



[www.lgmobile.com](http://www.lgmobile.com)

P/N : MMBB0360213 (1.0) W

**KM555e** User Guide

ENGLISH

Bluetooth QD ID B015952



Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## KM555e User Guide

Congratulations on your purchase of the advanced and compact KM555e phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents

 
<b>Getting to know your phone.....</b>	<b>6</b>	Using call barring.....	18
<b>Open view .....</b>	<b>8</b>	Changing the common call setting .	18
<b>Installing the SIM and battery.....</b>	<b>9</b>	<b>Contacts .....</b>	<b>20</b>
<b>Charging your phone.....</b>	<b>11</b>	Searching for a contact.....	20
<b>Memory card.....</b>	<b>11</b>	Adding a new contact .....	20
<b>Your home screen .....</b>	<b>12</b>	Contact options .....	21
Touch screen tips .....	12	Creating a group.....	22
Customising the home screen .....	13	Changing your contact settings .....	22
Quick keys .....	13	<b>Messaging.....</b>	<b>24</b>
<b>Your standby screen.....</b>	<b>14</b>	Messaging .....	24
The status bar .....	14	Sending a message .....	24
Changing your Status from the status bar .....	14	Entering text .....	25
Using the Multitasking function.....	14	T9 predictive .....	25
<b>Calls.....</b>	<b>15</b>	Abc manual.....	25
Making a call.....	15	Keyboard.....	26
Making a call from your contacts....	15	Handwriting recognition .....	26
In-call options.....	15	Changing your email settings .....	28
Adjusting the call volume .....	16	Message folders.....	29
Speed dialling.....	16	Managing your messages.....	30
Turning off DTMF.....	16	Using templates.....	31
Viewing your call logs .....	17	Using emoticons.....	31
Using call divert.....	17	Changing your text message settings .....	31
		Changing your multimedia message settings.....	32
		Changing your other settings.....	33

# Contents

<b>Taking Photo.....</b>	<b>34</b>	Using a sound .....	42
Taking a quick photo.....	34	Videos.....	42
After you've taken your photo.....	34	Using options while video is paused.....	43
Adjusting the Zoom .....	34	Editing a video clip.....	43
Adjusting the exposure .....	34	Sending a video clip.....	44
<b>Camera.....</b>	<b>35</b>	Using the video options menu .....	44
Choosing a shot type .....	35	Games and Applications .....	44
Selecting view mode.....	35	Documents.....	45
Using the advanced settings.....	35	Transferring a file to your phone .....	45
Preview settings .....	35	Viewing a file.....	45
<b>Video camera .....</b>	<b>37</b>	Music.....	46
Shooting a quick video.....	37	Transferring music onto your phone.....	46
After you've shot your video .....	37	Playing a song.....	46
Adjusting the Zoom .....	38	Using the radio .....	46
Adjusting the Exposure .....	38	Searching for stations .....	47
Changing the video image size.....	38	Resetting channels .....	47
Selecting view mode.....	39	Listening to the radio .....	47
Using the advanced settings.....	39	<b>Organiser.....</b>	<b>48</b>
<b>Multimedia .....</b>	<b>40</b>	Adding an event to your calendar ...	48
Pictures .....	40	Changing your default calendar view .....	49
Images option menus .....	40	Adding an item to your to do list.....	49
Sending a photo .....	41	Setting your alarm .....	49
Using an image .....	41	Voice recorder .....	50
Printing an image .....	42	Recording a sound or voice .....	50
Sounds .....	42	Using your calculator .....	50

<b>Settings .....</b>	<b>51</b>
Changing your screen settings .....	51
Changing your phone settings .....	51
Using memory information .....	52
Sending and receiving your files using Bluetooth .....	53
Pairing with another Bluetooth device .....	54
Installing LG PC Suite on your computer .....	55
Using your phone as Music Sync device .....	55
<b>Wi-Fi .....</b>	<b>56</b>
<b>Phone Software update.....</b>	<b>56</b>
Quick guide for phone software update .....	57
Preparation and Remarks.....	57
<b>Accessories .....</b>	<b>58</b>
<b>Guidelines for safe and efficient use.....</b>	<b>60</b>
<b>Troubleshooting.....</b>	<b>66</b>
<b>Gracenote®.....</b>	<b>69</b>

# Getting to know your phone

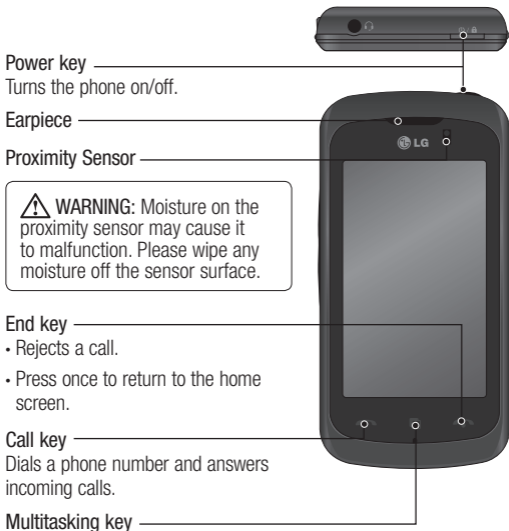

**⚠ WARNING:** Moisture on the proximity sensor may cause it to malfunction. Please wipe any moisture off the sensor surface.

**⚠ WARNING:** Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protection film on proximity sensor of LCD. It can be caused the malfunction of sensor.



Music key

Camera key

- Go to the camera menu directly by pressing and holding the key.




Volume keys

- When the screen is idle: key tone volume.
- During a call: earpiece volume.
- When playing a track: controls volume continuously.

Charger, Data cable (USB cable)

**TIP:** Before connecting the USB cable, wait until the phone has powered up and has registered on the network.

## Open view

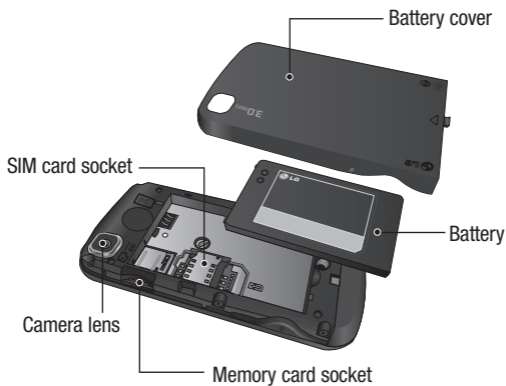 

# Installing the SIM and battery

## 1 Remove the battery cover

Press and hold down the battery release button on the top of the phone and lift off the battery cover.



 
**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the outwards.

## 2 Remove the battery


Hold the top edge of the battery and lift it away from the battery compartment.

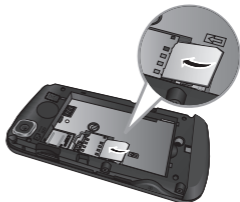

# Installing the SIM and battery

## 4 Install the battery

 First insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.

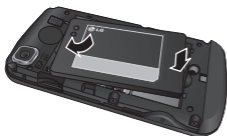

## Charging your phone

- 1 Ensure the battery is fully charged before using the phone for the first time.
- 2 With the arrow facing you as shown in the diagram push the plug on the travel adapter into the socket on the side of the phone until it clicks into place.
- 3 Connect the other end of the travel adapter to the main socket. Use only the charger included in the box.
- 4 The moving bars of battery icon will stop after charging is complete.

**NOTE:** The battery must be fully charged initially to improve battery lifetime. Disregard the first “Battery full” message and keep the phone on charge overnight.



 
## Memory card

### Installing a memory card

You can expand the available memory space on your phone by using a memory card.

**NOTE:** A memory card is an optional accessory.

Slide the memory card into the slot at the top, until it clicks into place. Make sure the gold contact area is facing downwards.

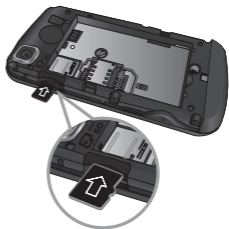

## Your home screen

From this screen you can access menu options, make a call, view the status of your phone and much more.

- Whenever your KM555e is not in use, it will return to the lock screen.

### Touch screen tips

The home screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not press too hard; the touchscreen is sensitive enough to pick up on a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- When the screen light is off, either press the power key or hold down the Unlock/Lock key on the touch screen to return the home screen.

## Customising the home screen

1. Widget home screen (active)
2. Livesquare screen
3. Contact home screen



### Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad, which lets you make a call. Enter the number using the normal key pad and touch **call** icon.



Touch to open your contacts. To search for the number you want to call: Enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS.







 










Touch to open the full Top menu which is divided into four categories.








# Your standby screen

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.


Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set
	My Profile in use
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use

Icon	Description
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause

## Changing your Status from the status bar




Touch the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3 and Bluetooth status.

 
## Using the Multitasking function


Press the multitasking hard key  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

# Calls


## Making a call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit touch the clear key.
- 3 Press the  hard key to initiate the call.
- 4 To end the call press the  hard key.

**TIP!** To enter + for making an international call, press and hold  .


**TIP!** To bring up the keypad during a call, press the .


## Making a call from your contacts

- 1 From the standby screen touch  to open the contacts.
- 2 Enter the first few letters of the contact you would like to call.


- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch .

## In-call options


 **Hold** - Touch this icon to put a call on hold.


 **Mute** - Touch this icon to turn off the microphone so the person you are talking to cannot hear you.


 **Speaker** - Touch this icon to turn on the speaker phone.

 **Options** - Choose from a list of further in-call options, including **Go to messages**, so you can check your messages, **Go to contacts** to add or search contacts during a call. You can also end the call from here by touching **End call**.

# Calls

 - Choose to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.

 - Choose to add another person to the call.



 - Choose to search your contacts during a call.

## Adjusting the call volume

To adjust the volume during a call, use the up and down button on the left edge of the phone.

## Speed dialling


You can assign a frequently-called contact to a speed dial number.

- 1 From the standby screen touch  and select .
- 2 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.

- 3 Your contacts will open. Select the contact you'd like to assign to that number by touching their phone number once. To find a contact tap the **Name** field box and enter the first letter of the name of the contact required.


## Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select **DTMF off**.

## Viewing your call logs

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  and select .  
Choose to view:

**All** - View a complete list of all your dialled, received and missed calls.

**Dialled** - View a list of all the numbers you have called.



**Received** - View a list of all the numbers that have called you.

**Missed** - View a list of all the calls you have missed.

**TIP!** From any call log touch  and **Delete all** to delete all the recorded items.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

## Using call divert



- 1 Touch , select .
- 2 Touch **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Touch "To voice mail centre" OR "To other number"
- 5 Input the number you'd like to divert to.
- 6 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.



# Calls

## Using call barring

- 1 Touch , select .
- 2 Touch **Call barring**.
- 3 Choose any or all of the six options:
  - All outgoing
  - Outgoing international
  - Outgoing international calls except home country
  - All incoming
  - Incoming when abroad
  - Deactivate all
- 4 Enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

## Changing the common call setting

- 1 Touch , select .
- 2 Touch **Common settings**.  
From here you can amend the settings for:
  - Call reject** - Slide the switch to **On** to highlight the Reject list. You can touch the text box to choose from all calls, contacts or groups, or those from unregistered numbers (those not in your contacts). Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **On** or right for **Off**.

**Minute minder** - Slide the switch left to **On** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

**Save new number** - Select **Yes** to save a new number.



**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

# Contacts



## Searching for a contact

There are two ways to search for a contact:

### From the standby screen

- 1 From the standby screen touch  to open the contacts.  
Select the contact from the list that you want to make a call.
- 2 Touch the  hard key to initiate the call.


### From the main menu

- 1 Touch , select .
- 2 Select **Search**.
- 3 You see a list of contacts, typing in the first letter of a contact's name will jump the menu to that alphabetical area of the list.

**TIP!** The alphabetical keypad is displayed once you tap the blank square.

**TIP!** To scroll through your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.


## Adding a new contact

- 1 From the standby screen touch  and touch  and select **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.

- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax**, and **General**. When you have finished, touch **Close**.
- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add other informations.
- 8 Touch **Save** to save the contact.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use.
- 2 You can call or send a message directly from here.
- 3 Press  to open the list of options.

**Delete** - Delete the contact. Touch **Yes** if you are sure.

**Copy or Move to SIM / Handset** - Choose to move or copy to the SIM card or handset (depending on where you originally saved the contact).


# Contacts

**Send business card** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, **Email** or via **Bluetooth**.




## **TIP! Send message**

- Send a message to the contact. If the contact has an email address, select whether you'd like to send an email or Message.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

**TIP!** You can edit an existing group by highlighting it and touching . Choose **Add members** to the group from your contacts, assign a Group ringtone, Rename the group or Delete a group.



## **Creating a group**

- 1 Touch  and select .
- 2 Select **Groups**.
- 3 Touch .
- 4 Select **Add group**.
- 5 Enter a name for your new group. You can also assign a ringtone to the group.
- 6 Touch **Save**.

## **Changing your contact settings**

You can adapt your contact settings so that your address book suits your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the standby screen touch .
- 2 Touch  and select **Settings**.
- 3 From here you can adjust the following settings:

**Contact list settings** - Choose whether to view contacts saved to both your **Handset & SIM**, Handset only or SIM only.

You can also choose to show the first name or last name of a contact first.

**Copy** - Copy your contacts from your SIM to your handset or from your handset to your SIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

**Move** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So if you move a contact from the SIM to the handset it will be deleted from the SIM memory.

**Send all contacts via Bluetooth** - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

**Backup and Restore contacts** - Backup and restore contacts to the Memory Card.




**Clear contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your contacts.

# Messaging

## Messaging

Your KM555e combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:

- 1 Touch  from the standby screen.
- 2 Or Touch  from the standby screen, then select .

## Sending a message

- 1 Touch **New message** to open a blank message.
- 2 From here you can send an SMS or MMS. To send an email, touch  from the standby screen, then select .



**WARNING:** You will be charged per per 1 page text message for each person that you send the message to.



**WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.


**TIP!** Quick reply - Send a reply promptly to the selected message using a template.


## Entering text

 
Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.


You can choose your input method by tapping  and **Input method**.

Tap the screen once, the keyboard appears.

 Touch to turn on T9 predictive text.

 You can choose writing languages.

 Tap to change numbers, symbols and text keypad.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

## T9 predictive

In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

## Abc manual

In Abc mode you will see .

In Abc mode you must touch the key repeatedly to enter a letter.

For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

# Messaging

## Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen.

**TIP!** Keyboard mode predicts and shows what you will type in next. These words are predicted based on the sentences you have typed in so far. If you do not wish to use the suggested words, keep typing in new words. If you wish to use the suggested words, press the space bar to confirm them.

**TIP!** You may find it easier to use the stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other character, and displays these characters as text. Handwriting recognition is only active where text can be entered.

**Note:** Most letters can be written using different stroke styles. See the tables below. The position on the screen decides case, not the style.

## Handwriting recognition

In Handwriting mode you simply write on the screen and your KM555e will convert your handwriting into your message. Select Handwriting **Screen** or **Box** or **Double box** depending on your preferred view.

## Alphabet

If you select capital letter mode (ABC), letters you type will be inserted as capital letters even if you write in small letters, and vice versa.

Letter	Strokes
A	A A' a a'
B	B B' b b'
C	C C'
D	D D' d d'
E	E E' e e'
F	F F' f f'
G	G G' g g'
H	H H' h h'
I	I I' i i'
J	J J' j j'
K	K K' k k'
L	L L' l l'

Letter	Strokes
M	M M' m m'
N	N N' n n'
O	O O' o o'
P	P P' p p'
Q	Q Q' q q'
R	R R' r r'
S	S S'
T	T T' t t'
U	U U' u u'
V	V V'
W	W W' w w'
X	X X'
Y	Y Y' y y'
Z	Z Z'
B	B

# Messaging

## Numbers

Numbers are written above the arrow.

Number	Strokes
0	
1	
2	
3	
4	
5	
6	
7	
8	
9	

## Changing your email settings

You can change your email settings according to your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch then select .
- 2 Touch Email settings from options and select **Email** accounts to set up a new account then you can adapt the following settings.

**Allow reply Email** - Choose to allow the sending of 'read, confirmation' messages.

**Request reply Email** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your KM555e checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd & Reply** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto Retrieval in Roaming** - Choose whether to retrieve your messages automatically when abroad (roaming).

**TIP!** Costs for retrieving email may be higher when roaming. Check with your network supplier.

**New email notification** - Choose whether to be alerted to new emails.

**Signature** - Switch this feature on and Create an email signature.

**Priority** - Choose the priority level of your email messages.

**Mail sending size** - Set the maximum size of sending mail.

**E-mail counter** - Input the date you want. You can check emails you sent during that period.

## Message folders

You'll recognise the folder structure used on your KM555e, which is fairly self-explanatory.

**Inbox** - All the messages you receive are placed into your inbox. From here you can view, delete and more, see **Managing your messages** below for details.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

# Messaging

**Outbox** - This is a temporary storage folder while messages are being sent or failed messages are stored here.




**Sent items** - All the messages you have sent are placed in this folder.

**My Folders** - Create folders to store your messages.

## Managing your messages

You can use your Inbox to manage your messages.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then select .
- 2 Select **Inbox**.
- 3 Touch  and then choose to:

**Delete** - Delete marked messages.

**Threaded view** - Displays all the messages received from a particular number in one screen.

**Create new message** - Open a new blank message.

**Move to my folders** - Move the marked messages to My folders.

**Filter** - View your message by type. This will group SMS separately from MMS.


**Delete all** - Delete all of the messages.

If you see the message **No space for SIM messages** you should delete some messages on the SIM.

If you see the message **No space for messages** you should delete some messages to free up memory space.



## Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add new**, **Delete** or **Delete all** templates.
- 3 Touch **Add template** to create a new template.
- 4 You can view the template by selecting it on the list and edit it by touching on the view screen.

## Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.


- 1 Touch  then choose **Emoticons**.
- 2 Touch  to **Add new**, **Delete** or **Delete all** emoticons.

## Changing your text message settings

Your KM555e message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

# Messaging

Touch  then choose **Settings** on the **Communication** menu. Select **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.


**Message types** - Convert your text into **Text, Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as **Multiple SMS** or as **MMS**.

## Changing your multimedia message settings

Your KM555e message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch . Choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read report** - Choose to allow and/or request a reply report.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.


**Creation mode** - Choose your message mode.

**Delivery time** - Choose how long before a message is delivered.

**Multi msg centre** - Enter the details of your message centre.

## **Changing your other settings**

Touch , choose **Settings** on the **Communication** menu:



**Voicemail** - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your Service security by creating trusted and untrusted lists of senders.

**Info service** - Choose your reception status, language and other settings.


# Taking Photo


## Taking a quick photo

- 1 Press and hold the  key on the right side of the phone.
- 2 The viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Position the phone so you can see the subject of your photo in the preview screen.
- 5 When the camera has focused on your subject, press the  on the side of the phone firmly.

## After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen.

 Touch to send the photo as a message, e-mail or Bluetooth or Blogger.

 Touch to use the picture you have taken as Home screen, Contacts image, Start-up image and Shut down image.

 Touch to edit the photo.


**TIP!** You can bring up the options by tapping the screen. They auto turn off after a few seconds.

## Adjusting the Zoom

- 1 Touch .
- 2 Slide the zoom indicator along the bar.


## Adjusting the exposure

Exposure defines the difference between light and dark (contrast) in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the contrast indicator along the bar - left for a lower exposure, hazier image or right for a higher exposure, sharper image.

# Camera


## Choosing a shot type

- 1 Touch  to open the available shot types.
- 2 Choose from two options:


**Normal shot** - This is the default shot type, the photo will be taken in the normal way, as outlined in taking a quick photo.

**Three / Six / Nine** - This enables you to take 3/6/9 shots automatically in very quick succession.

## Selecting view mode

- 1 Touch .
- 2 Choose from **Full screen** or **Full image**. In Full screen some clipping of the image may occur.

## Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.

### Preview settings

**Size** - Change the size of the photo to save on memory space.

**Colour Effect** - Choose a colour tone to apply to the photo you're taking.

**White balance** - Choose from Auto, Incandescent, Sunny, Fluorescent or Cloudy.

**Night mode** - Useful to use at dark place.

# Camera

**Self-timer** - The self-timer allows you to set a delay after the capture button is pressed before the camera takes the picture. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

**Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

**Memory** - Choose whether to save your photos to the Handset memory or to the External memory.

**Show captured image** - Select ON/OFF for showing the captured image.

**Hide icons** - Select how to display the icons.

**Shutter sound** - Select one of the three shutter sounds.

**Grid screen** - Choose from Off, Simple cross or Trisection.




**Noise reduction** - Use this feature to reduces the noise.

**Reset settings** - Reset all the camera settings.

**TIP!** When you exit the camera all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example colour tone. Check them before you shoot your next photo.

# Video camera

## Shooting a quick video

- 1 Press the camera key on the right side of the phone.
- 2 On the Camera preview mode touch and hold down the camera icon in the view finder to switch to video mode. The video camera's viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the capture button once to start recording. Or press the red dot at the bottom right of the screen.
- 5 **Rec** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.
- 6 To pause the video touch  and resume by selecting .
- 7 Touch  on screen or press the capture button a second time to stop recording.

## After you've shot your video

A still image representing your captured video will appear on screen.



Touch to play the video.



Touch to send the video as a **message**, **e-mail** or **Bluetooth** or **YouTube**.



Touch to edit the video.

**TIP!** You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.


# Video camera

## Adjusting the Zoom

- 1 Touch .
- 2 Slide the zoom indicator along the bar.




## Adjusting the Exposure

Exposure defines the difference between light and dark (contrast) in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.


- 1 Touch .
- 2 Slide the exposure indicator along the bar, left for a lower exposure, hazier image, or right for a higher contrast, sharper image.

## Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 Select  from the Preview menu.
- 2 Select a pixel value from the two options:  
 320x240 - Large image size, therefore larger file size.  
 176x144 - Small image size and therefore smaller file size.
- 3 Select the size option you'd like to use.

## Selecting view mode

- 1 Touch .
- 2 Choose from Full screen or Full image. In Full screen some clipping of the image may occur.

## Using the advanced settings

From the viewfinder touch  to open the settings options.

### Preview settings

**Colour Effect** - Choose a colour tone to apply to the video you're taking.

**White balance** - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions.

**Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

**Set time** - Set a duration limit for your video. Choose from **No limit**, or **MMS** to limit the size so that you can send the video as an MMS.

**Memory** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

**TIP!** If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.



**Voice** - Choose Mute to record a video without sound.

**Hide icons** - Select how to display the icons.

**Reset settings** - Reset all the video camera settings.


# Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then  to open a list of folders storing all of your multimedia files.

## Pictures

**Images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Touch  then select List view to change the view from thumbnail image to list.

## Images option menus

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Sort by, phone's camera, but only the Sort by, Search**, options are available for default images.

**Send** - Send the image to a friend.

**Move** - Move an image from the phone memory to a memory card or vice versa.

**Copy** - Copy an image from the phone memory to a memory card or vice versa.

**Delete** - Delete an image.

**Rename** - Rename an image.



**Print** - Print the selected image using a printer.

**Slide show** - Start a slide show.

**List/Grid view** - Grid view to List view or vice versa.




**Delete all** - Delete all of your images.

## **Sending a photo**

- 1 Touch .
- 2 Touch  then choose **Images**.
- 3 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

## **Using an image**

You can choose images to use as wallpapers, contact image, start up image or shut down image.

- 1 Touch .
- 2 Touch  then **Images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:

**Wallpaper** - Set a wallpaper for the standby screen.




**Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

**Start-up image** - Set an image to appear when you switch the phone on.

**Shut down image** - Set an image to appear when you switch the phone off.

# Multimedia

## Printing an image




- 1 Touch .
- 2 Touch  then **Images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

**TIP!** You can to print via bluetooth or by connecting to a PictBridge compatible printer.

## Sounds

The **Sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.



## Using a sound

- 1 Touch .
- 2 Touch  then **Sounds**.
- 3 Select a sound and it will begin to play.
- 4 Touch  and select **Use as**.
- 5 Choose from **Ringtone**, **Message tone**, **Start-up** or **Shut down**.

## Videos

The **Videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch .
- 2 Touch  then **Videos**.
- 3 Select a video to play.

## Using options while video is paused

Touch  while in pause mode and choose from:

**Capture** - Capture the frozen frame as a picture.


**Send** - Send the video in a message, E-mail, Bluetooth or via Youtube.

**Delete** - Delete the video.

**Edit** - Edit the video.

**File info.** - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright details.

## Editing a video clip

- 1 Select a video.
- 2 Touch  then.
- 3 Touch **Edit** and choose from:

**Trim** - Cut the video down to only the part you want.

**Video merge** - Merge the video with another video clip.

**Image merge** - Merge the video with an image from your Images folder.

**Text overlay** - Add text to the video.

**Image overlay** - Add an image to the video.

**Audio dubbing** - Choose to add sound from the **Defaults folder** or from your own **Voice recordings**.

**Voice recording** - Add a voice recording

**Time scaling** - Use this feature to increase / decrease the playing speed of the video.

# Multimedia

## Sending a video clip

- 1 Select a video and touch .
- 2 Touch Send and choose from Message, Email, Bluetooth or YouTube.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

## Using the video options menu

From the **Videos** folder, you can choose from the following options:

**Send** - Send a video to a friend.

**Move** - Move a video clip from the phone memory to a memory card or vice versa.

**Copy** - Copy a video clip from the phone memory to a memory card or vice versa.

**Delete** - Delete a video.

**Rename** - Rename a video.

**Sort by** - Sort videos into order by Date, Type or Name.

 
**List/Grid view** - Grid view to List view or vice versa.

**Delete all** - Delete all videos.

## Games and Applications

You can install new games and applications to your phone to keep you amused when you have time to spare.

**TIP!** To Enter the Facebook, MySpace, Twitter application, touch  and select **Games & Apps** then choose **Applications** and **Social Networking**.

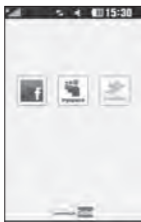

## Documents

Select mystuff then select Documents. From the Documents menu, you can view all of your document files.



## Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone.

To transfer using Bluetooth:



- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.

## Viewing a file

- 1 Touch .
- 2 Touch  then **Documents**.
- 3 Select a document and touch **View**.

# Multimedia

## Music

Your LG KM555e has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then .


## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Playing a song

- 1 Touch .
- 2 Touch , then **All tracks**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

## Using the radio




Your LG KM555e has an FM radio feature so you can tune into your favourite stations to listen to on the move.





**NOTE:** You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket.

## Searching for stations




You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone. You must first attach the headset to the phone as this acts as the antenna.

To auto tune:



- 1 Touch .
- 2 Touch  then .
- 3 Touch Auto scan. Then the stations will be automatically found and allocated to a channel in your phone.

**NOTE:** You can also manually tune into a station by using  and  displayed next to the radio frequency. If you press and hold  and , the stations will be automatically found.

## Resetting channels

- 1 Touch .
- 2 Touch  then .
- 3 Choose Reset channel to reset the current channel or choose Reset all to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.




## Listening to the radio


- 1 Touch .
- 2 Touch  then touch the channel number of the station you would like to listen to.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.



# Organiser

## Adding an event to your calendar



- 1 From the standby screen select , then touch . Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.
- 5 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 6 IF you would like to add a subject to your event, touch **Subject** and type in your note, followed by **Save**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

**TIP!** You can set a holiday in your calendar. Touch each day you are on holiday one at time, then touch  and select **Set holiday**.

## Changing your default calendar view




- 1 From the standby screen select , then touch .  
Select **Settings**.
- 2 Touch Calendar Settings and choose either Monthly view or Week view.
- 3 Set week starts on.
- 4 Touch **Save** to confirm your choice.

## Adding an item to your to do list

- 1 From the standby screen select , then touch .
- 2 Select **To do** and touch **Add to do**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Save**.

**TIP!** You can edit an item by selecting it, and touch the tab and input. Confirm your amends by selecting **Save**.

## Setting your alarm

- 1 From the standby screen select , then touch .
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound and touch **Save**.
- 4 Choose whether you would like your alarm to repeat **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, **Except holiday** or **Choose weekday**.  
The icons indicate the weekday you select.
- 5 Select **Alarm type** to select a type for your alarm.
- 6 Touch **Alarm bell** then choose.  
To listen to sounds touch the sound, followed by .




# Organiser

- 1 Add a memo for the alarm.  
Touch **Save** when you have finished typing the memo.
- 2 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
- 3 Once you have set your alarm, touch **Save**.

**TIP!** Touch on/off icon on the right hand side of the alarm to set.

## Voice recorder




Use your voice recorder to record voice memos or other sounds.

- 1 Touch .
- 2 Touch  then  and **Settings** choose from:  
**Duration** – Set the recording duration. Choose from **No limit**, **MMS** or **1 minute**.  
**Quality** – Select the sound quality. Choose from **Super Fine**, **Fine** or **Normal**.

## Recording a sound or voice

- 1 Touch .
- 2 Touch .
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

## Using your calculator

- 1 From the standby screen select , then touch .
- 2 Touch the numeric keys to input numbers.
- 3 For simple calculations, touch the function you require (+, -, \*, /), followed by =.
- 4 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc..

# Settings

Within this folder you can adapt your settings to make your KM555e personal to you.

## Changing your screen settings

1 Touch  then choose .

2 Select from:

**Wallpaper** - Choose the theme for your standby screen.

**Top Menu** - Choose the style of the top menu.

**Dialing** - Adjust the colour.

**Font** - Adjust the font size.

**Backlight** - Choose how long the backlight remains on for.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Brightness** - Adjust the screen brightness.

**Greeting message** - Choose on or off and fill in the greeting message.

**Start-up/Shut down** - Choose the image for your start-up/shut down screen.



3 Touch **Save** to save your settings.

## Changing your phone settings

Enjoy the freedom of adapting how your KM555e works to your own style.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

# Settings

- 1 Touch .
- 2 Touch  then choose from the list below.

**Date & Time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

**Power save** - Choose to switch the factory set power saving settings **Off**, **Night only** and **Always on**.

**Languages** - Change the language of your KM555e's display.

**Auto key lock** - Lock the keypad automatically in standby screen.

**Security** - Adjust your security settings, including PIN code request, Change codes, ATMT and handset lock.

**Memory info** - See the memory status.

**Reset settings** - Reset all the settings to their factory definitions.

**Information** - View the technical information for your KM555e.

## Using memory information

Your KM555e has three memories available: the phone, the SIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory information to determine how each memory is used and see how much space is available.

Touch . Select  then **Memory info**.

### Handset common memory

- View the memory available on your KM555e for Pictures, Sounds, Video, Flash, MMS, Email, Java and others.

### Handset reserved memory

- View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**SIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage settings** - Choose the location you prefer items to be saved to.

## **Sending and receiving your files using Bluetooth**

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

### **To send a file:**

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.

- 3 If you have already paired the Bluetooth device, your KM555e will not automatically search for other Bluetooth devices. If not, your KM555e will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.



### **To receive a file:**

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See Changing your Bluetooth settings on the right for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

# Settings

- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your My stuff.

## Changing your bluetooth settings:

- 1 Touch .
- 2 Choose  then touch  and choose **Settings**.

Make your changes to:

**My device visibility** - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your KM555e.

**Supported services** - Choose how to use Bluetooth in association with different services.

**Remote SIM Mode** - Turn on or off.



**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your KM555e and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KM555e will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.



## Installing LG PC Suite on your computer

- 1 From the standby screen press  and choose .
- 2 Select **USB connection** mode and choose **PC suite**.
- 3 Click on the **LG PC Suite Installer** which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 6 Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Using your phone as Music Sync device

Your Phone can be used as Music Sync device to Sync Music Files only.

Music Sync can be done using Windows Media Player 10 / 11 and supports both Handset Memory and External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen touch .
- 3 Select  and then **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect your phone to your PC. Your phone will read: Connecting as Music Sync ... followed by Disconnect Cable to Stop Music Sync.

## Wi-Fi

Wireless Manager allows you to manage Internet connections per Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

**NOTE:** The KM555e supports WEP, WPA and WPA2 encryption, and not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this popup window will not be shown.

You can obtain the key from your Wi-Fi service provider or network administrator.

## Phone Software update

### LG Mobile Phone Software Update Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to update your software to the latest version quickly and conveniently.

The mobile phone software update program requires the user's undivided attention for the duration of the update process. Please be sure to check any instructions and notes that appear at each step before proceeding. Also note that removing the USB data communication cable or batteries during the update may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the update process. You are advised to record any important information in advance for safekeeping.

## Quick guide for phone software update



Download LG mobile support Tool to PC and execution



\* Click 'Start upgrading' (If USB Driver is installed, connect your phone to PC via USB cable.)



\* After selecting phone model, Install USB Drive



Connect Phone via USB cable to PC

## Preparation and Remarks

- Fully charge the battery.
- Saved user information through PC Sync before upgrading your firmware.
- Close PC Sync/applications before proceeding with the update.
- Calling and messaging functions are not available during the update process.
- Remove the SD card.
- Do not disconnect the USB cable until the update is completed.
- The handset is automatically reset during this process.

# Accessories

These accessories were supplied with KM555e.

## Charger



## Data cable and CD

Connect and synchronise your KM555e and PC.



## Battery



## Stereo headset



## User Guide

Learn more about your KM555e.



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

**⚠ WARNING:** When the protection film is attached on touch window, touch sensitivity might be decreased.

## Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C

### Declaration of Conformity



#### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

#### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

KM555e

Trade Name

LG

CE 0168 !

#### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

#### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

#### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31-36-547-8940, Fax : +31-36-547-8794  
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director 21. Oct. 2009

Signature of representative

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model KM555e has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.44 W/kg (10g) and when worn on the body is 1.28 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance



### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.

## Guidelines for safe and efficient use

- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

### Efficient phone operation

#### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## **Road safety**

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

# Guidelines for safe and efficient use

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Troubleshooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.
Charging error	Battery totally empty Temperature out of range  Contact problem  No mains voltage  Charger defective  Wrong charger  Battery defective	Charge battery.  Make sure the ambient temperature is right, wait for a while, and then charge again.  Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.  Plug in to a different socket or check voltage.  If the charger does not warm up, replace it.  Only use original LG accessories.  Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.

# Troubleshooting

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
Number not permitted	The Fixed dial number function is on.	Check settings.
LCD Dimming	Low battery When the battery is empty, the LCD screen will be dimming to reduce the power supply.	Recharge the battery.
The screen does not turn on when I receive a call.	Proximity sensor problem	The proximity sensor is detecting an obstacle in front of the screen and turns off the screen to avoid accidental keypresses.  Make sure that the area around the proximity sensor is clean and perform a calibration of the sensor.

# Gracenote®

## Gracenote® End User License Agreement

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party.

YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

## Gracenote®

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you “AS IS.” Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© Gracenote, Inc. 2009

## Gracenote® Proprietary Legends

The following Gracenote legend (as Gracenote may specify from time to time) must be included in:

- All documentation for products or applications using Gracenote technology
- Marketing materials including web pages; if other third-party trademark legends are included (Proprietary Legends must be included in the same size and location as other legends)

CD, DVD, Blu-ray Disc, and music and video-related data from Gracenote, Inc., copyright © 2000-2009 to present Gracenote. Gracenote Software, copyright © 2000-2009 to present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDb, MusicID, MediaVOCS, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

If space is an issue, one-page printed collateral (“one-sheets”) can use the following instead:

Gracenote®, Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.

# Gracenote®

## Gracenote® Corporate Description

Version 20061005

In user documentation and anywhere descriptions of Gracenote technologies are included, the following description of Gracenote must be used:

Music and video recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit [www.gracenote.com](http://www.gracenote.com).

If space is an issue, one-page printed collateral may use the following description and/or the Gracenote logo as described below:

Music recognition technology and related data are provided by Gracenote®.