

MOTOROLA WX306

LIFE.  POWERED.



SAR This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the legal and safety information packaged with your product.
Note: When using the product while worn on your body, either use an approved accessory such as a holster or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

68016404016

WELCOME

Whether you're a talker, a texter or just love surfing the web, the WX306 does it all. Listening to music or taking photos and videos on the move, is just a key press away. We've crammed all the main features of your phone into this handy guide—you can even take the guide with you. If you'd like even more information about how to use your new WX306, visit www.motorola.com/support. So, let's go.

Note: Your phone may not appear exactly as the images in this guide. However, all key locations, sequences and functions are the same.

Caution: Before assembling, charging or using your phone for the first time, please read the important safety, regulatory and legal information in this guide.





YOUR PHONE



 



LET'S GO

- Cover off.
- SIM in.
- microSD in.
- Battery in.
- Cover on.
- Charge up.




 
BASICS

- Turn it on & off**
Press and hold  for a few seconds to turn the phone on/off.
- Menu navigation**
Press  to open the main menu.
Tip: You can also press **Menu** (right soft key).
- Press the navigation key  up, down, right or left to highlight a menu option.
- Press  to select the highlighted option.

 

 
PERSONALISE

- Set your wallpaper**
Change the wallpaper to one that makes you smile. Press  > **Settings** > **Phone settings** > **Display** > **Wallpaper**.
- Set time & date**
Press  > **Settings** > **Phone settings** > **Time and date**.
- Set ringtone & volume**
Play it loud or keep it quiet, you choose. Press  > **Settings** > **User profiles**. Choose a profile. Press **Options** > **Customise** to edit a profile.
- Set auto power**
Choose when to receive calls and messages—really useful stuff! Press  > **Settings** > **Phone settings** > **Schedule power off**.

 
 
 


CONTACTS

- Save contacts**
- Enter the number on the home screen and press **Options** > **Save to Phonebook**.
 - Enter the contact details and press **Yes** to save.
Tip: Press  > **Phonebook** > **Options** > **Phonebook settings** > **Preferred storage** to choose where to save your contacts (**SIM** or **Phone**).
- Call contacts**
- Press  > **Phonebook**.
 - Press  up or down, to scroll through the list to highlight the contact's number.
 - Press .


 
 

 
 
 
 
 
PHOTOS & VIDEOS

- Take photos & videos**
- To use the camera press  > **Multimedia** > **Camera**. Press **Settings** > **Video recorder** to switch to video.
 - Press  to take your photo or to start/stop the video. Then:
 - To **send** your photo by MMS, press .
 - To **delete** the photo, press **Options** > **Delete**.
 - To **return to the viewfinder**, press **Cont.**
- Tip:** To set where your photos are stored press **Settings** > **Photo album** > **Options** > **Photos** > **Options** > **Storage** > **Phone** or **Memory card**. To set where your videos are stored press **Options** > **Storage** > **Phone** or **Memory card**. To **transfer** photos or videos to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files.







RADIO

- Listen to the radio**
- Plug a headset into your phone.
Note: The FM radio works only when the headset is plugged in.
 - From the home screen, press  > **Multimedia** > **FM radio**. To tune in a station, press  left or right or press **Options** > **Auto-search**. To adjust volume, press  up or down. To turn off the radio, press **Options** > **Close**.
- Store favourite stations**
When listening to a station, press **Options** > **Channel list**. Select a channel number and press **Add** to store it. Press **Options** > **Channel list** to see your stored stations. Press keys  to  to select a stored station.



 


MESSAGES

- Send an SMS or MMS**
- Press  > **Messaging** > **Write message** > **Text message** or **Multimedia message**.
 - Enter your message.
Tip: Press **Options** > **Input method** to switch text entry modes. Press  to switch capitalisation modes. Press  to enter a space.
 - Press .
 - Select **Enter number**, enter a number and press  or select **Add from Phonebook** and scroll to a contact. Press  to select a contact.
 - Press .
- Read messages**
When you receive a message you will see  **New message 1 unread** on your screen. Press **View** >  to open the message.




 
 
CALLS

- Make calls**
Enter a number and press .
- Answer calls**
When your phone rings or vibrates, press .
- End a call**
Press .
- Redial number**
- From the home screen, press  to see a list of **All calls**.
 - Scroll to the entry you want and press .
- Emergency calls**
To call an emergency number, enter the emergency number and press . Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

TIPS & TRICKS

- Ringtone**
To quickly change your ringtone, press and hold  from the home screen.
- Voicemail**
Press and hold . If your voicemail number is preset, you will connect.
- Backlight time**
To set how long your backlight stays on, press  > **Settings** > **Phone settings** > **LCD backlight**.
- Torch on**
To turn on the torch, press and hold . Press and hold  again, to turn it off.
- Tip:** To download PC suite, go to: <http://www.motorola.com/mywx306>


MUSIC

- To use the music player, insert a microSD memory card (optional). The music player supports MP3, MIDI and AMR music formats.
- Play music**
Press  > **Multimedia** > **Media player**
- Controls**
- | | |
|---------------------------|--|
| function | |
| play/pause | Press  . |
| fast forwards/rewind song | Press  right or left. |
| volume | Press  up or down. |
- Tip:** To view music stored on your microSD memory card, press  > **File manager** > **Memory card**. To **transfer** music to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files.

MENU MAP

- Multimedia**
 - Camera
 - Image viewer
 - FM radio
 - Sound recorder
 - Schedule FM record
 - Media player
 - Phonebook**
 - Call centre**
 - Call history
 - Call settings
 - Messaging**
 - Write message
 - Inbox
 - Drafts
 - Outbox
 - Sent messages
 - Delete messages
 - Email
 - Broadcast message
 - Templates
 - Message settings
 - Browser**
 - Homepage
 - Bookmarks
 - Input address
 - Last web address
 - Schedule FM record
 - Stored pages
 - Service inbox
 - Settings
 - Social Networks**
 - Facebook
 - Twitter
 - Gmail
 - Google Search
 - MySpace
 - YouTube
 - File manager**
 - Phone
 - Memory card
 - Tools**
 - Alarm
 - World clock
 - Calendar
 - Calculator
 - Tasks
 - Currency converter
 - Fun & Games**
 - Settings**
 - Phone settings
 - Network settings
 - Security settings
 - Connectivity
 - Factory data reset
 - User profiles
 - Shortcuts
- This is a standard home screen layout. Your phone's home screen may be a little different.

DISPLAY

- The home screen shows when you turn on the phone. Status indicators can appear across the top of the home screen:
- 
- Note:** Your phone's home screen may be different from the one shown.

