

Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

Trademarks and Permissions



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents

 
1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions.....	2
Screen Icons.....	5
2 Getting Started	6
Installing the SIM Cards and the Battery.....	6
Removing the Battery and the SIM Cards	6
Installing the microSD Card.....	7
Charging the Battery	7
Navigating the Main Menu.....	7
Phone Lock	8
PIN and PUK	8
Locking and Unlocking the Keypad.....	9
My Files	9
3 Voice Services	9
Dual-Card Management	9
Making a Call.....	10
Answering a Call	10
SOS.....	11
Name 1/2.....	11
4 Text Input	12
Changing the Text Input Mode	12
Entering a Word.....	12
Entering a Digit	13
Entering a Symbol	13

5 Messages	13
Writing and Sending a Text Message	13
Writing and Sending a Multimedia Message	14
6 Contacts	15
Creating a Contact	15
Searching for a Contact.....	15
7 Multimedia	16
FM Radio	16
Camera	16
Image Album	17
Audio Player.....	17
Video Recorder	18
Video Player	18
Sound Recorder.....	18
8 Care Assistant	19
Relative Call.....	19
Magnifier	19
9 Bluetooth (Optional)	20
Connecting a Bluetooth Headset to Your Phone.....	20
Transferring Data.....	20
10 WAP	21
Network Settings.....	21
Connecting to a Network	22
11 Warnings and Precautions	22

1 Getting to Know Your Phone

Your Phone

The following figure shows the appearance of your phone.

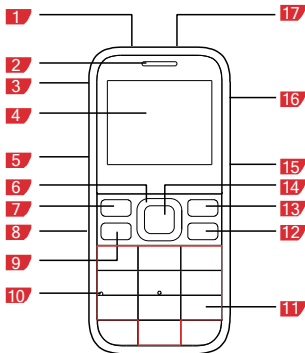
















- | | |
|---------------------|--------------------|
| 1 Torch | 10 Microphone |
| 2 Earpiece | 11 Number keys |
| 3 Charger jack | 12 End/Power key |
| 4 Screen | 13 Name 2 key |
| 5 Volume/Scroll key | 14 Confirm key |
| 6 Navigation keys | 15 Keypad lock key |
| 7 Name 1 key | 16 Torch key |

 





 
- 8 SOS key
9 Call/Answer key

17 Headset

















Keys and Functions

Press...	To...
	<ul style="list-style-type: none">• Make a call from the Subscriber Identity Module (SIM) card.• Answer a call.• Access All calls in standby mode.
	<ul style="list-style-type: none">• Power the phone on or off (press and hold this key for about 3 seconds).• End or reject a call.• Return to standby mode.
	<ul style="list-style-type: none">• Select the option displayed in the lower left corner of the screen.• Access Name 1 in standby mode.
	<ul style="list-style-type: none">• Select the option displayed in the lower right corner of the screen.• Access Name 2 in standby mode.
	<ul style="list-style-type: none">• Access the main menu in standby mode.• Confirm a selection.

Press...	To...
	<ul style="list-style-type: none"> • Access Calendar (press ) in standby mode. • Access Alarm (press ) in standby mode. • Access Inbox (press ) in standby mode. • Access Contact list (press ) in standby mode. • Customize the navigation keys. Access the main menu and select Settings > Phone settings > Direction key setup.
	<p>Adjust the volume when calling, listening to FM Radio, or playing music.</p>
	<p>Access SOS in any mode.</p>
	<p>Turn the torch on or turn off in any mode.</p>
	<p>Lock or unlock the keypad in standby mode</p>
	<ul style="list-style-type: none"> • Enter the number 0 or a space. • Access Magnifier in standby mode (press and hold this key for about 3 seconds).

Press...	To...
 through 	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call voicemail in standby mode (press and hold this  key for about 3 seconds). • Speed-dial phone numbers in standby mode (press and hold one of the number keys from  through  for about 3 seconds). • Select an option labeled with the corresponding number.
	<ul style="list-style-type: none"> • Enter * (press this key once), + (press this key twice), P (press this key three times), and W (press this key four times) in standby mode. • Display the symbol list in editing mode. • Access FM Radio in standby mode (press and hold this key for about 3 seconds).
	<ul style="list-style-type: none"> • Enter #. • Switch between text input methods in editing mode.


Screen Icons

Icon	Indicates...
	Signal strength.
	General Packet Radio Service (GPRS) signal.
	Ring only enabled.
	Vib. only enabled.
	Vib. and ring enabled.
	Vib. then ring enabled.
	Silence profile activated.
	Headset profile activated.
	Missed calls.
	Call forwarding enabled.
	New text messages.
	New multimedia messages.
	Alarms enabled.
	Keypad locked.
	Battery level.
	Bluetooth activated.

2 Getting Started


Installing the SIM Cards and the Battery

 You can install up to two SIM cards in the phone at the same time. When installing a SIM card, ensure that the gold contact area faces down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.

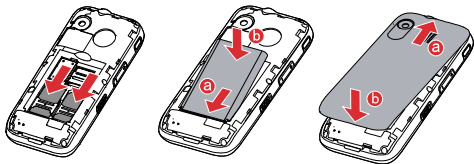


Removing the Battery and the SIM Cards

 Before removing the battery and the SIM cards, ensure that your phone is powered off.

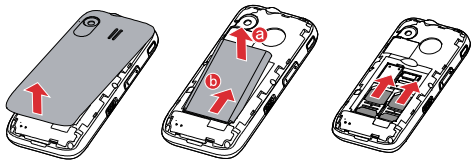

Installing the microSD Card

 Before installing or removing a microSD card, power the phone off. When the phone is powered back on, it indicates whether the microSD card has been installed correctly.

You can expand your phone's memory capacity by installing a microSD card. When installing a microSD card, ensure that the gold contact area faces down.












Charging the Battery

1. Connect the small end of the USB cable to the phone's charger jack and the large end to the charger.
2. Connect the charger to a power socket.
3. Wait until the battery is completely charged.
During the charging process, the charging icon is displayed in animation. When the charging icon becomes static, the battery is fully charged.
4. Unplug the charger from the power socket and the USB cable from the phone.

Navigating the Main Menu

1. In standby mode, press  to access the main menu.

2. Press  to scroll to the desired application and press  (OK) or  to access the application.
3. Press  or  to scroll to the desired option, and press  (OK) or  to access the option.
4. Press  (**Back**) to return to the previous menu, or press  to return to standby mode.

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. Once the phone lock is enabled, you must enter the phone unlock code each time you power on the phone. The preset phone unlock code is **1234**. You can change this code into any numeric string between four and eight digits.

If you forget the phone unlock code, contact your service provider.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks a blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

To enable the PIN lock:

1. Press  and select **Settings > Security settings > SIM1 or SIM2 security > PIN lock**.
2. Enter the PIN and press  (OK) or .

If you enter the incorrect PIN a specified number of times, the phone prompts you to enter the PUK.

If you enter the incorrect PUK a specified number of times, the SIM card will become permanently invalid. If this occurs, contact your service provider for a new SIM card.

Locking and Unlocking the Keypad




To lock the keypad, slide



upwards or downwards in standby mode. To unlock the keypad, slide

in the opposite direction. If the **Auto keypad lock** function is enabled and the phone is in standby mode for a preset period, the phone automatically locks the keypad.



When the keypad is locked, you can press  to answer a call or make an emergency call.

My Files

My Files manages multimedia files stored on the phone and its microSD card. Using **My Files**, you can view the size and create date of images or audio clips, and open multimedia files.

3 Voice Services



Dual-Card Management

Your phone supports dual-card dual-standby mode, but the two SIM cards cannot be used simultaneously. When you are making a call or using data services with one SIM card, the other SIM card becomes

unavailable, that is, no incoming calls can be received and the data services cannot be used.

Making a Call

1. In standby mode, enter the phone number.

- To make an international call, press  twice to enter the plus sign (+). Then enter the country or region code, area code, and phone number.
- To call an extension number, enter the phone number, press  three times to enter **P**, and enter the extension number.

2. Press  to dial the number.

3. Press  to end the call.





- You can also make a call from the call logs, contacts, or messaging screen.
- During a call, you can press volume key to adjust the in-call volume.



Answering a Call

When there is an incoming call, you can:

• Press  to answer the call.

• Press  to reject or end the call.


• Press  (**Options**) and select **Answer** to answer the call.

Press  (**Mute**) to mute the speaker, and press  (**Reject**) again to reject the call.

If the **Any key** answer function is enabled, you can press any key other than  and  to answer a call.

SOS



You can access SOS in any mode by pushing  upwards. After the alarm goes off for 13 seconds, the phone will automatically send a message to the first number contained in your relative number list. The default message will display the following: **Please help me, SOS automatically sent.** After the message is sent, the phone automatically calls the relative's number. If the first number cannot be reached, the phone will dial the next number in your relative number list. The phone will continue to dial numbers in your relative number list sequentially until a call is connected.



Push the SOS key upwards and the phone generates an alarm. The alarm will last for 13 seconds, but can be stopped at any time manually.

Name 1/2

 
In standby mode, press the Name 1 or Name 2 key and press to select **Relative Call Number > Add > Enter number / Add from contact**. After selecting the desired number, press to save the settings.



To set **Relative Call Number**, press and select **Care Assistant > Relative Call > Relative Call Number > Add > Enter number / Add from contact**.




4 Text Input

Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. Press  to switch between text input modes.


Indicator	Text Input Mode
ABC , abc and Abc	Multi-tap input modes
s ABC , s abc and s Abc	Predictive input modes
123	Number input mode



- Press  (Clear) once to delete the last character entered, or press and hold  (Clear) for about 3 seconds to delete all the characters.
- In input modes other than the number and predictive input modes, press  once to enter a space and twice to enter 0.

Entering a Word




- To enter a word in multi-tap input mode, press the keys labeled with the letters that spell the word repeatedly until the desired letters are entered.
- To enter a word in predictive input mode:

1. Press each key once according to the spelling sequence of the desired word.
The phone displays words associated with the sequence entered.
2. Press the navigation keys to scroll to the desired word.
3. Press  to enter the word.

Entering a Digit




In number input mode, press the number key labeled with the desired digit.

Entering a Symbol

1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the symbol.




5 Messages

Writing and Sending a Text Message

1. Press  and select **Messages > Write message > SMS**.
2. Write the message.
3. Press  (**Options**), select **Send to**, and enter the recipient's phone number or add a recipient from **Contacts**.
To add multiple recipients, repeat this step.
4. Scroll to the desired recipient and press  (**Options**) for the following options:

- **Send:** sends the message to the recipient.
- **Edit recipient:** allows you to change the recipient.
- **Remove recipient:** removes the recipient of the message.
- **Remove all recipients:** removes all recipients of the message.
- **Save to Drafts:** saves the message to **Drafts**.

Writing and Sending a Multimedia Message


1. Press  and select **Messages > Write message > MMS**.
2. Edit the content of the message.
You can add images, audio clips, and attachments to the message. You can also preview the message, add slides to the message, and set the playing interval between two slides.
3. Press  (**Options**), select **Send to**, and enter the recipient's phone number or add a recipient from **Contacts**.
To add multiple recipients, repeat this step.
4. Scroll to the desired recipient and press  (**Options**) for the following options:
 - **Send:** sends the message to the recipient.
 - **Send options:** allows you to set the sending options.
 - **Edit recipient:** allows you to change the recipient.
 - **Remove recipient:** removes the recipient of the message.
 - **Remove all recipients:** removes all recipients of the message.
 - **Change to CC:** copies the message to the recipient.
 - **Change to Bcc:** blind copies the message to the recipient.
 - **Save to Drafts:** saves the message to **Drafts**.



- Contact your service provider to determine the availability of the Multimedia Messaging Service (MMS) and how to subscribe to this service.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses and malicious software that can damage your phone.
- To configure the network settings provided by your service provider, press and select **Network Services > Data account > Add account**, and then select **Messages > Message settings > MMS > Data account > SIM1 or SIM 2 > OK**.

6 Contacts

Creating a Contact

1. Press and select **Contacts > Add new contact**.
2. Select **To SIM1**, **To SIM2** or **To phone** to save the contact.
3. Edit the contact information.
4. Press or  (**Yes**) to save the contact.

Searching for a Contact







1. Press and select **Contacts**.
2. Enter the first letter of the contact name in the search bar. Contacts whose names start with this letter will be displayed.

7 Multimedia




FM Radio

Your phone comes with a built-in antenna, and you can listen to the radio without a headset.

1. Press  and select **Multimedia > FM Radio** to access the frequency modulation (FM) radio.
 2. On the FM Radio screen:
- Press  to turn the FM radio on or off.

- Press ,  or  to adjust the volume.
- Press  or  to switch to the previous or next channel.
- Press  (**Options**) for options such as **Channel list**, **Manual input**, **Auto search**, **Settings**, **Sound Recorder**, **Append**, and **File list**.

Camera

1. Press  and select **Multimedia > Camera** to launch the camera.
2. Press  (**Options**) to view images or configure relevant settings.
3. Press  to take a picture.
















4. Press  (**Options**) to send or delete the picture, or press  (**Back**) to save the picture.






Image Album

1. Press  and select **Multimedia > Image Album** to launch the image album.
2. Press  to view images.
3. Press  (**Options**) for options such as **View, Image information, Send, Use as, Rename, Delete, Sort by, Delete all,** and **Storage**.




Audio Player

1. Press  and select **Multimedia > Audio Player**.
2. Select an audio clip.
3. Press  to play the clip.
When the clip is being played:
 - Press  to pause or continue.
 - Press  or  to adjust the volume.
 - Press and hold  or  to rewind or fast-forward the clip.
 - Press  or  to go back to the previous clip or advance to the next one.
4. If **Background play** is enabled, press  (**Back**) to exit the audio player screen and play the audio clip in the background.



Video Recorder

1. Press  and select **Multimedia > Video recorder** to launch the video recorder.
2. Press  (**Options**) to configure relevant settings.
3. Press  to start recording a video clip.
4. Press  and then  (**Yes**) to save the video clip.

Video Player



1. Press  and select **Multimedia > Video Player** to launch the video player.
2. Select a video clip.
3. Press  to start playing the video clip.
4. Press  (**Options**) for options such as **Play**, **Send**, **Rename**, **Delete**, **Delete all**, **Sort by**, and **Storage**.

Sound Recorder









1. Press  and select **Multimedia > Sound Recorder**.
2. Press  (**Options**) and select **New record**.
While recording, you can press  or  to pause or continue.
3. Press  (**Stop**) to stop recording.

8 Care Assistant

Relative Call

- Press  and select **Care Assistant > Relative Call > Auto Answer > Settings > Switch On/Off > On/Off**.
- When **Auto Answer** is turned on, set the auto answer time. Press  and select **Care Assistant > Relative Call > Auto Answer > Settings > Time**. Then choose **5 seconds, 20 seconds, 30 seconds** or **40 seconds**.

Magnifier

- Press  and select **Care Assistant > Magnifier**. You can also press , select **Settings > Phone settings > Direction key setup** and press  or  to set the Up, Down, Left, or Right key as a shortcut to **Magnifier**.
- Press  and select **Care Assistant > Magnifier**, press and hold  for about 3 seconds, or press the selected direction key to activate magnifier. While using the magnifier, press  or  to adjust the zoom.



9 Bluetooth (Optional)

Your phone supports Bluetooth. You can synchronize data between your phone and a personal computer (PC), exchange data with other Bluetooth devices, and connect a Bluetooth headset to your phone.



You can turn Bluetooth on by configuring Bluetooth settings.

Connecting a Bluetooth Headset to Your Phone

1. Press  and select **Tools > Bluetooth > Activate Bluetooth > On** to turn Bluetooth on.
2. Select **Search hands-free device** to search for available Bluetooth headsets.
3. Scroll to the desired Bluetooth headset and press  (**Pair**).
4. Enter the password to pair the Bluetooth headset with your phone.


When the Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen, indicating that the headset is ready for use.



A Bluetooth headset is not included in the product package and must be purchased separately.

Transferring Data

1. Press  and select **Tools > Bluetooth > Activate Bluetooth > On** to turn Bluetooth on.

2. Select **Search for Bluetooth device** to search for available Bluetooth devices.
3. Scroll to the desired Bluetooth device and press  (**Pair**). When you pair your phone with the device for the first time, a password is required.
4. Exchange data between your phone and the Bluetooth device.

10 WAP




You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the corresponding service from your service provider and configure relevant settings on your phone.

For details about services and charges, contact your service provider.



Network Settings

To access WAP sites on your phone, you need to set your data account and WAP parameters first.



Setting the Connection Profile

1. Press  and select **Network Services > Data account**.
2. Select the network type, press  (**Options**), and select **Add account**.
3. Press  (**OK**) and select **Yes** to save the settings.

Setting the WAP Profile

1. Press  and select **Network Services > WAP > Settings > Data account**.
2. Select your service provider and press  (OK).

Connecting to a Network

1. Press  and select **Network Services > WAP > Enter address**.
2. Enter the URL of the desired website.
3. Press  (Options) and select **Done** to access the website.

11 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are

using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.

- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When

the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the

device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.518 W/kg, and when properly worn on the body is 0.515 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.276 W/kg, and when properly worn on the body is 0.492 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of

the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

CE 0678

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Please visit www.huaweidevice.com/worldwide/support/hotline for recently updated hotline and email address in your country or region.