

- \* Depending on the software installed or your service provider or region, some of the descriptions in this guide may not match your phone exactly.
- \* Depending on your region, your phone and accessories may appear different from the illustrations in this guide.

[www.armanisamsungmobile.com](http://www.armanisamsungmobile.com)

Printed in Korea  
Code No.:GH68-20883A  
English (EU). 11/2008. Rev. 1.0

© 2008 Samsung Electronics Co., Ltd. <http://www.gsmlife.com>

# EMPORIO ARMANI

## SAMSUNG

**Samsung**  
**M7500**





### **Copyright information**

- Bluetooth<sup>®</sup> is a registered trademark of the Bluetooth SIG, Inc. worldwide.  
Bluetooth QD ID: B014429
- Java<sup>™</sup> is a trademark or registered trademark of Sun Microsystems, Inc.
- Windows Media Player<sup>®</sup> is a registered trademark of Microsoft Corporation.

**CE 0168**



# Important safety precautions

- Failure to comply with the following precautions may be dangerous or illegal.

## **Drive safely at all times**

Do not use a hand-held phone while driving. Park your vehicle first.

## **Switch off the phone when refuelling**

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

## **Switch off in an aircraft**

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

## **Switch off the phone near all medical equipment**

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

## **Interference**

All wireless phones may be subject to interference, which could affect their performance.

## **Be aware of special regulations**

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


## **Water resistance**

Your phone is not water-resistant. Keep it dry.

## Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

## Emergency calls

Key in the emergency number for your present location, then press .

## Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

## Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

## Qualified service


 

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 53.

# About this Guide

This User's Guide provides you with condensed information about how to use your phone.

In this guide, the following instruction icons appear: .

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
-  Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
- [ ] Indicates a key on the phone. For example, [  ]
- < > Indicates a soft key, whose function is displayed on the phone screen. For example, < **Select** >



- **3G**  
Your phone is capable of operating in a 3G environment, allowing much greater data transfer speed, video streaming, and video conferencing.

## *Special features of your phone*



- **User created theme**  
Create your own theme using your favourite background images and colours.



- **MobileBlog**  
Share your photos and videos on photo sharing websites and blogs.



- **RSS reader**

Use RSS reader to get the latest news from your favourite websites.



- **Camera and camcorder**

Use the camera module on your phone to take a photo or record a video.



- **Synchronisation with Windows Media Player**

Transfer music files to your phone directly from Windows Media Player.



- **Music player**

Play music files on your phone. You can use other phone functions while listening to music.



- **FM radio**

Listen to your favourite radio stations anytime, anywhere.



- **Digital data printing**

Print images, messages, and personal data directly from your phone.



- **Bluetooth**

Transfer media files and personal data, and connect to other devices using wireless Bluetooth technology.



- **Web browser**

Access the wireless web to get up-to-the-minute information and a wide variety of media content.



## **Unpack** **8**

---

*Make sure you have each item*

## **Get started** **9**

---

*First steps to operating your phone*

Assemble and charge the phone .....	9
Power on or off .....	10
Phone layout .....	10
Keys and icons .....	11
Access menu functions .....	15
Use shortcut icons .....	16
Enter text .....	17
Customise your phone .....	19
Use an optional memory card .....	22

## **Step outside the phone** **24**

---

*Begin with call functions, camera, music player, web browser, and other special features*

Make or answer calls .....	24
Use the camera .....	26
Upload photos and videos to the web .....	27
Play music .....	29
Listen to the FM radio .....	32
Browse the web .....	34
Use Phonebook .....	34
Send messages .....	35
View messages .....	37
Use Bluetooth .....	38
Switch applications .....	41

## **Menu functions** **42**

---

*All menu options listed*

## **Health and safety information** **53**

---

# Overview of menu functions

To access Menu mode, Press < **Menu** > in Idle mode. (Depending on your region, press [Centre] in Idle mode).

## 1 Call log

## 2 Phonebook

## 3 Music

- 1 Music player
- 2 Music recognition

## 4 Browser<sup>1</sup>

- 1 Go to homepage
- 2 Enter URL
- 3 Bookmarks
- 4 Saved pages
- 5 History
- 6 Settings

## 5 Messages

- 1 Create message
- 2 Inbox
- 3 Email inbox
- 4 Drafts
- 5 Outbox
- 6 Sentbox
- 7 My folders
- 8 Templates
- 9 Delete by folders
- 10 Settings
- 11 SOS messages<sup>2</sup>
- 12 Memory status

## 6 My files<sup>3</sup>

Images  
Videos  
Sounds  
Other files  
Memory status

## 7 Organiser

- 1 Calendar
- 2 Memo
- 3 Task
- 4 World clock
- 5 Calculator
- 6 Convertor

## 8 Camera

## 9 FM radio

## \* Applications

- 1 Image editor
- 2 Games and more
- 3 Voice recorder
- 4 Bluetooth
- 5 Synchronise<sup>2</sup>
- 6 Timer
- 7 Stopwatch
- 8 RSS reader
- 9 SIM Services<sup>4</sup>

## 0 Alarms

## # Settings

- 1 Phone profiles
- 2 Display and light
- 3 Time and date
- 4 Phone settings
- 5 Application settings
- 6 Security
- 7 Network settings
- 8 PC connections
- 9 Setup wizard
- 10 Memory settings
- 11 Reset settings

1. Labelled differently depending on your service provider.
2. Available only if supported by your region or service provider.
3. Additional folders will be available if you insert a memory card.
4. Available only if supported by your USIM or SIM card.

## *Unpack*

*Make sure you have each item*

- Phone
- Travel adapter
- Battery
- User's Guide

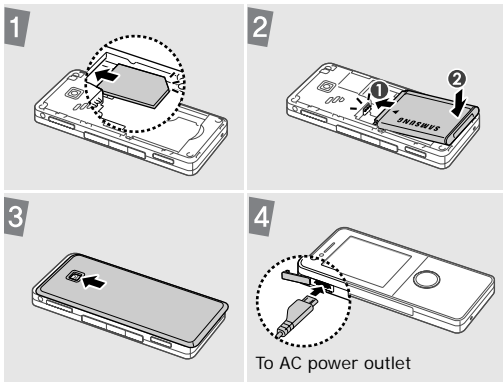 
You can obtain various accessories from your local Samsung dealer.

- The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your region or service provider.

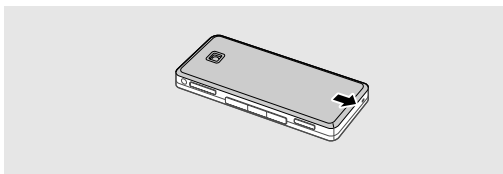 
## Get started

First steps to operating your phone

### Assemble and charge the phone

 


### Removing the battery cover




## Power on or off

### Switch on

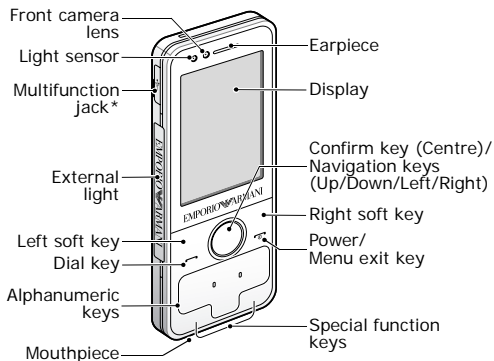 
1. Press and hold [].
2. If necessary, enter the PIN and press <**Confirm**>.
3. When the setup wizard opens, customise your phone according to your preferences.

### Switch off

Press and hold [].

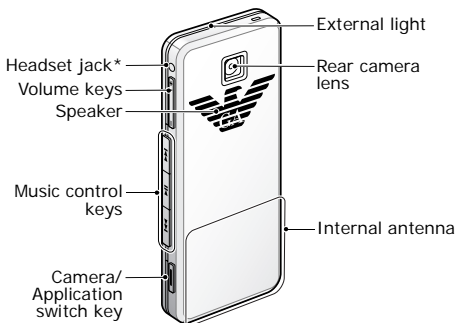 
## Phone layout

### Front view



\* For micro USB stereo headset

## Rear view



\* For 3.5 mm headset

- You can lock the keypad to prevent any unwanted phone operations, from accidentally pressing any of the keys. To lock or unlock the keypad, press and hold [\*].

## Keys and icons

### Keys



Perform the function indicated on the bottom line of the display.



In Idle mode, scroll through shortcut icons.

In Menu mode, scroll through menu options.

Select the highlighted option or confirm input.



Make or answer a call.

In Idle mode, retrieve the numbers recently dialed, missed, or received.



Press and hold to switch the phone on or off.

End a call.

In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.



In Idle mode, press and hold [**1**] to access your voicemail server. Press and hold [**0**] to enter an international call prefix.



Enter special characters or perform special functions.



In Idle mode, press and hold [**#**] to activate or deactivate the Silent profile. Press and hold [**\***] to lock or unlock the keypad. Press and hold [**\***] to enter a pause between numbers.



Adjust the phone volume.

In Idle mode, press and hold to turn on the external light in red, green, and blue for a few seconds.



During playback, skip to the next file. Press and hold to scan forward in a file.



Press and hold to launch the music player. Begin, pause, or resume playback.



During playback, return to the previous file. Press and hold to scan backward in a file.



In Idle mode, press and hold to turn on the camera.

In Camera mode, take a photo or record a video.

If you change a default function for the key, you can open the application switch window to access other applications without exiting the current application.

## Icons

The following icons may appear on the top line of the screen to indicate your phone's status. Depending on your region or service provider, the icons shown on the display may vary.



Signal strength



Connecting to GPRS (2.5G) network or transferring data in GPRS (2.5G) network





Connecting to EDGE network or transferring data in EDGE network



Connecting to UMTS (3G) network or transferring data in UMTS (3G) network



Connecting to HSDPA (3G+) network or transferring data in HSDPA (3G+) network



Voice call in progress



Video call in progress



SOS message feature activated



Profile setting:

- : Normal
- : Silent
- : Driving
- : Meeting
- : Outdoor
- : Offline



Browsing Internet



Connected to secured web page



Bluetooth active



Bluetooth headset or hands-free car kit connected



Connected with PC via USB port



New message:

- : Text message
- : Multimedia message
- : Email
- : Voicemail
- : Push message
- : Configuration message



Memory card inserted



Battery power level



Current time

---

## Access menu functions

### Select an option

1. Press a desired soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>**, **<OK>**, or [Centre] to confirm the function displayed or option highlighted.
4. Press **<Back>** to move up one level.  
Press [] to return to Idle mode.

### Use menu numbers

Press the number key corresponding to the option you want.






## Use shortcut icons

In Idle mode, there are icons on the display, which give you easy access to popular menus.

### Navigate shortcut icons

- To move among the shortcut icons, press [Left] or [Right].
- To access a highlighted menu, press [Centre].

### Available shortcut icons

- : create a new message.
- : access the **Music player** menu.
- : select a profile.
- : open the calendar.
- : set a colour of the external light.

Available shortcut icons may vary depending on your region.

### Set your favourite shortcut menus

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Shortcuts**.
2. Scroll to a menu to be changed.
3. Press <Change>.
4. Select the menu you want.
5. Press <Save>.

## Enter text

### Change the text input mode

- Press and hold [\*] to switch between T9 mode and ABC mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press [\*] to change case or switch to Number mode.
- Press and hold [#] to switch to Symbol mode.

### ABC mode

To enter a word:

Press the appropriate key until the character you want appears on the display.

<b>T9 mode</b>	<p>To enter a word:</p> <ol style="list-style-type: none"><li>1. Press [<b>2</b>] to [<b>9</b>] to start entering a word.</li><li>2. Enter the whole word before editing or deleting characters.</li><li>3. When the word displays correctly, press [<b>#</b>] to insert a space. Otherwise, press [<b>0</b>] to display alternate word choices.</li></ol>
<b>Number mode</b>	<p>Press the keys corresponding to the digits you want.</p>
<b>Symbol mode</b>	<p>Press the keys corresponding to the symbols you want.</p>
<b>Other operations</b>	<ul style="list-style-type: none"><li>• Press [<b>1</b>] to enter punctuation marks or special characters.</li><li>• Press [<b>#</b>] to insert a space.</li><li>• Press the Navigation keys to move the cursor.</li><li>• Press &lt;<b>Clear</b>&gt; to delete characters one by one.</li><li>• Press and hold &lt;<b>Clear</b>&gt; to clear the entire display.</li></ul>

# Customise your phone

---

## Display language

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Language** → **Screen text**.
2. Select a language.
3. Press <**OK**> → <**Save**>.

## Call ringer melody

To change the profile properties:

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone profiles**.
2. Scroll to the sound profile you are using.
3. Press <**Options**> and select **Edit**.
4. Select **Voice call ringtone** → a category → a ringtone.
5. Select **Video call ringtone** → a category → a ringtone.
6. Press <**Options**> and select **Save**.

To change the profile:

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone profiles**.
2. Select the profile you want.
3. Press [Centre].

### Key tone volume

In Idle mode, press [**+**/**-**] to adjust the key tone volume.

### Idle mode wallpaper

1. In Idle mode, press **<Menu>** and select **Settings** → **Display and light** → **Display** → **Home screen**.
2. Scroll left or right to **Image**.
3. Scroll down and select **Wallpaper**.
4. Select an image category.
5. Select an image.
6. Press **<OK>**.
7. Press **<Options>** and select **Save**.

### Themes for the display

To create a theme:

1. In Idle mode, press **<Menu>** and select **Settings** → **Display and light** → **Display** → **My theme**.
2. Press **<Options>** and select **Create** → **Easy** or **Expert**.
3. Customise the theme as desired by following the screen.
4. When you have finished, enter a name for the theme and press **<Save>**.
5. Press **<Yes>** to apply the theme.

---

To apply a theme:

1. In Idle mode, press <**Menu**> and select **Settings** → **Display and light** → **Display** → **My theme**.
2. Select a theme.
3. Press <**Save**>.



To restore the default theme quickly, enter [\*], [#], [8], [2], [7], and [#] in Idle mode and press <**Yes**>. Your phone restarts automatically and uses the default theme.

---

### Silent profile

You can activate the Silent profile to avoid disturbing other people. In Idle mode, press and hold [#].

---

### Phone lock

1. In Idle mode, press <**Menu**> and select **Settings** → **Security** → **Phone lock**.
2. Select **On**.
3. Press <**Save**>.
4. Enter a new 4- to 8-digit password and press <**Confirm**>.
5. Enter the new password again and press <**Confirm**>.



## Use an optional memory card

---

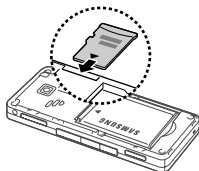 
### **Important memory card information**

- Frequent erasing and writing will shorten a card's lifespan.
- Do not remove a card from the phone or turn off the phone while data is being accessed or transferred. This could result in loss of data and/or damage to the card or phone.
- Do not subject cards to strong shocks.
- Do not touch card terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.
- Keep cards away from small children or pets.
- Do not expose cards in a place subject to electrostatic discharge and/or electrical noise.

---

**Insert a  
memory card**

1. Remove the battery cover.
2. Insert the card into the card slot, with the label side face up.



3. Attach the battery cover.

---

**Remove the  
memory card**

Remove the card from the slot.

## Step outside the phone



 

 


 
 
 



 

 

 
 


 
 
 






 
 

Begin with call functions, camera, music player, web browser, and other special features

### Make or answer calls


---

#### Make a call

 

To make a voice call:

1. In Idle mode, enter an area code and phone number.
2. Press [].  
Press [, , , , , , , , , , , , , , , , , , , , , , , , , , , , , , ] to adjust the volume.
3. Press [] to end the call.

To make a video call:

1. In Idle mode, enter an area code and phone number.
2. Press <**Options**> and select **Video call**.
3. Press [] to end the call.

#### Answer a call

1. When the phone rings, press [].  
If it is a video call, press <**Show me**> to allow the caller to see you via the camera.
2. Press [] to end the call.

---

### Use the speakerphone feature

During a voice call, press [Centre] and then <**Yes**> to activate the speaker.

Press [Centre] again to switch back to the earpiece.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

---

### Make a multi-party call

1. During a call, call the second participant.  
The first call is put on hold.
2. Press <**Options**> and select **Conference call**.
3. Repeat step 1 and 2 to add more participants.
4. During a multi-party call:
  - Press <**Options**> and select **Private call** to have a private conversation with one participant.
  - Press <**Options**> and select **End** → **Select participant** → a participant → **Drop** to drop one participant.
5. Press [] to end the multi-party call.

## Use the camera

---

### Take a photo

1. In Idle mode, press and hold [Camera].
  2. Rotate the phone to the left for landscape view.
  3. Aim the lens at the subject and make any desired adjustments.
  4. Press [Centre] or [Camera] to take a photo. The photo is saved automatically.
  5. Press <📷> or [Camera] to take another photo.
- 

### View a photo

1. In Idle mode, press <Menu> and select **My files** → **Images** → **My photos**.
  2. Select the photo you want.
- 

### Record a video

1. In Idle mode, press and hold [Camera].
2. Press [**1**] repeatedly to switch to Record mode.
3. Rotate the phone to the left for landscape view.
4. Press [Centre] or [Camera] to start recording.

- 
5. Press <[Camera]> or [Camera] to stop recording. The video is saved automatically.
  6. Press <[Camera]> or [Camera] to record another video.

---

### View a video

1. In Idle mode, press <Menu> and select **My files** → **Videos** → **My video clips**.
2. Select the video you want.

## Upload photos and videos to the web

---


### Activate the ShoZu account

1. In Idle mode, press <Menu> and select **Settings** → **Application settings** → **MobileBlog** → **ShoZu activation**.
2. Select **On**.
3. Follow the on-screen instructions to activate the account.

**Set a destination site**

1. In Idle mode, press <**Menu**> and select **Settings** → **Application settings** → **MobileBlog** → **Destinations**.
2. Press <**Options**> and select **Create new**.
3. Follow the on-screen instructions to add a new destination site.

**Upload a file**

1. Access an application, such as **My files** or **Camera**.
2. Select or capture a photo or video.
3. Press <**Options**> or < > and select **Upload to web**.
4. Select a destination.
5. Enter the title and description, and select a tag.
6. Press <**Upload**>.

# Play music

---

## Prepare music files

Use these methods:

- Download from the wireless web.
- Download from a PC using the optional Samsung PC Studio. See Samsung PC Studio User's Guide.
- Receive via Bluetooth.
- Copy to a memory card. See the next section.
- Synchronise music files with Windows Media Player. See page 30.




- Your phone accepts microSD™ memory cards up to 8 GB (depending on memory card manufacturer and type).
- When inserting a memory card with a large amount of files, your phone might work rather slowly for a few minutes while database updates. This may also affect some phone functions. This problem is temporary and is not a phone defect.

## Copy music files to a memory card


1. Insert a memory card into the phone.
2. In Idle mode, press <Menu> and select **Settings** → **PC connections** → **Mass storage**.
3. Press <Save>.



4. Press [] to return to Idle mode.
  5. Connect your phone and PC with an optional PC data cable.
  6. Select **Open folder to view files** when a pop-up window appears on your PC.
  7. Copy files from the PC to the memory card.
  8. When you have finished, disconnect the phone from the PC.
- 

**Synchronise  
with  
Windows  
Media Player**

You can copy music files to your phone by synchronising with Windows Media Player 11.

1. In Idle mode, press <**Menu**> and select **Settings** → **PC connections** → **Media player**.
2. Press <**Save**>.
3. Press [] to return to Idle mode.
4. Connect your phone and PC with an optional PC data cable.
5. Select **Sync digital media files to this device** when a pop-up window appears on your PC.

- 
6. Enter the name of your phone and click **Finish**.
  7. Select and drag the music files you want to the sync list.
  8. Click **Start Sync**.
  9. When synchronisation is finished, disconnect the phone from the PC.

---

### Play music files

1. In Idle mode, press <**Menu**> and select **Music** → **Music player**.
2. Select a music category → a music file.
3. During playback, use the following keys:
  - Centre: pause or resume playback.
  - Left: return to the previous file. Press and hold to scan backward in a file.
  - Right: skip to the next file. Press and hold to scan forward in a file.
  - **+/-**: adjust the volume.
4. Press [**⏹**] twice to stop playback.

### Create a playlist

1. From the music player screen, press <**Options**> and select **Open playlist** → **Library** → **Playlists** → **Create playlist**.
2. Enter the title of the playlist and press <**Save**>.
3. Select the added playlist.
4. Select **Add**.
5. Select the files you want and press <**OK**>.
6. Scroll to a file and press [Centre] to play music.

## Listen to the FM radio



Use a micro USB stereo headset only to listen to the radio.

### Listen to the radio

1. Plug the connector of a headset into the multifunction jack on the phone.
2. In Idle mode, press <**Menu**> and select **FM radio**.

- 
3. When you turn on the FM radio for the first time, press <**Yes**> to start automatic tuning.  
Available radio stations are automatically saved.
  4. Press [Left] or [Right] to find available radio stations.  
Alternatively, press [Up] or [Down] to select a stored radio station.
  5. Press [Centre] to turn off the radio.

---

### Store radio stations

By automatic tuning:

1. From the radio screen, press <**Options**> and select **Self-tuning**.
2. Press <**Yes**> to confirm.  
Available radio stations are automatically saved.

By manual setup:

1. From the radio screen, press [Left] or [Right] to select the radio station you want.
2. Press <**Options**> and select **Add to Favourites**.

## Browse the web

---

### Launch the web browser

In Idle mode, press <**Menu**> and select **Browser** → **Go to homepage**. The homepage of your service provider opens.

---

### Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To select an item, press [Centre].
- To return to the previous page, press <**Back**>.
- To access browser options, press <**Options**>.



The browser options may differ depending on your service provider.

## Use Phonebook

---

### Add a contact

1. In Idle mode, enter a phone number and press <**Options**>.
2. Select **Add to Phonebook** → a memory location → **New**.
3. For **Phone**, select a number type.
4. Specify contact information.
5. Press [Centre], or press <**Options**> and select **Save** to save the contact.

---

### Find a contact

1. In Idle mode, press <**Phonebook**>.
2. Enter the first few letters of the name you want.
3. Select a contact.
4. Scroll to a number and press [↩] to dial, or press <**Options**> and select **Edit** to edit contact information.

## Send messages

---

### Send a text message

1. In Idle mode, press <**Menu**> and select **Messages** → **Create message** → **Message**.
2. Enter the message text.
3. Press [Up] to move to the recipient field.
4. Enter destination numbers.
5. Press <**Options**> and select **Send** to send the message.

**Send a  
multimedia  
message**

1. In Idle mode, press <**Menu**> and select **Messages** → **Create message** → **Message**.
2. Enter the message text.
3. Press <**Options**> and select **Add multimedia**, or **Advanced** → **Add attachment**.
4. Add a media file, contact, calendar item, task, memo, or bookmark item.
5. Press <**Options**> and select **Advanced** → **Add subject**.
6. Enter the message subject.
7. Press [Up] to move to the recipient field.
8. Enter destination numbers or email addresses.
9. Press <**Options**> and select **Send** to send the message.

---

### Send an email

1. In Idle mode, press <**Menu**> and select **Messages** → **Create message** → **Email**.
2. Enter the email text.
3. Press <**Options**> and select **Attach multimedia** or **Attach organiser**.
4. Add a media file, contact, calendar item, task, memo, or bookmark item.
5. Press [Up] to move to the subject field.
6. Enter the email subject.
7. Press [Up] to move to the recipient field.
8. Enter email addresses.
9. Press <**Options**> and select **Send** to send the email.

## View messages

---

### View a text message

1. In Idle mode, press <**Menu**> and select **Messages** → **Inbox**.
2. Select a text message.



**View a multimedia message**

1. In Idle mode, press <**Menu**> and select **Messages** → **Inbox**.
2. Select a multimedia message.

**View an email**

1. In Idle mode, press <**Menu**> and select **Messages** → **Email inbox**.
2. Press <**Options**> and select **Download**.
3. Select an email or a header.
4. If you selected a header, press <**Options**> and select **Retrieve** to view the body of the email.

## **Use Bluetooth**

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

---

## Turn on Bluetooth

1. In Idle mode, press <Menu> and select **Applications** → **Bluetooth**.
2. Press <Options> and select **Settings**.
3. Scroll down to **Activation** and scroll left or right to **On**.
4. Scroll down to **My phone's visibility** and scroll left or right to **On**.
5. Press <Save>.

---

## Search for and pair with a Bluetooth device

1. In Idle mode, press <Menu> and select **Applications** → **Bluetooth** → **Search for new device**.
2. Select a device.
3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and press <OK>. When the owner of the other device enters the same code, pairing is complete.

### Send data

1. Access an application, such as **Phonebook**, **My files**, **Calendar**, **Memo**, **Task**, or **Browser**.
  2. Select an item.
  3. Press **<Options>** and select **Send namecard via**, **Send via**, or **Send URL via** → **Bluetooth**.
  4. Search for and select a device.
  5. If necessary, enter the Bluetooth PIN and press **<OK>**.
- 

### Receive data

1. If necessary, enter the Bluetooth PIN and press **<OK>**.
2. Press **<Yes>** to confirm that you are willing to receive.

## Switch applications

You can switch to other applications from a menu, without closing the menu screen you are using.

---

### Change the camera key function

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Camera key**.
  2. Select **Switch**.
  3. Press <**Save**>.
- 

### Switch to an application

1. While using a menu, press [Application switch].
  2. Select an application.
- 

### Available applications

- **Call**: open the dialling screen.
  - **Messages**: access the **Messages** menu.
  - **Browser**: launch the web browser.
  - **Games and more**: open a list of games.
- 

### Close all running applications

1. Press [Application switch].
2. Scroll to **End all?**
3. Press <**Yes**>.

## *Menu functions*

*All menu options listed*

This section provides brief explanations of menu functions on your phone.

### **Call log**

Check the most recent calls dialled, received, or missed.

### **Phonebook**

Search for contact information stored in Phonebook.

### **Music**

<b>Menu</b>	<b>Description</b>
Music player	Access and listen to all music files sorted by criteria. You can also make your own music playlists.
Music recognition	Download information for your music files from the online database and browse recognition results. You can also get information on how to buy the music files.

# Browser

Menu	Description
Go to homepage	Connect your phone to the network and load the homepage of the wireless web service provider.
Enter URL	Enter a URL address and access the associated web page.
Bookmarks	Save URL addresses in order to quickly access web pages.
Saved pages	Access the list of pages you have saved while online.
History	Access the list of pages you have accessed recently.
Settings	Clear the cache. Delete cookies or set whether or not they are stored. Change the settings for the web browser and access version and copyright information about it. Select a connection profile to be used for accessing the wireless web.

## Messages

Menu	Description
Create message	Create and send text, multimedia, or email messages.
Inbox	Access messages that you have received.
Email inbox	Access emails that you have received.
Drafts	Access messages that you have saved to send at a later time.
Outbox	Access messages that the phone is attempting to send or has failed to send.
Sentbox	Access messages that you have sent.
My folders	Create new folders and organise your messages.
Templates	Make and use templates of frequently used messages or passages.
Delete by folders	Delete messages in each message folder all at once.
Settings	Set up various options for using the messaging services.

Menu	Description
SOS messages	Specify options for sending and receiving an SOS message. You can send an SOS message by pressing [+/-] 4 times when the exposed keys are locked. This feature may not be available depending on your region or service provider.
Memory status	Check information about the memory currently in use.

## My files

Menu	Description
Images, Videos, Sounds, Other files	Access media files and other files stored in the phone's memory.
Memory status	Check information about the memory currently in use.



Additional folders will be available if you insert a memory card.



## Organiser

Menu	Description
Calendar	Keep track of your schedule.
Memo	Make memos for things that are important and manage them.
Task	Make a list of tasks you need to complete.
World clock	Set your local time zone and find out the current time in another part of the world.
Calculator	Perform arithmetic functions.
Convertor	Do conversions, such as length and temperature.

## Camera

Use the camera embedded in your phone to take photos and record videos.

## FM radio

Listen to music or news via the FM radio on your phone.

# Applications

Menu	Description
Image editor	Edit your images using various editing tools.
Games and more	Access the embedded Java games and download Java applications.
Voice recorder	Record voice memos and any other sounds.
Bluetooth	Connect the phone wirelessly to other Bluetooth devices.
Synchronise	Synchronise personal data, such as contacts, calendar items, tasks, and memos with the specified web server. This feature may not be available depending on your region or service provider.
Timer	Set a period of time for the phone to count down.
Stopwatch	Measure elapsed time.
RSS reader	Save your favourite news channels or blogs to libraries and get the latest news and updated information from them whenever you want.

Menu	Description
SIM Services	Use a variety of additional services offered by your service provider. Depending on your USIM or SIM card, this menu may be available but labelled differently.

---

## Alarms

Set a wake-up alarm to wake you up in the morning or an alarm to alert you to an event at a specific time.

## Settings

Menu	Description
Phone profiles	Change the sound settings of the phone for different events or situations.
Display and light → Display → Home screen	Change the background image that is displayed in Idle mode and select a clock type.
Display and light → Display → My theme	Select or create a theme for the phone display.

---

Menu	Description
Display and light → Display → Main menu style	Select a display style for the main menu screen.
Display and light → Display → Dialling display	Customise the settings for the display while dialling.
Display and light → Display → Greeting message	Enter the greeting that is displayed briefly when the phone is switched on.
Display and light → Light → LCD brightness	Adjust the brightness of the display for varying lighting conditions.
Display and light → Light → Backlight time	Select the length of time the backlight or display stays on when the phone is not used.
Display and light → Light → Keypad light	Set how the phone controls the use of the keypad light.
Display and light → External light	Select a colour and adjust the brightness of the external light.
Time and date	Change the time and date displayed on your phone.
Phone settings → Language	Select a language to be used for the display text or T9 input mode.

Menu	Description
Phone settings → Shortcuts	Select shortcut menus to be displayed in Idle mode.
Phone settings → Keypad auto-lock	Set the phone to lock the keypad automatically when the display turns off.
Phone settings → Camera key	Set a default function for [Camera/Application switch].
Application settings	Customise the settings for using applications available on the phone.
Security → Phone lock	Activate your phone password to protect your phone against unauthorised use.
Security → SIM lock	Set the phone to work only with the current USIM or SIM card by assigning a SIM lock password.
Security → PIN lock	Activate your PIN to protect your USIM or SIM card against unauthorised use.
Security → Privacy lock	Lock access to messages, files, call logs, contacts, calendar, memos, or tasks.
Security → Fixed dialling mode	Set the phone to restrict calls to a limited set of phone numbers, if supported by your USIM or SIM card.

Menu	Description
Security → Change phone password	Change the phone password.
Security → Change PIN code	Change the PIN.
Security → Change PIN2 code	Change the PIN2.
Security → Mobile tracker	Set the phone to send the preset tracking message to your family or friends when someone tries to use your phone with another USIM or SIM card. This feature may be unavailable due to certain features supported by your service provider.
Network settings → Network selection	Select the network to be used while roaming outside of your home area, or let the network be chosen automatically.
Network settings → Network mode	Change to an appropriate band when you travel abroad.

<b>Menu</b>	<b>Description</b>
Network settings → Preferred networks	Add a new network to your preferred network list, if your USIM or SIM card supports it.
Network settings → Connections	Create and customise the profiles containing the settings for connecting your phone to the network.
PC connections	Select a USB mode that will be used when you connect your phone to a PC via USB interface.
Setup wizard	Quickly customise basic settings of your phone. Select the option you want for each setting by following the on-screen instructions.
Memory settings	Check information about the memory currently in use. You can also clear the memory.
Reset settings	Reset the phone's settings you have changed.

### **SAR certification information**

---

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0 W/kg.<sup>1</sup>

The highest SAR value for this model phone was 0.779 W/kg.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

---

1. The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.



Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

## **Precautions when using batteries**

---

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the service provider.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.

- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0° C (32° F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## **Road safety**

---

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

## **Operating environment**

---

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

## **Electronic devices**

---

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

## **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

## **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

## **Other medical devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted facilities**

Switch off your phone in any facility where posted notices require you to do so.

## **Potentially explosive environments**

---

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.


## **Emergency calls**

---

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

## **Other important safety information**

---

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## **Care and maintenance**

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.

- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.


## Correct disposal of this product

---

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

 This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



## **Correct disposal of batteries in this product**

---



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

# Declaration of Conformity (R&TTE)

We,

**Samsung Electronics**

declare under our sole responsibility that the product

**GSM Mobile Phone : M7500**

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

<b>SAFETY</b>	<b>EN 60950-1 : 2001+A11:2004</b>
	<b>EN 301 489-01 V1.6.1 (09-2005)</b>
	<b>EN 301 489-07 V1.3.1 (11-2005)</b>
<b>EMC</b>	<b>EN 301 489-17 V1.2.1 (08-2002)</b>
	<b>EN 301 489-24 V1.3.1 (11-2005)</b>
	<b>EN 50360 : 2001</b>
<b>SAR</b>	<b>EN 62209-1 : 2006</b>
	<b>EN 301 511 V9.0.2 (03-2003)</b>
	<b>EN 300 328 V1.7.1 (10-2006)</b>
<b>RADIO</b>	<b>EN 301 908-1 V2.2.1 (10-2003)</b>
	<b>EN 301 908-2 V2.2.1 (10-2003)</b>

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex<sup>IV</sup> of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

**BABT, Balfour House, Churchfield Road,  
Walton-on-Thames, Surrey, KT12 2TD, UK\***  
Identification mark: 0168

The technical documentation kept at :

 
**CE 0168**Samsung Electronics QA Lab.

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK\*

2008.09.17

(place and date of issue)

**Yong-Sang Park / S. Manager**

(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.