

INTEX

AQUA MARVEL
GSM/GPRS Mobile Phone
User Guide

1

Dear INTEX customer,

Congratulations on becoming a proud owner of INTEX product. You have now joined the fraternity of millions of satisfied INTEX customers spread across the globe.

Intex Technologies is one of the fastest growing IT Hardware, Mobile Phones and Electronics Company. A well established brand, INTEX has kept pace with the technology needs of millions of IT hardware & electronics consumers and has been serving them with more than 300 user friendly, high quality, state-of-the art yet simple products/solutions. The products have been in the market since 1996 and conform to global standards.

Brand INTEX covers a wide range of computer peripherals and accessories such as Computer Multimedia speakers, Cabinets, Keyboards, Mouse, UPS, Add-on cards, Webcams, Headphones, Laptop bags, etc. As a part of its diversification strategy, Intex also offers an interesting range of PCs, TFT-LCD Monitors, Consumer Electronics (DVD Players), Home UPS & Mobile Phones.

Every INTEX product goes through a rigorous process of sample evaluation and approval before commercial launch. Customers look upon the brand as a value-for-money & feature-rich offering, supported by efficient after sales service.

We look forward to your patronage.

It would be our pleasure to receive feedback and suggestions you may have for improvements in the product(s) you are using.

*Intex Technologies (I) Ltd
info@intextechnologies.com*

www.intextechnologies.com

Helpline No. 1800-103- 8822 (India)

Intex Way Gulf LLC

service@intexuae.com

www.intexuae.com

Toll Free No. 800-468- 39823 (Dubai)

[Tel: 00971 04 3931991](tel:00971043931991)

SAFETY TIPS

- *Use of wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.*
- *Make sure the cell phone has a low SAR.*
- *Keep your calls short or send a text message (SMS) (instead. This advice applies especially to children, adolescents and pregnant women.*

- *Use cell phone when the signal quality is good.*
- *People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.*

Contents

<i>1. WARNING</i>	<i>8</i>
-------------------------	----------

1 SAFETY INFORMATION	9
2 CAUTIONS ON MOBILE PHONE USE	10
3 PRECAUTIONS FOR USE OF BATTERY	11
4 CAUTIONS FOR CHILDREN	12
II. KEYS AND PARTS	13
ICONS	14
III. START TO USE	16
1 BATTERY	16
2 CONNECTING TO NETWORK	20
IV. BASIC FUNCTIONS	27
1 MAKE CALLS	27
2 EMERGENCY CALLS	31
3 ANSWER CALLS	31
4 CALL HISTORY	32

5 CONNECTION OPTION.....	32
V. FUNCTION MENU INSTRUCTION.....	35
1. BROWSER	35
2. CALCULATOR.....	35
3. CALENDAR	36
4. CALL LOG.....	36
5. CAMERA.....	37
6. CLOCK	37
7. CONTACTS.....	38
8. DOWNLOADS	38
9. EMAIL	39
10. FILE MANAGER	39
11. FM RADIO.....	39
12. GALLERY.....	40

13. MESSAGES	41
14. MUSIC	42
15. DIAL	43
16. SEARCH	43
17. SETTINGS.....	43
18. SIM TOOLKIT.....	49
19. SOUND RECORDER	49
20. INTEX ZONE.....	50
VI. TECHNICAL INFORMATION.....	51

1. Warning

Please read the concise rules. The breach of the rules may result in danger or violation of law.

1 Safety information

1.1 Traffic safety first

Please use the mobile phone carefully when you drive a car. Park your car at roadside and then use the mobile phone if the driving condition is bad.

1.2 Turn off in hospital

Please abide by relevant provisions or regulations. Please turn off your mobile phone near medical equipment.

1.3 Turn off in airplane

Wireless equipment has disturbance to the airplane, so the use of the mobile phone in airplane is dangerous and illegal.

1.4 Turn off when refueling

Please don't use the mobile phone in gas station or near fuels or chemicals.

1.5 Turn off near blasting sites

Don't use the mobile phone in blasting sites. Please observe relevant restrictions and carry out rules or regulations.

2 Cautions on mobile phone use

2.1 Interference

All phones may be interfered, which affect phone calls.

2.2 Reasonable use

Use only in the normal position. Do not touch the antenna area unnecessarily.

2.3 Qualified maintenance service

Only qualified personnel may install or repair this product.

2.4 Water-resistance

Your device is not water resistant. Keep it dry.

2.5 Emergency calls

Ensure the phone is switched on and in service. Enter the emergency number and press the Dial icon.

3 Precautions for use of battery

3.1 *Do not dispose of batteries near or in a fire to avoid dangers.*

3.2 *Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.*

4 Cautions for children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

11. Keys and parts



➤ **Home key**

Press Home key at a non-standby screen to go back to standby screen

➤ **Volume key**

Press Volume key to change the volume.

➤ **Menu Key**

Press Menu key to add/manage applications, wall papers, searches, notices and menu settings.








➤ **Back Key**









Press Back key to go back to previous menu.

➤ **Power Key**

Short press on the Power key shall lock the screen and a long press on the Power key shall switch on/off the device.

Icons

	<i>Show the SIM1's current network signal level.</i>
	<i>Show the SIM2's current network signal level.</i>
	<i>Show the power level of Battery.</i>
	<i>You have missed calls in SIM.</i>
	<i>Alarm is set on.</i>
	<i>The headset is plugged in.</i>
	<i>Bluetooth is powered on.</i>

	<i>Warning: No SIM card.</i>
	<i>The Audio player is in use.</i>
	<i>An open network is available.</i>
	<i>General Mode is activated.</i>
	<i>Meeting Mode is activated.</i>
	<i>Silent Mode is activated.</i>
	<i>Outdoor Mode is activated.</i>
	<i>Applications are being downloaded or installed.</i>

The "press" related to the screen in this manual means using your finger to touch the screen.

III. Start to use

1 Battery

The battery which is initially 50% charged can be used immediately. Please fully charge/discharge the battery for the first three times to get maximum capacity.

1.1 Remove/insert the battery

 
Follow the steps below to remove the battery:

A. Open the back cover by the gap at its upper right side.

- B. Lift up the battery bottom at its upper side in the direction of the arrow.*
- C. Close the back cover.*

Follow the steps below to install the battery:

- A. Align the metal contacts of the battery with the metal contacts in the battery compartment as per the direction of the arrow, press the battery bottom into the compartment.*
- B. Put on the battery cover in a parallel way until it is completely matched.*

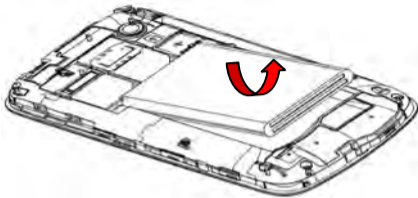

1-2 Charge the battery

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overused when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen says 'Battery is full', thunder icon will disappear, which means the completion of

charging. If the phone is switched off during charging, the screen will display ' Battery is full ' . It generally takes 4 hours to charge the battery. During charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging. .

Cautions: Charge the phone in a well ventilated place in which the temperature is between -10°C to $+55^{\circ}\text{C}$. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid

damage to the battery or any danger.

2 Connecting to network

 
2.1 SIM card

Insert a valid SIM card (subscriber identity module) before using the device.

All information related to the reach of the network are recorded in the chip of SIM card, including the name, phone number and messages stored in the SIM card contacts. In case of losing or damaging SIM card information, users should avoid touching the metal touching side and keep SIM card away from electrical and magnetic field.


2.2 Insert and remove the SIM card

- Switch off the device, and remove the battery and other external power supply.
- Insert the SIM card into the card slot.
- Please switch off the phone and remove the battery before removing the SIM card.

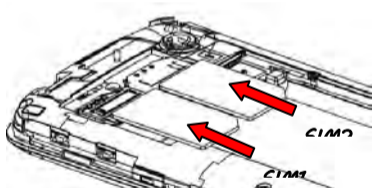

Warning: Damages could happen to your SIM card if the device is not switched off when taking out of the SIM card.

 Attention: SIM1 (left side in the picture) supports GSM network while SIM2 (right side in the picture) supports GSM network. This device is a dual SIM- card dual standby mode mobile phone (handset).

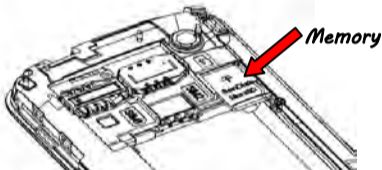

2.3 Insert/remove the memory card.

- Switch off the handset.
- Insert the memory card into the slot and lock the slot.
- Attention: This handset doesn't support the hot-swap of

T card. When you need to take out the inserted card, please switch off the device before taking it out.

2.4 Switch on/off

Long press the Switch on/off key to switch on/off the phone. If the device is switched on but the SIM card isn't inserted, the title bar will show no signal.

After inserting the SIM card, the screen will show the signal strength in the title bar when the phone is switched on: Type in PIN code - if you have already set the SIM code. Search—the handset will be searching for proper network connection.

2.5 Unlock SIM card

To avoid illegal use, the SIM card is enciphered with PIN (personal identification number) as a protection. When this function is ON and you have already set a PIN code, you need to type in PIN code every time the handset is switched on in order to unlock SIM card and use the handset.

You can switch off the SIM PIN code. Yet in this situation, the SIM card can't prevent illegal use.

■ Input PIN code, press cancel key to erase typing error and press OK to end typing. For example, if the PIN code is set as 1234, then type "1234" then press OK.

The SIM card will be locked if you type in wrong code for three times continuously. The handset will inform you to type in PUK code.

Attention: Your network provider will set a standard PIN code (four to eight numbers) for your SIM card. It is recommended that you change the code into a personal code as soon as possible.

2.6 Connection to network

When the SIM card is successfully unlocked, the handset will automatically search for available network (the screen shows searching). The handset will show the information of the network provider, the status bar will show the signal strength and the network condition once the handset is successfully connected to a network.

Attention: If the screen shows "Emergency", it means that you're out of network coverage (service coverage) or your card is not valid, yet you can still make emergency calls based on enough

signal strength

IV. Basic functions

1 Make calls

When the network provider icon appears on the standby screen, you can call out or answer calls. The indicator on the upper right part shall show the signal strength.

Quality of connection will be greatly influenced by obstructions. So movement in a small range may effectively improve the quality of connection.

1.1 Make domestic calls

Use virtual keyboard to enter phone numbers and then press Dial icon to call. If you need to change the phone number, please press the cancel key on the touch screen to delete (numbers entered). When the call is answered, the screen shall show the connection

status.

1.2 Call extension phone

Some of the extension phones can't be directly connected to. Use the virtual keyboard, enter switchboard number, open the option menu and choose "Add 2-sec pause", and then dial the extension phone number.

Type in as follows to call extension phone:

Zone description > switchboard number > temporarily held for 2s > extension phone number > call

1.3 Make international calls

If you need to make an international call, long press the 0 key on the virtual keyboard until there appears the sign "+" for international call prefix, which helps you call numbers from any

country (For example, 86 for China) even if you don't know the international call prefix of that country.

You can make an international call according to the following typing order: + > country code > complete phone number > dialing icon (type in the prefix code(+), and then continue to enter the country code and complete phone number). Country code usually follows conventional practice: German is 49, Britain 44, Sweden 46 and so on.

When making international phone calls, the "0" in the city code should be omitted.

For example, if you want to make a call to Shanghai from other countries, you should dial: +86 21 114

1.4 Make listed calls

Every dialed and received phone number is recorded in the call

history list. Recently dialed, answered and missed phone numbers are in order (latest to earliest) listed in the "all" log. You can also choose and check missed, answered and dialed list as needed. Follow the instructions below to check the list:

- *Press Dial icon at standby screen to dial or check call history.*
- *Listed phone numbers can be called out by pressing the respective log.*
- *Press the small icon on the right side to enter the log detail interface. In the call history interface, users can long press to save or delete the number. In the details interface, the phone number saving function is preset.*

2 Emergency calls

You can make emergency call as long as you are in the network coverage (check the signal strength indication bar on the upper right side of the handset screen). If your network provider doesn't provide roaming service in this area, there will be "Emergency Calls Available" on the screen. If you are in the network coverage, you can make emergency calls even without a SIM card.

3 Answer calls

Directly slide "answer key" to answer an incoming call. If your headphone is connected to the handset, you can use the headphone key on the headphone to answer calls.

Cautions: A short press on the headphone key will answer the call while a long one will hang up the phone.

4 Call history

This handset can not only list all calls in reverse order, but also list a floating menu with all, answered, dialed, missed calls for checking call history of different kinds.

5 Connection option

This option can only be seen during a call. The waiting call, hold call, multi-party call functions require the support of the network. Please contact your service provider for details.

In the connection option page, you can do the following operations:

- **Hold**

Temporarily hold the current one-line call.

- **End Call**

End the current call.

- *Contacts*

Enter the Contacts menu.

- *Dialpad*

Enter the dialing screen during a call.

- *Speaker*

The voice passes through the speaker system

- *Mute*

Turn on/off Mute. When the mute is ON, the other person can't hear the sound from this handset.

- *Recording.*

Record the current call.

- ** Conference**

In Conference call mode, you answer the incoming call and add it to the conference in accordance with the instructions; Hold

multiparty conference; Have a private conversation with one party and hold other parties' call; Connect one party to the other and end the conference call; Put one party on hold; End current call and all holdon calls.

*Cautions: menu items marked by * means happening only under certain situations. Users need to apply for opening the conference call service from their service provider.*

V. Function menu instruction

1. Browser

Press the browser icon to enter the browser interface and you can search for websites.

2. Calculator

The handset is provided with a calculator with basic functions. You can carry out the operation for plus, minus, multiply, and division by pressing icons on the screen. You can use more functions in the advanced panel.

Cautions: the accuracy is limited and round-off error may occur.

3. Calendar

Enter the calendar menu and there shall appear a virtual calendar on the screen with the current date marked on background frame in a special color. Press the touch screen to browse date and the calendar information on the screen shall be correspondingly updated.

4. Call Log

Enter Call history interface, press and change the tagged pages on the upper side of the screen, choose call history, contacts and contact groups.

Use finger to scroll from down to up to select phone numbers. Short press a log can call the contact directly while long press will turn to the page with functions such as dialing, send text, edit number before calling, add to contact, delete from call history

and so on.

5. Camera

In viewing interface, press the bottom icons to do the following operations. Press the center icon to shoot a picture or film a video, press the camera icon to switch among the camera mode, Camcorder mode or Panorama mode. Press the right icon to show the latest captured picture or video.

6. Clock

Enter the clock menu and press alarm icon to add a new alarm. Drag the scrollbar to set alarm time. Choose "settings" to edit the activity, alarm time, repeat, alarm tone, vibration and tag, press "done" to finish the setting. If you need to change the settings (reset), choose "edit alarm". If you want to delete the

alarm, press "delete alarm".

7. Contacts

Enter the Contacts interface, you can check all the contacts, search for contacts or add new contact. New contact means a newly added phone number that is recorded in the SIM card or the handset.

When adding a new contact, you can type in the name, address, phone number, workplace, more phone number, handling/work place/ other email address and so on.

You can also check call history and contact group.

8. Downloads

You can check the downloaded or being-downloaded contents.

9. Email

First you need to set the Email account. Step 1: Input email address and password. Step 2: select account type, press OK to connect.

10. File manager

You can manage file folders, including Download, Music, Received files. Press menu key to create a new folder or select folders to copy, move and delete.

11. FM Radio

Notice: this handset doesn't have a built-in antenna. If you want to listen to the radio, please insert the headphone first. Pressing the side keys can adjust the volume.

1. Channel list: check all the channels and select.

2. *FM recording: choose recording after turning on the FM radio.*
3. *Start/stop: start/stop FM.*
4. *Previous/Next: press this key to change FM channel.*

12. Gallery

In the gallery interface, there are different folders. Select a folder and press to enter. Press the picture to view it.

When viewing the picture, if you press on the screen or press the menu key, "share, delete, more" will pop out. Choose "share" to send the file via bluetooth or a message; choose "more" for further functions such as detailed information, set as, edit, print, and rotate left or right.

If you press the shooting icon at the upper right corner, you can directly shoot a picture or record a video.

13. Messages

13.1 Write a new message

Press “compose new message” to get a new text message:

1. Press the edit frame, type in the message after a virtual keyboard pops out.
2. Press the number frame and enter number, or press add contact icon and select stored contact number from Contacts, or call history or contact group.
3. Input contents into the typing frame on the touch screen. After editing, press send icon to send the text.
4. Press menu key to add subject, Attach, Discard, Insert quick text, Insert smiley and more operations.

13.2 Message setting

Include storage settings, SMS settings, MMS settings, notice settings, service information settings and so on.

14. Music

In the music interface, there are four tags: Artists, Albums, Songs and Playlists. Press different tags to enter different tag interfaces.

In the play interface, you can press the menu key to change settings of the player's by selecting part shuffle play, all shuffle play or sound effects. In the sound effect menu, you can choose Bass Boost, Virtualization, Preset Reverberation and Equalizer Effect.

15. Dial

Press Dial icon, enter the phone number, and press Call icon.

16. Search

Input key words to search in the network, messages, applications, contacts, call history and music, etc.

17. Settings

17.1 SIM management

The contents in this menu may differ subject to different service providers. For detailed information, please view in the phone.

17.2 Wireless & networks

Change settings for wireless connection and network such as Airplane mode, Wi-Fi, Wi-Fi settings, Bluetooth, Bluetooth

settings, Tethering & portable hotspot, VPN settings and mobile networks.

17.2.1 Bluetooth

*To activate Bluetooth, you need to make Bluetooth settings.
Bluetooth settings:*

- 1. Bluetooth: Activate/Inactivate bluetooth.*
- 2. Device name: check and change device name.*
- 3. Discoverable: Enable others to find your device after you activate this function.*
- 4. Advanced settings: you can transfer files, select visit authority and remote SIM mode.*
- 5. Scan for device: Scan and search devices.*

17.3 Call settings

Change settings of voice call, video call and Internet call, and other settings.

17.4 Audio profiles

Include General, Silent, Meeting and Outdoor.

17.5 Display

Change settings of brightness, auto-rotate screen, -active desktop and screen timeout.

17.6 Location

Locate your position through tools like wireless network and GPS.

17.7 Security

Change the settings of screen lock/unlock, SIM card lock,

passwords, device management and credential storage items.

1. Screen lock settings:

2. Pattern: unlock the screen through designed pattern. Draw a private pattern to unlock the screen so as to avoid unauthorized use of the handset.

3. PIN: type in PIN numbers to unlock the screen.

4. Password: type in password to unlock the screen.

17.8 Applications

Include the management of applications, the condition and development of the currently used service and storage space.

17.9 Accounts & sync

You may add user accounts here and sync data and applications as you like.

17.10 Privacy

Restore default settings - in this menu, related settings will be restored to default if you press "reset the phone". You can also format the SD card. If you select this option, all of the data in the SD card will be erased.

17.11 Storage

Include the SD card storage, available storage, insert SD card (If a SD card has already been inserted, then this option will show "remove SD card"), format SD card and all available storage.

17.12 Language & Keypad

Include language settings, keypad settings, input methods and so on.

17-13 Voice input & output

Include text to voice settings. You can use the default setting, and install linguistic data.

17-14 Accessibility

Power button: press power button to end calls.

Quick boot: switch on/off the handset quickly.

17-15 Date & Time

Include automation, set date, select time zone, set time, use 24hour format and select date format.

17-16 Schedule power on/off

You can set the time for switching on/ off the handset, which include setting time and repetition date.

17.17 About phone

Include status information, battery information, law information, type, android version, baseband version, core version and version number.

18. SIM Toolkit

The contents in this menu will differ subject to different service providers. For detailed information, please view in the phone.

19. Sound Recorder

- 1. Press Record to start recording. In the middle of the screen is a timing bar. Press Stop to stop recording and select "Save" in the pop up "Save/Cancel" to save the recording. You can press Play key to listen to the recording before selecting "Save/Cancel".*
- 2. Press menu key to select recording quality.*

20· Intex Zone

20·1 Mobile tracker

When the SIM card is replaced, the device will automatically send a message to your preset number·

20·2 Data protector

You can set Peer control item and Peer control setting· When you send the preset setting to the device, it will complete your preset Peer control items·

20·3 Auto call record

When the function is on, it will auto call record during the call·

20·4 Change Password

The initial password is 1234· You can change password here·

VI. Technical Information

Model: AQUA MARVEL

Size Length: 116mm xWidth: 61.7mm xDepth: 11.9mm

Battery: 1400mAh

Networks: GSM 900/1800 MHz

SAR Value: GSM900 MHz: 0.542 W/kg;

GSM1800MHz:0.792W/kg

Weight: 118.0±5 gram (with battery)

Battery Type: Lithium Battery

Model: BR 1435N

Nominal voltage: 3.7v

Max. Voltage: 4.2v

Capacity rating: 1400mAh

Operation Temperature: -10°C ~+55 °C

The operation time of the battery depends on conditions such as:

- Transmitting power level*
- Signal (distance between the phone and the base station)*
- Network parameters defined by the operator*
- Phone use (WAP, games, SMS)*
- Charging procedure used*

Exclusions:

Subject to the exclusions contained below:

- 1. Damage due to the improper use.*
- 2. User does not follow the manual.*

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

All pictures are for reference only in the instruction book; please refer to the actual phone.

Disclaimer

© Intex. All rights reserved.

Features and specifications are subject to change without prior notice. Certain mobile phone features may not be activated by your service provider, and / or their network setting may limit the feature's functionality. Services and some features such as GPRS, email may be dependent on the network, SIM card, as well as on the compatibility of the devices used and content formats

supported and may require network/service subscription/solutions. Data transfers speeds are network dependent. Always contact your service provider for details or help. Talk and standby time is quoted in digital mode and are approximate; battery performance and the signal reception depend on network configuration, signal strength, type of SIM card, operating temperature, features selected as well as voice, data and other application usage pattern. The phones supports Bluetooth, A2DP, in order for Bluetooth devices to communicate with one another, they must utilize the same Bluetooth Profile. To determine the profiles supported by other Intex products, visit www.intextechnologies.com, for other devices, contact their respective manufacturers. Always demand for original Intex mobile phones to protect against buying tinkered and/or used,

refurbished or tampered phones. The warranty is applicable only for Intex phones; the company is not responsible for any loss or theft. Always use Intex original Enhancements (including batteries) for safety. The use of any other type may invalidate and approval or warranty applying to the mobile phone and may be dangerous. The phone is designed to operate using Li-ion batteries approved by the phone manufactures. Using non approved batteries with the phone may result in poor performance and damage to the phone or its enhancements. The display and products visualization here are illustrative purposes only; Display / color of the phone may differ from that shown on the manual. All features, functionality and other product specifications are based on the latest available information and are correct at the time of printing; however such product specifications are subject to change without

notice. Copyrights are reserved. Intex is the trademark of INTEX TECHNOLOGIES (INDIA) LTD. which is registered. The unauthorized copying of copyrighted material is not legalized is inimical to the provisions of the copyright laws of India and other countries.

INFORMATION UNDER E-WASTE (MANAGEMENT AND HANDLING) RULES, 2011

For disposal of e-waste, please call our helpline no. or visit our website.

E-waste Helpline no. 1800-103-8822

Weblink:

http://intextechnologies.com/window_self/Waste%20Disposal.html

1. Do's for disposal of product

- a) Always drop your used electronic products, batteries, and packaging materials after the end of their life in nearest collection point or collection center*
- b) Separate the packaging material according to responsible waste disposal options and sorting for recycling.*
- c) The battery can easily be removed from the product for recycling.*

2. Don't disposal of equipment

- a) Never dump E-waste in garbage bins or municipal solid waste stream.*
- b) Do not dispose of your product as unsorted municipal waste.*

- c) *Do not throw used batteries into household waste.*
- d) *Do not dispose damaged or leaking Lithium Ion (Li-Ion) battery with normal household waste.*



- 3. *Information on the consequences of improper handling, accidental breakage damage and improper recycling of the end of life product.*
 - a) *If batteries are not properly disposed of, it can cause harm to human health or the environment.*
 - b) *Placing of batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators and improper disposal*

of batteries may lead to explosion.

- c) If the battery terminals are in contact with metal objects, it may cause a fire.*

APPENDIX

The customer can connect to High speed internet over Wi-fi network at below hotspots. Upto 750 MB usage will be free for one month.

Mc Donalds, Cafe Coffee Day, Ansal Plaza, Slice of Italy, RG Computers, The chowk, Asian Saga Spa, Cocoberry, 3-D Restaurant, 64 Bistro Café, Aditya Restaurant, Adonis Gym, AL - BEK, Al Rimaal, Alibaba, All Heavens, Ambrosia Restaurant, Amritsar to China, Anatomy Gym, Anjappar, Ansal Plaza, Appointment, Aquajava, Aryan Restaurant, Ashish Resort ,

Asian Saga Spa, ATE 9 ATE, Ateal Restaurant, Attapur Hyderabad house, Au Bon Pain, Aura Lounge & Bar, Bangalore Club, Barichi Restaurant, Barista, Baskin Robbins, Bean it Up, Beijing Bites, Bikanewala, Bikers and Guzzlers, Blanco restaurant, Blossoms square, Boca Grand, Boca Grand(Floor-1), Bollywood blues, Books N Brew, Booster Juice, Bowl O China, Bowl-O-China, Bread works, Brewberry, Brews Café, Brix Pizza, Bromfy, BRU WORLD CAFE, Burger Girl, Cad B, Café 27, Café buddy, Café Buzz, Cafe Coffee Day- Netaji Subhash Place, Cafe Coffee Day-Kingsway Camp, Café Cruise, Cafe Festa, CAFE KOOBA, Cafe Melange, Café Oz, Café Retro, Café WTF, Cakes & Bakes, Capri Italy, Casa Lolo, Casa Rivera, C-Factor, Chaipatti, Chakh le, Chef Bakers, Chillm, Chin Chin Restaurant, Chings, Chocolate room, Chocolatier, Chokola, Chung Wah, Cirrus, Cocoberry, Coffee Bean

& Tea Leaf, Coffee NU, Coffee World, Comesum, cosmopolitan westend mall ludhiana, Costa, Cream and Fudge Factory, Creambell, Creppeteria, CRN Cambay Hotel, Curzon Court, Daddy's Deli, Daily Bread, Dana Choga, Darbar Restaurant, Delhi Darbar, Desmonds, Dominos, Eden Park (Sofraah), Eden Park(Tangra), Eden Park(The Lounge), Enigma, Fast Trax, Fay Yan Restaurant, Figurine Fitness, Fireflies, Fit N Fine, Fitness Gear, Flambe Restaurant, Food junction, Fortis, Forum Value Mall, Frumix, FYI Maggi, Gloria Jean's Coffees, Golden Dragon, Good Bakery, Goverdhan, Grand Westend, gravey, Guru Datta, H30 Pub, Hall Of Fame, Harry Karaoke Lounge Bar, Head Turners, Hear Cup Coffee, Herbs & Spices, Hercules, Hotel Arpit, Hotel Chanakya, Hotel garden, Hotel Shalimar, Hungry Hogs, HYDERABAD DELICACY, Hyderabad Delicasy, Hyderabad house,

Indulge spa, Indus Grill, Infinitea, Innova Car Comesum Delhi, Italia, Javacity, Javed Habib-Pitampura, JMD Kohinoor Mall, Juke box, Jullundur Hotel & Restaurant, Just Bake, Kamini Bar, Kamini Dining Hall, Kamini Garden Restaurant, KFC, khana khazana, KSRTC Bus, Kunzum travels, Kylin, La Casa, Legends of Rock, Lemon Grass, Leslie Molly Malone, Linger on, Little Italy, Love Latte, Love Shack, Maduri Grand, Mahaveer Mall, Manchester United, Mandarin Express, Mandarin Trail, Margarets Beauty Parlour (Ladies), Margarets Beauty Parlour(Gents), Medicity, Mirage- rohini, Mirchi Restaurant & Bar, Mojo's, Monster Slice, Moti mahal, Moti mahal -Pitampura, Mr. Beans, Nestle Café, New Delhi Railway Station, News Café, NewsCafe, Nirulas, Nirula's, NJAC(Not Just another Coffee), Nokia Priority Store, Om Book Store, ON-TOES-ICESPICE, OOMPH,

*Orchid, Oven fresh, Pack and Chew, Pecos R & B, Pegassus fit life-
Paschim Vihar, Phileas Hogg, Pizzahut, Pizzarro, Planet- M,
Portfolio, Studio, Punjabi by taste- Janakpuri, Punjabi Haveli,
Rauch Haus, RD-MALL, Red ball Internet-rohini, Reforma, RG
Computers, River View Bar, River View Dining Hall, River, View
Garden Restaurant, RM Supermarket, Ruby Tuesday, Ruby's Bar
& Grill, Sahibaan Restaurant Sangria, Shivaaz, Shruti electronics,
Slice of Italy, Slice of Italy- Rajori Garden, Smokin Joe's, snake
pit, So Food and More, Spardise, Speciality Group-Flame & Grill,
Speciality Group-Kibbeh, Speciality Group-Machan, Speciality
Group-Mainland China, Speciality Group-Oh! Calcutta, Speciality
Group-Sigree, Speciality Group-Sweet Bengal, Spice Tree, Stones,
Styx, Subway, Subway City Center, Subway Clock Tower, Subway
DLF*

Subway Hitech City Cyber Gateway, Subway I Max, Subway Rajbhavan, Subway Sredavi mall warangal, Subway vizag 1, Subway Vizag Inox 2, Suvarna Samphala Inn, Sweet, Obsession, Swensen's, TAJ SATS CAKE & BAKE, Talwalkars, Tandoori Hippies, The Biere Club , The Bowl House, The Brown Cup, The Chocolate Beetle, The Chocolate Room, The chowk , The Mairaj Restaurant, The wall Street, The Yum Yum Tee, Toast Lazzez, TURQUOISE COTTAGE , U·S PIZA, Urban solace, US Pizza, Vaango, Via Milano, Village Rooftop, Viva Goa International, Wagh Bakri Tea Lounge, Wang Dynasty, Washing Bay, Whipped, WINGS N FRIES , Woods Inn AP2, Xtreme sports bar outlet , Yoko Sizzlers, Your Fitness Club, Zafran Kasbah, Zen Cafe