



Nothing like Anything



A75

User Guide

User Guide

1 Welcome

1.1 Exciting Features

Thank you for purchasing the Micromax A75 Android mobile phone. You are now the proud owner of the A75 which offers you these exciting features:

- Video Calls
- Dual SIM support
- 4 X Zoom 3 MP Multi-shot Camera
- 9.53 CM (3.75 inch) touch sensitive screen
- T-Flash card support (up to 32 GB)
- LED Flashlight
- Music Player and FM Radio

User Guide

1.2 Prebaded Applications

In addition to the regular phone features, your A75 comes packed with these interesting and helpful applications.

- Facebook
 - WhatsApp (for mobile messaging)
 - Ebuddy (web messenger)
 - Mi Apps (For downloading various applications to your phone)
 - Saavn (music search engine)
 - Teen patti
 - Polaris Office (Read/edit Documents on your phone)
 - TOI (News)
 - Postcard (Send postcards via your phone)
 - BSE/NSE (Stocks)
 - Quickr Classifieds
-

User Guide

Contents

1	Welcome.....	2			
1.1	Exciting Features.....	2			
1.2	Preloaded Applications.....	3			
2	Phone Layout.....	7			
2.1	Icons and Indicators.....	8			
3	Getting Started.....	9			
3.1	Remove/Insert Battery.....	9			
3.2	Insert SIM card.....	10			
3.3	Insert Memory card.....	11			
3.4	Charge the Battery.....	12			
3.4.1	Charging via power socket	12			
3.4.2	Charging via USB cable	14			
4	The Home Screen.....	16			
4.1.1	Wake up the phone	17			
4.1.2	Return to Home screen	18			
4.1.3	Using the touch screen	19			
4.1.4	Using the phone's buttons	20			
4.1.5	Home Screen	22			
4.1.6	Desktop Themes	23			
4.1.7	Widgets	24			
4.2	Google service.....	24			
4.2.1	Gmail	24			
4.2.2	Maps	24			
4.2.3	Market	26			
5	Placing and Receiving Calls	27			
5.1	Placing and ending Calls.....	27			
5.1.1	Open the Phone	27			
5.2	End a call.....	30			
5.3	Options During a Call.....	30			
5.3.1	Mute the Microphone During a Call	32			
5.3.2	Turn speakerphone on/off	32			
5.4	Manage Multiple Calls.....	32			
5.5	Switch Between Calls.....	33			
5.6	Set up a Conference Call.....	33			
6	Managing Notifications	35			
6.1	Open the Notifications Panel	35			

User Guide

6.2	Respond to Notifications	36	8.16.1	Add items to the Home screen	53
6.3	Clear all Notifications.....	36	8.16.2	Change the Home screen wallpaper	55
6.4	Close Notifications Panel.....	37	8.16.3	Rename a Folder	55
7	Working With Call Logs	38	9	Messaging.....	56
7.1	Open the Call log	38	9.1	Delete Message Threads	57
7.2	Dial a Number From Call Log	39	9.2	Exchange Messages.....	57
7.3	Other Actions on Call Logs.....	39	9.3	Send a Text Message	57
8	The Features.....	40	9.4	Create and Send Multimedia Message	58
8.1	Working with Menus.....	40	9.4.1	Respond to a Message	60
8.1.1	Context menus	41	9.4.2	Forward a message	61
8.2	Open the Toolkits	42	9.4.3	Lock a Message	61
8.3	Using the Onscreen Keyboard.....	43	9.4.4	View Details of a message	61
8.4	Enter text.....	44	10	Camera.....	62
8.5	Enter Various Characters.....	45	10.1	Open Camera	63
8.6	Change Keyboard Orientation	45	10.2	Take a picture	63
8.7	Edit Text.....	46	10.3	Shoot Videos.....	63
8.8	Select Text.....	46	10.4	Change Camera Settings.....	64
8.9	Cut or Copy Text.....	48	10.5	Gallery.....	64
8.10	Paste Text.....	49	10.5.1	Open Gallery and view albums	64
8.11	Open and Switch Applications	49	10.6	Share an Album.....	66
8.12	Open and Close the Launcher	50	10.7	Delete an Album.....	66
8.13	Open an application.....	51	11	Music	67
8.14	Switch to Recently Used Application	51			
8.15	Lock Your Screen.....	52			
8.16	Customize Home screen.....	53			

User Guide

11.1 Play Music.....	68	14.5 Receive Notifications.....	76
11.2 69		14.6 Connect to Bluetooth Devices.....	76
11.3 Control Playback Volume.....	69	14.7 Turn Bluetooth On/Off.....	77
12 FM Radio.....	71	14.8 Pair With Bluetooth Devices.....	77
13 Other Features.....	72	14.8.1 Connect to Bluetooth Devices	78
14 Connect to Networks and Devices.....	73	14.8.2 Connect to a computer via USB	78
14.1 Connecting to Mobile Networks.....	73	14.9 Working with Secure Certificates.....	79
14.2 Determine the Network you are Using.....	74	14.10 Install Secure Certificate from SD Card	79
14.3 Edit or Create New Access Points.....	74	15 Phone Settings.....	81
14.4 Connect to Wi-Fi Networks.....	75	16 Notes and Warnings.....	83
14.4.1 Connect to Wi-Fi Network	75		

User Guide











2 Phone Layout



- | | | | | | | | |
|---|------------------|---|------------|---|--------------|----|-------------|
| 1 | USB/charger port | 4 | Back key | 7 | Home key | 10 | Speaker |
| 2 | Receiver | 5 | Menu key | 8 | Front camera | 11 | Back Camera |
| 3 | Screen | 6 | Search key | 9 | Volume key | | |

User Guide

2.1 Icons and Indicators

Icons	Indicators	Icons	Indicators
	Signal strength indicator		Alarm has been set
	New missed calls		Call Divert Unconditionally
	Music player is on		Bluetooth is on
	The headphone is being used		Battery level
	New message		FM Radio is on


3 Getting Started

3.1 Remove/Insert Battery

You may need to remove the battery to insert SIM cards, Memory card or for replacing the battery.


To insert the battery:

1. Invert the back of the mobile phone upward and then take off the rear cover according to the figure below.

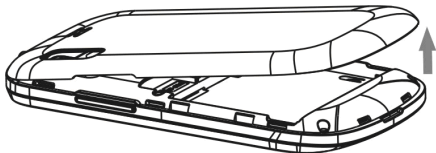

2. Insert the battery as shown in the following figure.

User Guide

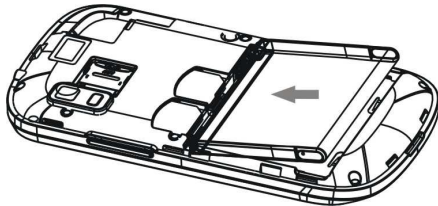


3. Finally place back the rear cover of the mobile phone.

3.2 Insert SIM card

The A75 is a Dual SIM mobile phone allowing you to use the facility of two networks. To insert SIM card(s):

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s)(See figure below)

User Guide

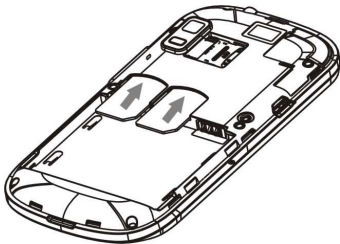

3. Finally insert the battery and replace the rear cover of the mobile phone.


3.3 Insert Memory card

Use only compatible memory cards approved by Micromax for use with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

To insert the memory card:

1. Power off the mobile phone, then remove the rear cover and battery.
2. Open the memory card holder, and insert the memory card into the slot at the bottom.

User Guide

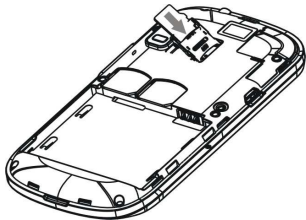

3. Close the memory card holder.
4. Finally insert the battery and the rear cover of the mobile phone.


3.4 Charge the Battery

You can charge your battery using the charger or the USB cable supplied with this phone.

3.4.1 Charging via power socket

1. Connect the charger to the charger jack on the phone.
2. Next connect the charger to a power socket, the charging starts, with the charging icon in an animated state.

User Guide

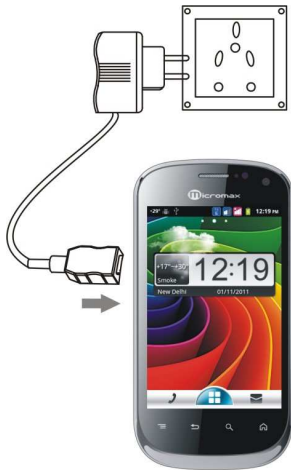

User Guide

3. When the charging icon becomes static, it indicates that the battery is full.
4. Disconnect the charger from the power socket and the phone.

3.4.2 Charging via USB cable

1. Connect the USB cable to the charger socket on the phone.
2. Next connect the USB jack of the cable with the pc or laptop. The charging starts, with the charging icon in an animated state.



User Guide

3. Disconnected the USB cable from the PC/Laptop and the phone.

Note: Slight heating during charging is normal. It indicates that the battery is full, when the charging icon becomes static.

User Guide

4 The Home Screen

When you sign in, the home screen opens.



The status bar shows the time, signal strength, battery status, and other information. It also displays notification icons

Touch items on the Home screen to open them. Touch and hold an empty spot to add a shortcut to an application, a widget and so on

Touch the Launcher icon to open the Launcher and view all your applications.

- The Home screen is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features. You can customize the Home screen with different wallpaper and display the items you want.

User Guide

- At the top of the screen, the Status bar displays the time, information about the status of your phone, and icons for notifications that you have received.
- Touch the Launcher icon at the bottom of the screen to view all installed applications.


4.1.1 Wake up the phone

If you do not use the phone for a while, the Home screen or other screen you are viewing is replaced with a locked screen and then the screen darkens to conserve the battery.

1. Press the power button.

- If you have locked your screen, you must draw an unlock pattern or enter a PIN or password to unlock it.
- If you have not unlocked your screen, this lock screen appears.

User Guide

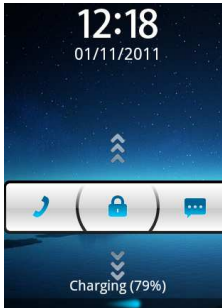

2. Drag the lock icon upward or downward, the last screen you were working on opens.

4.1.2 Return to Home screen

- Press the Home button  at any time, in any application.

User Guide

To view other parts of the Home screen

Slide your finger left or right across the Home screen.

These extensions to the Home screen provide more space for widgets, shortcuts, and other items.

4.1.3 Using the touch screen

The main way to access the features is by using your finger to touch the icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen.

- **Touch:** Acts on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons, you simply touch them with your finger.
- **Touch and hold:** Touch and hold an item on the screen and not lifting your finger until an action occurs. For example, to open a menu for customizing the Home screen, you can touch an empty area on the Home screen until the menu opens.
- **Drag:** Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them and you drag to open the Notification panel.
- **Swipe or slide:** To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch (so you do not drag an item instead). For example, slide the screen up or down to scroll a list, and in some Calendar views swipe quickly across the screen to change the range of time visible.
- **Double-tap:** Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen. You can also




User Guide

double-tap to control the Camera zoom, In Maps, and in other applications, Double-tapping after pinching to zoom in some applications, such as browser, rearranges a column of text to fit the width of the screen.


- **Pinch:** In some applications (Such as Maps, Browser, and Gallery) you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen:** On most screens, the orientation of the screen rotates with the phone as you turn it from upright to its slide and back again. You can turn this feature on and off.

4.1.4 Using the phone's buttons

The phone's physical buttons and soft buttons offer a lot of functions and shortcuts.


Button	Press	Press and hold
Back 	Opens the previous screen you were working on, If the onscreen keyboard is open, closes the keyboard	
Menu 	Opens a menu with items that affect the current screen or Application.	
Home 	Open the Home screen, If you are viewing	Opens the most recently

User Guide

	the left or right Extended Home screen, opens the central Home screen.	Used applications screen.
Search 	On the home screen, opens Google search to search your phone and the web. In many applications, opens a Search box for searching within the application.	Opens Google search by voice.
Power (Top)	Turns on/off the screen.	Opens a menu with options for airplane mode, for Reboot/ powering off the phone and so on.
Volume Up/Down (Right side)	When a call is in progress, increases or decrease the call volume, When the phone is ringing, silences the ringer. On the Home screen when no call is in progress, increase or decreases the ringtone volume, or sets the phone to silent or to vibrate instead of ringing. In other applications, controls the volume of music, spoken directions, and other audio.	Quickly increasing the ringtone volume to maximum or minimum.


User Guide

4.1.5 Home Screen


	<p>Status bar</p>
<p>Display area</p>	<p>Status bar: Appears at the top of every screen. Displays icons indicating that you have received notifications, and icons indicating the phone's status, along with the current time.</p> <p>Display area: For various interface actions and display.</p>
<p>Interface switches includes: The dialer, Main menu and messages</p>	

User Guide

 
Dialer

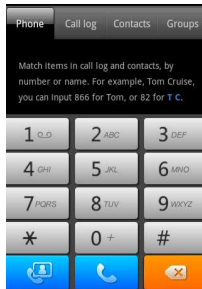

Main menu

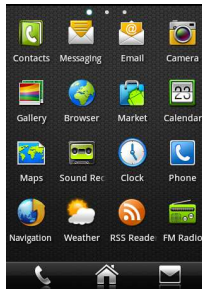 

Messages

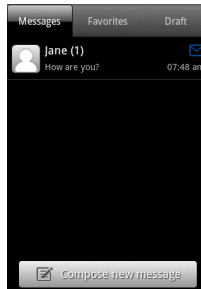 

4.1.6 Desktop Themes

The Canvas on a desktop allows you to freely define and expand. You can do the following on-screen canvas:

User Guide

- Expand the screen in any direction
- Customize Home screen
- Create and organize shortcuts, widgets and folders
- Choose your desired wallpaper

4.1.7 Widgets

A widget that acts as a shortcut allows you to preview or open an application.

You can paste the widget on the desktop as icons or preview windows.

In addition to the default widget is installed on the phone, you can also download additional widgets from the library of Android widgets.

4.2 Google service

Google provides you the excellent services as diverse as Gmail, Navigation, Market and Maps

4.2.1 Gmail

Gmail is Google's web-based email service. When you first set up your phone, you can configure it to use an existing Gmail Account, or you created a new account. The first time you open the Gmail application on your phone, your inbox contains the messages from your Gmail account on the web.

4.2.2 Maps

- You can use Maps to find your current location; view real-time traffic conditions; get detailed

User Guide

directions by foot, public transportation, bicycle, or car; and navigate by using spoken, turn -by turn driving instructions, using the Google Maps Navigation service.

- You can search on a street map or a satellite image to locate an address or a landmark, and you can view some locations as if you were strolling down the street.
- If you join Google Latitude, you can view your friend's locations on your maps and share your location and other information with them.
- Maps may not have information about every location.



User Guide

4.2.3 Market

Android Market provides direct access to applications and games to download and install on your phone. Touch **Menu**> **Market** to access this feature.




5 Placing and Receiving Calls

You can place a phone call by dialing a phone number. You can also touch a number in your contacts, on web pages, and other places. When you are on a call, you can answer incoming calls or send them to your voicemail box. You can even set up conference calls with several participants.

5.1 Placing and ending Calls

You can place calls with the phone application. You can also place calls working in the Call log or in contacts.


5.1.1 Open the Phone



Touch the phone icon  on the Home screen or if you are already working with Contacts or the Call log, touch the **Phone** tab.

To place a call by dialing


1. Open the Phone

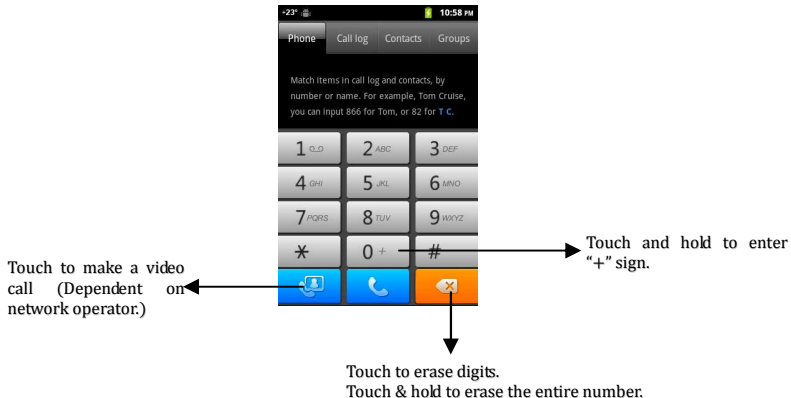
User Guide



2. Touch the keys on the phone tab to enter the phone number. If you enter a wrong number, touch  to erase digits one by one. To erase entire number, touch & hold .

User Guide

- To dial an international number, touch & hold the 0 key to enter the Plus (+) symbol, then enter the international prefix or the country, followed by the full phone number.
- Touch the blue phone icon  to dial the number that you entered.

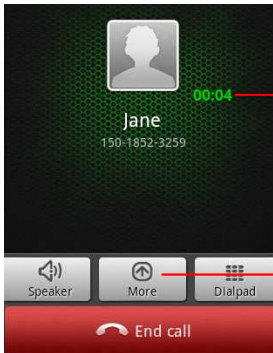

Duration of call


Touch to display more options

User Guide

You can switch applications during a call—for example, to look up information via the Browser. The green phone icon appears in the status bar while the call is underway.

- Press the **Volume Up/ Down button** to adjust the call volume.

5.2 End a call

While during a call, touch the  icon.

To disable phone calls (Airplane mode)

Some locations may require you to turn off your phone's mobile, Wi-Fi, and Bluetooth wireless connections. You can turn off all these wireless connections at once by placing your phone in Airplane mode.

1. Press and hold the **Power** button.
2. Touch the Airplane mode.


5.3 Options During a Call

When a call is in progress, you can put it on hold, initiate a phone conference, mute your microphone etc.

To place a call on hold


- Touch the Hold icon .

User Guide

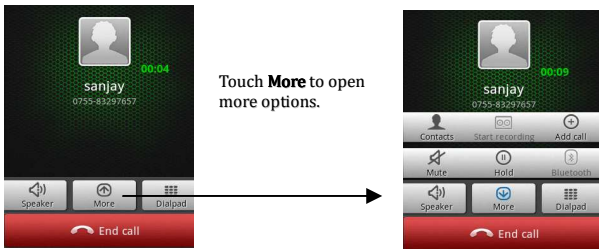



Touch **More** to open more options.

The current call screen indicates that you have a call on hold.

- A Hold  icon appears in the status bar to remind that you have a call on hold. From any other application, you can open the Notifications panel and touch the entry for the call on hold to return to the current call screen.
- Take the call off hold by touching the Unhold button.


User Guide

5.3.1 Mute the Microphone During a Call

- Touch the Mute icon  Mute
- The Mute icon turns to  to indicate that the microphone is muted. The Mute icon appears in the Status bar to remind you that the microphone is turned off.

When viewing the current call screen, you can unmute the microphone by touching the Mute icon again. The microphone is unmuted automatically when the current call ends.

5.3.2 Turn speakerphone on/off

Touch the speakerphone icon  Speaker

The speaker icon appears in the Status bar and the sound from your call is through the phone's speaker. When viewing the current call screen, you can turn the speakerphone off by touching the Speaker icon again.


The speaker is turned off automatically when your current call ends.

5.4 Manage Multiple Calls


If you accept a new call when you are already on a call, you can switch between the two callers or merge the two calls into a single conference call. You can also set up a conference call with multiple callers.

User Guide

5.5 Switch Between Calls

Touch the swap icon , the current call is put on hold and you join the other call.

5.6 Set up a Conference Call

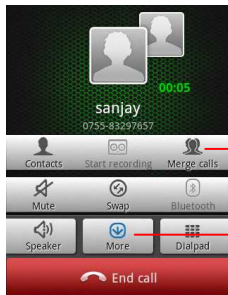


Touch to merge the calls into a conference call

Touch to swap calls

Recommendation: Contact your service provider to know whether they support conference calls and how many participants you can include.

1. Place a call to the first participant

 User Guide

2. When you are connected, touch the  icon, the first participant is put on hold and you are prompted to dial the second caller.

3. Place the next call, using the phone tab, the Call log, or your contacts.

4. When you are connected, touch . The participant is added to the conference call.

You can add as many callers as your carrier supports.

6 Managing Notifications

Notification icons inform the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when call forwarding is on or the current call status.

When you receive a notification, its icon appears in the status bar, along with a summary that appears only briefly.

You can open the Notifications panel to view a list of all your notifications.


Applications whose activities produce notifications, such as Gmail have their own settings, which you can use to configure whether and how they send notifications, whether they sound a ringtone, vibrate, and so on.

6.1 Open the Notifications Panel

Drag the status bar down from the top of the screen.

The Notifications panel displays your wireless provider and a list of your current notifications, Notifications about ongoing activities are listed first followed by notifications about events, such as new mail notifications or calendar reminders.

User Guide

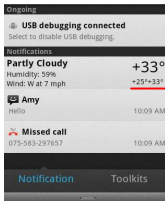

Touch a notification to open its application.

6.2 Respond to Notifications

- Open the notification panel, your current notifications are listed in the panel, each with a brief description.
- Touch a notification to respond to it. The notifications panel closes. What happens depends on the notification. For example, new voicemail notifications dial your voicemail box, and network disconnect notifications open the list of configured network so you can reconnect.

6.3 Clear all Notifications

- Opens the Notifications panel
- Touch Clear at the top right of the panel. All event-based notifications are cleared; ongoing notifications remain in the list.

User Guide

6.4 Close Notifications Panel

- Drag the tab at the bottom of the Notifications panel to the top of the screen. Or just press the back button. The panel also closes when you touch a notification to respond to it.


User Guide

7 Working With Call Logs

The call log is a list of all the calls you have placed, received, or missed. It offers a convenient way to redial a number, return a call, or add a number to your Contacts.

7.1 Open the Call log

Press the **Call** button. Or if you have the **phone** or **Contacts** tab open, touch the **Call log** tab. Calls are listed with the most recent at the top. Calls exchanged sequentially with the same number are grouped. Scroll to view earlier entries in the log.

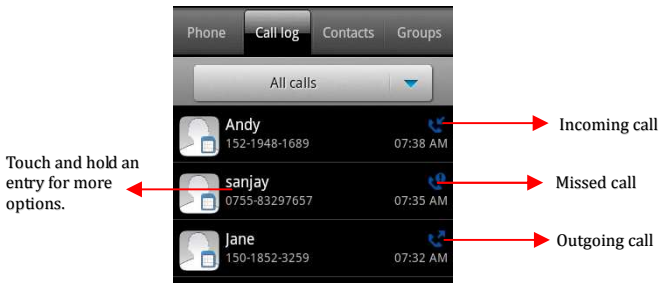

User Guide

7.2 Dial a Number From Call Log

You can touch and hold the entry to open a menu with options for communicating with that contact.

To add an entry's number to your Contacts


1. Touch & hold the entry.
2. Touch **Add contact** in the menu that opens.
3. A menu with two options opens, touch **Existing** to add the number to an existing contact; Touch **New** to create a new contact.

7.3 Other Actions on Call Logs

Touch a Call log entry to open a screen where you can call the contact again, send the contact a message, add the number to your contacts, and learn more about the original call.

Touch and hold a Call log entry to open a menu where you can call the contact, view contact information, edit the number before you redial, and more.

Clear the Call Log

While viewing the call log, press  and touch **Clear call log**.



You can also touch and hold an entry in the log. In the menu that opens, touch **Remove from call log** to remove just the entry from the log.

8 The Features


8.1 Working with Menus

The phone provides you with Options menus and context menus.

Options menus

- Options menus contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. You can open options menu by pressing the menu button  .
- Not all screens have options menus. If you press menu  on a screen that has no options menu, nothing happens.
- Some screens have more options menu items than can fit in the main menu; touch **More** to open a menu of additional items.

User Guide

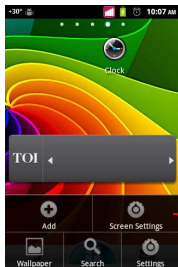


Options menu contain items that apply to the current screen or to the current screen or to the application as a whole.

8.1.1 Context menus

Context menus contain tools that apply to specific item on the screen. You can open a context menu by touching and holding an item on the screen. Not all items have context menus. If you touch and hold an

User Guide

item that has no context menu, nothing happens.

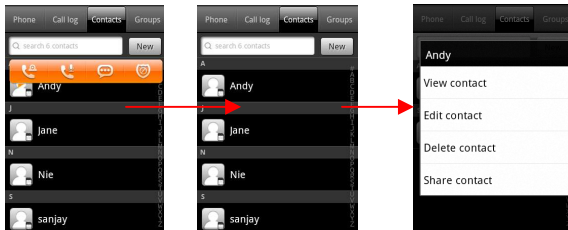


1. Touch the photos of the left of the item, an option menu opens.
2. When you touch and hold some items on a screen, a context menu opens.

8.2 Open the Toolkits

In the toolkits you can quickly start the common applications such as: Bluetooth, Wi-Fi and so on.

- Open the Notifications panel
- Touch the **Toolkits** at the right bottom of the screen, then the Toolkits screen will open.

User Guide

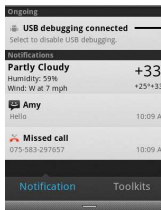


Touch to enter
the Toolkits
screen



8.3 Using the Onscreen Keyboard

You can enter text via the onscreen keyboard. Some applications display the keyboard by default. In others, you touch a text field where you want to enter text, to open the keyboard.

User Guide

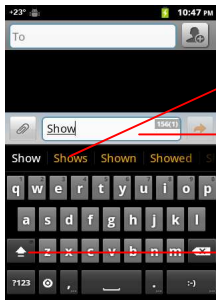

Touch a suggestion to enter it.

Press space or a punctuation mark to enter the highlighted suggestion.


Touch once to capitalize the next letter you type. Touch and hold for caps.

8.4 Enter text

- Touch a text field, the onscreen keyboard opens.
- Touch the keys on the keyboard to type; the characters you have entered appear in a strip above the keyboard with suggestions for the word you are typing to the right. Press the left or right arrows in the strip to view more suggestions.
- Press space or a punctuation mark to enter the highlighted suggested word. If you touch the space key, the suggestion strip offers a series of punctuation marks you can touch, to replace the space with,

User Guide

or touch another suggested word to enter it.


- Use the Delete key  to erase characters to the left of the cursor.
- When you are finished typing, Press Back to close the keyboard.

8.5 Enter Various Characters

- Press the symbols key to switch to the numbers and symbols keyboard.
- Press the Alt key on the symbols keyboard to view additional symbols; Press it again to switch back.

8.6 Change Keyboard Orientation

- Turn the phone sideways or upright. The keyboard is redrawn to take best advantage of the new phone orientation. Many people find the larger horizontal onscreen keyboard easier to use.

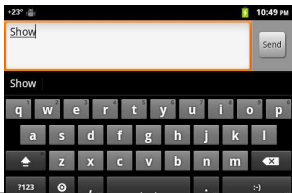

User Guide

You can control whether the screen changes orientation automatically when you turn the phone.

8.7 Edit Text

You can edit the text you enter in text fields and use menu commands to cut, copy, and paste text, within or across applications. Some applications do not support editing some or all of the text they display. Others may offer their own way to select text you want to work with.

- Touch the text field that contains the text to edit.
- Type, cut, paste, or delete text.
- Press the Back button when you are finished typing, to close the keyboard. You may also have a **Next** or **Done** button on the keyboard, depending on the application and text field you are typing in.

8.8 Select Text


You can select text for cutting or copying. The selected text is highlighted in orange.

- Touch the text field or other portion of the screen that contains the text to select, a menu opens with options for cutting, copying, and performing other tasks with the text field.
- Touch “Select word”, to move the cursor to select the text you want.


User Guide

- Touch “Select all” to select all the text in the text field.
- Touch in the text field to move the cursor in text.

User Guide

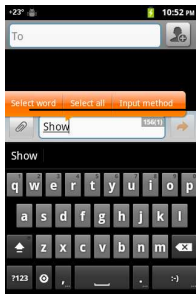

Touch "Select word", you can move the cursor to select the text you want.

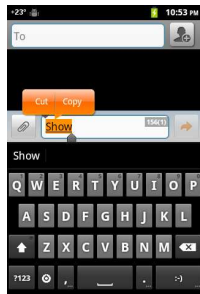

8.9 Cut or Copy Text

1. Select the text to cut or copy
2. Touch **Cut** or **Copy** in the menu that opens. If you touch **Cut**, the selected text is removed from the text field. In either case, the text is stored in a temporary area on the phone, so that you can paste it into another text field.

User Guide

8.10 Paste Text

1. Copy the text to paste.
2. Touch the text field where you want to paste the text. You can paste the text that you copied from one application into a text field in any application.
3. Slide your finger to move the cursor to the location where you want to paste the text.
4. Touch and hold the text field.
5. Touch Paste in the menu that opens. The text is inserted at the cursor. The text that you pasted also remains in a temporary area on the phone, so you can paste that same text in another location.

8.11 Open and Switch Applications

The Launcher, which you open from the Home screen, holds icons for all of the applications on your phone, including any application that you downloaded and installed from Android Market or other sources.

When you open an application, the other applications you have been using will keep on running: playing music, opening web pages, and so on. You can quickly switch between your applications, allowing you to work with several at once. The Android operating system and applications work together to ensure that applications you are not using do not consume resources unnecessarily, stopping them and starting them as needed. For this reason, there is no need or facility for quitting applications.

User Guide

8.12 Open and Close the Launcher

On the Home screen, touch the Launcher Icon  to open it.

If you have more applications than can fit on the Launcher in one view, you can slide the Launcher left or right to view more. You can add an application icon to the Home screen by touching and holding it on the Launcher until it vibrates and then dragging it to a location on the Home screen.




Touch an application to open it.

Slide the Launcher left or right to bring more icons into view.

Touch to close the Launcher.


User Guide

1. Touch the Home icon on the Launcher or the Home button  to close the Launcher.
2. The Launcher closes automatically if you touch an icon to open its application or if you move an icon from the Launcher to the Home screen.

8.13 Open an application


1. Touch an application's icon on the Launcher
2. Touch an application's icon on the Home screen.

8.14 Switch to Recently Used Application

1. Press & hold the Home button . A small window opens, with icons of applications that you have used recently.
2. Touch an icon to open its application. Or press Back to return to the current application.

User Guide

8.15 Lock Your Screen

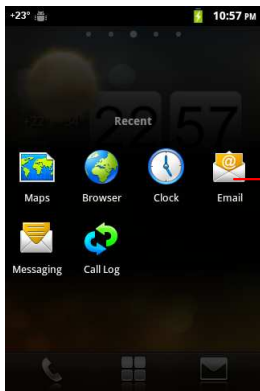


 
Touch an icon to open an application you have used recently.

You can lock your screen so that only you can unlock it to make calls, access your data, buy applications, and so on. You may also be required to lock your screen by a policy set by an email or other account you add to your phone.

User Guide

To lock your phone



1. On the Home screen, press Menu  and touch **Settings>Touch Application tab> security.**
2. Touch **Set up screen lock.**
3. Touch **Pattern** or **Password**. If you touch **Pattern**, you are guided to create a pattern you must draw to unlock the screen. The first time you do this, a short tutorial about creating an unlock pattern appears.

You can press Menu  and touch **Help** at any time for a refresher. Then you are prompted to draw and redraw your own pattern. If you touch password, you are prompted to set a numeric password you must enter to unlock your screen. The next time you turn on your phone or wake up the screen, you must draw your unlock pattern or to enter your password to unlock the screen.

8.16 Customize Home screen

You can add applications, shortcuts, widgets, and other items to any part of the Home screen. You can also change the wallpaper.

8.16.1 Add items to the Home screen

1. Press  to open the Home screen where you want to add the item.
2. Tap the + sign that appears on the screen.
2. Press menu  and touch **Add**. Or just touch and hold an empty location on the Home screen. If there are no empty spots on the Home screen, **Add** is dimmed; you must delete or move an item before you can add another item, or switch to another Home screen.

User Guide

3. In the menu that opens, touch the type of item to add. You can add the following types.

- **Shortcuts:** Add shortcuts to applications, a bookmarked webpage, a favorite contact, a destination in Maps, a Gmail label, a music play list, and many other items. The shortcuts available depend on the applications you have installed.
- **Widgets:** Add any of miniature applications (widgets) to your Home screen, including a clock, a music player, a picture frame, the Google search bar, a Power manager, a calendar that shows upcoming appointments, and a News & weather widget. You can also download widgets from Android Market.
- **Folder:** Add a folder where you can organize Home screen items, or folders that contain all your contacts, contacts with phone number, or starred contacts. Your folder's contents are kept up to date automatically.

To move an item on the Home screen


1. Touch and hold the item you want to move. Do not lift your finger.
2. Drag the item to a new location on the screen.
3. When the item is where you want it, lift your finger.

To remove an item from the Home screen

1. Touch & hold the item you want to remove. Do not lift your finger. The Launcher icon changes to a menu with two options: **delete** and **uninstall**.
2. Touch **delete**.
3. Lift your finger.

User Guide

8.16.2 Change the Home screen wallpaper

1. Press Menu  and touch **Wallpaper**. You can also touch & hold an empty area of the Home screen and in the menu that opens, touch **Wallpapers**.

2. Touch **Gallery**, **Live wallpapers**, or **Wallpapers**. Touch **Gallery** to use a picture that you have captured using the camera or copied to your phone. You can crop the picture before setting it as wallpaper.

Touch **Live wallpapers** to open a scrolling list of animated wallpapers installed on your phone. Some live wallpapers change according to the time of day, in response to touching the screen, tell the time, or offer other information. Some live wallpapers have a **settings** button.

Touch **Wallpapers** to open a screen where you can sample the wallpaper images that come with the phone. Slide the miniature images left and right to view the samples. Touch a sample to view a large version.

3. Touch **Set wallpaper**.

8.16.3 Rename a Folder

1. Touch the folder to open it.

2. Touch & hold the folder window's title bar.

3. Enter a new name in the dialog that appears

4. Touch **Ok**.


User Guide

9 Messaging

You can use Messaging to exchange text messages and multimedia messages with your friends on their mobile phones.

Touch the Messaging icon or the  Home screen or in the Launcher.

The Messaging window opens, where you can create a new message or open an ongoing message thread

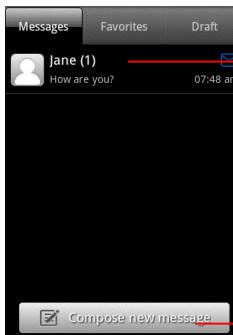

Touch to open a messaging conversation

Touch to compose a new text or multimedia message.

User Guide

9.1 Delete Message Threads

1. Touch and hold the message to start a new text or multimedia message.
2. Touch **Delete thread** in the menu that opens.

You can also press Menu  and touch **Delete threads** to delete all message threads from the window.

9.2 Exchange Messages

You can send text message of up to 160 characters to another mobile phone. If you keep typing after the limit, your message is delivered as a series of messages. Multimedia messages can contain text and a picture, a recorded voice, an audio file, a video, or a picture slideshow.

Messaging automatically converts a message into a multimedia message if you send it to an email address instead of a phone number, add a subject, or attach a media file.


9.3 Send a Text Message

1. On the Messaging screen, touch **Compose new message**.
2. Enter a mobile phone number in the **To** field. As you enter the phone number, matching contacts appear. You can touch a suggested recipient or continue enter with a mobile number. You can also enter the name of a contact with a mobile number.
3. Touch the composition text box to start entering your message.

User Guide

4. Touch  to send the message.

Enter a mobile phone number or the name of a contact

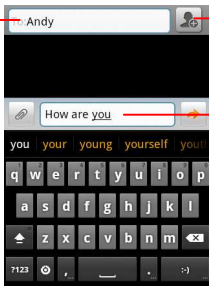

Tap this icon to select desired contact from phonebook

Enter the content of the message.


9.4 Create and Send Multimedia Message




1. On the Messaging screen, touch **compose new message**.
2. Enter a mobile phone number or email address in the **To** field. As you type, matching contacts appear. You can touch a suggested contact or continue typing. You can also enter the name of a contact with a

User Guide

mobile number.


3. Touch the composition text box to start entering your message.

4. Touch  on the left of the text box, a menu opens as shown in the following picture:

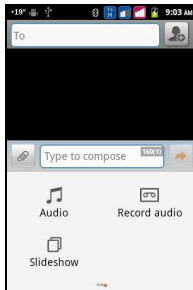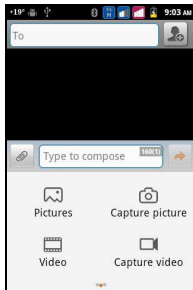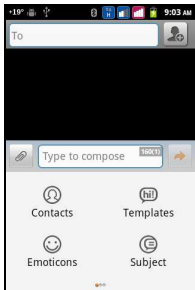

User Guide

- Touch **subject** to add a message subject.
- Touch **pictures** to attach a picture.
- Touch **capture picture** to take a picture and attach it.
- Touch **videos** to attach a video.
- Touch **capture videos** to shoot a video and attach it.
- Touch **Audio** to attach a ringtone.
- Touch **Record audio** to record a spoken message and attach it.
- Touch **Slideshow** to assemble photos into a slideshow of up to 10 Slides to attach to the message.
- Use the buttons in the Compose Message screen to preview or remove the media attachment.

5. Touch  to send the multimedia message.

9.4.1 Respond to a Message


If you are working on a message window, messages that you receive are displayed in it. Otherwise, you receive a new message notification and a new message icon appears in the Status bar. When you touch the new message notification, the Message window opens, where you can reply to the message.

If the message contains a media file, touch **Play** to view, watch, or listen to it. Touch and hold the media file to open a menu with an option for saving the message on your SD card.

Touch and hold a message to open a menu with number of options for working with the message and it's sender's information.

User Guide

9.4.2 Forward a message

1. Touch and hold a message in a message window.
2. Touch **Forward** in the menu that opens.
3. Enter a recipient for the message and edit the content if you want.
4. Touch  to send the message.

9.4.3 Lock a Message

You can lock a message so it won't be deleted if you reach your storage limits. If you try to delete a thread that contains a locked message, you are asked to confirm that you want to delete it.

1. Touch and hold message in a message window.
2. Touch **Lock message** in the menu that opens. A lock icon appears to the left of the message. Unlock a message by touching & holding it and then touch **Unlock message**.

9.4.4 View Details of a message

1. Touch & hold a message in a message window.
2. Touch **View message details** in the menu that opens.


User Guide

10 Camera

The Camera allows you to shoot and share pictures and videos.

Pictures and videos are stored on the phone's SD card, so you must insert one to use the Camera. You can copy your pictures and videos from the SD card to a computer.

You can view your pictures and videos on the phone, edit them, share them, and so on from the Gallery.

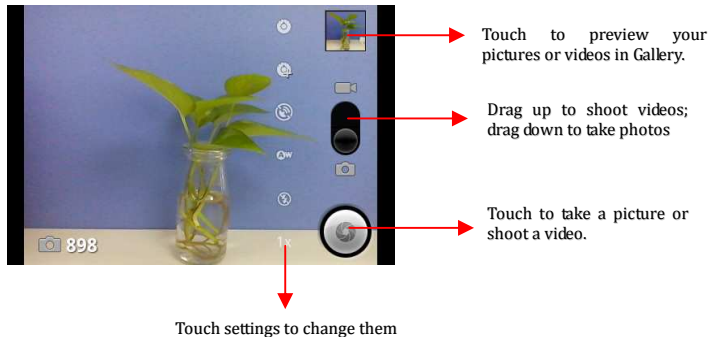

User Guide

10.1 Open Camera

Touch the Camera icon in the main menu.

10.2 Take a picture

- Adjust your exposure, flash, and other settings if you wish. Or leave them on automatic.
- Frame your subject on screen. You can zoom in or out by sliding the Zoom icon.
- Touch the shutter icon on the screen.

The picture you just took is displayed for a moment, and then is displayed as a thumbnail at the top right.

10.3 Shoot Videos

- Drag the control to the video position
- Adjust the quality, effect, and other settings if you wish. Or leave them on automatic.
- Point the lens to frame the scene where you want to start
- Touch the start video icon.
- Touch the stop video icon to stop shooting. An image from your most recent video is displayed as a thumbnail at the top right.

User Guide

10.4 Change Camera Settings

Your camera has automatic settings that you can use to take quick point-and shoot photographs and videos. It also offers a number of ways to control your exposures, including controlling the focus, turning the flash on and off, and adjusting the white balance.

In Video mode, the camera includes settings for controlling picture and video quality and video length, storage location of your pictures, and so on.

- Open the Camera and touch the icon for the settings you want to change. The settings open over the screen.
- Touch the settings category you want to control and then touch a setting.
- Press the Back key to close the **Settings** menu.
- Take your pictures using the new settings.

10.5 Gallery

You can use the Gallery to view pictures and play videos that you have taken with your Camera, downloaded, or copied onto your SD card.

10.5.1 Open Gallery and view albums


1. Touch the Gallery icon in the Launcher.

OR

2. Open Gallery from camera by touching the thumbnail image at the top right.


User Guide

OR

3. Open Gallery from camera by pressing Menu  and touching Gallery.

If you have many pictures or videos on your SD card, it may take a few minutes when you open it and organize them.

Touch in any view to return to the main Gallery screen.

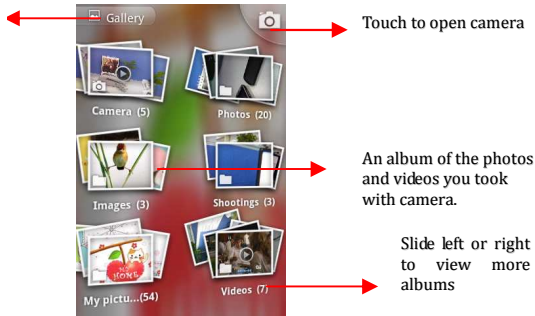

Touch to open camera

An album of the photos and videos you took with camera.

Slide left or right to view more albums


4. Touch an album to open it and view its contents.

User Guide

5. Peek into an album stack by touching it with two fingers and spreading them apart.
6. Touch a picture or a video in an album to view it.


10.6 Share an Album

You can share the entire contents of one or more albums.

1. Open the main Gallery window.
2. Press Menu  twice.
3. Check or uncheck the albums you want to share.
4. Touch Share at the bottom of the screen. In the menu that opens, touch the application to use to share the selected albums.

10.7 Delete an Album

You can delete an album and its content from your SD card.

1. Open the gallery window
2. Press Menu  twice.
3. Check or uncheck the albums you want to delete
4. Touch Delete at the bottom of the screen. In the dialog that opens, touch confirm delete.


User Guide

11 Music

You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music. Touch the music icon in the launcher or home screen to open your music player.

When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself. This can take a few seconds, depending on how many files you have copied onto the SD card.


When the catalog is complete, the Music library screen opens, with tabs that you can touch to view your music library organized by Artists, Albums, Songs or playlists.

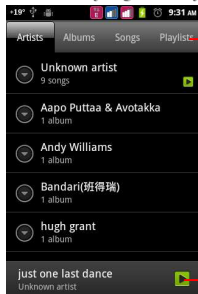

Touch a tab to view your library in one of four ways

Touch the summary of the current track to open the playback screen

 
User Guide

You can return to the main library screen from most other screens in the Music applications by pressing Menu  and touch Library.

11.1 Play Music

Touch a song in your library to listen to it. The playback screen opens and the song you touched or the first song in the album or other playlist starts to play. The tracks in the current playlist plays in order until you reach the end of the playlist (unless you choose a repeated option). Playback stops only if you stop it. It pauses when you receive a phone call.

User Guide

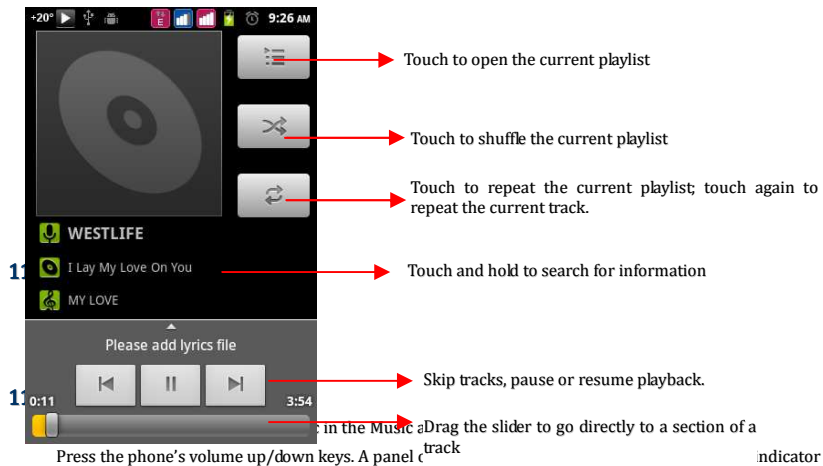

User Guide

moves as you adjust the volume.

 
Some headsets include their own volume controls or ways to pause and resume playback or switch tracks.

User Guide

12 FM Radio

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone.

Use your phone to listen to the Radio.

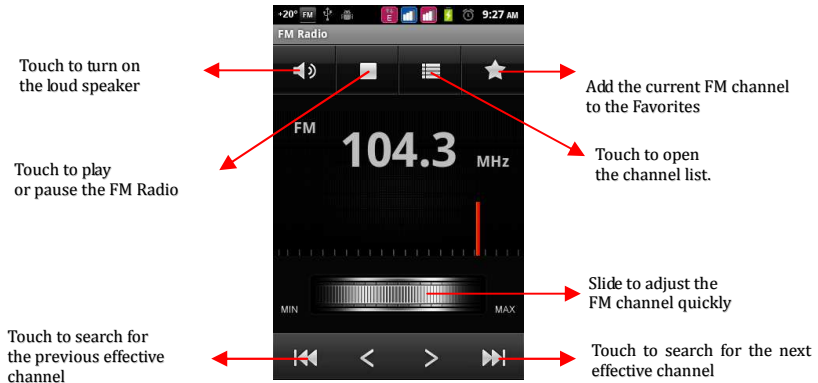

13 Other Features

The phone also is loaded with the following important features:

- **Browser** to let you browse over the Internet
- **Calendar** for dates
- **Calculator** for simple calculations
- **File Manager** to manage your files. The File Manager also features the Remote control application that allows you to connect your phone and PC via the Wi-Fi network. When you attempt to connect, IP address will be generated by your phone and you need to put it in the address bar of **My Computer** on your PC. You can then access the SD card from the PC without using any data cable.
- **Firewall** for network security
- **Email** for access to your email service
- **Appmanager** to manage your settings and downloads
- **RSS Reader (Really Simple Syndication)** collects news in the background. You can click the news headline to see a short description of the news and open the original news web page.
- **Sound Recorder** for recording sounds
- **SIM toolkit** for access to various network services
- **Theme Manager** for applying your desired desktop themes.

14 Connect to Networks and Devices

Your phone can connect to a variety of networks and devices, including mobile networks for voice and data transmission, Wi-Fi data networks, and Bluetooth devices, such as headsets. You can also connect your phone to a computer, to transfer files from your phone's SD card, and share your phone's mobile data connection via USB or as a portable Wi-Fi hotspot.

14.1 Connecting to Mobile Networks

When you assemble your phone with a SIM card from your wireless service provider, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.

Your phone is configured to work with more than one mobile carriers' network. If your phone does not connect to a network when you insert a SIM card and turn it on, contact your carrier to obtain the details of its access point name.

Different locations may have different mobile networks available. Initially, your phone is configured to use the fastest mobile network available for data. But you can configure your phone to use only a slower 2G network for data, to extend the life of your battery between charges. You can also configure your phone to access a different set of networks entirely, or to behave in special ways when roaming.



The icons in the Status bar indicates the kind of data network you are connected to and the voice and data network signal strength.

When you are connected to a slower network, you may want to postpone using your phone for data-intensive tasks until you are connected to a faster network again, or find a WI-FI network to connect

User Guide





to.

14.2 Determine the Network you are Using

1. Press **Home** , press **Menu** , and touch **Settings** to open the **Communication** tab.
2. Touch **Wireless & networks**>**Mobile networks**> **Access Point Names**. The name of the wireless service provider you are currently registered with is selected in the list.

14.3 Edit or Create New Access Points

If you and your wireless service provider determine that you need to change the settings of your current access point name (APN) or to create a new one, you must obtain the APN and detailed settings from your provider.

1. Press **Home** , Press **Menu** , and touch **Settings** to open the **Communication** tab.
2. Touch **Wireless & networks**>**Mobile networks**>**Access point names**.
3. Touch an existing APN to edit it, or press **Menu**  and touch **New APN**. Enter the APN settings that you obtained from your wireless service provider by touching each setting that you need to edit.
4. When you are finished, press **Menu**  and touch **Save**.
5. If you created a new APN, touch it in the APNs screen to start using it.

User Guide

14.4 Connect to Wi-Fi Networks

Wi-Fi is a wireless networking technology that can provide internet access at distance of up to 100 meters, depending on the Wi-Fi router and your surroundings. To use Wi-Fi on your phone, you access a wireless access point, or “hotspot”. Some hotspots are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.



There are numerous systems for securing Wi-Fi connections, including some that rely on secure certificates or other schemes to ensure that only authorized users connect.

TIP: Turn off Wi-Fi when you are not using it, to extend the life of your battery.

When you connect to a Wi-Fi network, the phone obtains a network address and other information it needs from the network, using the DHCP protocol.

14.4.1 Connect to Wi-Fi Network

If you are adding a Wi-Fi network when first setting up your phone, Wi-Fi is turned on automatically, so you can skip to step 4.

1. Press **Home**  , press **Menu**  , and touch **Settings**.
2. Touch **Wireless & networks > Wi-Fi settings**.
3. Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon. If the phone finds a network, you connected previously, It connects to it.
4. Touch a network to connect to it

User Guide

If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.

If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details)

When you are connected to a network, you can touch its name in the Wi-Fi settings screen for details about the speed, security, address, and related settings.

14.5 Receive Notifications

By default, when Wi-Fi is on, you receive notifications in the status bar when your phone detects an open Wi-Fi network.



1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, check **Network notification**. You can uncheck this option to stop receiving notifications.

14.6 Connect to Bluetooth Devices

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters. The most common Bluetooth devices are headphones for making calls or listening to music, hands-free kits for cars, and other portable device, including laptops and cell phones.

User Guide



14.7 Turn Bluetooth On/Off

1. Press **Home**  , press **Menu**  , and touch **Settings** to open the **Communication** tab.
2. Touch **Wireless & networks**.
3. Check or uncheck **Bluetooth** to turn it on or off.

*Important: Go to **Bluetooth Settings** and check **Discoverable** option so that your phone can be detected by other devices.*

14.8 Pair With Bluetooth Devices

You must pair your phone with a device before you can connect to it. Once you pair your phone with a device, they stay paired unless you unpair them.



1. Press **Home**  , press **Menu**  , and touch **Settings** to open the **Communication** tab.
2. Touch **Wireless & network**>**Bluetooth settings**.
3. If Bluetooth is not turned on, check **Bluetooth** to turn it on. Your phone scans for and display the IDs of all available Bluetooth devices in range.
4. If the device you want to pair with is not in the list, make it discoverable.
5. If your phone stops scanning before you make the other device discoverable, touch **Scan for devices**.
6. Touch the ID of the other device in the list in Settings to pair them. The devices pair with each other. If you are prompted to enter a password, try entering 0000 or 1234 (the most common password), or

User Guide

consult the documentation that came with the device to learn its password. If the pairing is successful, your phone connects to the device.

14.8.1 Connect to Bluetooth Devices

Once paired, you can connect to Bluetooth device—for example, to switch devices or the reconnect after the phone and the device comes within range.

1. Press Home  , press Menu  , and touch **Settings** to open the Settings application.
2. Touch **Wireless & network** > **Bluetooth settings**.
3. If Bluetooth is not turned on, check **Bluetooth** to turn it on.
4. In the list of devices, touch a paired but unconnected device in the list. If the device you expected is not displayed, touch **Scan for devices**. When the phone and device are connected, the device is displayed as connected in the list.

14.8.2 Connect to a computer via USB

You can connect your phone to a computer with a USB cable to transfer music, pictures, and other files between your phone's SD card and the computer.

When connecting your phone to a computer and mounting its SD card, you must follow your computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting the files on your SD card.

You can not share your phone's data connection and SD card via USB cable at the same time. If you are using USB tethering, you must turn that off first.

User Guide

Connect to a computer via USB

1. Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
2. Open the notification panel and touch **USB connected**.
3. Touch **Turn on USB storage** in the screen that opens to confirm that you want to transfer files. When the phone is connected as USB storage, the screen indicates that USB storage is in use and you receive a notification. Your phone's SD card is mounted as a drive on your computer. You can now copy files to and from the SD card.

During this time, you can not access the SD card from your phone, so you can not use applications that rely on the SD card, such as camera, Gallery, and Music. You also can not share your phone's data connection with your computer via USB.

14.9 Working with Secure Certificates


 
If your organization's VPN or Wi-Fi Network rely on secure certificates, you must obtain the certificates and store them in your phone's secure credential storage, before you can configure access to those VPN or Wi-Fi networks on your phone.

If your network administrator instructs you to download the certificates from a website, you are prompted to set a password for the credential storage when you download the certificates.

14.10 Install Secure Certificate from SD Card

1. Copy the certificate from your computer to the root of the SD card

User Guide

2. Press Home  , press  , and touch **Settings**>Touch **Application** tab.
3. Touch security.
4. Touch **Install from SD card**.
5. Touch the file name of the certificate to install. Only the names of certificates that you have not already installed on your phone are displayed.
6. If prompted, enter the certificate's password and touch **OK**.
7. Enter a name for the certificate and touch **OK**.

User Guide

15 Phone Settings

You can go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

Wireless & networks	Use Wireless & Network settings to configure and manage connections to networks and devices by Using Wi-Fi, Bluetooth, and mobile networks.
Call settings	Use Call settings to configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier.
User profiles	Use the sound settings to configure how and at what volume the phone rings, vibrates.
Display settings	Use the Display settings to configure brightness and other screen settings.
Security settings	Use the Location & Security settings to set your preferences for using and sharing your location when your search for information and use location-aware applications, such as Maps.

User Guide

Accounts & sync settings	Use the Accounts & sync settings to add, remove and manage your Google and other supported accounts
Privacy settings	You use the privacy settings to manage your personal information.
storage settings	Use the SD card & Phone storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.
Language & keyboard settings	Use the Language & keyboard settings to select the language for the text on your phone and for configuring the onscreen keyboard.

16 Notes and Warnings

Optimizing Battery Life

Your phone includes an internal lithium-ion or lithium-ion polymer battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the phone or battery must comply with laws and regulations pertaining to lithium-ion or lithium-ion polymer batteries.

You can extend your battery's life between charges by turning off features that you do not need. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radios that you aren't using. If you aren't using WI_FI, Bluetooth, or GPS, use the Settings application to turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- If you do not need them, turn off automatic syncing for Gmail, Calendar, Contacts, and other applications.
- Use the Power Control widget to check and control the status of radios, the display brightness, and syncing.

To check the battery charge level


- On the Home screen, Press **Menu** and touch **Settings**>Touch **Others** tab>**About phone**>**Status**

User Guide

The battery status and level are displayed at the top of the screen.

To monitor and control what uses the battery

The Battery Use screen shows which applications consume the most battery power. You can also use it to turn off applications that you have download, if they are consuming too much power.

- On the Home screen, Press **Menu**  and touch **Settings**>Touch **Others** tab> **About phone**>**Battery use**.

The Battery Use screen lists the applications that have been using the battery, from greatest to least battery use.

The top of the screen displays the time since you were last connected to a charger or, if you are currently connected to one, how long you were running on battery power before you connected to a charger.

Then each application or service that used battery power during that time is displayed, In order of the amount of power they used

- Touch an application in the Battery Use screen to learn details about its power consumption.

Different applications offer different kinds of information. Some applications include buttons that open screens with settings to adjust power use.

Operational Warnings

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION: Read this information before using

User Guide

your phone. For the safe and efficient operation of your phone, observe these guidelines:

- **Potentially explosive at atmospheres:** Turn off your phone when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations, below deck on boats), storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (Such as metal powders, grains, and dust) in the air.
- **Interference to medical and personal Electronic Devices:** Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your phone.
- **Audio Safety:** This phone is capable of producing loud noises which may damage your hearing. When using the speaker phone feature, it is recommended that you place your phone at a safe distance from your ear.
- **Other Media Devices, hospitals:** If you use any other personal medical device, consult the manufacture of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Product statement on handling and use: You alone are responsible for how you use your phone and any consequences of its use.

- You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.
- Always treat your phone and its accessories with care and keep it in a clean and dust-free place

User Guide

- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw, or try to bend your phone or its accessories
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not attempt to disassemble your phone or its accessories; only authorized personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 32°F and maximum 113°F (0°C to 45°C).
- **Faulty and damaged products:** Do not attempt to disassemble the phone or its accessory. Only qualified personnel must service or repair the phone or its accessory. If your phone or its accessory has been submerged in water, Punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Disclaimers

1. Please note that the accuracy of some of the phone functions may vary depending on the surroundings and take a while to get accurate results.
2. Micromax will not bear any responsibility for any non-compliance with the above mentioned guidelines or improper usage of the mobile phone.
3. Micromax keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content

User Guide

displayed in the mobile phone. In such a case, the latter shall govern.