

Device layout

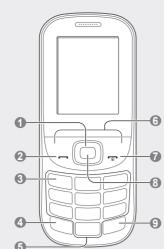

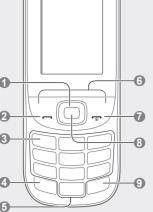

6

6 Navigation button Softkeys From the Home screen, access user-defined menus; Perform actions indicated at

the bottom of the display 0 Power button Turn the device on or off (press and hold); End a call; in the Menu screen, cancel

an input and return to the

service provider 0 Dial button

In the Menu screen, scroll

Pre-defined menus might differ, depending on the

through menu options

O

6

4

and hold)

and hold)

Home screen Make or answer a call; From 8 the Home screen, retrieve Confirm button recently dialled, missed, or From the Home screen, access the Menu screen; In received numbers

the Menu screen, select the Voicemail button highlighted menu option, or From the Home screen confirm an input The key might perform access voicemails (press differently, depending on

the region Keypad lock button 0 From the Home screen, lock or unlock the keypad (press Silent mode button From the Home screen, activate or deactivate the silent mode (press and hold)

Alphanumeric buttons

The device displays the following status indicators at the top of the screer

con	Description		Icon	Description
0	No SIM card		Q	SOS message
\odot	No signal			feature activated
Taul	Signal strength		4	Normal profile activated
٦	GPRS network connected		1	Silent profile activated
(1111)	Battery power level		6	Bluetooth feature
C	Call in progress		63	activated
_	Call diverting		1	Alarm activated
¢	activated		Ó	FM radio on
₽ ₽	New text message (SMS)		8	Roaming (outside of normal service
\mathbb{F}_{\otimes}	New multimedia			area)
- 64	message (MMS)		Ð	Memory card

inserted

 
Installing the SIM card and battery

1. Remove the back cover and insert the SIM card.



Do not bend or twist the back cover excessively. Doing so may damage the cover.

2. Insert the battery and replace the back cover



Inserting a memory card (optional)

The device accepts memory cards with maximum capacities of 16 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with the device



Insert the memory card as shown in the drawing.

- Formatting the memory card on a computer might cause incompatibility with your device.
- Format the memory card only on the device. Frequent writing and erasing of data will shorten the lifespan of memory cards.
- Do not use sharp tools to remove the memory card from the device.

Turning the device on or off

Turning the device on

Press and hold [-----], and then enter the PIN and press <OK>, if necessary.

Turning the device off

Press and hold [----].

If the battery is fully discharged or removed from the device, the time and date will be reset.

Accessing menus

To access the device's menus or options,

Navigation button	Scroll to each menu.
Confirm button	Launch a menu or an application.
<menu></menu>	Open the Menu screen.
<back></back>	Return to the previous screen.
[]]	Close the menu or application and return to the Home screen.

• When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider. Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

Entering text

Changing	the text input mode
Press [#]	Change to uppercase, lowercase, or switch to number mode.
Press and hold [#]	Switch between T9 and ABC mode. Depending on the region, users might be able to use an input mode for specific language.
Press [X]	Switch to symbol mode.
Press and hold [X]	Select an input mode or change the input language.

T9 mode

- 1. Press the appropriate alphanumeric buttons to enter an entire word.
- 2. When the word displays correctly, press [0] to insert a space. If the word does not display, press the Navigation button up or down to select an alternate word

ABC mode

Press an appropriate alphanumeric button until the character appears on the display.

Number mode

Press an appropriate alphanumeric button to enter a number.

Symbol mode

Press an appropriate alphanumeric button to enter a symbol.

Other features for text input

Press the Navigation button	Move the cursor.
Press < Clear >	Delete characters one by one.
Press and hold < Clear >	Delete characters quickly.
Press [0]	Insert a space.
Press [1]	Enter punctuation marks.

Making or answering a call

electric socket while charging.

- To make a call, enter a phone number and press [---].
- To end a call, press [----].

SAMSUN

or service provide

Printed in Korea GH68-38061V English (MEA). 01/2013. Rev. 1.0

Charging the battery

∕₽∖

1. Plug the small end of the charger into the

end of the charger into an electric socket. 2. After fully charging, disconnect the device from the

and then unplug it from the electric socket.

damage the device.

multipurpose jack of the device, and plug the large

charger. First unplug the charger from the device,

Use only Samsung-approved chargers,

batteries, and cables. Unapproved chargers

or cables can cause battery to explode or

· Do not remove the battery before removing

the charger. This may damage the device

To save energy, unplug the charger when not

power. The device should remain close to the

in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting

GT-E2200

user manual

Some content may differ from your device depending on the region

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any

This product includes certain free/open source software. The exact

terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com.

www.samsung.com

To electric socket

content or service will remain available for any period of time

- To call a recently dialled number, press [----] to select a number, and press [----] again to dial the number. To make a call using the phonebook, press <Menu>
- \rightarrow Contacts \rightarrow Contact list, select a contact and press [----].
- To answer an incoming call, press [-].

Sending and viewing messages

<Menu> \rightarrow Messages

Sending messages

- 1. Press Create message. 2. Press <Options> \rightarrow Add recipients \rightarrow Contact list to open the phonebook
- 3. Select a contact.
- Or, enter a contact number.

4. Scroll down and enter a text message.

- See "Entering text" 5. To attach files with the message, press < Options > Add multimedia and select files.
- 6. Press <Options> \rightarrow Send.
- Viewing messages

Press Inbox and select a message to read.

Managing contacts

Save data, such as names, phone numbers and personal information in the device memory or SIM card.

- (J $\textbf{<Menu} \textbf{>} \rightarrow \textbf{Contacts}$
- Users can change the memory location by Ø pressing Management \rightarrow Save new contacts to and selecting a memory location.

Adding new contacts

- 1. Press Create contact \rightarrow a memory location (if necessary).
- 3. Enter contact information and press the Confirm button.

Editing contacts

1. Press Contact list, select a contact, and press the Confirm button. 2. Edit items and press the Confirm button to save.

Deleting contacts

Press Contact list, select a contact, and press <Options> -> Delete contact.

Using the camera

Senuse → Camera

Taking photos

- 1. Aim the lens at the subject and make any adjustments by pressing < Options>.
- 2. Press the Confirm button to take a photo. Photos are saved automatically.

Recording videos

- 1. Press <**Options**> → **Camcorder**.
- 2. Aim the lens at the subject and make any adjustments by pressing < Options>.
- 3. Press the Confirm button to start recording.
- 4. Press <Stop> to end recording. Videos are saved automatically.

Viewing photos and videos

From the Home screen, press <Menu> \rightarrow My files \rightarrow Images or Videos and select an item to view

Listening to music

C→ Menu> → Music

Buttons	Function
Confirm button	Play, pause, or resume music.
Navigation button	 Left: Skip backwards (press); Scan backwards in a file (press and hold). Right: Skip forwards (press); Scan forwards in a file (press and hold). Up/Down: Adjust the volume.
3	Turn shuffle mode on or off.
4	Change the repeat mode.

2. Select a number type (if necessary).

Browsing the web

Senu> → Browser

- When users access Browser for the first time, users might be prompt to create an Internet profile.
 - The browser may not support some webpages.

Navigating webpages

Buttons	Function
Navigation button	Scroll up or down on a webpage.
Confirm button	Select an item.
<back></back>	Return to the previous page.

Using the alarm

 \checkmark <Menu> \rightarrow Organiser \rightarrow Alarms

Setting alarms

- 1. Select an empty alarm location.
- 2. Enter details and press <Save>

Stopping alarms

- When an alarm rings,
- Press < Confirm > to stop the alarm.
- Press < Snooze> to silence the alarm for the snooze period

Deleting alarms

Select an item and set Alarm activation to Off.

Managing calendar

 \frown <Menu> \rightarrow Organiser \rightarrow Calendar

Creating events

- 1. Press <Options> \rightarrow Create
- 2. Enter details of the event and press the Confirm button.

Viewing events

Select a date

Listening to the FM radio

Activating the FM radio

- 1. Plug a headset into the device.
- 2. Press the Confirm button to turn on the FM radio.

3. Press <Yes> to start automatic tuning. Users may be asked to start automatic tuning when accessing the FM radio for the first time.

4. Control the FM radio using the following buttons

Buttons	Function
Confirm button	Turn the FM radio on or off.
Navigation button	 Left/Right: Fine-tune the frequency; Search for the next available station (press and hold). Up/Down: Adjust the volume.

Adding radio stations to the favourites list

- 1. Plug a headset into the device. Press <Options> → Add to Favourites.
- 3. Assign a button and press <Select>

Using the Bluetooth feature

Turning on the Bluetooth feature

- 1. Press <Options> \rightarrow Settings and set Activation to On.
- 2. Set My phone's visibility to allow other devices to search for the device

nding and pairing with other Bluetooth

- 1. Press Search for new devices to find other Bluetooth devices
- 2. Select a device.
- 3. Press <**Yes**> to match the PIN between the devices.
- 4. When the other device accepts the connection. pairing is complete
- Users might have to enter a PIN, depending on the device.

Turning off the Bluetooth feature

Select <Options> \rightarrow Settings and set Activation to Off.

Sending data using the Bluetooth feature

- 1. Select items to send from one of the device's applications
- 2. Press <Options> \rightarrow Send via \rightarrow Bluetooth.

Customising the device

Settings control how applications and functions operate. Change them to customise the device. Appearances, sound profiles, call actions, and many more can be customised.

C→ Settings

Menu	Description
Profiles	Change the alert type, ringtone, volume, etc.
Display	Alter wallpaper, theme, brightness, etc.
Time and date	Change the time and date of the device.
Phone	Change the device language, etc.
Applications	Set application settings.
Security	Set locks or change passwords.
PC connections	Set connection settings with a computer.
Network	Change network profiles settings.
Memory	Clear memory, manage the memory card, or set the default memory location.
Reset	Reset the device.

Adjusting the sound profiles

To switch to another profile, select it from the list.

Changing the ringtone

- 1. Scroll to a profile and press $\langle Options \rangle \rightarrow Edit$.
- 2. Press Call ringtone.
- 3. Select a ringtone and press the Confirm button.
- Changing the message alert tone
- 1. Scroll to a profile and press **<Options>** \rightarrow **Edit**
- Press Message alert type.
 Select a tone and press the Confirm button.

Adjusting the volume of the ringtone

- 1. Scroll to a profile and press $\langle Options \rangle \rightarrow Edit$
- 2. Press Volume \rightarrow Call alert.
- 3. Adjust the volume and press **Save**.

Adjusting the volume of voice during a call While a call is in progress, press the Navigation button up or down to adjust the volume.

Using shortcuts

Editing shortcuts

- Select a Navigation button.
 Select an application to assign.

Customising the Home screen

- Customise the Home screen with applications, contacts, calendar, and many more.
- The shortcuts assigned to the Navigation button is disabled when you are using the smart idle on the Home screen.

Adding items to the smart idle

- Press <Options> → Edit and select items to display on the Home screen.
- 2. Press **Save** or press **Options** \rightarrow **Save**.

Using the smart home

Select an item on the smart home and press the Confirm button to launch the item.

Using the SOS message feature

Send SOS messages to family or friends in an emergency.

Activating the SOS message feature

- 1. Press Sending options and set Sending SOS to On.
- 2. Enter recipient and press $\langle Options \rangle \rightarrow Save$.
- 3. Set the number of times to repeat the message
- 4. Press $\langle Back \rangle \rightarrow \langle Yes \rangle$.

Sending SOS messages

- 1. With the keypad locked, press [---] four times to send an SOS message to preset numbers.
- 2. To exit SOS mode, press [-.].

Making fake calls

Activating the fake call feature

Set Fake call hot key to On.

Making fake calls

a vehicle

- On the Home screen, press and hold the Navigation button down.
- When the buttons are locked, press the Navigation button down four times.

Comply with all safety warnings and regulations

regarding mobile device usage while operating

responsibility. Never use your mobile device while driving, if it is

prohibited by law. For your safety and the safety of others, use your common sense and remember the following tips:

 Position your device within easy reach. Make sure you can access your wireless device without taking your eyes off the

road. If you receive an incoming call at an inconvenient time

Suspend calls in heavy traffic or hazardous weather conditions

"to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely.

Rain, sleet, snow, ice, and heavy traffic can be hazardous.

Do not take notes or look up phone numbers. Jotting down a

· Dial sensibly and assess the traffic. Place calls when you are

not moving or before pulling into traffic. Try to plan calls when

Do not engage in stressful or emotional conversations that may be distracting. Make the person you are talking to aware

Use your device to call for help. Dial a local emergency number

in the case of fire, traffic accidents, or medical emergencies

· Use your device to help others in emergencies. If you see a car

accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.

Use caution when using the device while walking or moving

· Make sure the headset cable does not become entangled in

Do not carry your device in your back pockets or around

Any changes or modifications to your device can void your

Paint and stickers can clog moving parts and prevent proper

When this happens, stop using the device and consult your

· Wipe your device or charger with a towel or an eraser

Clean the battery terminals with a cotton ball or a towel.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it

Do not use the device for anything other than its intended

Avoid disturbing others when using the device in public

operation. If you are allergic to paint or metal parts of the device, you may experience itching, eczema, or swelling of the skin.

manufacturer's warranty. If your device needs servicing, take

· Do not disassemble or puncture the battery, as this can cause

You could be injured or damage the device if you fall.

Do not disassemble, modify, or repair your device

your device to a Samsung Service Centre.

Do not paint or put stickers on your device

· Always be aware of your surroundings to avoid injury to

that you are driving and suspend conversations that could potentially divert your attention from the road.

Get to know your device and its convenience features, such as

speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.

While driving, safely operating the vehicle is your first

let your voicemail answer it for you.

your car will be stationary.

yourself or others.

explosion or fire.

When cleaning your device:

· Do not use chemicals or detergents.

 
physician.

repaired.

vour waist

your arms or on nearby objects

Safety information



section of this manual. When carrying the product or using it while worn on your body, maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements.

Trademarks

 SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.

 Bluetooth[®] is a registered trademark of the Bluetooth SIG Inc. worldwide.

 All other trademarks and copyrights are the property of their respective owners.

This safety information contains content for mobile devices. Some content may be not applicable to your device. To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device.

 Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle that you know to be stolen, call a number that is designated for reporting these types of situations.

Proper care and use of your mobile device

Keep your device dry

- Humidity and liquids may damage the parts or electronic circuits in your device.
 Do not turn an your device if it is not if your device is alread
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

Do not use or store your device in areas with high concentrations of dust or airborne materials

Dust or foreign materials can cause your device to malfunction and may result in fire or electric shock.

Store your device only on flat surfaces If your device falls, it may be damaged.

Do not store your device in very hot or very cold areas. It

- is recommended to use your device at temperatures from 5 $^{\circ}\mathrm{C}$ to 35 $^{\circ}\mathrm{C}$
- Your device can explode if left inside a closed vehicle, as the internal temperature can reach up to 80 °C.
 Do not expose your device to direct sunlight for extended
- periods of time (on the dashboard of a car, for example)
 Store the battery at temperatures from 0 °C to 45 °C.

explosion Do not use damaged power cords or plugs, or loose electrical sockets Do not touch the power cord with wet hands or disconnect the charger by pulling the cord Do not bend or damage the power cord Do not use your device while it is charging or touch your device with wet hands

Warning: Prevent electric shock, fire, and

Do not short-circuit the charger or the device

Do not drop or cause an impact to the charger or the device

Do not charge the battery with the charger that is not approved by the manufacturer

Do not use your device during a thunderstorm

Your device may malfunction and your risk of electric shock is increased.

Do not handle a damaged or leaking Lithium Ion (Li-Ion) batterv

For safe disposal of your Li-lon battery, contact your nearest authorised service centre.

Handle and dispose of the device and charger with care • Use only Samsung-approved battery and charger specifically designed for your device. Incompatible battery and charger can cause serious injuries or damage to your device.

Do not store your device with metal objects, such as coins,

· If the battery terminals come into contact with metal objects, this

Your device may malfunction or the battery may discharge from

closures or allow your device to come into contact with magnetic

Do not store your device near or in heaters, microwaves, hot

Do not drop your device or cause impacts to your device

Do not use your device or applications for a while if the

Prolonged exposure of your skin to an overheated device may

cause low temperature burn symptoms, such as red spots and

If your device has a camera flash or light, do not use it close

to the eyes of people or pets Using a flash close to the eyes may cause temporary loss of vision

· If bent or deformed, your device may be damaged or parts may

· Magnetic stripe cards, including credit cards, phone cards,

passbooks, and boarding passes, may be damaged by

· Do not use carrying cases or accessories with magnetic

cooking equipment, or high pressure containers

· Your device may overheat and cause a fire.

The screen of your device may be damaged.

Your device may be scratched or may malfunction

Do not store your device near magnetic fields

keys, and necklaces

may cause a fire

magnetic fields.

· The battery may leak.

malfunction.

pigmentation

device is overheated

or damage to the eyes

exposure to magnetic fields.

fields for extended periods of time

- Never dispose of the battery or device in a fire. Follow all local regulations when disposing of used battery or device.
 Never place the battery or device on or in heating devices, such as microwave ovens, stoves, or radiators. The device may
- explode when overheated.
 Never crush or puncture the device. Avoid exposing the device to high external pressure, which can lead to an internal short

circuit and overheating. Protect the device, battery and charger from damage

- Avoid exposing your device and battery to very cold or very hot temperatures.
- Extreme temperatures can damage the device and reduce the charging capacity and life of your device and battery.
- Prevent the battery from coming into contact with metal objects as this can create a connection between the + and – terminals of your battery and lead to temporary or permanent battery
- damage.Never use a damaged charger or battery

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Do not use your device near other electronic devices Most electronic devices use radio frequency signals. Your device

may interfere with other electronic devices. Do not use your device near a pacemaker

Use caution when exposed to flashing lights

Reduce the risk of repetitive motion injuries

Ensure maximum battery and charger life

overcharging may shorten battery life.

Avoid charging your device for more than a week, as

· Use the battery only for their intended purposes.

device or cause the device to malfunction.

Do not bite or suck the device or the battery

using the device immediately.

and consult a physician

before use

and supplies

nsung.

properly

- Avoid using your device within a 15 cm range of a pacemaker, if possible, as your device can interfere with the pacemaker.
- To minimise possible interference with a pacemaker, use your device only on the side of your body that is opposite the pacemaker.

While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.

flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop

· Seizures or blackouts can occur when you are exposed to

When you repetitively perform actions, such as pressing keys

drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands,

neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip press the keys lightly, and take frequent breaks. If you continue

to have discomfort during or after such use, stop using the device

· Over time, unused device will discharge and must be recharged

Use manufacturer-approved batteries, chargers, accessories,

· Using generic battery or charger may shorten the life of your

· Samsung cannot be responsible for the user's safety when

using accessories or supplies that are not approved by

Doing so may damage the device or cause an explosion.

· If children use the device, make sure that they use the device

· Disconnect the charger from power sources when not in use

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency If you use medical equipment, contact the equipment manufacturer before using your device to determine whether or not the equipment will be affected by radio frequencies emitted by the device.

If you use a hearing aid, contact the manufacturer for information about radio interference

The radio frequency emitted by your device may interfere with some hearing aids. Before using your device, contact the manufacturer to determine whether or not your hearing aid will be affected by radio frequencies emitted by the device.

Turn off the device in potentially explosive environments

- Turn off your device in potentially explosive environments instead of removing the battery.
 Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (petrol stations), near fuels or chemicals, or in blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or

Your device may interfere with the aircraft's electronic navigation

Electronic devices in your car may malfunction, due to radio interference from your device. Contact the manufacturer for more

Do not insert the device or supplied accessories into the

· Hold the device upright, as you would with a traditional phone

· Do not touch the device's internal antenna. Doing so may result

in reduced call quality or cause the device to emit unintended

Protect your hearing and ears when using a headset

conversation or music.

headset to the device.

hearing damage

Excessive exposure to loud sounds can cause

distract your attention and cause an accident.

Always turn the volume down before plugging the

minimum volume setting necessary to hear your

In dry environments, static electricity can build

up in the headset. Avoid using headsets in

dry environments or touch a metal object to

discharge static electricity before connecting a

· Exposure to loud sounds while driving may

earphones into an audio source and use

Doing so may cause suffocation or serious injuries.

Your device may interfere with automotive equipment

Turn off your device when on an aircraft

instruments.

information

eyes, ears, or mouth

Internal antenna

~~?

When using the device:

Speak directly into the microphone.

levels of radio frequency (RF) energy.

Do not allow children to use your device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others or damage the device.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

Handle SIM cards or memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/ or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services personnel.

Keep your personal and important data safe

- While using your device, be sure to back up important data. Samsung is not responsible for the loss of any data.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.

- Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions or to a significant amount of your personal information.
- Check your accounts regularly for unapproved or suspicious use. If you find any sign of misuse of your personal information contact your service provider to delete or change your account information.
- In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.
- Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN.

Do not distribute copyright-protected material

Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

Specific Absorption Rate (SAR) certification information

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organisation (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded		
Head SAR	0.901 W/kg	
Body-worn SAR	0.598 W/kg	

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimise interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

A body-worn SAR test has been performed on this device at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device must be positioned at least 1.5 cm away from the body.

Organisations such as the World Health Organisation and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or reduce the amount of time spent using the device.

For more information, visit www.samsung.com/sar and search for your device with the model number.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature

indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This EEE is compliant with RoHS.

Correct disposal of batteries in this product

(Applicable in countries with separate collection systems)

This marking on the battery, manual or packaging

indicates that the batteries in this product should not be disposed of with other household waste. Where

marked, the chemical symbols Hg. Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.