

Spark 250 User Manual

1 Welcome

Thank you for purchasing Lava Spark 250. Your Spark 250 is packaged with the following state of the art features:

- 1.3MP+VGA Camera
- 2.4 Inch screen
- Audio Player
- FM Radio
- Video and FM Recording
- Dual SIM (GSM + GSM)
- T-Flash Card support (up to 8 GB)
- Hindi Language Support

Important:

1. Please read the contents of this manual to fully utilize the features of this phone.
2. Please read the Guidelines section provided with this Reference guide.

Table of Contents

1	Welcome	2
2	Know Your Phone	6
2.1	Keys and Parts	6
2.2	Insert SIM Card	7
2.3	Insert Memory Card	7
3	Basic Operations	8
3.1	Switch Phone ON/OFF	8
3.2	Unlock the phone	8
3.3	Make a call	8
4	Notable Features	9
4.1	Secure your Phone	9
5	Contacts Features	9
5.1	Add New Contact	9
5.2	Send SMS	10
5.3	Call a Contact	10
5.4	Delete a Contact	10
5.5	Delete multiple contacts	10
5.6	Add to Blacklist	10
5.7	Import/Export Contacts	11
5.8	Send vCard	11
5.9	Others	11
5.10	Most used	12
5.11	Groups	12

User Manual

6	Call Logs	12
6.1	View Call Logs	12
7	Settings	13
7.1	Phone settings	13
7.2	Display settings	13
7.3	Security settings	13
7.4	Call settings	13
7.5	Connections	14
7.6	Dual SIM settings	14
7.7	Profiles	14
8	Gallery.....	14
9	Messages.....	15
9.1	Write message	15
9.2	Use message Templates	15
9.3	Broadcast message	15
9.4	Voice mail server	15
9.5	Settings	16
9.6	Delete all	16
9.7	Message capacity	16
10	Media	16
10.1	Camcorder	16
10.2	Video Player	17
10.3	FM Radio	17
10.4	My Images	18
10.5	Recorder	18
11	Camera	18

User Manual

12	Music	18
13	Organizer	19
13.1	World clock	19
13.2	Alarm	19
13.3	Calendar	19
13.4	Stopwatch	20
13.5	Timer	20
13.6	Torch	20
13.7	Calculator	20
13.8	Bluetooth	20
14	Tools	21
14.1	Ebook	21
14.2	To Do list	21
15	Fun	21
16	Web	21
16.1	Internet	21
16.2	Lava Zone	22
16.3	Lava Space	22
16.4	SIM tool kit	22
17	Health and Safety Precautions	22
18	Taking Care of Your Device	25
19	LAVA WARRANTY CERTIFICATE	29

2 Know Your Phone

2.1 Keys and Parts

Important keys and parts are listed here for you to use the phone better.



2.2 Insert SIM Card

The Spark 250 is a Dual SIM mobile phone allowing you to use two SIM Cards.

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the SIM slot(s).
3. Finally, insert the battery and place the rear cover of the mobile phone.

2.3 Insert Memory Card

1. Switch off the phone and remove the rear cover and the battery.
2. Insert the memory card into the slot.
3. Finally, insert the battery and the rear cover of the mobile phone.

Note: Use only compatible memory cards approved for Spark 250. Incompatible cards may damage the slot or corrupt the data stored in the card.

3 Basic Operations

3.1 Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the **End key** for a few seconds.

3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

1. Press any key to activate the screen.
2. Press **Left** key, and then press * key.

3.3 Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key** to make the call.
- Go to **Menu > Phonebook** and then select and dial the desired number.
- Just press the **Call key** to dial the contacts listed in Call logs.

- You can also dial a contact from the messages.

4 Notable Features

4.1 Secure your Phone

Menu > Settings > Security > Phone Locked

Let you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is **4321**.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

5 Contacts Features

Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory. You can manage your contacts from here.

Menu > Contacts

5.1 Add New Contact

Menu > Contacts > Left Key > Create Contact

5.2 Send SMS

Menu > Contacts > Left Key > Write message > SMS

5.3 Call a Contact

Menu > Phonebook > Left Key > Call > Voice call

Allow you to make a call to the contact you are viewing. Or you can just highlight a number and press the **Call** key.

5.4 Delete a Contact

Menu > Contacts > Left Key > Delete

In the Contacts list, select the entry you want to delete.

5.5 Delete multiple contacts

Menu > Contacts > Left Key > Delete multiple

In the Contacts list, select the entry you want to delete.

5.6 Add to Blacklist

Menu > Contacts > Left Key > Add to Blacklist

Allow you to black list selected numbers. In this case the contact will be blocked from calling you up.

5.7 Import/Export Contacts

Menu > Contacts > Left Key > Import/Export

You can copy, Import or Export contacts entries stored in the SIM card to the phone memory and vice-versa.

5.8 Send vCard

Menu > Contacts > Left Key >Contacts> vCard

Allow you to send vCard to other numbers and export vCard.

5.9 Others

Speed dial

Menu > Contacts > Left Key >Others> Speed dial

Set speed dial and view memory status.

Owner number

Menu > Contacts > Left Key >Others> Owner number

Set names of your own number.

Memory status

Menu > Contacts > Left Key >Others> Memory status

Check the memory status of SIM, and Phone.

5.10 Most used

Menu > Contacts > Most used

View the contacts that most used.

5.11 Groups

Menu > Contacts > Groups

Press the Left/Right navigation key to access the Group tab. Set up a list of numbers with similar preferences such as ringtone, profile etc.

6 Call Logs

6.1 View Call Logs

Menu > Call Logs

Tip: Directly access the call logs of by pressing the **Call** key in idle mode.

The Call log lists the calls you have recently dialed, received, missed for SIM1 and SIM 2.

Press the Left/right navigation keys to access various call logs and work on the call logs.

7 Settings

Choose various preferences to customize your handset according to your requirements. You can set:

7.1 Phone settings

Menu > Settings>Phone settings

To perform the Time & Date, Language settings, dedicated keys, Schedule power on/off, Battery Status and Restore factory setting.

7.2 Display settings

Menu > Settings>Display settings

Performance related Settings shown as wall paper, and standby interface, backlight and the backlight time, key backlight time setting

7.3 Security settings

Menu > Settings>Security settings

Execute related the SIM1/2 security, mobile security, automatic keyboard lock, and end keys locked fast, anti-theft tracking and fixed dialing, blacklist and whitelist privacy protection.

7.4 Call settings

Menu > Settings>Call settings

User Manual

To perform the Dual-SIM, call divert, call waiting, call barring, Hide ID, Others

7.5 Connections

Menu > Settings>Connections

You can set connectivity including Data account.

7.6 Dual SIM settings

Menu > Settings>Dual SIM settings

You can set SIM card related things

7.7 Profiles

Menu > Settings>Profiles

Activation and customize the required profile is General, Silent, Meeting, Indoor, Outdoor, Headphones, Bluetooth.

8 Gallery

To manage the space of phone or memory card.

9 Messages

9.1 Write message

Menu > Messages > Write message > New SMS

You can compose and send SMS. Pressing the **Left Key** during/after composing the message gives you a host of messaging features.

9.2 Use message Templates

Menu > Messages > Templates

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

9.3 Broadcast message

Menu > Messages > Broadcast message

. To receive public messages on all different subjects from your network operator

9.4 Voice mail server

Menu > Messages > Voice mail server

You can activate voicemail service to redirect your incoming calls (based on your call settings) to a voicemail server and retrieve them later via

SMS alerts.

To divert incoming calls to a voicemail server, go to Settings>Phone tab > Call Divert> Voice> (choose the desired call divert condition)> Activate> Phone Number/Voicemail Number.

9.5 Settings

Menu > Messages > Options>Settings

You can set your desired parameters for SMS and Others.

9.6 Delete all

You can choose all messages in the Inbox or others to delete.

9.7 Message capacity

Menu > Messages >Options> Message capacity

View the memory status of your SMS.

10 Media

10.1 Camcorder

Menu > Media > Camcorder

Press the **OK** Key to start recording.

User Manual

- You can press **Options** switch to **Camera** and vice versa.
- You can also press **Options** key to choose memory
- Press Left key to choose various settings

Shortcut keys: Press the number keys as shortcuts on the phone's keypad to choose various video settings.

10.2 Video Player

Menu > Media > Video Player

Let you play videos stored in your phone or memory card.

Press 2 key while playing a video to change the display mode.

10.3 FM Radio

Menu > Media> FM radio

Your phone comes with an FM radio to let you listen to FM channels.

- Go to Options> Search Channels> Auto Search to fill up the channels.
- Press the number keys on your keypad in accordance to the channel list.
- Press OK key to start/stop the radio.
- Press the Up or Down key to increase/decrease the volume.

User Manual

- Press the Left key for various radio options.

10.4 My Images

Menu > Media> My Images

Let you to view your saved images. You can also send the images via Bluetooth or use it as contact icon or wallpaper, etc.

10.5 Recorder

Menu > Media> Sound recorder

You can record surrounding sounds using this feature.

11 Camera

Press the left key in camera mode to choose various settings

Shortcut keys: Press the number keys on the phone's keypad to choose various settings. Long Press Left key to directly use front camera, you can also change from Main camera to front and vice versa from camera settings

12 Music

The phone comes with an inbuilt audio player that plays all your favorite

songs stored in the phone memory or memory card.

- While in music mode, press the Left key to choose various music options
- **Adjust Volume:** Press Up and Down keys to adjust volume.

13 Organizer

13.1 World clock

Menu > Organizer > World clock

To use the world clock function.

13.2 Alarm

Menu > Organizer > Alarm

To use the alarm service available with your mobile phone.

13.3 Calendar

Menu > Organizer > Calendar

To arrange your journey according to calendar.

13.4 Stopwatch

Menu > Organizer > Stopwatch

For different time

13.5 Timer

Menu > Organizer > Timer

Set up time, time will have ring tone hint.

13.6 Torch

Menu > Organizer > Torch

To turn on/off Torch.

13.7 Calculator

Menu > Organizer > Calculator

To provide a calculator with 4 basic functions to facilitate simple calculations.

13.8 Bluetooth

Menu > Organizer > Bluetooth

Open the Bluetooth, for file transfer and acceptance

14 Tools

14.1 Ebook

Menu > Tools> Ebook

To read the e-book with text format.

14.2 To Do list

Menu > Tools> To Do list

To remember something

15 Fun

You may play the built-in games.

16 Web

16.1 Internet

Menu > Web>Internet

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this

function.

16.2 Lava Zone

Menu > Web>Lava Zone

We can use this to download MP3, Video, Wallpaper and other content.

16.3 Lava Space

Menu > Web>Lava Space

We can use it for entertainment

16.4 SIM tool kit

Menu > Web>SIM tool kit

Your phone supports STK (SIM TOOL KIT) function for SIM1/2.

17 Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.

User Manual

- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.
- The highest SAR value of the device at the head and body are below 1.6W/kg respectively averaged over 1 gm. of human tissue.

SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place

User Manual

from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in chest pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

18 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.

User Manual

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. Spark 250 will not be held responsible for user's safety when using unapproved accessories or supplies.

User Manual

Recycle Your Handset



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.Lavamobiles.com

Disclaimers

1. The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their

User Manual

respective owners.

2. Spark 250 keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part of all of the contents in this document in any form without the prior written permission of Lava International is strictly prohibited.

19 LAVA WARRANTY CERTIFICATE

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as “product”)

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have to coverage or benefits under this warranty in the event that any of the following conditions are applicable:

1. The product has been subjected to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation
2. You have not notified Lava of the defect in the product during the applicable warranty period.

User Manual

3. The product serial no. code or the accessories date code has been removed, defaced or altered.
4. The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.
5. The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
6. All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website

User Manual

www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No.
Dealers Stamp
Date of purchase
Model No.