

ALL RIGHTS RESERVED

Spice Retail Ltd. ©2013. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with Spice, and Spice does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), Spice does not warrant that any Spice software will meet your requirements,

will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.


 *Note: User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.*

TABLE OF CONTENTS

SAFETY PRECAUTIONS	5
UNDERSTANDING YOUR DEVICE	8
GENERAL INFORMATION	8
TECHNICAL SPECIFICATIONS	8
DEVICE OVERVIEW.....	9
POSITION OF KEYS	9
FUNCTION OF KEYS	9
STATUS ICONS.....	10
GETTING STARTED	12
INSTALLING SIM CARD AND BATTERY.....	12
INSTALLING MEMORY CARD.....	12
CHARGING THE BATTERY	13
SWITCH ON/OFF THE DEVICE	13
AUTOMATIC CUSTOMER REGISTRATION	14
BASIC OPERATIONS.....	14
TO MAKE CALLS.....	14
TO DIAL INTERNATIONAL NUMBER	14
ANSWER/REJECT AN INCOMING CALL	15
OPTIONS DURING A CALL.....	15

MAIN MENU.....	15
PHONEBOOK	16
MESSAGES	17
CALL LOGS	18
MULTIMEDIA	19
FUN SPICE.....	21
SETTINGS.....	22
FILE MANAGER	27
ORGANIZER.....	28
SERVICES	30
SUPPORT AND CONTACT	31
ENVIRONMENTAL CONCERN	32

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.

- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

Notice:

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.



If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.

SAR (Specific Absorption Rate)

Your device conforms to the Indian guidelines for exposure to radio waves. The limits are given in terms of a unit referred to as the Specific Absorption Rate (SAR), which is a measure of the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value as per the Indian guidelines standard is 1.6 watts per kg (Watt/kg), averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of human tissue. MAX SAR for Head: **0.922 Watt/kg**; MAX SAR for Body: **0.716 Watt/kg**; You can check it by dialing ***#07#** on your device.



UNDERSTANDING YOUR DEVICE

General Information

Your device encloses features, such as **Digital Camera, Video Player, Bluetooth, Audio Player, Wireless FM** etc. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM.



Technical Specifications

Battery	1800 mAh
Charger	Input AC 100-260V , Output DC 5.2V
Dimensions	114.5*48*16.2mm
Weight	60.8 g
Screen	2.0 inch
Standby Time*	18 days
Maximum Talk Time *	5 hours

** The standby time and maximum talk time depend upon the network signals and settings.*

Device Overview



Position of Keys

1. LSK/Menu Key	2. Slave SIM Call Key
3. Navigation Keys	4. Audio player Key
5. Phonebook/RSK	6. Master/call Key
7. Keypad	8. Connector
9. Camera	10. Speaker














Function of Keys

Key	Description
Master SIM Key	To make/answer a call from Master SIM. In the standby mode, press this key to view Master SIM Call Logs.

Slave SIM	To make a call from Slave SIM. In the standby mode, press the key to access Slave SIM Call Logs.
RSK/Right Soft Key	Use RSK to execute the functions indicated at the right of the prompt bar on the screen.
LSK/menu Key	In the standby mode, press this key to access Main Menu.
End/Power Key	End an ongoing call. Press and hold this key to turn on or off the device.
Navigation Keys	In the editing mode, use the keys to move the cursor. In the standby mode, press the keys to access the function assigned to these keys.
Keypad	Use to enter numbers, letters and special characters. In the standby mode, long press 0 Key to switch on the FM Radio. Press RSK and # key to lock/unlock screen. Long press * key to switch on the torch.

Status Icons

The table below lists various icons that might appear on the status bar while using the device. Apart from the icons for signal strength level and the power, other icons are displayed as per the current mode and priority of the device.

Icon	Description
	Indicates the network signal strength of Master SIM.
	Indicates the network signal strength of Slave SIM.
	Indicates the current battery capacity.
	Indicates that there is an unread SMS in Master SIM.
	Indicates that there is an unread SMS in Slave SIM.
	Indicates that there is a missed call in Master SIM.
	Indicates that there is a missed call in Slave SIM.
	Indicates that Alert type of current profile is Only Ring.
	Indicates that Alert type of current profile mode is Vibrate.
	Indicates that the Alert type of the current profile mode is the Ring and Vibrate
	Indicates that the current profile is Headset mode.
	Indicates that alarm clock is set as activated.
	Indicates the current keypad-locked state.

GETTING STARTED

Please switch off your device before inserting or removing the battery/SIM card or memory card.

Installing SIM Card and Battery

Your device is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM.

- Remove the back cover of the device.
- Hold the phone with the front facing downwards; pull the cover.
- Insert the SIM cards and battery in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.

Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage.

- Switch off your device.
- Remove the battery cover.


- Slide the T-Flash card into the slot.
- Attach the battery.
- Push the battery cover until it clicks into place.

Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power of your device is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Note: When  is shown on the screen, it indicates that there is not enough power and you should now charge your device. When charging is complete, the battery icon will stop flashing. You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for four hours before using the device for the first time. If the device is turned on during charging, you can still make or answer calls, but this will consume battery power, thus will extend the charging time of the device.

Switch On/Off the Device

To turn on/off the device, press and hold the **End/Power Key**. If you have enabled the SIM Lock function then enter the PIN code (4 to 8 digits secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in


succession, your SIM card will be locked. To unlock it, you must obtain a code from your network operator.

Automatic Customer Registration

After 4 hours of usage a SMS from the device will be sent automatically for the customer registration. *Note: standard SMS charges apply.*

BASIC OPERATIONS

To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

- Input the phone number (should affix the international/ national/regional code or district code if necessary) and then press the Master/Slave SIM key to make a call.
- You can select a number from Contacts and call the Contacts person.

Tip: The signal strength may influence the quality of connection.

To Dial International Number

Your device supports dialing the international emergency phone number, such as 112. With the device, you can dial an emergency call in any country or region under the normal situation regardless of SIM card inserted when the device is located within the coverage of the GSM network. Input the emergency phone number and press **Master/Slave SIM Key** to

dial. The device will select the main network automatically after powered on if it is located within the coverage of the main network. The device can use other network, called as roaming, if the device is not located within the coverage of the main network when the network operator protocol permits. You can dial or answer a call when the symbol of the network operator appears on the screen.

Answer/Reject an Incoming Call

- Press **Call/Master SIM Key** to receive the incoming call. You can use the earphone to answer the call when the generic headset is inserted in the device.
- Press **End Key** to reject an incoming call.

Options during a Call

Press **<Options>** to use the following functions during the call:

- **Hold:** temporarily hold the current call.
- **End:** end the current call.
- **Phonebook:** access the Contacts menu.
- **Call history:** access the call logs
- **Messaging:** enter in the SMS menu.
- **Mute:** on/off the mute mode.
- **Volume:** adjust the call volume

MAIN MENU

Menu guides you to the various applications, features and utilities available in your device. In the idle mode, press Menu

key to access the Main Menu. Use the navigation keys to choose the desired operation and press Ok to enter the selected operation.

Phonebook	Messaging	Call logs
Multimedia	Fun Spice	Settings
File Manager	Organizer	Services

PHONEBOOK

Phonebook refers to the directory wherein all the Contacts are stored in an alphabetical order. You can view, edit, delete, send message and perform various other functions on each contact of your phonebook. Press Menu key in the standby mode and then select Contacts.

Add New Contact

- Go to Main Menu > Phonebook > Add new Contact
- Press ok and enter the Contacts details

Search Contact

- Go to phonebook > contacts and input the initials of a name to be searched.
- Select a desired entry from the list.

Select a Contact from the list and select options to perform the following operations:

- View: view the detailed info of the selected Contacts.
- Send message: send message to the Contacts.
- Call: call the Contact.
- Edit: edit the Contact information.
- Delete: delete the Contact.
- Copy: Copy the entry to phone memory, SIM memory or to a file.
- Add to blacklist: add the contact to blacklist.
- Mark Several: select several contacts at a time.
- Caller groups: add the contact in a caller group.
- Phonebook settings: view/manage phonebook settings.

MESSAGES

Your device features, sending and receiving of SMS (Short Message Service). Press LSK key to access Main Menu and then select Messages.

Write message

You can create and send SMS to a particular Contact using this sub-menu.

Inbox

Inbox sub-menu enables you to view all the messages received on your Master/Slave SIM.

Drafts

The created messages can be saved to drafts folder for future use. After selecting a message from the Drafts folder, select Options to edit/delete or send the saved message from the desired SIM.

Outbox

The messages that do not reach the receiver successfully get stored in the Outbox folder.

Sent Messages

All the messages that are sent successfully get stored in sent messages.

SMS Templates

Your device is provided with some commonly used pre-defined messages. These messages can be edited and send instantly.

SMS Settings

You can change the SMS settings, such as profile, preferred storage, delivery report etc.

CALL LOGS

Call Logs sub-menu lets you view the call details i.e. the missed, received & dialed call logs. In the standby mode, press LSK key to access Menu > Call logs. Scroll up/down using the navigation keys to select a call and then press OK key to view

the details and perform operations, such as View, Save, Call, Delete, Edit before call, Send message .

Missed Calls

With this function, you can check recent missed calls. Scroll the Up/Down keys to select a missed call. Press OK key to access missed call information, and perform operations, such as View, Save, Call, Delete, Edit before call, Send message.

Dialed Calls

With this function, you can check recent dialed calls. Press OK key to access dialed call information, and perform operations, such as View, Save, Call, Delete, Edit before call, Send message.

Received Calls

With this function, you can check recent received calls. Press OK key to access received call information, and perform operations, such as View, Save, Call, Delete, Edit before call, Send message.

Delete Call Logs

You can delete all records of missed calls, dialed calls or received calls by accessing this sub-menu.

MULTIMEDIA

This menu is specifically designed for the entertainment purpose of the user. To enter this menu, go to the Main Menu

and select Multimedia. The various multimedia features offered by your device includes **Audio Player, Sound Recorder, Camera, Video Recorder, FM Radio , Image Viewer and Video Player.**

Camera

Your device is provided with **Digital Camera**, which supports the photographing and video shooting functions.

Image Viewer

Pictures taken can be accessed quickly through Image Viewer. Select an image to view and press ok key to perform operations, such as, delete all files, use the image as wallpaper.

Video recorder

In standby mode, select Menu > Multimedia > Video recorder to launch the video recorder and shoot your videos.

Video Player

Your device supports playing various video formats. To access the Video Player, go to Multimedia and select Video Player. All the videos available in the storage selected by you will be displayed. Select a video clip and press OK key to open it.

Audio Player

Audio player allows you to play audio files. Please save your audio files in the My Music folder of the memory card. You can

stop, pause, play and switch to the next/previous song using the navigation keys.

Sound Recorder

You can record conversations, which will be saved to the Audio folder under File Manager. After selecting a recording, you can select to play, rename, delete, delete all files etc.

FM radio

You can use your device to listen to FM radio stations after inserting the headphones. Go to Main Menu > Multimedia > FM radio. When in the Radio interface, press options to view channel list and settings.

FUN SPICE

MTracker

Now be sure of your device with Mobile Tracker. This feature allows users to track their device if it is lost or stolen. Switch on Mobile Tracker application and whenever a new SIM is inserted in your device you will receive a SMS on pre defined numbers.

1) Tracker Mode

This function requires your network support. You can set ON or OFF. When the function is ON the device will send a message to the number which you have set. The message will tell you that which number is using your device now. The default password is 1122.

2) Number

You can set Tracker number.

TIP: This function requires your network support. When you set Tracker Mode OFF, and then you can set the tracker number you want.

Privacy Protection

Now you can protect your Call Logs, Contacts, Messages and File Manager by using Privacy lock feature. If it is switched on then all these services will become password protected. The default password is 1122.

SETTINGS

In the standby mode, press OK key to access Menu > Settings.

Profiles

The phone provides six pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are **General, Silent, Meeting, Outdoor and Flight Mode**. The phone will automatically enter the headset profile if you connect the headset to your phone.

General

Activate: select to enable the mode

Customize: select to customize the mode as per your desire

- Alert Type: select the alert type for incoming call.
- Ring Type: set the ring type.
- Incoming call: select the ringtone for Master SIM.

- Incoming call: select the ringtone for Master/Slave SIM.
- Ringtone Volume: set the ring volume.
- Message: select the message tone for Master and Slave SIM
- Message volume: set the message tone volume.
- Keypad: set the keypad tone
- Keytone Volume: set the keytone volume.
- Power on/off: select tone for power on/off
- System alert: select system alert tone.

Reset: select to set to default

Silent

Select activate to enable this mode.

Meeting

Please select activate to enable the meeting mode on. In the standby mode, long press # key to enable/disable meeting mode.

Outdoor

Please refer to "General" for more details.

Flight Mode

Set it to on while boarding the plane.

Multi SIM Settings

You can select one mode as per your usage.

Phone Settings

- Time and Date:
 - Set date and time: enter the current time and date.

- Format: select a time and a date format.
- Auto power on / off: You can set the time for auto power on /off.
- Language: Your device supports English and Hindi language.
- Preferred input method settings: Select the desired input method to set as the default input method.
- Display Settings: With this sub-menu you can configure the display characteristics of the device including wallpaper, screensaver, power on/off display.
- UART settings: select the settings for Master/Slave SIM
- MISC settings: set the LCD backlight.

Network Settings

Please Contact the network operator for the following network service.

- Network Selection: You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the device will make the selection according to the network. If you select Manual, you will have to select the network manually.

Security Settings

- Master/Slave SIM Security: You can choose to set/change the PIN for Master/Slave SIM.
- Phone Security:

- Phone lock: You can lock or unlock the device. Enter the password to activate or deactivate the phone lock. When the device is locked, you will be asked to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is 1122.
- Change password: You can change phone password as per your desire.
- M Tracker: After entering the password, you can change the status and settings. The default password is 1122
- Privacy Protection: You can protect your device from unauthorized access. Now you can protect your call logs, messages, Contacts and file manager by using Privacy Protection feature. If it is switched on then all these features will become password protected. You can change Private protection password. The default password is 1122.

Call Settings

Master/Slave Call Settings

- Call waiting: Activate, the network will notify you of a new incoming call while you have a call in progress (Net work Service).
- Call divert: This network service allows you to divert your incoming calls to another number. For details, Contact your service provider.

- Call barring: Activate, this network service allows you to restrict incoming calls from your device. For details, Contact your service provider.

Advanced Settings

- Black list: when the function is on, the number in Black list can't call you.
- White list: when the function is on, only the numbers added in this list would be able to call you.
- Auto redial: when you dial a number and the other side not responds, it will dial again automatically.
- Auto Call Record: set it on if you want to record all the calls automatically.
- Call time display: set it to on/off
- Call time reminder: you can open the function; it will remind you single or periodic.
- Answer mode: when a call is coming, you can press any key to answer but end key.

Smart Call Divert

The smart divert function is provided for avoiding the missed calls. When you are on call on the first number, the incoming call from the second number will be diverted to the first number if you have activated this function. The device will remind you to check the smart divert status each time when you power on the device. This function is based on service provider.

Bluetooth

- Turn on: on/off Bluetooth function. when the Bluetooth is on, main LCD interface status bar will display the Bluetooth icon.
- Visibility: whether the device can be searched.
- My devices: show the devices which had matched with my device.
- Search audio devices: search the nearby Bluetooth devices.
- My name: Show device name.
- Advanced: Include the following
 - Storage: set up the memory card.
 - My address: show my address.

Restore factory settings

Access Settings to select Restore factory settings, and press OK. All settings can be restored to factory settings with this function. The default password is 1122.

Shortcuts

You can set shortcuts for those functions you often use. You can edit, delete/add and set the order of the shortcut list functions. In the shortcut list, press the up and down direction keys or the number keys to designate the function menus, select options to edit the selected shortcut.

FILE MANAGER

File manager enables you to browse, open and manage the data saved in Memory card. The device provides a certain space for users to manage files and supports the Memory card. You can use the file manager to conveniently manage various directories and files on the Memory card. Choose Files to enter the root directory of the memory. The root directory will list the default folders, new folders and user files.

ORGANIZER

The organizer menu gives you access to a number of features including **Games, Torch, Calendar, Alarm and Calculator and World Clock.**

Games

Your device is provided with an interesting game Copter for your entertainment purpose.

Torch

Go to organizer > torch to turn on /off the torch. In the idle mode press * to switch on the torch.

Calculator

The mobile phone is provided with a calculator with basic functions. You can carry out the basic arithmetic operations using the in-built calculator of your device.

Ebook Reader

The phone supports reading files in the *.txt format, which is ideal for reading an e-book. Store the *.txt files in the Ebook folder, and then you can read them in E-Book reader.

Calendar

You can view and edit the memo of a specified date with this function.

- **View:** You can view or edit the daily arrangement of the day.
- **View all:** You can view or edit all the daily arrangement of the day.
- **Add event:** You can select task types: Reminder, Meeting, and Course.
- **Delete event:** You can select delete entries form All, Overdue, Spec Period.
- **Jump to date:** Skip to the specified date to view or edit the daily arrangements of the day.
- **Go To today:** Return to today's view.
- **Go To weekly view:** Go to the specified date to check which week/Month it is.

Alarm

Your device provides 5 alarms and you can set them as per your need. If you have configured an alarm, an icon indicating

that you have configured the alarm will appear on the status bar.

World Clock

Scroll to browse every city's time zone in the world map. The related date and time will be displayed at the bottom of the screen.

SERVICES

To access this menu, enter the Main Menu in the standby mode and then select Service. You can use the network-related services with this function.

SUPPORT AND CONTACT

You can visit www.si2imobility.com/spicemobiles/ for additional information, downloads and services related to your Spice handset.

For further assistance or queries, you can call on SPICE customer care number **011-42921000** (toll free) or mail at **customer care@smobility.in** or **product@smobility.in**.

Note: After sales service of the device is confined to the country in which the purchasing is done.



ENVIRONMENTAL CONCERN

Help us save Our Environment...GO GREEN..!!

All our endeavors are directed towards providing environment friendly products to you. The material used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

DOs

- Recycle your handset and its accessories.

- To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

DONTs

- Do not dispose off your mobile and its battery in fire.
- Do not dispose your mobile with the regular waste.
- Do not over charge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it



This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

Hazards of Improper handling, accidental breakage, damage and /or Improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

- Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body ;
- When burned, create cancer-producing dioxins which are released into the air we breathe ;
- If thrown in landfills, may leach into groundwater affecting your local community ;
- In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and
- Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

How to Recycle

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care. **Help us to GO GREEN.**

Constitution of Hazardous Elements In your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder:

- maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers ; and
- maximum concentration value of 0.01% by weight in homogenous materials for cadmium.