



VIDEOCON
Mobile Phones



USER MANUAL
A24

www.videoconmobiles.com

VIDEOCON

USER'S MANUAL

User Manual

Legal Notices

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited.

VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided as it is. Except as required by applicable law, no warranties of any kind, either deselected or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

Software Update Information

To enhance device performance, we recommend that you get in touch with the nearest VIDEOCON Authorized Service Center, regarding the availability of updated firmware for your device. Please see the enclosed Service Center Directory for the VIDEOCON Authorized Service Center nearest to your location.

Third party applications Disclaimer

Some applications accessible through your mobile belong to third parties and are protected by patent, copyright, trademark and/or other intellectual property laws. Those applications are provided solely for your personal non-commercial use. You may not use any application in a manner that has not been authorized by the application owner or provider.

Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"Third party content and services are provided "as is". VIDEOCON does not warrant content or services so provided, either expressly or impliedly, for any purpose. VIDEOCON expressly disclaims any implied warranties, including but not limited to, warranties of merchantability or fitness for a particular purpose. VIDEOCON does not guarantee the accuracy, validity, timeliness, legality, or completeness of any content or service made available through this device. Under no circumstances, including negligence, shall VIDEOCON be liable, whether in contract or tort, for any direct, indirect, incidental, special or consequential damages, attorney fees, expenses, or any other damages arising out of, or in connection with, any information contained in, or as a result of the use of any content or service by you or any third party, even if advised of the possibility of such damages."

Third party services may be terminated or interrupted at any time, and VIDEOCON makes no representation or warranty that any content or service will remain available for any period of time. Videocon reserves the right, in its sole discretion to change/modify/update the software (including without limitation, the availability of any feature or content) of the phone at any time without prior notice.

Content and services are transmitted by third parties by means of networks and transmission facilities over which VIDEOCON has no control. Without limiting the generality of this disclaimer, VIDEOCON expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

VIDEOCON is neither responsible nor liable for customer service related to the content and services. Any question or request for service related to content or services should be made directly to respective content and service providers.

*** Memory Capacity** - Memory capacity is dependent on Operating System usage. Available storage capacity may be less as it includes pre-installed operating system, such as Android and/or pre-installed applications, or media content, shared video/system memory.

“It is recommended to install the third party applications on memory card rather than phone memory for best performance.”

SAR

Your phone meets the SAR requirements for exposure to radio waves, recommended by Govt. of India. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the Govt. of India. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the Govt. Of India is 1.6 Watt/kg taken over a volume containing a mass of 1 gram of tissue. The highest SAR value for A24 is 0.736W/Kg. Dial *#07# to check the SAR value on your phone display.

Using this manual

Thank you for purchasing this mobile phone. This user manual has been specially designed, to guide you through the functions and features of your device.

Read me first

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Images and screenshots used in this manual are based on the default settings of your device.
- Available features and additional services may vary by software or service provider.

E-Waste Management**What is E-waste?**

- 'E-waste' means waste electrical and electronic equipment (WEEE).

How harmful is e-waste?

E-wastes are considered dangerous, as certain components of some electronic products contain materials that are hazardous, depending on their condition and density. If improperly disposed, they can leach lead and other harmful substances into soil and groundwater.

Govt. of India vide notification dated May 12, 2011 has announced E-waste (Management and Handling) Rules, 2011 ("Rules").

According to these Rules, the consumer now has the legal responsibility to dispose of the waste electrical and electronic equipment (popularly known as "WEEE") in the prescribed manner and not by just throwing it into a dustbin or giving/selling it to scrap dealer.

V RECYCLE is an initiative by Videocon where we recycle your old and no longer useful phones.

There are 3 easy steps to begin playing your part:

Step 1: Grab your old and useless phone (or its accessories).

Step 2: Locate a Videocon Collection Point near you, available at

<http://www.videoconmobiles.com/v-recycle.htm>

Step 3: Drop your old phone into the designated collection boxes.

Lets join hands today to celebrate the glory of nature earth & help in making it a better & healthier place for all of us.

Contents

SAFETY AND USAGE INFORMATION	8
SAFETY WARNINGS	8
SAFETY PRECAUTIONS	9
IMPORTANT USAGE INFORMATION	11
ASSEMBLING	12
INSTALL THE SIM CARD AND BATTERY	12
CHARGE THE BATTERY	13
USE A MEMORY CARD	14
GETTING STARTED	17
TURN YOUR DEVICE ON AND OFF	18
USE THE TOUCH SCREEN	19
LOCK OR UNLOCK THE TOUCH SCREEN AND KEYS	20
GET TO KNOW THE IDLE SCREEN	20
APPLICATION	21
ENTER TEXT	22
SYNCHRONIZE DATE	23
COMMUNICATION	24
CALLING	24
MESSAGING	26
EMAIL	28

CONTACTS	29
ENTERTAINMENT	32
CAMERA AND CAMCORDER	32
GALLERY	34
MUSIC	35
FM RADIO	37
SOUND RECORDER	38
VIDEO BROWSER	39
WEB AND CONNECTIVITY	40
BROWSER	40
WI-FI	40
BLUETOOTH	41
SETTINGS	42
WIRELESS & NETWORK	42
DEVICE	43
PERSONAL	44
ACCOUNTS	46
SYSTEM	46

Safety and usage information

To prevent injury to yourself and others or damage to your device, read all of the following information before using your device.

Safety warnings**Keep your device away from small children and pets**

Keep your device and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing

Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Install mobile devices and equipment with caution

Ensure that any mobile devices or related equipment installed in your vehicle and securely mounted. Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Avoid interference with pacemakers

Maintain a minimum of 15cm between mobile devices and pacemakers to avoid potential interference, as recommended by manufactures and the independent research group, Wireless Technology Research. If you have any reason to suspect that your device is interfering with a pacemaker or other medical device, turn off the device immediately and contact the manufactures of the pacemaker or medical device for guidance.

Turn off the device in potentially explosive environments

Do not use your device at refueling points (service stations) or near fuels or chemicals. Turn off your device whenever directed by warning signs or instructions. Your device could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Handle and dispose of batteries and charger with care

- Use only approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the device to service center to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.

Safety precautions**Drive safely at all times**

Avoid using your device while driving and obey all regulations that restrict the use of mobile devices while

driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile device in a certain area.

Turn off the device near medical equipment

Your device can interfere with medical equipment in hospital or health care facilities. Follow all regulations, posed warnings, and directions from medical personnel.

Turn off the device or disable the wireless function when in an aircraft

Your device can cause interference with aircraft equipment. Follow all airline regulations and turn off your device or switch to a mode that disables the wireless functions when directed by airline personnel.

Handle your device carefully and sensibly

- Do not disassemble your device due to a risk of electric shock.
- Do not allow your device to get wet-liquids can cause serious damage and will change the color of the label that indicates water damage inside the device. Do not handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.
- Avoid using or storing your device in dusty, dirty areas to prevent damage to moving parts.
- Your device is complex electronic device-protect it from impacts and rough handling to avoid serious damage.
- Do not paint your device, as paint can clog moving parts and prevent proper operation.
- If your device has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your device may be damage by exposure to magnetic fields. Do not use carrying cases or accessories

with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0°C or above 45°C). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Important usage information**Use your device in the normal position**

Avoid contact with your device's internal antenna.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.

- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-colored contacts or terminals with your fingers or metal object. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternated method of contacting emergency service personnel.

Assembling

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.

If the device is on, press and hold [**Power key**] → **Power off** to turn it off.



1. Remove the back cover.
2. Insert the SIM cards.
3. Insert the battery.
4. Replace the back cover.

Note

- Place the SIM cards into the device with the gold-colored contacts facing down.
- If you do not insert SIM cards, you can only use your device's non-network services and some menus.

Charge the battery

Before using the device for the first time, you must charge the battery. You can charge the device with the provided travel adapter or by connecting the device to PC with PC data cable.

**Charge with the travel adapter**

1. Plug one end (micro-USB) of PC data cable into the multifunction jack.
2. Plug the other end of the PC data cable into USB port of travel adapter.
3. Plug the travel adapter into a power outlet.

Note

- You can use the device while it is charging, but it may take longer to fully charge the battery.
 - While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance.
 - If your device is not charging properly, bring your device and the charger to service center.
 - Improperly connecting the travel adapter can cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.
4. When the battery is fully charged, unplug the travel adapter from the device and then from the power outlet.

Caution:

Do not remove the battery before removing the travel adapter. Doing this may cause damage to the device.

Charge with the PC data cable

Before charging, ensure that your PC is turned on.

1. Plug one end (micro-USB) of PC data cable into the multifunction jack.
2. Plug the other end of the PC data cable into USB port on a PC.

Note:

Depending on the type of PC data cable you are using, it may take some time before charging begins.

Use a memory card**Insert a memory card**

To store additional multimedia files, you must insert a memory card.

Caution: We use approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card.

Note

- You device supports only the FAT file structure for memory card. If you insert a card formatted with a different structure, your device will ask you to reformat the memory card.
- Frequent writing and erasing of data will shorten the lifespan of memory card.
- When you insert a memory card in your device, the file directory of memory card will appear in the sdcard folder under the internal memory.



1. Remove the back cover.
2. Insert a memory with the gold-colored contacts facing down.
3. Replace the back cover.

Remove the memory card

Before removing a memory card, first unmount it for safe removal.

1. In idle mode, open the application list and select **Settings** → **Storage** → **Unmount SD card**.
2. Remove the back cover.
3. Remove the memory card.
4. Replace the back cover.

Caution: Do not remove a memory card while the device is transferring or accessing information, as this could result in loss of data or damage to the memory card or device.

Format the memory card

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device.

In idle mode, open the application list and select **Settings** → **Storage** → **Erase SD card**.

Caution: Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacture's warranty does not cover loss of data resulting from user actions.

Getting started



Key	Function
Menu	Open a list of options available on the current screen.
Home	Return to the idle screen. Open the list of recent applications (press and hold).
Back	Return to the previous screen.
Volumes	Adjust the device's volume.
Power	Turn on the device (press and hold); Access the quick menus (press and hold); Lock the touch screen.

Turn your device on and off

To turn on your device, press and hold **[Power]**.

If you turn on your device for the first time, set up your device by following the on-screen instructions.

To turn off your device, press and hold **[Power]** and then select **Power off → OK**.

Note

- Follow all posted warnings and directions from official personnel when in areas where the use of wireless devices is restricted, such as airplanes and hospitals.
- To use you device's non network service only, switch to Flight mode. Press and hold **[Power]** and then select **Airplane mode**.

Use the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.

Note

- To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.
- For optimal use of the touch screen, remove the screen protection film before using your device.
- For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus op pen.

Control your touch screen with the following actions:

- **Tap:** Touch once with your finger to select or launch a menu, option, or application.
- **Tap and hold:** Tap an item and hold it for more than 2 seconds to open a pop-up option list.



- **Drag:** Tap and hold your finger on an item, and then drag your finger to move the item.
- **Double-tap:** Tap twice quickly with your finger to zoom in or out while viewing photos or maps.
- **Scroll:** Tap and drag your finger up, down, left, or right to move to items on lists.

Note

- Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press **[Power]**.
- You can also adjust the backlight time. In idle mode, open the application list, select **Settings** → **Display** → **Sleep**.

Lock or unlock the touch screen and keys

You can lock the touch screen and keys to prevent any unwanted device operations.

- To lock, press **[Power]**.
- To unlock, turn on the screen by pressing **[Power]**, and then drag  to .


Get to know the idle screen

When the device is in idle mode, you will see the idle screen. From the idle screen, you can view your device's status and access applications.

The idle screen has many panels. Scroll left or right to a panel of the idle screen.

Add items to the idle screen

You can customize the idle screen by adding shortcuts to applications or items in applications, widgets, or folders. To add items to the idle screen:

1. In idle mode, tap  to access the application list.
2. Select **APPS** or **WIDGETS** label, tap and hold an item to add it to idle screen.


Move items on the idle screen

1. Tap and hold the item to move until it magnified.
2. Drag the item to the location you want.

Remove items from the idle screen

1. Tap and hold an item to remove until the screen display the blue grid.
2. Drag the item to **Remove** at the top of the screen.
3. When the item turns red, release the item.

Application**Access applications**

1. In idle mode, tap  to access the application list.
2. Scroll left or right to another application screen.
3. Select an application.

Note

- When you use applications provided by Google, you must have a Google account. If you do not have a Google account, sign up for a Google account.
- You can add a shortcut to an application by tapping and holding the application icon to the location list. You can move the icon to the location you want to on the idle screen.

4. Press **[Back]** return to the previous screen; Press **[Home]** to return to the idle screen.

Note: Your device has a built-in motion sensor that detects its orientation. If you rotate the device while using some features, the interface will automatically switch to landscape view. To set the interface to keep the orientation when you rotate the device, select **Settings** → **Display**, clear the check box of **Auto-rotate screen**.

Access recent applications

1. Press and hold **[Home]** to open the list of applications you have accessed recently.
2. Select an application to access.

Use the task manager

Your device is a multitasking device. It can run more than one application at the same time. However, multitasking may cause hang-ups, freezing, memory problems, or additional power consumption. To avoid these problems, end unnecessary programs using the task manager.

1. In idle mode, open the application list and select **Settings** → **Apps** → **Manage apps**.
2. Select **RUNNING** label. The list of all applications currently running on your device appears.
3. To close an application, select an application → **Stop**.






Enter text

Change the keyboard type

1. Tap the text input field to display the current keyboard.
2. Open the shortcut panel and tap **Select input method**.
3. Select a keyboard type.

Copy and paste text

While you are entering text, you can use the copy and paste feature to use text in other applications.

1. Tap and hold the text filed into the edit mode.
2. Drag  or  to across the text you want to highlight. Or tap  to select all text.
3. Tap  to copy, or tap  to cut the text onto the clipboard.
4. In another application, tap and hold the text filed and then selects **Paste** to insert the text from the clipboard into the text filed.

Synchronize date

You can synchronize data with various web servers and back up or restore your data.

Once the synchronization is completed, your device stays connect to the web. If any change is made on the web, the updated information will appear on your device and will automatically begin synchronization, and vice versa.

Note: This feature may be unavailable depending on your region or service provider.

Set up a server account

1. In idle mode, open the application list and select **Settings** → **ACCOUNTS**.
2. Select **Add account**.
3. Follow the on-screen instructions to complete the account setup.

Activate automatic sync


1. In idle mode, open the application list and select **Settings** → **Accounts**.
2. Select an account.
3. Select the applications you want to synchronize. To exclude applications from automatic synchronization, clear the check boxes of the applications you want.

Communication

Calling

Learn to use calling functions, such as making and answering calls, using options available during a call or customizing and using call-related features.

Make a call

1. In idle mode, open the application list and select **Phone**.
2. Enter an area code and a phone number.
3. Tap  to make a call.





Answer a call

When a call comes in, drag  to  to answer the call.


Note

- When a headset is plugged into the device, you can press the headset button to answer a call.
- To mute the ringtone, press **[Volume]**.

Reject a call

 





When a call comes in, drag  to  to reject the call. Or drag  to  to send a message and reject the call.

Call an international number

1. In idle mode, open the application list and select **Phone**.
2. Tap and hold **0** to insert the **+** character.
3. Enter the complete number you want to dial (country code, area code, and phone number).
4. Tap  to make a call.






Use options during a voice call

You can use the following options during a voice call:

- To adjust the voice volume, press **[Volume]**.
- To open the dialing screen, tap .
- To activate the speakerphone feature, tap .
- To turn off the mouthpiece so that the other party cannot hear you, tap .
- To hold the current call, tap .
- To dial a second call, tap , and then dials a new number.
- To end the call, tap .

View call log

In idle mode, open the application list and select **Phone**. Tap  to view the call log. The status bar will display  when you have missed calls.




- Tap **ALL** to view all call logs; Tap  to view dialed calls; Tap  to view answered calls; Tap  to view missed calls.
- Tap  to select resource of call log.
- Tap  of a call log to make a voice call.
- Tap the log to view details. You can select the corresponding operations.

Messaging





Learn to create and send text (SMS) or multimedia (MMS) message, and view or manage messages you have sent or received.

Note: You may incur additional charges for sending or receiving messages while outside your home service area. For details, contact your service provider.

Send a text message

1. In idle mode, open the application list and select **Messaging**.
2. Tap  to compose a new message.
3. Select **Type name or number** field to enter a number manually or tap  to select one from phonebook.
4. Select **Type text message** field to enter your message text.
5. Tap  to send the message.

Send a multimedia message

1. In idle mode, open the application list and select **Messaging**.
2. Tap  to compose a new message.
3. Select **Type name or number** field to enter a number manually or tap  to select one from phonebook.
4. Press **[Menu]** → **Add subject** → select **Subject** field to add a subject for the message.
5. Select **Type message** field to enter your message text.
6. Tap  to add attachment.
7. Tap  to send the message.

View a text or multimedia message

1. In idle mode, open the application list and select **Messaging**.
2. The messages are grouped into message thread by contact, like a messenger.
 - Select a thread or message to view detail.
 - Tap and hold a thread or message to select an option in pop-up menu.

Email



Learn to send or view email message via your personal or company email account.


Set up an email account

1. In idle mode, open the application list and select **Email**.
2. Enter your email address and password.
3. Select **Next** (for general email accounts, such as Google Mail and Yahoo) or **Manual setup** (for other company email accounts).
4. Follow the on-screen instructions.

When you are finish setting up the email account, the email messages are downloaded to your device.




Send an email message

1. In idle mode, open the application list and select **Email**.
2. Tap  to compose a new email.
3. Select **To** field to enter an email address manually or tap  to select one from phonebook. Press **[Menu]** → **Add Cc/Bcc** to add more recipients.

4. Select **Subject** field to enter a subject.
5. Select **Compose Mail** field to enter your email text.
6. Press **[Menu]** → **Attach file** to attach a file.
7. Tap  to send the email.

View an email message

When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline.


1. In idle mode, open the application list and select **Email**.
2. Tap  to update the message list.
3. Tap and hold a message in the list to select an option in pop-up menu.
4. Select an email. From the message view, use the following options:
 - To reply the email, tap .
 - To delete the email, tap .

Contacts


Learn to create and manages a list of your personal or business contacts stored on the phone's memory card or a UIM/SIM card. You can save names, phone numbers, email address and more for your contacts.

Create a contact


To create a contact from dialing screen:

1. In idle mode, open the application list and select **Phone**.
2. Enter a phone number.
3. Tap  → **CREAT NEW ACONTACT**.
4. Enter contact information and select **Done** to add the contact to memory.

To create a contact from phonebook:

1. In idle mode, open the application list and select **People**.
2. Tap  to add a contact.
3. Enter contact information and select **Done** to add the contact to memory.

Find a contact

1. In idle mode, open the application list and select **People**.
2. Scroll up or down on the contact list or tap  to input a name to search.
3. Select a contact's name to view the details.




Delete a contact

1. In idle mode, open the application list and select **People**.
2. Press **[Menu]** → **Delete contact**.
3. Select the check boxes of the contacts you want to delete.
4. Select **OK** to delete them.

Contacts group

By creating groups of contacts, you can manage multiple contacts and send message or email to an entire group.

Creat group and add members

1. In idle mode, open the application list and select **People**.
2. Tap  to view the groups.
3. Tap  to add a group.
4. Select **Group's name** field to enter group name.
5. Select **Type person's name name** field to enter contact name or tap  to select contacts.
6. select **DONE** to save group and members.

Entertainment Camera and Camcorder

In idle mode, open the application list and select **Camera** or **Camcorder**. Aim the lens at the subject and make any necessary adjustments.



Number	Function
1	Change the settings.
2	Start to record a video.
3	Take a photo.
4	View the pictures or videos in Gallery.
5	Switch camera.
6	Select flash mode.
7	Switch to Normal mode.
8	Switch to Panorama mode.
9	Switch to Smile mode.


Gallery

Learn to view photos and play video saved in your memory card.


View a photo

1. In idle mode, open the application list and select **Gallery**.
2. Select a folder.
3. Select a photo (with no icon) to view.

While view a photo, use the following options:

- To view more photos, scroll left or right.
- To zoom in, place two fingers on the screen and spread them apart. To zoom out, move you fingers closer together.
- To share the photo, tap .
- To delete the photo, press **[Menu] → Delete**.
- To view photos in a slideshow, press **[Menu] → Slideshow**.
- To edit the photo, press **[Menu] → Edit**.
- To rotate the photo, press **[Menu] → Rotate left/Right**.
- To crop the photo, press **[Menu] → Crop**.
- To use the photo, press **[Menu] → Set picture as**.
- To view the photo detail, press **[Menu] → Details**.

Play a video

1. In idle mode, open the application list and select **Gallery**.
2. Select a video (with the  icon) to play.

Music

Learn to listen to your favorite music by music player.








Note

- Some files formats are not supported depending on the software of the device.
- If the size exceeds the memory available, an error may occur when you attempt to play it.
- Playback quality may vary by content type.
- Some files may not play properly depending on how they are encoded.

Play music

After transferring music file to your memory card:

1. In idle mode, open the application list and select **Music**.
2. Select a music category.
3. Select a music file.
4. Control playback with following icons:

Icon	Function
	Pause playback; Tap  to resume playback.
	Skip backward; Scan backward in a file (tap and hold).
	Skip forward; Scan forward in a file (tap and hold).
	Show the current playlist.
	Activate shuffle mode.
	Change the repeat mode.

Create a playlist

1. In idle mode, open the application list and select **Music**.
2. Select a music category.
3. Tap and hold the artist, album, or song, and then select **Add to playlist**.
4. Select **New** → enter the playlist name → **Save** to one or all of songs of the selected artist or album to the playlist.

Tip: During playback, you can add the current song to a playlist by press **[Menu]** → **Add to playlist**.

Use a song as ringtone

To use a song as ringtone:

1. In idle mode, open the application list and select **Music**.
2. Select a music category.
3. Tap and hold a song and then select **Use as phone ringtone**.


Tip: During playback, you can use it as ringtone by press **[Menu]** → **Us as ringtone**.






FM Radio

Learn to listen to music and news on the FM radio. To listen to the FM radio, you must connect a headset, which serves as the radio antenna.

1. Plug a headset into the device.
2. In idle mode, open the application list and select **FM Player**. The FM radio scans and saves available stations automatically.

Note: The first time you turn on the FM radio, it will start automatic tuning.


3. Tap  to select the radio station you want from station list.
4. Control the FM radio with the following icons:





Icon	Function
	Turn off FM radio and exit.
	Search for an available radio station.
	Fine-tune the frequency with 0.1 MHz.
	Open the station list.
	Search stations; Switch speaker and earphone; Record FM.

Sound Recorder


Learn to operate your device's sound recorder.

Record a voice memo

1. In idle mode, open the application list and select **Sound Recorder**.
2. Tap  to start recording.
3. Speak into to mouthpiece.

4. Tap  to pause. When you are finished, tap  to stop and save the memos.
5. Tap  to play the current record. Select **Discard** to delete the record or select **Save** to save it .
6. To record more voice memos, tap  and repeat steps 2-4.

Play a record

1. In idle mode, open the application list and select **Sound Recorder**.
2. Tap  to select a record to play.

Tip: You can also play records in **Music** application. Select **Playlist** → **My recordings** → Select a record to play.

Video Browser

Learn to use the video player to play various kinds of videos.

Note

- Some files formats are not supported depending on the software of the device.
- If the size exceeds the memory available, an error may occur when you attempt to play it.
- Playback quality may vary by content type.
- Some files may not play properly depending on how they are encoded.

1. In idle mode, open the application list and select **Video Player**.
2. Select a video to play.

Web and connectivity**Browser**

Web services require a data connection. Contact your operator to choose the best data plan.

Learn to access and bookmark your favorite web pages.

Note

- You may incur additional charges for accessing the web and downloading media files. For details, contact your service provider.
- Available icons may vary depending on your region or service provider.

1. In idle mode, open the application list and select **Browser** to launch a specified homepage.
2. To access a specific webpage, select the URL input field, enter the web address (URL) of the webpage, and then tap **go** on keyboard.
3. To return to previous page, press **[Back]**.

While browsing a webpage, press **[Menu]** to select corresponding options.

Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (Wi-Fi) compatible with IEEE 802.11 a/b/g/n standards.

You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

Activate the Wi-Fi feature


In idle mode, open the application list and select **Settings**. Drag the switch to **ON** of **Wi-Fi**.

Note: An active Wi-Fi network running in the background will consume battery power. To preserve battery power, activate the Wi-Fi network only when needed.

Find and connect to a Wi-Fi network

1. In idle mode, open the application list and select **Settings** → **Wi-Fi**. The device will automatically search for available Wi-Fi networks.
2. Select a network.
3. Enter a password for the network (if necessary).
4. Select **Connect**.

Add a Wi-Fi network manually

1. In idle mode, open the application list and select **Settings** → **Wi-Fi** → tap .
2. Enter the SSID for the network and select the security type.
3. Set the security settings depending on the selected security type.
4. Select **Save**.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 10m without requiring a physical connection.

Turn on the Bluetooth wireless feature

In idle mode, open the application list and select **Settings**. Drag the switch to **ON** of **Bluetooth**.

Find and pair with other Bluetooth-enabled devices

1. In idle mode, open the application list and select **Settings** → **Bluetooth** → **SEARCH FOR DEVICES**.
2. Select a device.
3. Enter a PIN for the Bluetooth wireless feature or the other devices' Bluetooth PIN, if it has one, and select **OK**. Alternatively, select **Accept** to match the PIN between your device and the device.
4. When the owner of the other device enters the same PIN or accepts the connection, pairing is complete. If the pairing is successful, the device will automatically search for available services.

Note: Some devices, especially headsets or hands-free car kits, may have fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.

Settings

To access the settings menu:

- In idle mode, open the application list and select **Settings**.
- In idle mode, press **[Menu]** → **System settings**.

WIRELESS & NETWORK

Change the settings for wireless network connections.

- **SIM management:** SIM cards settings.
- **Wi-Fi:** Turn the Wi-Fi feature on or off. Tap the menu to setup.
- **Bluetooth:** Turn the Bluetooth wireless feature on or off. Tap the menu to setup.
- **Mobile data:** Turn the mobile data on or off. Tap the menu to setup.
- **Data usage:** View the data usage of UIM/SIM card and Wi-Fi.
- **More**

- ✓ **Airplane mode:** Disable all wireless functions on your device. You can use only non-network services.
- ✓ **VPN:** VPN settings.
- ✓ **Tethering & portable hotspot**
 - **Wi-Fi hotspot:** Activate the Wi-Fi tethering feature to share your device's mobile network connection with PCs or other devices through the Wi-Fi feature.
 - **USB tethering:** Activate the USB tethering feature to share your device's mobile network connection with PCs via USB. When connect to a PC, your device is used as a wireless modem for the PC.
 - **Bluetooth tethering:** Activate the Bluetooth tethering feature to share your device's mobile network connection with PCs or other devices through the Bluetooth feature.
 - **Hotspot & tethering settings:** Select internet protocol for hotspot and tethering.
- **Mobile networks**
 - ✓ **Network settings:** Set options for Mobile network, APNs.
 - ✓ **Data enabled:** Enable data access over Mobile network.
 - ✓ **Data roaming:** Connect to data services when roaming.
- **USB Internet:** Share Windows PC internet via USB cable.

DEVICE

- **Audio profiles:** Tap a profile to select it; Tap  to add new profile; Tap  to customize the

profile; Tap  to reset profiles.

- **Display**

Change the settings for display.

- ✓ **Lock screen notifications:** Show notifications on lock screen.
- ✓ **Wallpaper:** Select the idle screen wallpaper.
- ✓ **Auto-rotate screen:** Rotate the content automatically when the device is rotated.
- ✓ **Brightness:** Set the brightness of the display.
- ✓ **Font size:** Set font size.
- ✓ **Sleep:** Set the length of time the device waits before turning off the display's backlight.
- **Storage:** View memory information for your device and memory card. You can also format the memory card.
- **Battery:** View the battery information.
- **Apps:** Access the list of the applications installed on the device and checks the application information.

PERSONAL

- **Location access**

- ✓ **Access to my location:** Turn on to let apps that have asked your permission use your location information.
- ✓ **GPS satellites:** Turn on to use GPS satellite for finding your location.
- ✓ **Wi-Fi & mobile network location:** Turn on to let apps use Google's location service to estimate your location faster.

- **Security**
 - ✓ **Screen lock:** Set an unlock security code.
 - ✓ **Owner info:** Set the owner info to display on lock screen.
 - ✓ **Set up SIM card lock**
 - **Lock SIM card:** Activate or deactivate the PIN lock feature to require the PIN before using the device.
 - **Change SIM PIN:** Change the PIN used to access SIM data.
 - ✓ **Make passwords visible:** Set the device to display your password as you enter it.
 - ✓ **Device administrators:** View device administrators installed on your device. You can allow device administrators to apply new policies to your device.
 - ✓ **Unknown sources:** Select to download applications from any source. If you do not select this option, you can download applications only from Android Market.
 - ✓ **Verify apps:** Disallow or warn before installation of apps that may cause harm.
 - ✓ **Trusted credentials:** Display trusted CA certificates.
 - ✓ **Install from SD card:** Install encrypted certificates that are stored in the USB storage.
 - ✓ **Clear credentials:** Remove all certificates.
- **Language&input**
 - ✓ **Spell checker:** Set to use spelling correction.
 - ✓ **Personal dictionary:** You can add a word to user dictionary.
 - ✓ **Default:** Select the default keyboard.
 - ✓ **Text-to-speech output:** Set text-to-speech output.

- ✓ **Pointer speed:** Set the pointer speed.
- **Backup & reset:**
 - ✓ **Back up my data:** Back up app data, Wi-Fi password, and other settings to Google servers.
 - ✓ **Backup account:** Backing up to debug-only private cache.
 - ✓ **Automatic restore:** When reinstalling an app, restore backed up settings and data.
 - ✓ **Factory data reset:** Reset your settings to the factory default values and delete all your data.

ACCOUNTS

Manage accounts for synchronization.

SYSTEM

- **Date & time:** Set date and time.
- **Scheduled power on & off:** Set schedule to power on/off.
- **Accessibility:** Set accessibility.
- **Developer options:** Set the developer options.
- **About phone:** View the device information.



VIDEOCON
Mobile Phones

UNIVERSAL DIGITAL CONNECT LIMITED

Marketing Office:

Plot no.: 254, IInd Floor, Udyog Vihar, Phase-IV
Gurgaon - 122015, Haryana, India.

Website: www.videoconmobiles.com

Tel: 0124-33660000