

Amour user manual

Table of Contents

Phone Safety Information	3
Appearance and Functions.....	5
Introduction.....	6
Lock Screen.....	8
Personalization.....	9
Application Menu.....	11
Call Functions.....	12
Call Logs.....	Error! Bookmark not defined.
Contacts	Error! Bookmark not defined.
Messaging.....	Error! Bookmark not defined.
Internet Browser	Error! Bookmark not defined.
Music	16
Google Play	Error! Bookmark not defined.
Gallery	Error! Bookmark not defined.

Phone Safety Information

Failure to comply with the following precautions may be dangerous or illegal.

Use Safely

Do not use your mobile phone where prohibited or where it might cause danger.

Transportation Safety

Please observe all transportation laws and regulations.

Please drive with both hands – **DO NOT TEXT AND DRIVE**

Hospitals

Please turn off your mobile phone when near medical instruments.

Airports

Please follow all Federal flight safety regulations and do not use your phone during flight.

Toxic Chemicals

Do not use your mobile phone around fuels or chemicals.

Accessories and Batteries

Please use only Blu authorized accessories and batteries.

Waterproof

Your mobile phone is not waterproof. Please keep it away from water.

Backup

Please remember to make a backup or keep a written record of all important information saved in your mobile phone.

SOS Emergency Calls

Make sure your mobile phone is switched on and in a service area. In home screen, click the phone key and dial 911.

 
Appearance and Functions



Introduction

Insert the SIM Card

1. Power off the mobile phone and remove the battery cover and battery.
2. Insert the SIM card correctly in the card slot(s) 1 or 2.

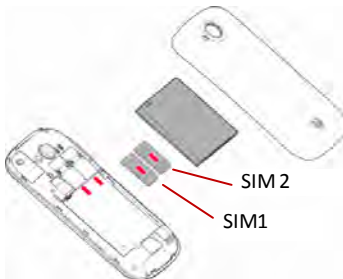


3. Insert the battery and battery cover of the mobile phone.

Insert the Memory Card

1. Power off the mobile phone and remove the batter cover and battery.
2. Insert the Micro SD card into the slot.
3. Insert the battery and the battery cover of the mobile phone.

 (Insert memory card as figure below)

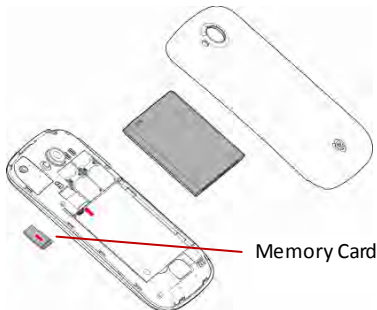


Memory Card

Charging the Battery



Charge your battery by plugging the charger to the USB port of the phone.

 Note: Please use only BLU authorized products

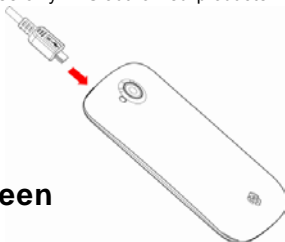

Lock Screen

  1. Press power button to enter Sleep Mode
2. Press power button to bring phone out of Sleep Mode. Drag the lock icon **UP** to unlock the phone.

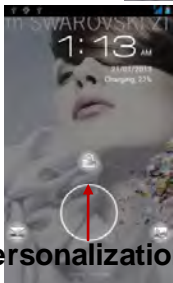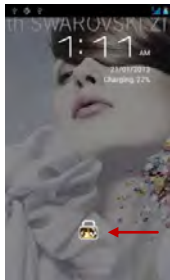

Personalization



Home Screen

The home screen displays application icons, widgets, shortcuts, and other features.

Notification Bar

At the top of the screen, the notification bar displays the time, status, and notifications. If there is a new message or missed call you may drag the bar down to open notification panel and click on any notifications pending.

Application Menu

Click the application menu icon at the bottom of the screen to view all installed applications.

Home Screen



Notification Bar



Application Menu

Adding Widgets and Icons

Enter the application menu and long press an application icon until the screen appears. Then, select which screen where the icon will be placed, and release finger.

Editing Widgets and Icons

Long press and hold the widget or icon that will be moved. Once the phone vibrates, drag the widget or icon to a new location on the screen.

Long press and hold the widget or icon that will be deleted. Once the phone vibrates, drag the widget or icon to the top of the screen so it may be removed.




Application Menu

The application menu displays icons for all of the applications on your phone. From the Home screen, click the application menu icon to enter.



Slide the menu left or right to display more icons

 Press and hold the Home key to open the recent applications menu.

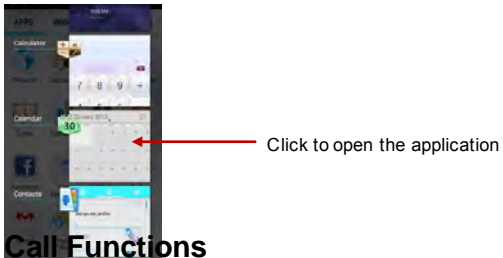


Call Functions


To make a call, click the dial key on the home screen to open the call interface. **You may place a call the following ways:**

Click the number keys to enter a telephone number and press the dial key to place a phone call.

 Call a telephone number or contact from the call log.

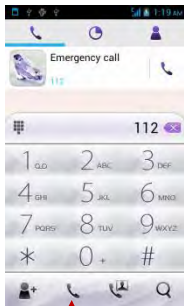

Place a Call

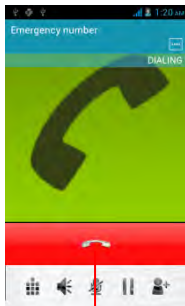 


End Call

Call Log

Every telephone number called and received will be saved in the phone's call log. All numbers in the call log can be dialed directly by clicking the phone icon on the right side of the screen. When the number appears on the list, click it to view details.

 You may also long press a number in the call log to edit, delete, save number and do other operations.

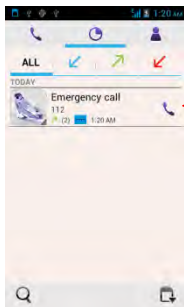


Click the phone icon to dial

Contacts

Home » Application Menu » Contacts

Click the add contact icon to add a new contact to either the phone or the SIM card.

 (See figure below)

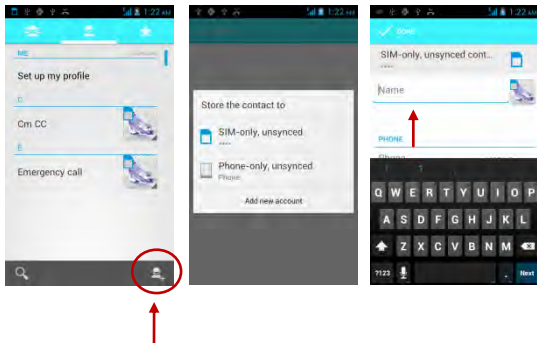

Messaging

 
You may use this function to exchange text messages and multimedia messages with your family and friends. The messages to and from the same contact or phone number will be saved into a single conversation so you may see the entire message history conveniently.

Home » Application Menu » Messaging » New message

1. Click contact icon to enter recipient

(You may enter contacts from the address book or enter a new number)

2. Compose Message

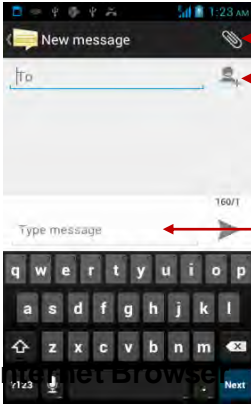

Click to add attachments such as Pictures, Videos and Audio

Add Contact

Message Section

Menu Functions

Backward

After browsing through multiple pages, this option will return the user to the previous page.

Forward

After browsing through multiple pages, this option will move to a

web page after the current page.

Windows

You may view all windows open.

Bookmarks

- Click the “Bookmarks” option to make the current URL as a saved bookmark.
- Click the bookmark under the bookmarks list, will open the URL.

More

- Add bookmarks: Save the current URL as bookmark.
- Find on page: Search current page.
- Select text: Click and drag to select a piece of text.
- Page info: Display page address and other information of the current browsing.
- Share page: Select the Bluetooth or SMS to share the current page.
- History: Show your browsing history and view the most visited pages.
- Setting: Contains a variety of browser settings.

Music

Music Player

Open Music

Home » Application Menu » Music

Search Music

 
You may choose to search for music from media folder through artist name, song name, album name.

Party Shuffle

- Press Menu, and select Party Shuffle. The music will start playing from a randomly selected song.
- To turn off the Party Shuffle, press Menu and press the Party Shuffle option.




Click to view artist, albums, songs, or playlists that have been saved

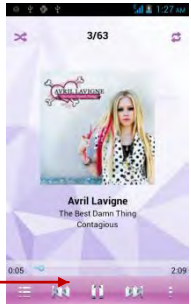


Google Play

 Google Play gives you an easy way to install applications in your Android device. The service allows users to browse and download music, magazines, books, movies and TV programs.

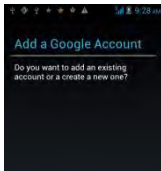



 Enter the Play Store and create an account to download apps.

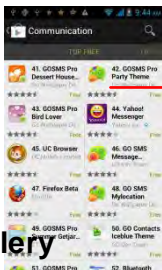

Gallery

Open Images

Home » Applications Menu » Gallery

Share Pictures

You may share pictures by sending them through Gmail or the E-mail application. You may also send pictures through the MMS by composing a message and attaching the picture. Any image can also be sent via the Bluetooth function by selecting Bluetooth phones that have been paired.

Adjust Image

Edit Light: Fill Light, Highlights, Shadows, Auto-Fix

Edit Image Effects: Cross-process, Posturize, Logo, Documentary, Vignette, Film Grain, and Fisheye.

Color Effects: Warmth, Saturation, B&W, Sepia, Negative, Tint, Duo-tone, and Doodle

Crop: Crop, Red Eye, Straighten, Rotate, Flip, Sharpen.