KKT27+User Manual

1.2. Call settings

Call waiting

Call divert

Auto record in call

Blacklist:

User Manual

KKT27+

View SIM 1 and SIM 2's call timers from last calls dialled calls and

Open this feature, during the call if the new call is incoming, the

Open this teature, during the call if the new call is incoming, the network will notify you. This feature support depends to use on your network provider.

Activate launch the function.

Deactivate Close the function.

Network Call Transfer service allows you to forward your call in specific cases to a phone number you specify. The features include:

Divert all voice calls, Divert if unreachable, Divert if no answer,

Note: This feature support depends to use on your network provider.

In "Call barring" sub-menu, you can set the following call barring

combination to improve security. Some network provider may not provide this service or there are call restrictions, specific use. Please contact your network provider for support. Network provider will

provide a password so that you can enable call restrictions

Advanced settings

Turn on the auto call record, an automatic recording during call.

Query status Query the function's status.

Divert if busy, divert all data calls,

LAVA

Basic Information......

5.5. Sent messages.

5.7. Schedule SMS

6.1. Image Viewer 6.2. Video recorder

5.6 SMS setting

KKT27+User Manual

Safety Notice

6.5 FM radio 9.1. Calculator .. 9.2. Calendar..... 9.3 Alarm 10.2. Bluetooth 11.1. Profiles..... 11.2 Phone settings 1.3. Security settings.... 1.4. Dual SIM settings.

KKT27+User Manual

6.3. Video player.

KKT27+User Manual Basic Information Brief Introduction

KKT27+User Manual

LAVA

... 13

Thank you for choosing KKT27+ mobile phone. You can read the manual, a comprehensive understanding of the use of mobile phones and enjoy its perfect functionality and simple method of operation. KKT27+ supports two SIM cards. In addition to basic call function it

also supports phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, One image viewer, video recorder, video player, audio player, FM, One Memory Card ("Falsa card), calcular, calendar et. A variety of practical features to facilitate your work and leisure activities, in addition, KKT27 interface with personalized mobile phone design, its perfect functionality to meet your needs. Our Company reserves without any prior notice the contents of this manual under the right to make changes.

KKT27+User Manual LAVA

numbers.

Memory status: To View the usage and free Phonebook capacity

-Copy contacts: If select SIM to phone, the SIM card records of all

-Call: To Make a call to the number. -Edit: It can edit and save record.

Health and Safety Precautions

Taking Care of Your Device...... LAVA WARRANTY CERTIFICATE...

Auto redial: Through on / off settings you can activate or disable this feature. If this feature is turn on, then for failed attempt your phone will continue

-Edit: It can cent and save record.
-Delete: To delete the record.
-Copy: To copy the current record to Phone/SIM.
-Add to blocklist: To Save the number to blocklist.
-Mark several: To Mark several or all records can send text

redial a number upto10 times -Phonebook settings:

-Preferred strongs: It can be in the SIM1, SIM2, Phone and All to switch, and phonebook list will change accordingly, such as select SIM1, and the phonebook list will only show SIM1 records.

-Extra numbers: It can be set SIM owner numbers and fixed dialling

LAVA

Call time reminder: This menu can prompt a certain length of time to set up the call

ording to the menu function mode in order to select the following Off: Close the function

This feature can be used in case you want to block any particular

number or numbers. Open the blacklist feature. Add the numbers

Single: Enter any numbers between 1-3000 (sec), which arrived at the selected time (seconds) of talk time when prompted.

selected time (seconds) of talk time when prompted.

Periodic: Enter any number between 30-60 (sec), from the input time (in seconds), the intervals of 1 minute for talk time tips.

Answer mode:

User can select any key to answer or to auto answer when headset mode. When selected any key, press any key except power key and RSK to answer the call. 2. Phonebook

You can use the contacts to store records, can store the following: Total use the Contacts to store records, can store the forthwaing manner and phonen number. In the phonebook list, select a record, to make a call when you press the dial keys. Select a record in the phonebook, you can do the following:

-View: To view the contact details or edit record.

-Send text message: To Send text message to this number.

In the Audio player interface, you can press left and right keys to switch the music; press * and # keys to adjust the play volume. In the Audio player interface, press the left soft key to enter "list" menu and enter the current playlist.

Select a music file to enter the settings options:

3- Music

Pre.playlist: It can select the preferred list. Phone or Memory card. If u choose a memory card, then show the all music files in memory you cnoose a memory care, then show the air music files in memory. List auto gen. To switch to this setting. When this feature is set on, you can perform the "Refresh Playlist" operation. Repeat: It can be set as off (no repeat), one and all. Shuffle: Random order of play set, respectively, can be set to on and

Background play: Set the background play on, you can make mobile

phone in other user interface and also play music. Set as off, the music will not play when out of the Audio player.

The phone includes camera by which you can take pictures anytime, here and can save the photos to phone or memory card

anywhere and can save the photos to phone or memory card.

State in the preview, press the LSK to enter "Options" you can do this
to conduct a more detailed set of parameters.

Switch to video recorder: Switch to the video recorder.

the numbers will be copied to the phone.

-Move contacts: You can select the SIM records of all mobile phone numbers move to the phone, also you can switch the option to operate. Photos: Photo album shows the current list of files.

Camera settings: Including Shutter sound, EV, Contrast, Anti-flicke Delete all contacts: You can delete all contacts in SIM card or phone and all records are deleted. and Delay timer, setting operation contents of the regulation. Been adjusted, press the LSK "OK" to save the current settings.

adjusted, press the Lisk. ON to Save the Cutters settings.

Image settings: Includes the Image size and image quality regulation.

Storage: Storage location can be set as Phone, Memory card, the captured image will be saved to the specified location.

Restore default: Set all parameters to default settings.

10

5- Messaging

LAVA

Renly: Send SMS to the sender Reply: Send SMS to the sender.
Forward: Send the message to other people.
Delete: To Delete the message.
Delete all: To Delete all messages.
Save to Phonebook: To Save number into phonebook.

KKT27+User Manual

Keys and Parts:

Safety Notice

KKT27+User Manual

Save: Save to drafts.

5.2 Inhov

f your phone lost or stolen, in

nications sector, or its outlet, to disable the SIM. This wil

allow you to take phone calls from other economic loss arising. To make you more secure use of mobile phones, please take

Set up mobile phone SIM card PIN password, PIN password to prevent your SIM is unauthorized use by others.

Cleaning and Maintaining

Do not use the bathroom where high humidity, cell phone, battery and charger, the same should also avoid the rain. Use a soft, dry cloth to

Make sure that the information in writing before the message center

number is set correctly. Access to an information menu, you can edit

Send to: After editing the information, select the operation, enter the

number manually, or add records from the phonebook, you can do

send, Edit recipient, Remove recipient, Remove all recipients,

Input method: Offers many kinds of input methods to choose from

Insert name: Insert the name of the record into SMS from

In list of inbox, you can press the OK key to read the message details, in the inbox interface, press LSK "Options" to enter the menu:

View: Enter the message reading interface to view the message's

Insert number: Insert number into SMS from phonebook

LAVA

KKT27+User Manual

Before Using SIM

LAVA

LAVA

Before using your phone, you must insert a valid SIM (Subscriber Identity Warning: Be sure to remove the SIM before phone gets off. There is absolutely

clean the phone, battery and charger. Dirt outlet will lead to poor

contact, power-down, which does not charge, regular cleaning

prohibited in the case of an external power supply connected to insert or rem the SIM, or SIM card and mobile phone may be damaged. Phone Unlock

Phone Unlock
In order to prevent illegal use, your phone can set the phone lock password
protection. To use this function, you must enter the phone lock password so that
you can unlock the phone into the normal use state.
Enter the phone lock password, press the LSK so confirm. For example, if the
phone lock password is set to 4321, hen the following input: 4321.

SIM Unlock

In order to prevent illegal use of your SIM, there is PIN (Personal Identification in order to prevent inegui use of your SMI, there is PIN (Personal adentification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use. Enter the PIN password, press the LSK to confirm. For example, if the PIN is set to 1234, then the following input: 1234.If there consecutive incorrect PIN, your SIM will be network locked, the phone will ask for PUK password which will be provided by network service provide

KKT27+User Manual

5.3. Drafts Edit the SMS's which are not sent but stored in the draft, for detail

LAVA

features, please refer to "Inbox". 5.4. Outbox Go to the Outbox list view your SMS are not sent successfully, for detail features, please refer to "Inbox"

detail (eatures, please refer to "inbox".

5.5. Sent messages

Open the message set in the "Save sent message", send the information after the success of information stored in the Sent, detail features, please refer to "inbox".

5.6. SMS settings

SIM1\SIM2: This menu can set SMS address, delivery report, reply

path and voice mail server function.

Memory status: To view the SIM and Phone capacity information Save sent message: Open the "Save sent message", messages sent after a successful save the sent message, if you turn off this feature,

you will not be saved Preferred storage: Can set preferred storage as SIM or phone.
5.7. Schedule SMS

t messages sending time or time to send message.

6- Multimedia 6.1. Image Viewer

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the LSK to enter to "Options" to choose the nictures to do the View Send Use as Rename Delete change 12

KKT27+User Manual

Function menu Introduction

1- Call logs

All Calls

Enter all calls menu to display all current call record, press the LSK Enter all calls menu to display all current call record, press the key to enter "Options":

- View: To view the details.

- Call: To call the recorded numbers.

- Send text message: To send SMS to recorded number.

- Save to Phonebook: To save the number to phone or SIM card.

LAVA

-Add to black list: To save the number to phonebook block list. - Delete: To Delete the numbers from recorded numbers. Missed calls

Enter the missed call menu, will display the missed call list.Please refer to all calls for details Dialled calls

Enter the dialled call menu to display the current record of outgoing phone list of phone numbers. Please refer to all calls for details.

Enter the received call menu to display the current record of incoming calls that has been received by mobile phone. Please refer to all calls

Delete all calls from dialled calls, missed calls, received calls and all Call timers

KKT27+User Manual Storage and check Image information operations. View pictures, by ing on the left and right navigation buttons to switch pictures.

Camcorder settings: Recorder settings including Anti-flicker setting.

Video settings: Includes video quality adjustment.

Storage: storage location can be set Phone and Memory card, shooting the video will be saved to the specified location.

6.3 Video player Choose video player sub-menu, you can easily view the saved video player in the video list, press the LSK to enter "Options" to select the

video files to do the play, send(send the video via Bluetooth or multimedia message if you want) rename, delete operations.

6.4. Sound recorder In the sound recorder interface press "option", it shows the items of

New record: To Start a new record. If you press stop, it will pop up a dialog box to prompt you save it or not. If you press spase, it will suspend recording, and then press continue. it can record again.

List: It displays the sound that you recorded and saved in the memory

Settings: you can set the file format and audio quality of the record.

6.5. FM radio 6.5. FM radio
FM interface, press the OK key to turn on / off FM play, press the right

navigation key to automatic search, press *and # keys to adjust the FM playing volume. Press the left soft key "Options" can show FM options menu, the content were: 13

Auto search: Auto search FM channels in the channel inst.

Settings: Can onloff the background and loudspeaker sound and also it can set FM record audio quality and storage operations.

Record: Record your favorite FM audio sound.

File list: To get recoded audio. 7- File manager 7- File manager
File manager sidel manager has a manager
File manager displays Phone and Memory card. Root directory, select 'Phone', press the LSK to enter 'Options' can be as follows:
- Open:It Opens the root directory lists and files.
- Format: Format the memory card, this action will remove all current

Channel list: Shows FM channel list.

Manual input: To manually enter the channel frequency, the effective

Auto search: Auto search FM channels in the channel list.

flash memory data. flash memory data. Root directory, select "Memory Card", press the LSK to enter

"Options" can be as follows: Options can be as follows:
 Open: To open the root directory lists the directories and files. -Format: Format the memory card, this action will remove all current

flash memory data.

-Details: To view more information such as Name, Total size, free

size.
You can play the music or video files, view Photo, copy/move/delete

me files and so on. You can send the file through Bluetooth. 8- Fun & Games

This menu display games and games settings.

KKT27+User Manual

KKT27+User Manual LAVA The SAR value of the phone may depend on factors such as

The highest SAR value of the device at the head and body are

below 1.6W/kg respectively averaged over 1 gm. of human tissue.

SAR Recommendations

Use a wireless hands-free system (headphone, headset) with a low

power Bluetooth emitter.

Please keep your calls short and use SMS whenever more

nient. This advice applies especially to children, adolescents and Prefer to use your cell phone when the signal quality is good.

People having active medical implants should preferably keep the

cell phone at least 15 cm away from the implant. Maintain a preferable distance of 15 mm from the device

Do not use the phone while driving. When you have to use the

Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or

other dangerous goods are stored. During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone 21

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you

KKT27+User Manual

E. Calendar ster calendar sub-menu, the screen will show a calendar month, and

a small background box with the current date marked. Press the up,

down, left, and right navigation keys to change the date, calendar

Press the left soft key "Options" option to display the calendar menu.

- Selects and edit an alarm clock: This Can edit the setting of alarm

(on / off), Time, Snooze, Repeat, Alarm tone and Alert type. You can choose to set to repeat: Once, Every day, Custom.

ect the on or off state to turn on or turn off the torch light.

15 KKT27+User Manual LAVA

• Your Phone's radio waves may interfere with the functioning of

Tour Prootes Yando waves may interrete with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
 To avoid potential interference with implanted medical devices.

such as a pacemaker or cardioverter defibrillator:

Always keep your phone at least 15.3 centimeters (6 inches) from

 Turn off the phone if there is any reason to suspect that turn out the phone it there is any reason to suspect that interference is taking place.
 Follow the manufacturer directions for the implanted medical

If you have any questions about using your wireless device with an

Please turn off your phone when you are close to a gas station or in e vicinity of any place where fuel and chemical preparations, or any

nted medical device, consult your health care provider.

Do not carry the wireless device in chest pocket.

Enter STK menu, display Operators' information.

information on the screen will be updated accordingly.

and content as follows:

Jump to date: Jump to a specified date.

Go to today: Switch to current date which is set by system.

9- Organizer

9.3. Alarm

10-Tools

the medical device

Unsafe Areas

Taking Care of Your Device

Five alarms can be set up.

rotect your phone:

Keep the device dry. Precipitation, humidity, and all types of iquids or moisture can contain minerals that will rust electronic 22

10.2. Bluetooth

LAVA

Power: Activate Bluetooth on or off the Bluetooth function.

FOWER: ACTIVATE DIBLEOORS ON OF OFFICE THE DIBLEOORS INSCRICT.

VISIBIBITY: If set as on, other devices can search this Bluetooth device if set as off, other devices cannot search this Bluetooth device.

My device: Can search for nearby Bluetooth devices.

Search audio device: Free devices to search for near-free decoration. Your phone provides you feature to perform basic arithmetic operations with function of calculator. operations with function of calculator.

Note: This calculator has limited accuracy and rounding errors will be generated, especially in addition to endless time. When calculations are out of range, the display area will use the letter "E" to represent

KKT27+User Manual

such as Bluetooth headsets.

My name: The Bluetooth device name can be modified.

Advanced: Advanced: Audio path: Set the sound path can be set to stay in the sound and go hands-free cell phone devices. If set to go hands-free device, connected to the phone, the sound will be automatically transferred to

connected to the phone, the sound will be automatically transferred to the hands free device.

Storage: To receive the file will be automatically transferred to the specified path, the path can be set as phone or memory card.

My address: Displays Bluetooth physical address.

11-Settings

Profile including General, Silent, Meeting and Outdoor. First, based on the current scene, select a different profile, then you only need a nal profile can be set and activated. General: For General envir

Silent: For Silent environment.

Meeting: For meeting the environment, to be pre-set (for example:

Outdoor: For outdoor activities, need to pre-set (for example, ring volume can be set to a higher state).

KKT27+User Manual LAVA circuits. If your device gets wet, remove the battery without turning on

the device, wine it with a dry cloth and take it to the service center Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage

atteries.

Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

Do not attempt to open the device other than as instructed in this

guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.

• Do not drop, knock, or shake the device. Rough handling can break

Do not drop, knock, or snake me device. Rough nandling can break internal circuit boards and fine mechanics.
 Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the

surface of the device.

Do not store your device near magnetic fields or allow your device

 Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

 Battery Recommendations:
 Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room

Batteries have life cycles. If the time that the battery powers nes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and

23

Do not discard the battery with household trash. Please dispose of

KKT27+User Manual Headset: Insert Headset, for earphone mode.

Press the left soft key "Options Activate: Enable the selected profile.

LAVA

Alert type: Can choose to Ring only. Vibrate Only. Vibrate and ring

Alert type: Can choose to Ring only, Vibrate Only, Vibrate and ring, Vibrate Then ring as the current method.

Ring type: You can choose repeat and beep once.

Ringtone: According to your preference ringtones can be set from 1-5, can also be set from the memory card custom ringtones.

Ringtone volume: In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

seven, 1-7, followed by increases.

Message: According to their own preferences set ringtones 1-5.

Message volume: in the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Keypad; you can set keypad as silent, press and tone.

Keypad; you can set keypad as silent, press and tone.

Keypad volume: In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into en 1-7 followed by increases 11.2. Phone settings

to the phone settings sub-menu, you can make the following

Time and Date

In this menu, you can edit the phone time and date settings. The menu isists of three sub-menus:
home city: Set the mobile phone home city.

KKT27+User Manual

Use manufacturer approved batteries, chargers, accessories and supplies. KKT27+ will not be held responsible for user's safety when using unapproved accessories or supplies.

The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Specified collection points for recycling of such hazardous waste Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web Disclaimers

The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their

respective owners.

2. KKT27+ keeps the right to make modifications to any of the

KKT27+User Manual Set time/date and format: You can set date and date's format. Phone allows you to set a calendar from 2000 to 2030 between the dates and

Phone supports many kinds of language for you to select. Set the current language type, then menu and interface refresh for the corresponding language.

Pref. input method

The phone supports many kinds of methods, to choose an input method as the default when the initial input.

Wallpaper: Wallpaper set in two ways: First, through the navigatio system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as

vallpaper. How date and time: Display date and time to do On / Off settings, to etermine whether the date and time displayed on the idle screen.

Set up, down, left and right key for any functions of you want.

Flight made

Turn On/Off the Normal or Flight mode. If you select Flight mode, SIM cards' function will not active.

Miscellaneous settings
Set the LCD brightness and time

11.3. Security settings

ou can set time and time's format

LAVA

LAVA

KKT27+User Manual LAVA content in this user guide without public announcement in advance.

The content of this manual may vary from the actual content displayed n the mobile phone. In such a case, the latter shall govern.

reserved. Reproduction, transfer, distribution or storage of part of all of the contents in this document in any form without the prior written permission of Lava International is strictly prohibited.

KKT27+User Manual

In the "Security Settings" menu, you can set the phone's security options, mobile phone or SIM card to avoid unauthorized use. SIM security 11.4. Dual SMS settings
Select to open or close SIM cards' function. If there are no SIM cards in the card ports, then you camot do operations with the card. The SIM cards' function will active when you open the SIM card.

11.5. Connectivity
In sets the parameter according to network service, such as GPRS, MMS, WAP settings. These parameters depend on network service.

MM security
PIN lock
To lock the SIM there is SIM card PIN password. Set this function to
ON/OFF to lock the sim card. If the current SIM card lock is On,
select Off to close the PIN lock protection.
Change PIN: If the current PIN password lock has been activated,

you can re-set on the PIN password

Change PIN2:PIN2 old to enter the correct password, you can set on

Phone lock: Phone lock password can prevent your mobile phone stolen by others. Select On to open phone lock password to enter the

stored by offices, seeee of the object in the next boot requires that you enter the correct password to enter the soft requires that you enter the correct password to enter the phone lock.

Change password: Change the phone password, enter the old password and then enter a new password. Phone default password is

Screen auto lock

Set the screen auto locked time Mahila tracker

Activate mobile tracking: To set on/off to mobile tracker input

phone password. Default password for phone is 4321.

Change Password: Reset new password. Settings SMS: Input phone number and remarks

End key locks keypad

KKT27+User Manual

LAVA WARRANTY CERTIFICATE

Limited warranty:
LAVA international Ltd. (LAVA) provides limited warranty for your
mobile phone and original accessories delivered with your mobile
phone (hereinafter referred to as "product")
The warranty period for the transceiver is one (1) year and for battery,
charger and headset is six (6) months from the date of purchase.

I AVA Warranty

LAVA Warranty
Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery &

charger. You shall have no coverage or benefits under this warranty in the

vent that any of the following conditions are applicable:
. The product has been subjected to abnormal use or conditions improper storage, exposure to excessive moisture or dampness, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, impropor installation

quids, improper installation

You have not notified Lava of the defect in the product during the appuscane warranty period.

3. The product serial no. code or the accessories date code has been removed, defaced or altered.

removed, defaced or altered.

1. The product has been used with or connected to an accessory (i)
Not supplied by Lava or its affiliates, (ii) Not fit for use with the
product or (iii) Used otherwise than in manner intended.

near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer. orized distributor/retailer.
warranty information, product features and specifications are

LAVA

IMFI No Model No.

KKT27+User Manual

11.4. Dual SIM settings

11.6. Restore settings

delete, delete all and change order.

KKT27+User Manual

Health and Safety Precautions

Select open the red key locks keypad, press the end key will destroy

With this setting phone automatically restore the mobile phone to factory setting after entering the default password.

11.7. Shortcuts
Shortcuts interface, Press LSK key into option, it displays add, edit,

Please read these simple guidelines. Not following them may be dangerous or illegal.

cangerous or triegal.

Next Compliance

**Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.

**SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during

5. The seals of the product's battery enclosure have been broken or

shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by

AVA.

All plastic surfaces and all other externally exposed part that is

Read the terms and conditions of your Lava warranty in the

Keep your original receipt; you will need it for warranty services if

Present this Lava Warranty Certificate along with original proof of

In case Lava product needs service, please visit the nearest Lava

service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers

scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

Read the guidelines for safe and efficient use as mentione

26