

User Manual

Spark 252

Contents

| | |
|---|-------------------------------------|
| Basic Information..... | 2 |
| <i>Brief Introduction</i> | <i>2</i> |
| <i>Safety Notice</i> | <i>3</i> |
| <i>Cleaning and Maintaining</i> | <i>Error! Bookmark not defined.</i> |
| Before Using | 3 |
| <i>SIM</i> | <i>3</i> |
| <i>Phone Unlock</i> | <i>4</i> |
| <i>SIM Unlock</i> | <i>4</i> |
| Function menu Introduction | 4 |
| 1- <i>Call register</i> | <i>4</i> |
| 1.1. <i>Call history</i> | <i>4</i> |
| 1.2. <i>Call settings</i> | <i>5</i> |
| 2- <i>Contacts</i> | <i>6</i> |
| 3- <i>Music</i> | <i>7</i> |
| 4- <i>Camera</i> | <i>8</i> |
| 5- <i>Messaging</i> | <i>8</i> |
| 5.1. <i>Write message</i> | <i>8</i> |
| 5.2. <i>Inbox</i> | <i>9</i> |
| 5.3. <i>Drafts</i> | <i>9</i> |
| 5.4. <i>Outbox</i> | <i>9</i> |
| 5.5. <i>Sent messages</i> | <i>9</i> |
| 5.6. <i>Broadcast messages</i> | <i>9</i> |
| 5.7. <i>Service messages</i> | <i>10</i> |
| 5.8. <i>SMS settings</i> | <i>10</i> |
| 6- <i>Multimedia</i> | <i>10</i> |
| 6.1. <i>Video recorder</i> | <i>10</i> |
| 6.2. <i>Video player</i> | <i>10</i> |
| 6.3. <i>Sound recorder</i> | <i>10</i> |
| 6.4. <i>FM radio</i> | <i>11</i> |
| 7- <i>Gallery</i> | <i>11</i> |

| | | |
|-------|--|-----------|
| 8- | <i>Fun & Games</i> | 11 |
| 8.1. | Games | 11 |
| 9- | <i>Organizer</i> | 11 |
| 9.1. | STK | 11 |
| 9.2. | Bluetooth | 11 |
| 9.3. | Alarm..... | 12 |
| 9.4. | Calendar..... | 12 |
| 9.5. | Calculator | 12 |
| 9.6. | Torch | 13 |
| 10- | <i>Tools</i> | 13 |
| 10.1. | File manager | 13 |
| 10.2. | Shortcuts | 13 |
| 11- | <i>Settings</i> | 13 |
| 11.1. | Profiles..... | 13 |
| 11.2. | Schedule SMS | 14 |
| 11.3. | Dual SIM settings | 14 |
| 11.4. | Phone settings..... | 15 |
| 11.5. | Security settings..... | 16 |
| 11.6. | Connectivity | 17 |
| 11.7. | Restore settings..... | 17 |
| 12- | <i>Internet</i> | 17 |
| 12.1. | Internet service | 17 |
| | Health and Safety Precautions | 18 |
| | Taking Care of Your Device | 20 |
| | LAVA WARRANTY CERTIFICATE | 22 |

Basic Information

Brief Introduction


Thank you for choosing Lava Spark 252 mobile phone. You can read the manual, a comprehensive understanding for the use of mobile phones and enjoy its perfect functionality and simple method of operation.

Spark 252 supports two SIM cards function. In addition to basic call

functions, it also have features like phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, One Memory Card (T-Flash card) slot, calculator, calendar etc.

Our Company reserves the right to make any changes in the contents of the manual without any prior notice.

Keys and Parts:

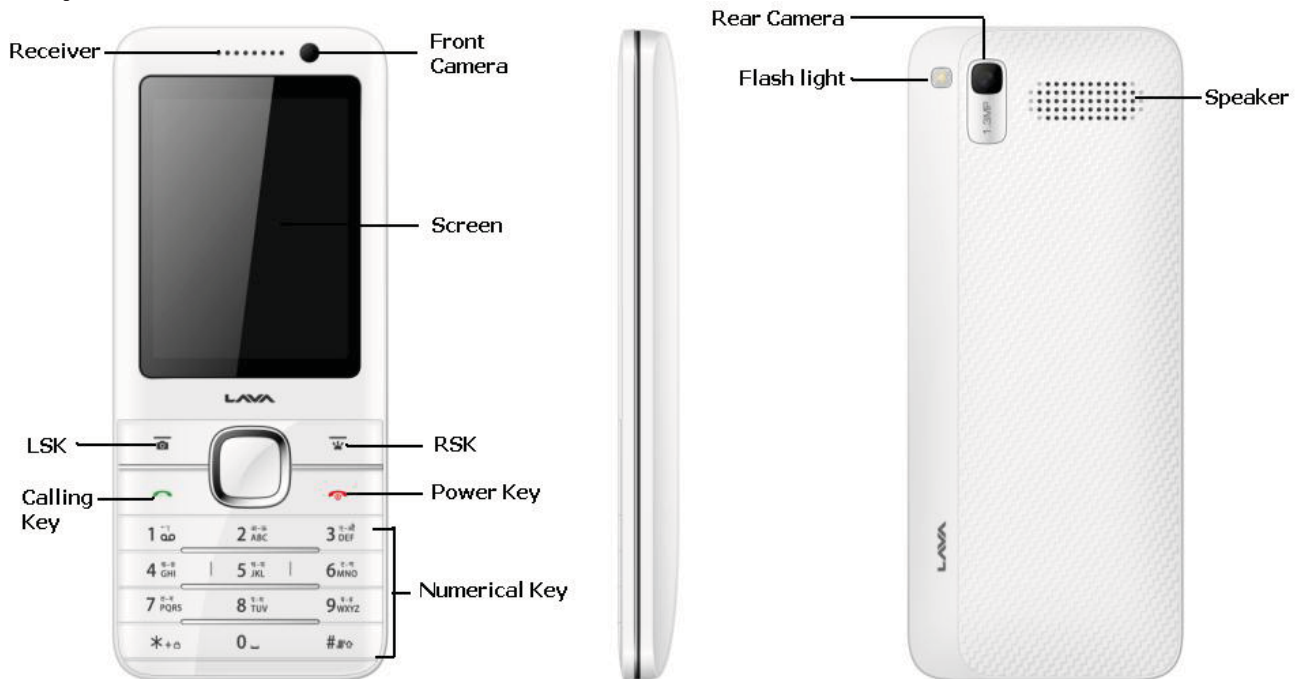

Safety Notice

If your phone is lost or stolen, immediately notify the telecommunications sector, or its outlet, to stop the SIM service. To make you mobile phone more secure, please take precautionary measures, such as:

- Set up mobile phone SIM card PIN password, PIN password to prevent your SIM is unauthorized use by others.

Before Using

SIM

Before using your phone you must insert a valid SIM (Subscriber Identity Module) card. SIM card provide by the network provider.

Phone Unlock

In order to prevent illegal use, your phone can set the phone lock password protection. To use this function you must enter the phone lock password so that you can unlock the phone for the normal use state.

Enter the phone lock password, press the LSK to confirm. For example, if the phone lock password is set to 4321, then the following input: 4321.

SIM Unlock

In order to prevent illegal uses of your SIM use PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use. Enter the PIN password, press the LSK to confirm. For example, if the PIN is set to 1234, then the following input: 1234. If there consecutive incorrect, your SIM will be network locked, the phone will ask for PUK password.

Function menu Introduction

1- Call register

1.1. Call history

Missed calls

Enter the missed call menu, will display the missed calls list. Select missed call records, press the OK key to enter "Options":

- **View** View the details.
- **Call** Call the record number.
- **Send text message** Send SMS to record number.
- **Save to Phonebook** Save the number to the phone or SIM card.
- **Add to block list** save the number to phonebook block list.
- **Delete** Delete the number.
- **Mark several** Mark several or all records.

Dialled calls

Enter the dialed calls menu to display the current record of outgoing phone list of phone numbers. Please refer to all calls for details.

Received calls

Enter the received calls menu to display the current record has been received mobile phone number list. Please refer to all calls for details.

Delete call logs

Delete all calls from dialled calls、 missed calls、 receive calls and all calls.

Call timers

View SIM 1 and SIM 2's call timers from last calls、 dialled calls and received calls.

1.2. Call settings

Enter the call set up sub-menu, you can make the following settings:

Call waiting

Open this feature, during the call if the new call, the network will notify you. Specific use with your network provider.

- **Avtivate** lanch the function.
- **Deactivate** Close the function.
- **Query status** Query the function's status.

Call divert

Network Call Transfer service allows you to call a business case in a default transferred to a phone number you specify. The features include: Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls.

Call barring

Into the "Call barring" sub-menu, you can set the following call barring any combination to improve security. Some network providers may not provide this service call restrictions, specific use, please contact your

network provider. Network provider will provide a four-ban password so that you can enable call restrictions.

Change the password to enter the old call barring password, set new restrictions on the password.

Advanced settings

Auto record in call

Turn on the auto call record, Automatic recording during a call.

Blacklist:

This feature allows you to use in case of do not want to be disturbed, add the number to open the blacklist after blacklist, the number can not dial your phone. Reject unknown calls can open and close. Refused to blacklist calls can open and close. The blacklist Number can enter your own can also be joined from the phone book.

Auto redial:

Through on / off settings, to activate or disable the feature. Turned on and when your phone call after another failed attempt to connect up to redial 10 times. This feature can save you the trouble of repeated calls.

Call time reminder:

In this menu can prompt a certain length of time to set up the call, according to the menu function mode in order to select the following tips:

Off Close the function.

Single Enter any numbers between 1-3000 (sec) , which arrived at the selected time (seconds) of talk time when prompted.

Periodic Enter any number between 30-60 (sec) , from the input time (in seconds), the intervals of 1 minute for talk time tips.

Answer mode:

Any key and Auto answer when headset mode two choices for selecting. When you select any key, press any key outside power key and RSK can answer the call.

2- Contacts

You can use the contacts to store records, can store the following: name and phone number. In the phonebook list, select a record, to make a call when you press the dial keys. Select a record in the phonebook, you can do the following:

-View View the contact details or edit record.

-
- Send text message** Send text message to this number.
 - Call** Make a call to the number.
 - Edit** Can edit and save record.
 - Delete** Delete the record.
 - Copy** Copy the current record to Phone/SIM.
 - Add to blocklist** Save the number to blocklist.
 - Mark several** Mark several or all records can send text message or delete.

-Phonbook settings:

-Preferred storage can be in the SIM1, SIM2, Phone and All to switch, and phonebook list will change accordingly, such as select SIM1, the phonebook list will only show SIM1 records .

-Extre numbers can be set SIM owner numbers and fixed dialing numbers.

-Memory status View the usag and free Phonebook capacity information.

-Copy contacts If select SIM to phone, the SIM card records of all telephone numbers copied to the phone.

-Move contacts You can select the SIM records of all mobile phone numbers move to the phone, also you can switch the option to operate.

-Delete all contacts You can delete all contacts in SIM card or phone and all records are deleted.

-Backup contacts Backup phonebook list.

-Restore contacts Restore backed up the phonebook.

3- Music

In the Audio player interface, you can press left and right keys to switch the music; press * and # keys to adjust the play volume. In the Audio player interface, press the left soft key to enter "list" menu and enter the current playlist to play in the option list can be any of a music file to play.

Select a music file to enter the settings options, you can top of the screen prompts the items content specific settings of each item:

Pre.playlist: Can select the preferred list, Phone or Memory card. If you choose a memory card, then show the all music files in memory.

List auto gen.: To switch to this setting. When this feature is set on, you can perform the "Refresh Playlist" operation.

Repeat: Can be set as off (no repeat), one, all.

Shuffle: Random order of play set, respectively, can be set to on and off.

Background play: Set the background play on, you can make mobile phone in other user interface and also play music. Set as off, the music will not play when out of the Audio player.

4- Camera

The phone includes high-definition camera, you can take pictures anytime, anywhere, and to save the photos to your phone or memory card.

State in the preview, press the LSK to enter "Options" you can do this to conduct a more detailed set of parameters.

Camera Switch: Switch the camera between before and after.

Switch to video recorder: Switch to the video recorder.

Photos: Photo album shows the current list of files.

Camera settings: Including Shutter sound, EV, Contrast, Anti-flicker and Delay timer, setting operation contents of the regulation. Been adjusted, press the LSK "OK" to save the current settings.

Image settings: Include the Image size and image quality regulation.

White balance: Set the white balance state.

Effect settings: To set the photo shoot special efficiency.

Storage: storage location can be set as Phone; Memory card, the captured image will be saved to the specified location.

Restore default: Set all parameters to default settings.

5- Messaging

Make sure that the information in writing before the message center number is set correctly. Access to an information menu, you can edit the SMS and Multimedia message.

5.1. Write message

Send to After editing the information, select the operation, enter the number manually, or add records from the phonebook, you can do **send**, **Edit recipient**, **Remove recipient**, **Remove all recipients**, **Save** operations. Sent SMS to one or more persons, and storage to Drafts.

Insert symbol Offer many kinds of symbol to choose.

Input method Offer many kinds of input methods to choose from method.

Advanced:

Insert number Insert number into SMS from phonebook.

Insert name Insert the name of the record into SMS from phonebook.

Save save to drafts.

5.2. Inbox

In list of inbox, you can press the OK key to read the message details, In the inbox interface, press LSK "Options" to enter the menu:

View Enter the message reading interface to view the message's details.

Reply Send SMS to the sender.

Call sender Make a call to the sender.

Forward Send the message to other people.

Delete Delete the message.

Delete all Delete all messages.

Save to Phonebook Save the number to phonebook.

5.3. Drafts

Edit the SMS not sent but stored in the draft, the detail features, please refer to "Inbox".

5.4. Outbox

Go to the Outbox list view your SMS are not sent successfully. the detail features, please refer to "Inbox".

5.5. Sent messages

Open the message set in the "Save sent message", send the information after the success of information stored in the Sent, detail features, please refer to "Inbox".

5.6. Broadcast messages

Broadcast is a public network operators to send messages. Using the cell broadcast service, you can receive from the network operator information on various topics, such as weather, taxis, hospitals and so on. For

information on available topics, please contact your local network provider.
Note: The cell broadcast function needs the network operator support.

5.7. Service messages

It includes following items to: Enable push and Service loading.

5.8. SMS settings

SIM1\SIM2 This menu can set SMS address、delivery report、reply path and voicemail server function。

Memory status View the SIM and Phone capacity information.

Save sent message Open the "Save sent message", messages sent after a successful save the sent message, if you turn off this feature, you will not be saved.

Preferred storage: Can set preferred storage as SIM or phone.

6- Multimedia

6.1. Video recorder

Switch to camera: Switch to the camera.

Camcorder settings: Recorder settings including Anti-flicker setting.

Video settings: Include video quality.

Storage: storage location can be set Phone and Memory card, shooting the video will be saved to the specified location.

6.2. Video player

Choose video player sub-menu, you can easily view the saved video player in the video list, press the LSK to enter "Options" to select the video files to do the play, send(send the video via Bluetooth or multimedia message if you want) ,rename, delete etc operations.

6.3. Sound recorder

In the sound recorder interface press “option”, it shows the items of record.

New record Start a new record. If you press stop, it will pop up a dialog box to prompt you save it or not. If you press pause, it will suspend recording, and then press continue, it can record again.

List Display the sound that you recorded and saved in the memory card.

Settings you can set the file format and audio quality of the record.

6.4. FM radio

FM interface, press the OK key to turn on / off FM play, press the right navigation key to automatic search, press * and # keys to adjust the FM playing volume. Press the left soft key "Options" can show FM options menu, the content were:

Channel list: Shows FM channel list.

Manual input: Can be their own editors to manually enter the channel frequency, the effective value of 87.5 ~ 108.0.

Auto search: Auto search FM channels in the channel list.

Settings: Can on/off the background and loudspeaker play. Also can set FM record audio quality and storage operations.

Record: Record your favorite FM audio sound.

File list: You get recoded audio.

7- Gallery

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the LSK to enter to "Options" to choose the pictures to do the View, Send, Use as, Rename, Delete, change Storage and check Image information operations. View pictures, by pressing on the left and right navigation buttons to switch pictures.

8- Fun & Games

8.1. Games

Into this menu display game and games settings.

9- Organizer

9.1. STK

Enter STK menu, display Operators's information.

9.2. Bluetooth

Power: Activate Bluetooth on or off the Bluetooth function.

Visibility: If set as On, other devices can search this Bluetooth device; if set as Off, other devices can not search this Bluetooth device.

My device: Can search for nearby Bluetooth devices.

Search audio device: Free devices to search for near-free decoration, such as Bluetooth headsets.

My name: The Bluetooth device name can be modified.

Advanced:

Audio path Set the sound path can be set to stay in the sound and go hands-free cell phone devices. If set to go hands-free device, connected to the phone, the sound will be automatically transferred to the handsfree device.

Storage To receive the file will be automatically transferred to the specified path, the path can be set as phone or memory card.

My address Display device Bluetooth physical address.

9.3. Alarm

Five alarm can be set up (turned off the alarm is still valid).Select and edit an alarm clock: Can edit the setting of alarm on / off, Time, Snooze,Repeat ,Alarm tone and Alert type. You can choose to set to repeat: Once,Everyday, Custom.

9.4. Calendar

Enter calendar sub-menu, the screen will show a calendar month, and other background box with the current date marked.Press the up, down, left, and right navigation keys to change the date, calendar information on the screen will be updated accordingly. Press the left soft key "Options" option to display the calendar menu, and content as follows:

Jump to date: quickly jump to a specified date.

Go to today: switch the current date that system setted.

9.5. Calculator

Your phone provides you with the basic arithmetic operations can be a function of the calculator, easy simple operation. Press the left soft key "Clear", Press the right softkey "Back" to exit the calculator.

Note: This calculator has limited accuracy and rounding errors will be generated, especially in addition to endless time. When the calculation of range, the display area will use the letter "E" to represent.

9.6. Torch

Select the on or off state to turn on or turn off the torch light.

10- Tools

10.1. File manager

Into the File manager menu, the menu display **Phone** and **Memory card**. Root directory, select "**Phone**", press the **LSK** to enter "**Options**" can be as follows:

- **Open** Open the root directory lists the directories and files.
- **Format** Format the memory card, this action will remove all current flash memory data.

Root directory, select "**Memory Card**", press the **LSK** to enter "**Options**" can be as follows:

- Open** Open the root directory lists the directories and files.
- Format** Format the memory card, this action will remove all current flash memory data.
- Details** more information you can view, such as Name, Total size, free size.

You can paly the music or video files, view Photo, copy/move/delete files, rename files and so on.You can send the file through Bluetooth.

10.2. Shortcuts

Shortcuts interface, Press LSK key into option, it display add、edit、delete、delete all and change order.

11- Settings

11.1. Profiles

Profile including General、 Silent、 Meeting and Outdoor. First, based on the current scene, select a different profile, then you only need a personal profile can be set and activated.

General: General environment.

Silent: For Silent environment.

Meeting: For meeting the environment, to be pre-set (for example: ring mode can be set to vibration).

Outdoor: For outdoor activities, need to pre-set (for example, ring volume can be set to a higher state).

Headset: Inset Headset, for earphone mode.

Press the left soft key "Options":

Activate: Enable the selected profile.

Customize:

Alert type: Can choose to Ring only, Vib. Only, Vib.and ring, Vib. Then ring as the current method.

Ring type: You can choose repeat and beep once two type.

Ringtone According to their own preferences set ringtones 1-5, can also be set from the memory card custom ringtones

Ringtone volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Message According to their own preferences set ringtones 1-5.

Message volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Keypad you can set keypad as silent、press and tone

Keypad volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Power on\off According to their own preferences set ringtones 1-5.

System alert can on\off system alert.

11.2. Schedule SMS

Set messages sending time,time to send message.

11.3. Dual SIM settings

Select to open or close SIM cards' function. If there are no SIM cards in the card ports, then you can not do operations with the card.The SIM cards' function will active when you open the SIM card.

Flight mode Turn On/Off the Normal or Flight mode. If you select Flight mode, SIM cards' function will not active.

11.4. Phone settings

Into the phone settings sub-menu, you can make the following settings:

Time and Date

In this menu, you can move the phone time and date settings. The menu consists of three sub-menu:

Set home city: Set the mobile phone home city.

Set date and format: You can set date and date's format. Phone allows you to set a calendar from 2000 to 2030 between the dates.

Set time and format: You can set time and time's format and on / off daylight saving function. If daylight saving is set to open, then the phone time to add in the original time of one hour or one hour later.

Update with time zone: On /off update with time zone.

Schedule power on/off

There are two powered on and two powered off time for you to edit. every time item includes: enable , disable, content and ect. Finish the setting , you must open this item. when time is up, the phone will execute relevance operation.

Notice: if you set the time of powered on and the time of powered off are same, it isn't active at the same time!

Language

Phone supports many kinds of language for you to select. Set the current language type, then menu and interface refresh for the corresponding language.

Pref. input method

The phone supports many kinds of methods, to choose an input method as the default when the initial input.

Display

Wallpaper: Wallpaper set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Power on display: Power on display set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Power off display: Power off display set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Show date and time: Display date and time to do On / Off settings, to determine whether the date and time displayed on the idle screen.

Dedicated key

Set up,down,left and right key for any functions of you want.

Auto update time

On /off auto update time.

Miscellaneous settings

Set the LCD brightness and time.

11.5. Security settings

Into the "Security Settings" menu, you can set the phone's security options, mobile phone or SIM card to avoid unauthorized use.

SIM security

PIN lock

SIM card PIN password to lock the completion of your SIM card to prevent unauthorized use. If the current SIM card lock is closed, select Open to open the SIM card, enter the PIN lock password, the next boot requires that you enter the correct PIN password to enter; If the current SIM card lock is On, select Off to close the PIN lock protection.

Change PIN: If the current PIN password lock has been activated, you can re-set on the PIN password

Change PIN2: PIN2 old to enter the correct password, you can set on the PIN2 password.

Phone security

Phone lock: Phone lock password can prevent your mobile phone stolen by others. Select On to open phone lock password to enter the correct password-protected phone lock open, the next boot requires that you enter the correct password to enter the phone lock.

Change password: Change the phone password, enter the old password and then enter a new password. Phone default password is 1234.

Screen auto lock

Set the screen auto unlocked time.

Mobile tracker

Activate mobile tracking: Input phone password into, the mobile tracking set to on or off.

Reset Password: Reset new password.

Settings SMS: Input phone number and remarks.

Red key locks keypad

Select open the red key locks keypad, press the end key will destroy the screen mobile phone.

11.6. Connectivity

It sets the parameter that according to network service, such as GPRS, , WAP, Different country ,different network parameter.

11.7. Restore settings

In this menu, enter the password, once determined, the phone automatically reboot the phone after the relevant parameters can be set to return to the case of mobile phone factory. The default password is 4321.

12- Internet

12.1. Internet service

In the internet service interface, it has includes the following items:

Homepage Log on homepage, you will find it is a WAP website that you setted.user can set it by themselves.

Bookmarks It doesn't have default bookmarks. Users can add bookmarks by themselves. You can go to relevant website conveniently.

Search or input URL You can search or edit any website you want, but it is effective.

Recent pages Display the recent pages.

Settings it includes following items to users to set: data account , browser options and preferences.

Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.
- The highest SAR value of the device at the head and body are below 1.6W/kg respectively averaged over 1 gm. of human tissue.

SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low

power Bluetooth emitter.

- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in chest pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers

equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.

- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. SPARK 252 will not be held responsible for user's safety when using unapproved accessories or supplies.

Recycle Your



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.Lavamobiles.com

1. The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
2. SPARK 252 keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part of all of the contents in this document in any form without the prior written permission of Lava International is strictly prohibited.

LAVA WARRANTY CERTIFICATE

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as “product”)

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:

1. The product has been subjected to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation
2. You have not notified Lava of the defect in the product during the applicable warranty period.
3. The product serial no. code or the accessories date code has been removed, defaced or altered.
4. The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.
5. The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
6. All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

| | |
|------------------|-------|
| IMEI No. | |
| Dealers Stamp | |
| Date of purchase | |
| Model No. | |