 


tecmobile® | R30 User Manual
Dual SIM

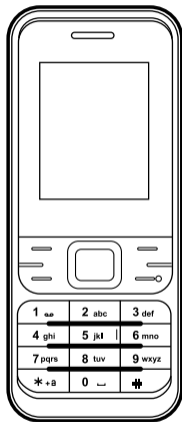


Contents

1) Introduction	4	4.7) Forwarding Messages	16
1.1) Overview	4	4.8) Deleting Messages	17
1.2) Box Contents	5	5) Phone Settings	18
1.3) Functions of Buttons	6	5.1) Menu Settings	18
2) Getting Started	8	5.2) Sounds	18
2.1) Installing the Battery, SIM Card and Memory Card	8	5.3) Dual SIM Settings	19
2.2) Charging the Battery	11	5.4) Phone Settings	20
2.3) Powering ON/OFF	12	5.5) Display Settings	20
3) Making Phone Calls	13	5.6) Call Settings	21
3.1) Making a Call using the Keypad	13	5.7) Security Settings	21
3.2) Making a call from Contacts	13	5.8) Bluetooth Settings	22
3.3) Answering a Call	13	6) Managing Contacts	23
3.4) Adjusting the Volume	13	6.1) Creating Contacts	23
4) Messages	14	6.2) Creating a New Contact	23
4.1) SMS Settings	14	6.3) Searching for a Contact	24
4.2) MMS Settings	14	6.4) Deleting a Contact	25
4.3) Composing a SMS	15	7) Using Bluetooth	26
4.4) Composing a MMS	15	7.1) Turning ON Bluetooth and making your phone Visible (Discoverable)	26
4.5) Save the information as a Draft	16	7.2) Pairing with a Bluetooth Device	26
4.6) Reading and Replying to a Message	16	7.3) Un-pairing a Bluetooth Device	27
		7.4) Sending and Receiving Files	27

8) Multimedia	28	13) Health and Safety	44
8.1) Camera	28	14) Declaration of Conformity	51
8.2) Image Viewer	28		
8.3) Video Recorder	29		
8.4) Video Player	29		
8.5) Audio Player	29		
8.6) Sound Recorder	30		
8.7) FM Radio	30		
9) General	32		
9.1) Torch	32		
9.2) Calendar	32		
9.3) Tasks	33		
9.4) Alarm	34		
9.5) World Clock	35		
9.6) Calculator	35		
9.8) eBook	36		
10) File Manager	37		
11) Services	38		
11.1) Internet Service	38		
11.2) APN Settings	38		
12) Legal Information	40		

1) Introduction

 1.1) Overview

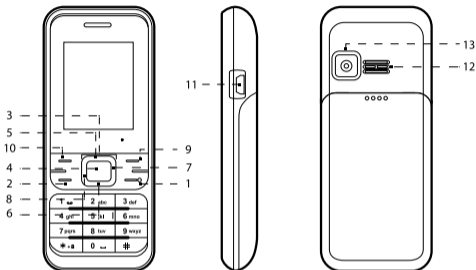

- 1 Power ON/OFF/End button
- 2 Send button
- 3 Navigation button
- 4 OK button
- 5 Up button
- 6 Down button
- 7 Right button

- 8 Left button
- 9 Right soft button
- 10 Left soft button
- 11 Mini USB/ Audio/Charger jack
- 12 Speaker
- 13 Camera

1.2) Box Contents

Please check the box includes the following components. If there are any items missing please contact your supplier.

- Handset
- Power Adaptor
- Data Cable
- Headset
- User Manual
- Quick Start-Up Guide

1.3) Functions of Buttons

Power ON/OFF/End Button

- When the phone is OFF, press to turn ON the phone.
- When the phone is ON and the screen is unlocked, press to turn OFF the phone.

Navigation Button

Up Button

- During an active call, press to increase the volume on the earpiece.
- When not on a call, press to go to shortcuts.
- Whilst listening to the FM radio, press to increase the volume.
- Use this button to navigate the Main menu.

Down Button

- During an active call, press to decrease the volume on the earpiece.
- When not on a call, press to go to alarm.
- Whilst listening to the FM radio, press to decrease the volume.
- Use this button to navigate the Main menu.

Left Button

- Use this button to navigate the Main menu.
- Whilst listening to the FM radio, press to search for a lower radio frequency.
- In standby mode use this button to go to sounds.

Right Button

- Use this button to navigate the Main menu.
- Whilst listening to the FM radio, press to search for a higher radio frequency.
- In standby mode use this button to add a new contact.

Right Soft Button

- Press the Right Soft button to select the corresponding function on the bottom right hand side on the screen.

Left Soft Button

- Press the Left Soft button to select the corresponding function on the bottom left hand side on the screen.


2) Getting Started


2.1) Installing the Battery, SIM Card and Memory Card

Your phone comes with a rechargeable Lithium-ion battery and is designed to use only manufacturer-specified original batteries and accessories. Battery performance depends on many factors, including network configuration, signal strength, the temperature of the environment in which you operate your phone, the features and/or settings you select and use, items attached to connecting ports, your voice, data, and other program usage patterns.


Installing the Battery and SIM card.

1. Make sure that your mobile phone is powered OFF.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.

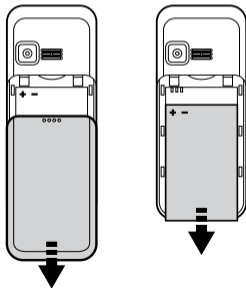

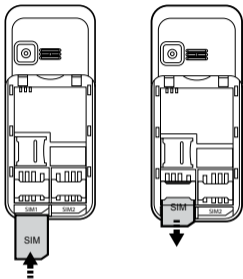


4. Slot the SIM card into place.
Always ensure the SIM card is inserted correctly before replacing the battery.

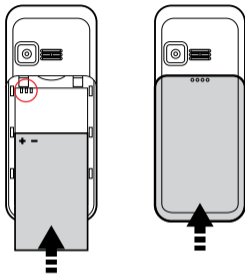

5. Replace the battery into position and slide the back cover into place until you hear a click.

Installing the Micro SD Memory Card.

1. Make sure that your mobile phone is powered OFF.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.
4. Slide the micro SD card holder to the **Open** position and flip the holder upwards.
5. Insert the memory card into the holder and click it back into place.
6. Slide the holder to the **Lock** position to secure it into place.
7. Insert the battery and the back cover.

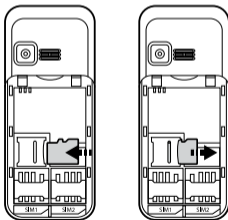

2.2) Charging the Battery

Only use the power adaptor and USB data cable provided in this pack to charge your phone. There are 2 methods for charging the battery.

Charging the battery with the Power Adaptor and USB data cable.

1. Install the battery correctly in the phone.
2. Connect one end of the USB data cable into the charger jack on the phone.
3. Attach the other end to the Power adaptor.
4. Connect the charger to a standard AC wall outlet.
5. When charging is complete, unplug the charger from the AC wall outlet and disconnect the cable from the phone.

Charging the battery using a computer with the USB data cable.

1. Connect the mini USB end of the data cable into the charging jack on the phone.
2. Attach the USB end of the data cable to the USB port on the computer.
3. When charging is complete, disconnect the cables from the handset and computer.

2.3) Powering ON/OFF

Ensure the SIM card and battery has been inserted correctly into your phone before attempting to power ON.

Press and hold the **Power ON/OFF/End** button for 3 seconds to power ON/OFF your phone.

3) Making Phone Calls

3.1) Making a Call using the Keypad

1. In Standby mode, input the contact number on the keypad.
2. Press the **Send button** to make a call.
3. Press the **Power ON/OFF/End button** to terminate a call.

3.2) Making a Call from Contacts

1. In Standby mode, press **Left Soft button** to access the **Menu**.
2. Use the **Navigation button** to select **Contact** and scroll through the **Contact List**.
3. Choose your contact and press the **Send button** to make the call.

3.3) Answering a Call

When there is an incoming call, the phone will display the information on the screen.

Press the **Send button** to answer the call.

Press the **Power ON/OFF/End button** to terminate or reject the call.

3.4) Adjusting the volume

In an active call press the **Up/ Down button** on the **Navigation button** to increase or decrease the volume.

4) Messages

4.1) SMS Settings

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Messages > Message Settings > SMS** to access the submenu.

Save Sent Messages: Enables you to save your sent messages.

Preferred storage: Enables you to save the SMS to the SIM card or to the phone.

4.2) MMS Settings

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Messages > Message Settings > MMS** to access the submenu.
3. Edit the following submenu to set your MMS settings:

APN Setting: Sets to automatic will enable your 3G/EDGE connection through your data plan. Contact your network operator for more information.

Common settings:

Compose: Sets your image slide time, and signature for your MMS message.

Sending: Sets your delivery reports and MMS sending options.

Retrieval: Allows you to set the network operator your MMS data received from different network.

Preferred storage: You can select your desired storage location for pictures, music or video files received via MMS.

Memory status: View the storage capacity remaining or used.

4.3) Composing a SMS

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Messages > Compose > SMS**.
3. Enter the message in the Compose message box.
4. Enter a contact number or select the desired recipient from the Contact List.

4.4) Composing a MMS

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Messages > Compose > MMS**.
3. Enter the message using the keypad.
4. Select **Options > Send To** and enter a contact number or select the desired recipient from the Contact List.

4.5) Save the information as a Draft

When composing a message, the MMS or SMS can be saved to the Draft box by pressing **Power On/OFF/End button** or going to **Options** and select **Save to Drafts**.

To edit the message

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Messages > Draft**.
3. Highlight the desired message to edit and press the **OK button**.
4. Edit your message and select **Options > Send**.
5. Enter a contact number or select the desired recipient from the Contact List to send the message.

4.6) Reading and Replying to a Message

The phone will display an icon on the screen to notify you of a New Message received. Press the **Left Soft button** to View the message.

4.7) Forwarding Messages

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Select **Messages** and go to the message want to forward.
3. Select **Options > Forward**.
4. Edit your message and select **Options > Send To**.
5. Enter a contact number or select the desired recipient from the Contact List to send the message.

4.8) Deleting Messages

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Messages > Inbox**.
3. Select the desired message and select **Options > Delete** to remove the message.

5) Phone Settings

5.1) Menu Settings

1. In the Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Settings** to access the submenu to display the list of options to change your phone settings.

5.2) Sounds

1. In Standby mode press **Left Soft Button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Settings > Sound**.
3. Select one of the following profiles: **General, Silent, Meeting, Outdoor** or **My style**.
4. Edit the following fields to change each profile settings:

Alert Type: Allows you to set Vibrate only or Vibrate and Ring.

Ring Type: Allows you to set Repeat, Ascending or Beep Once.

Ringtones: Allows you to set a ringtone.

Ringtone Volume: Increase or decrease the volume for the incoming ringtone.

SIM1 Message: Allows you to select a message alert tone for SIM1.

SIM2 Message: Allows you to select a message alert tone for SIM2.

Message Volume: Increase or decrease the volume for the message tone.

Keypad Tone: Allows you to select a Click sound or Tone sound when a button is pressed.

Keypad Volume: Increase or decrease the volume when a button is pressed.

Power ON Tone: Allows you to select a Power ON tone.

Power OFF Tone: Allows you to select a Power OFF tone.

System Alert: Enables or disables the System Alert Tones.

5.3) Dual SIM Settings

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Settings > Dual SIM Settings**.
3. Edit the following fields to change your settings:

Dual SIM Open: Both SIM1 and SIM2 are enabled.

Only SIM1 Open: Only SIM1 is enabled.

Only SIM2 Open: Only SIM2 is enabled.

5.4) Phone Settings

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Settings > Phone Settings**.
3. Edit the following to set your phone settings:

Time & Date: Allows you to set your local time, Time and date and format to be displayed.

Schedule Power ON/OFF: Allows you to set preferred times to automatically switch your handset ON and OFF.

Language: Set the language on your phone. English will be the default language preset on the phone.

Preferred Input: Sets your default text input preference for composing messages.

Dedicated key: Allows you to assign different functions for the Navigation button. Once the settings are saved the instructions in this manual will change.

Airplane Mode: Allows you to select Normal or Airplane Mode. If Airplane mode is selected, no network service will be available.

5.5) Display Settings

Enables you to set the brightness of the screen and associated screen backlight delay as well as select your wallpaper and the Power ON/OFF animation.

5.6) Call Settings

Allows you to set voice calls, plus other features such as voicemail, call barring, waiting and forwarding.

5.7) Security Settings

Using a PIN code to protect your SIM card

You can specify a Personal Identification Number (PIN) to protect the SIM card from unauthorised use.

1. In Standby mode press **Left Soft button** to access the **Main menu**.
2. Use the **Navigation button** to select **Settings > Security settings** to access the submenu.
3. Select **SIM1 Security Settings** or **SIM2 Security Settings** to set the PIN code, or change the PIN and PIN2 settings.

Note: Emergency calls can always be made without a PIN code.

Using a keypad lock to protect your phone

Locking the keypad can prevent you from making accidental calls when the phone is in a bag, purse or pocket.

1. In Standby mode press **Left Soft button** to access the **Main menu**.
1. Use the **Navigation button** to select **Settings > Security Settings**.
2. Enable the **Keypad Lock** and select the delay time for this function.

5.8) Bluetooth Settings

1. In Standby mode press **Left Soft button** to access the **Main menu**.
2. Use the **Navigation button** to select **Settings > Bluetooth**.
3. Edit the following fields to change your settings:

Power: Switch ON or OFF to enable or disable the Bluetooth function.

Visibility: Enables or disables the visibility of the phone. When you set to Hide, other Bluetooth compatible devices will not be able to detect your phone when the Bluetooth feature is switched ON.

My Paired Devices: List the names of paired devices with your phone.

Search for New Device: Allows you to search for Bluetooth compatible devices within a 10m range.

My name: The name of the phone when a Bluetooth device searches for your phone.

Advance: Allows you to forward to a Bluetooth device or set where your files are stored when transferring via Bluetooth.

6) Managing Contacts

6.1) Creating Contacts

There are several ways to create contacts. You can add new contacts with additional personal information. Setting this up will allow you to call the person quickly or browse the information more efficiently. Contacts are saved in the phone's memory or in the SIM card.

1. In Standby mode press **Left Soft button** to access the **Main menu**.
2. Select **Contacts**. The Contact List will display the name of the Contact. Select the contact and go to **Options** to open up their details where you can make a Call, send a Text or Edit their details.

6.2) Creating a New Contact

1. In the Standby mode press the **Left Soft button** to access the **Main menu**.
2. Use the **Navigation button** to select **Contact > Add New Contact**.

The new contact can be stored onto the SIM1 or SIM2. Select the desired location to store the new entry.

SIM: Allows you to save to SIM1 or SIM2. Only the name and number information can be stored.

Phone: Allows you to save to the phone memory. The name and number can be stored and a ringtone can be assigned to the contact.

3. Edit the fields with the contact information.

Name: Input the name of the contact using the keypad.

Number: Input the contact number using the keypad.

4. Press the **Left Soft button** to access the **Options** menu and select **Save** to confirm the details of the entry.

6.3) Searching for a Contact

1. In Standby mode, press **Left Soft button** to access the **Main menu**.

2. Use the **Navigation button** to select and scroll through the **Contact list**.

3. Press **OK button** to view the contact details.

6.4) Deleting a Contact

1. In the Standby mode press the **Left Soft button** to access the **Main menu**.
2. Use the **Navigation button** to select the desired contact to delete.
3. Press the **Left Soft button** to access the **Options** menu.
4. Select **Delete** and then **Yes** to confirm to remove the entry.

7) Using Bluetooth

Bluetooth is a short-range wireless communications technology that allows devices to exchange information over a distance of about 10 meters without requiring a physical connection. The Bluetooth device must be initially paired with your phone.

7.1) Turning ON Bluetooth and making your phone Visible (Discoverable)

Allows you to manage the connection and set up device names and enable the visibility of your phone for other Bluetooth devices. This will make your phone visible for 119 seconds to pair with another Bluetooth device.

1. In Standby mode press **Left Soft button** to access the **Main menu**.
2. Use the **Navigation button** to select **Settings > Bluetooth**.
3. Enable the Power setting to **ON** and set the Visibility to **Show**.

7.2) Pairing with a Bluetooth Device

You can pair your phone with another Bluetooth device.

1. Make sure the phone is Bluetooth-enabled.
2. In Standby mode press **Left Soft button** to access the **Main menu**.
3. Use the **Navigation button** to select **Settings > Bluetooth**.
4. Select **Search for new devices**, then your phone will start searching for Bluetooth devices within range.

4. Select the name of the device detected on your phone and when prompted, select **Pair** to complete the pairing process.

Note: To successfully pair 2 devices you must use the same Password.

7.3) Un-Pairing a Bluetooth Device

You can disconnect a paired device with your phone.

1. In Standby mode press **Left Soft button** to access the **Main menu**.
2. Use the **Navigation button** to select **Settings > Bluetooth**.
3. Select **My devices** and use the **Navigation button** to select the device name you wish to unpair.

7.4) Sending and Receiving Files

You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or computer. The first time you transfer information between your phone and another device, you need to enter or confirm a security passcode. Once the device is paired with your phone you will not need to set up the pairing process again unless you delete the device from your phone.

8) Multimedia

1. In Standby mode press **Left Soft button** to access the **Main menu**.
2. Select **Multimedia** to access the submenu to display the list of multimedia options.
3. Edit the following submenus to change your multimedia settings.

8.1) Camera

Enables you to take pictures and change the camera and image settings, as well as the colour scheme. If you want to change from **Picture** to **Video** go to **Options** and change from one to another.

8.2) Image Viewer

Enables you to see and manage all the pictures on your phone. It is possible to edit, rename, send, delete and check the picture information.

1. Press **Options** to display the list of submenus.
2. Edit the following fields to change your settings:

View: Views all the Pictures and Multimedia files taken on the phone.

Image Information: View the image information.

Browse Style: View the pictures as list or grid format.

Send: Allows you to send the image via Bluetooth or as a MMS message.

Use As: Allows you to set the picture as your Wallpaper or Screen Saver.

Rename: Allows you to rename the file.

Delete: Delete the current image.

Sort by: Allows you to organise and sort the file by Name, Type, Time and Size.

Delete All Files: Allows you to delete all files.

Storage: Allows you to select the default storage location to the Phone or Memory Card.

8.3) Video Recorder

Enables you to Record Videos and change the video quality settings.

8.4) Video Player

Enables you to see videos you have recorded with your camera and other imported videos.

8.5) Audio Player

You can listen to music from your phone or your playlist from your memory card. Enables you to repeat the same music the number of times you want and

to shuffle your music when you are listening to it.

8.6) Sound Recorder

The display shows the length of recording time and volume meter. You can choose where to store the recordings and change the audio volume.

1. Press the **Ok button** to start recording.
2. Press the **Right soft button** to stop recording and the **Left Soft button** to pause/continue.
3. Once finished you can Playback the recording.

8.7) FM Radio

Plug in your headset before use as this will function as an antenna as well as a headphone for you to listen to the radio.

1. Insert the headphone into the Mini USB port on the phone.
2. In Standby mode press **Left Soft button** to access the **Main menu**.
3. Use the **Up/Down button** on the **Navigation button** to select **Multimedia > FM Radio**.
4. Use the **Left/Right button** on the **Navigation button** to adjust the frequency.

5. Use the **Ok button** to deactivate the FM Radio.
6. Use the **Volume Up/Down button** on the **Navigation button** to adjust the volume.
7. Select **Options** to edit the following settings:

Channel List: List the present radio channels.

Manual Input: Input the frequency of the radio station manually.

Auto Search: Enables the Auto search and automatically saves the channels in its memory.

Settings: Enables and disables the **Background play** option or **Loudspeakers**.

Note: The broadcast reception quality may be affected in an indoor or shielded environment. You can improve the reception quality by putting the phone near a window, adjusting the position of the headphone cable, or manually changing the channels.

9) General

1. In Standby mode press **Left Soft button** to access the **Main menu**.
2. Select **General** to access the submenu to display the list of options.

9.1) Torch

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **General > Torch** to enable or disable the feature on the phone. The light is located on the top of the phone.

9.2) Calendar

Use your phone's Calendar to create and manage your events, meetings, and appointments. By default the calendar is viewed by month. You can set a reminder and view the calendar by Day, Week, Month or Today.

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **General > Calendar**.
3. Press the **Left Soft button** to select **options** to open the submenu.
4. Edit the following fields to change your settings:

View: View all the event reminders set on a date. Use the **Left/Right button** to

the dates sequentially.

View All: View all the Event reminders stored on the Calendar.

Add Event: Input the details and set different reminders for your events.

Delete Event: Delete an entry.

Jump to date: Select a date to view the events set up.

Go to Today: Select to view events on the current day.

Go to weekly view: Select to view weekly events.

9.3) Tasks

Input your task and set a notification reminder when the time is due.

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **General > Task**.
3. Select **Add** and edit the following fields to set your reminders.

Date: Sets the Date on the Calendar.

Time: Sets the time to activate the alarm.

Subject: Sets the title of your reminder.

Alarm: Sets the reminder to notify before the task is due.

Repeat: The task can be set to notify once or repeatedly every day, weekly, monthly or yearly. You can also customise this to your requirements.

Priority: Sets low, medium or high priority of the task.

Details: Enter more information about the task in this field.

9.4) Alarm

The alarm clock function can be configured to meet different alarm settings.

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **General > Alarm**.
3. Edit the following to set your alarms:

Status: Activates or deactivates your alarm setting.

Time: Adjust to set the time of the alarm.

Repeat: Select the alarm to repeat once or daily or selective days of the week to sound the alarm.

Snooze: Set how long the snooze button will pause between 1 to 10 min intervals.

Alert Type: Sets the alarm to ring only or vibrate only.

9.5) World Clock

Allows you to set different world time zones and activate daylight saving time feature.

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **General > World Clock**.
3. Use the **Left/Right button** on the **Navigation button** to scroll through the different time zones.

9.6) Calculator

The calculator can be used to perform basic arithmetic calculations.

1. In Standby mode press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **General > Calculator** to open the calculator interface.
3. Use the keypad to perform your calculations.

9.8) eBook

You can view files in TXT format in the eBook folder.

1. In Standby mode press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **General > eBook > Bookshelf** to access the eBook list.
3. Select the desired file to view.

10) File Manager

This option allows you to manage your files, stored in the phone or in the memory card.

1. In Standby mode, press the **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **File Manager**.
3. Select **Phone** or **Memory Card** to access the **submenu**.
4. Edit the following fields to manage your files:

New Folder: Creates a new folder.

Rename: Allows you to rename the file.

Delete: Delete the file.

Sort By: Allows you to sort the file according to Name, Type, Time and Size.

Copy: Allows you to copy files between Phone and Memory Card.

Move: Move files between Phone and Memory Card.

Delete All Files: Removes the files from selected location.

11) Services

11.1) Internet Service

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Services > Internet Service** to access the submenu.
3. Edit the following fields to modify your internet settings:

Homepage: By selecting this option, your mobile phone will go directly to the pre-set homepage.

Bookmarks: Edit and Save your specific webpages by adding them to your bookmark list.

Input Address: Input the required website URL to access the web page.

Recent Pages: Stores the websites you have recently visited.

11.2) APN Settings

APN setting is only for your 3G/EDGE connection through your data plan. Contact your network operator for more information. You will need details on your APN, username and password.

1. In Standby mode press **Left Soft button** to access the **Main Menu**.
2. Use the **Navigation button** to select **Services > APN Settings > Options > Add APN Account**.
3. Input the correct information provided by your network operator to set up the network connection.

12) Legal Information

©Tecmobile (International) Ltd. All rights reserved. Tecmobile® and related trademarks, names, and logos are the property of Tecmobile (International) Ltd and are registered and/or used in Europe and other countries around the world.

Notice

The information in this manual is subject to change without notice. Whilst every care has been taken in the preparation and design of the manual, statements, recommendations and information, implied or expressed, these do not constitute a warranty of any kind. No part of this manual may be reproduced, quoted or translated by any means or in any form photographically, mechanically or electronically, without the written permission of Tecmobile (International) Ltd.

Trademarks and Permissions

The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Google Mail is a trademark of Google Inc.; Wi-Fi, Wi-Fi Protected Access, Wi-Fi Protected setup, and WPA are trademarks of the Wi-Fi Alliance; Microsoft, Hotmail, Outlook, Windows Live, and Windows Media are trademarks of Microsoft Corporation; GSM and Global System for Mobile Communications are trademarks of the GSM MOU Association; JavaScript is a trademark of Oracle America, Inc. All other trademarks are the property of their respective

owners and any use of such trademarks by Tecmobile is under license where required.

FCC Notice

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orientate or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Warranty Disclaimers

Although every effort is used to reduce inaccuracies and, except those required by applicable law, no warranties of any kind, either express or implied, and including but not limited to the implied warranties of fitness for a particular use or satisfactory quality, are made in relation to the contents, accuracy or reliability of this manual.

Tecmobile reserves the right to modify, change specifications or information in this manual without any consequential liability or prior notice. Under no circumstances, except as required by applicable law, will Tecmobile or any of its licensors be responsible for indirect damages or consequential loss of income or data however caused.

Disclaimer

Third party content and services may be enabled and are available through this device. Some features and accessories referred to in this manual rely on local network settings and installed software. These may or may not automatically be accepted, in total or in a limited way, by local service and network providers. As a consequence, some descriptions may not match the features or product which you can purchase/download. Third party content and services belong to, are the copyright of, are trademarked by and patented by their respective owners under intellectual property law. They should not be used without the express permission of the service provider or content owner and, unless given specific permission by them, you should not transmit, upload, publish, modify, copy or distribute in any way the services or content displayed through this device. The device may contain technology, software or commodities which are subject to regulations and export laws from the US and other countries. Diversion contrary to law is prohibited. To the fullest extent permissible by applicable law by using the applications provided with your device, you acknowledge that the application is provided "as is". Tecmobile does not provide a warranty, make any representations, or take any responsibility for the end-user support, content or functionality of third-party applications provided with your device.

13) Health and Safety

RF/SAR Information

Your mobile phone is a radio transmitter and receiver. When switching on, your phone sends out low-level radio-frequency (RF). Country governments all over the world adopt state security guidelines developed by independent scientific organisations such as ICNIRP and IEEE. These guidelines establish permitted levels of RF energy for the general population. The guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. SAR is the unit of measurement for absorbed radio quantity when using mobile devices. SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level, however, the actual SAR level of the phone while operating can be well below the maximum value. In general, the closer you are to a base station, the lower the power output of the phone.

The SAR values may vary, depending on different models of phones. To ensure the safety and health of the users, the phone is designed and manufactured to meet the radio exposure guidelines.

The ICNIRP SAR limit for mobiles devices used by the general public is 2W/kg and highest SAR value for this device is tested for use at the ear is below the SAR limit recommended by ICNIRP.

The highest SAR value reported under this standard during product certification for use on the ear is 0.343W/kg and when properly worn on the body is 0.448 W/kg.

Batteries

Never use a charger or battery that is damaged in any way. Use the battery properly. Do not short-circuit the battery, which may damage the battery, cause heat or cause fire. Do not dispose of batteries in high temperature or in a fire as they may explode. Return the waste battery to the dealer or appointed recycle locations.

Do not dispose as household waste. Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to replace the battery with a new one.

Use only original or approved chargers and batteries. Unplug the charger from the electrical plug and the device when not in use. Do not over charge as this will damage the battery and shorten its life. Leaving the battery in extreme hot or cold places will reduce the capacity of the battery. Li-ion batteries are particularly affected by temperatures below 0°centigrade.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or it may cause danger. When connecting the phone or any accessory to another device, read its User's Guide for detailed safety instructions. Do not connect incompatible products. It is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder) for your satisfactory operation of the equipment and for the safety of personnel. Do not expose the equipment to temperature below -10° or above 50° centigrade. Keep the phone in an appropriate holder while you are driving. Do not put it on a seat or places where it could fall when driving. To ensure safe driving and avoid accidents, do NOT use the phone when driving.

Medical Devices

Ensure that you switch OFF your phone in areas near electronic medical equipment that obviously require the phone to be switched OFF: (Such as heart pacemakers, hearing aids, etc). Most medical devices can shield the phone's RF signal, but some cannot. If you have any doubts, or need to find out more, please consult your doctor or medical device manufacturer.

Pacemakers

Pacemaker manufacturers advise the distance between your phone and heart pacemaker should be 6 inches (15.3 cm) at least, otherwise the phone could interfere with the pacemaker.

People fitted with a pacemaker should note the following:

- Always keep a distance (at least 6 inches) between the phone and the pacemaker, when the phone is switched ON.
- Do not carry the phone in a breast pocket
- Listen to the phone using the ear which is farther from the pacemaker.

Caution:

Please switch OFF your phone if you feel there is interference, and consult the doctor as soon as you can.

Hearing Aids

Mobile phones may cause some interference with some hearing aids. If so, please consult your hearing aid manufacturer other safety information.

- If you do not use your phone for extended periods, please switch it OFF and remove the battery to save energy.
- Do not have the volume excessively loud while using the phone, as this could impair your hearing.
- Repairs should only be undertaken by an approved agent.
- Avoid using phone cases that have magnetic closures:
These can affect the performance and life of the phone and its components.
- If you or your family have a medical record of dizziness or epilepsy, please consult your doctor first, if you want to play phone games or use the torch.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched ON and in a service area with adequate signal strength.

To make an emergency call, enter the local emergency number in standby mode to make a call.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will allow you to enjoy this product for many years.

- Keep your phone away from small children and pets. They may accidentally damage the phone or choke on small parts.
- Keep the phone dry and avoid liquids that corrode the phone.
- Do not use the phone with a wet hand, which may cause an electric shock.
- Do not store the phone in hot areas, which can shorten the life of electronic devices, damage batteries, or melt accessories.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.

- Do not expose your phone to hot sunlight which may cause it to over-heat.
- Do not place your phone near inflammable liquids, gas or explosive substances.
- Do not drop or knock the phone. Rough handling can break internal circuit boards.
- When cleaning the phone, use a damp or anti-static cloth. Do not use a dry or static cloth.
- Do not use chemicals such as cleaning solvents to clean the surface. Switch OFF the phone first before cleaning.
- Do not paint the phone. Paint can prevent proper operation.
- If your phone has a torch, do not use it too close to the eyes. This may cause damage to eyes.
- If the phone or battery gets wet and the label on the phone are damaged, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.

14) Declaration of Conformity

Hereby, we declare under our sole responsibility that your device, and in combination with the accessories, are in compliance with the appropriate standards EN 301511, EN 300328, EN 301489-1/-7/-17, EN 60950-1, EN 50360, EN 50332-1, EN 50371, EN 62311, following the provisions of Radio Equipment and Telecommunication Terminal Equipment directive 1999/5/EC.

tecmobile®

| www.tecmobile.com |

Tecmobile reserves the rights to change specifications and parameters of the products without prior notice

MODEL NO: TEC/R30

CE 0700

