

User Guide

ZTE Z667™



ZTE[®]
Bringing you Closer

Devices purchased for use on AT&T's system are designed for use exclusively on AT&T's system. You agree that you won't make any modifications to the Equipment or programming to enable the Equipment to operate on any other system. A voice plan is required on all voice-capable devices, unless specifically noted otherwise in the terms governing your agreement. Some devices or plans may require you to subscribe to a data plan.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

AT&T may collect certain types of information from your device when you use AT&T services to provide customer support and to improve its services. For more information on AT&T's Privacy Policy, visit att.com/privacy.

Copyright © 2014 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

microSDHC logo is a trademark of SD, 3C-LLC. Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission. The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



Version No.: V1.0

Edition Time: July 2014

Manual No.: 079584506462



Contents

Getting Started	1
Phone Setup	1
Powering Your Phone On/Off	2
Getting Around	4
Get to Know Your Phone	5
Key Functions	6
Phone Calls	12
How to Make Calls	12
How to Receive Calls	13
Adjusting Your Call Settings	15
Contacts	17
Importing and Exporting Contacts	17
Creating a Contact	18
Adding a Contact to Favorites	19
Searching for a Contact	19
Creating a New Group	19
Entering Text	20
Google™ Keyboard	20
Google Voice Typing	21
TouchPal X Keyboard	21
Choosing Touch Input Settings	24

Messaging	25	Bluetooth ®	36
Message Box	25	Using <i>Bluetooth</i>	36
Sending a Message	25	Entertainment	38
Changing Message Settings	26	Taking Pictures with Your Camera	38
Email	28	Adjusting Camera Settings	38
Creating an Email Account	28	Sharing a Picture	39
Receiving Email	28	Opening Your Gallery	39
Composing and Sending an Email	29	Shooting Video with Your Camcorder	40
Replying to or Forwarding an Email	29	Adjusting Your Video Settings	40
Deleting an Email Account	29	Adjusting Other Settings	41
Email Settings	30	Sharing a Video	42
Connecting to the Internet	31	Playing Your Videos	42
Adding a New GPRS/EDGE/3G/4G Connection	31	Adding Music to Your Phone	43
Turning on Wi-Fi®	32	Playing Your Music	44
Connecting to a Wi-Fi Network	32	Making Memorable Memos	46
Checking the Wi-Fi Network Status	32	Applications	47
Browsing the Internet	33	Clock	47
Opening a Web Page	33	Calculator	47
Browsing Options	33	File Manager	47
Opening Another Browser Window	34	Kingsoft® Office	48
Using Bookmarks	34	Note	48
Changing Browser Settings	35	Task Manager	48
Using Google Chrome™	35	Timer	49
ii	Contents	Contents	iii


World Time	49	Managing Applications	58
Twitter®	49	Security Settings	59
Google Applications	50	Factory Reset	61
Google Search and Google Now™	50	Managing Other Settings	62
Gmail™	51	For Your Safety	64
Google Play™ Store	52	General Safety	64
Using Google Calendar™	53	FCC Regulations	65
Google Maps™	53	RF Exposure Information (SAR)	66
Google Music™	54	Hearing Aid Compatibility (HAC)	68
Google+™	54	CTIA	69
Hangouts	54	Distraction	71
Play Newsstand	54	Product Handling	71
Voice Search	55	Electrical Safety	75
YouTube™	55	Interference	75
Phone Settings	56	Explosive Environments	77
Mobile Network Services	56	Specifications	78
Sound Settings	56	Warranty	79
Display Settings	56	Limited Warranty	80
Setting Date and Time	57	How to Get Warranty Service	81
Language Settings	57	Other Warranty Programs	81
Managing Your Device Memory	57		

Getting Started

Phone Setup

Installing the micro-SIM Card and Battery
Power off your phone before installing or replacing the battery or micro-SIM card.

① Remove the back cover as shown.

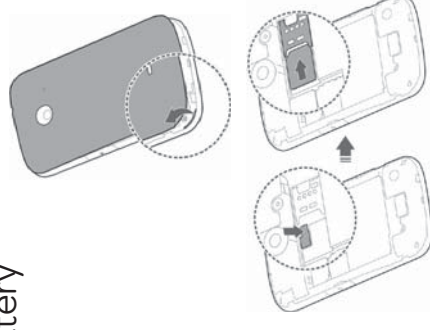

② Press the black spot and insert the micro-SIM card into the card slot with the cut corner oriented as shown.

③ Insert the microSDHC (sold separately) with the gold-colored contacts facing down.

④ Carefully insert the battery with the contacts located against the metal springs. Push down on the battery until it is fully seated.

⑤ Replace the back cover.

Charging the Battery

Note: For best performance, charge the battery fully prior to using the phone for the first time.

- 1 Insert the charger's connector into the charging port. Be sure to insert the connector in the correct orientation. Do not force the connector into the port.
- 2 Plug the charger into a standard AC wall outlet.
- 3 When the battery is fully charged, unplug the charger and disconnect it from the phone.



Note: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Powering Your Phone On/Off

Make sure the micro-SIM card is in your phone and the battery is charged.

- Press and hold the **Power Key** to power on your phone.
- To power it off, press and hold the **Power Key** to open the options menu. Tap **Power off** > **OK**.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see *Phone Settings – Factory Reset*), you need to set up your phone settings before using it.

2

Getting Started

- 1 Tap the language field to select the language you want to use and then tap **Start**.
- 2 Select a Wi-Fi network or tap **Skip**.
- 3 If prompted, set the date, time, and time zone. Then tap **Next**.
- 4 If you have a Google account or Gmail, tap **Existing** to sign in to your account. Or, tap **New** to get an account. You can also tap **Not now** to set up an account later.
- 5 Configure the Google location options and tap **Next**.
- 6 Enter your name, which the phone uses to personalize some apps, and tap **Next**.
- 7 You will be prompted to accept the terms of Google service. Tap **Next** to continue.
- 8 Tap **Finish** to complete setup.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your phone in a low-power-consumption state while the display is off. Your phone also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time, which you can set by pressing **Settings** > **System settings** > **Display** > **Sleep** from the home screen.

Press the **Power Key** to switch to Sleep Mode.

Getting Started

3

Waking Up Your Phone

- 1 Press the **Power Key** to activate your screen display.
 - 2 Tap and hold a blank area of the screen to unlock it.
- Note:** If you have set an unlock pattern, PIN, or password for your phone (see *Phone Settings – Security*) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Getting Around


Touch Control

Use the touchscreen to control your phone. The controls on your touchscreen change dynamically depending on the tasks you're performing.

- 1 Tap the buttons, icons, or applications to select items or to open applications. Keep your finger on an item to see the available options.
- 2 Swipe the screen to scroll up, down, left, or right.
- 3 Drag and drop to move particular items across the screen.
- 4 Pinch with two fingers or double-tap the screen to zoom in/out on a web page or an image.

Note: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side.

Get to Know Your Phone

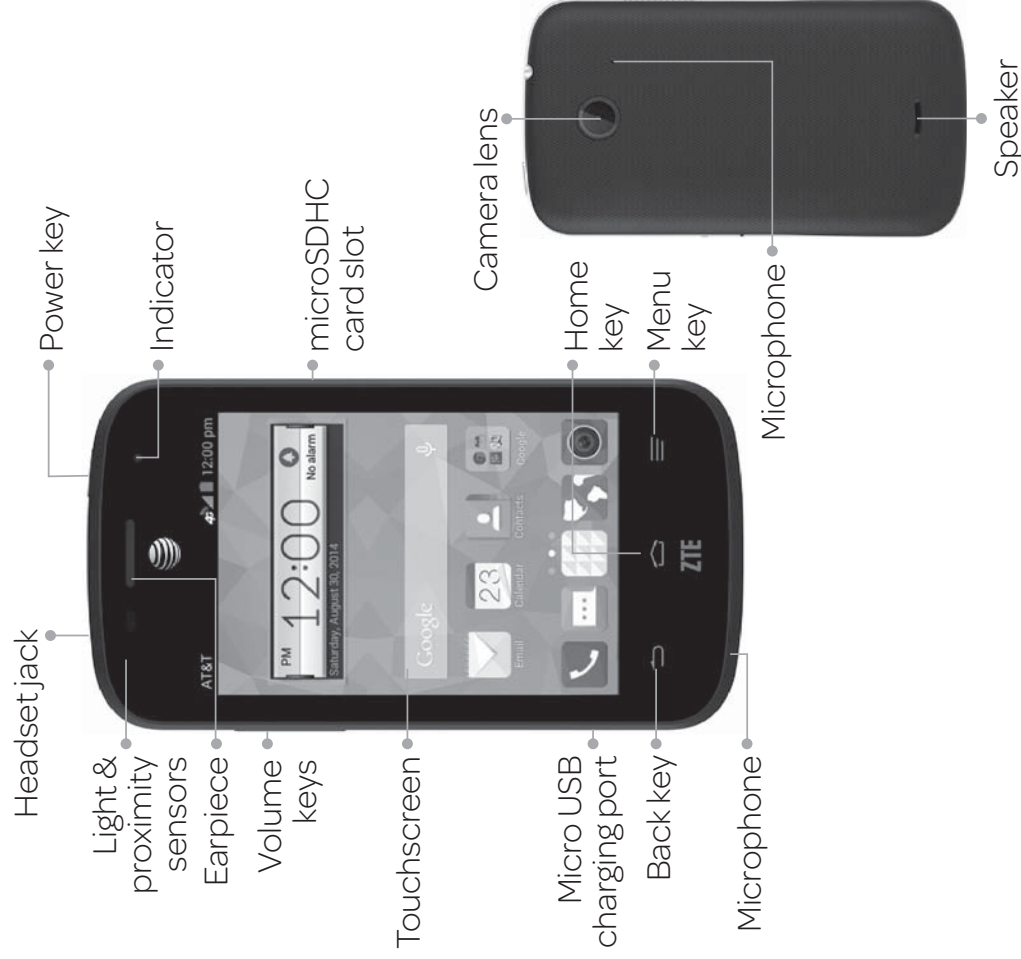

Key Functions

Key	Function
Power Key	Press and hold to turn phone on/off, change sound setting to silent/vibration/sound, set to Airplane mode, or to restart the phone. Press to switch your phone to Sleep Mode. Press to wake up your phone.
Home Key	Press to return to the main home screen from any application or screen. Press and hold to access Google Now.
Menu Key	Press to see the options for the current screen. Press and hold to see recently used applications.
Back Key	Press to go to the previous screen.
Volume Keys	Adjust the volume of the phone.

Home Screens

You can customize your home screens. Set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.



Navigating Your Home Screens

Your phone comes with three home screens, giving you more space to add more items. Simply swipe your finger to the left or right to see each home screen.

Choosing Your Wallpaper

- ① Tap and hold a blank part of the home screen and tap **Wallpaper**.
- ② Tap **Wallpaper for home screen** or **Wallpaper for lock screen**.

- ③ Tap **Gallery**, **Live**, **Photos**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.
- ④ Tap **Set Wallpaper**.

Note: Live wallpapers and Photos are not available for the lock screen.


Adding Items to Your Home Screen

- ① Tap and hold a blank part of the home screen and tap **Widgets** or **Apps**.
- ② Tap and hold the icon of the item you wish to add and then drag it to a home screen thumbnail at the bottom of the screen.
- ③ To move an icon, tap and hold it and then drag it to a new location.

Removing Items from Your Home Screen

- ① Tap and hold the item you want to delete until  appears on the screen.
- ② Drag the item to  and release your finger when the item turns red.

Creating a Folder

- ① On a home screen, tap and hold an app icon and drag it to .
- ② You can add more apps to the folder by dragging icons to the folder.
- ③ Tap the folder to open it and access items in the folder.
- ④ To name the folder, open it and tap the folder name.

8

Getting Started

- ⑤ Enter a name and tap **Done**.



















Deleting Items from a Folder

- ① Tap a folder to open it.
- ② Tap and hold an icon and drag it to .

Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.










Indicators and Icons












Indicator	What it means	Indicator	What it means
	GPRS connected		No signal
	EDGE connected		Signal strength
	3G connected		Mobile data in use
	4G connected		Ringer off
	Airplane mode		Vibrate mode
	Battery empty		Bluetooth on
	Battery low		Connected to a Wi-Fi network
	Battery partially drained		Wi-Fi in use
	Battery full		Wired headset connected

Getting Started

9



  
Indicators and Icons (continued)


Indicator	What it means
	Battery charging
	No SIM card installed
	New SMS
	New MMS
	New email
	New Gmail message
	Problem with SMS/MMS delivery
	Missed call
	Call in progress
	Song is playing

Indicator	What it means
	Alarm set
	microSDHC card unexpectedly removed
	Upcoming event
	Call on hold
	New Wi-Fi network detected
	Downloading data
	Sending data
	Updates available
	USB debugging connected
	GPS on
	USB connected


Using the Notifications Panel

The Notifications panel provides quick access to alerts including new messages, emails, and software updates.

- To open the Notifications panel, tap the top of the home screen and swipe down with your finger.
- Swipe left or right to clear individual notifications or tap  to clear all.
- Tap  to access the full Settings menu.
- To close the Notifications panel, swipe up from the bottom of the screen or press .

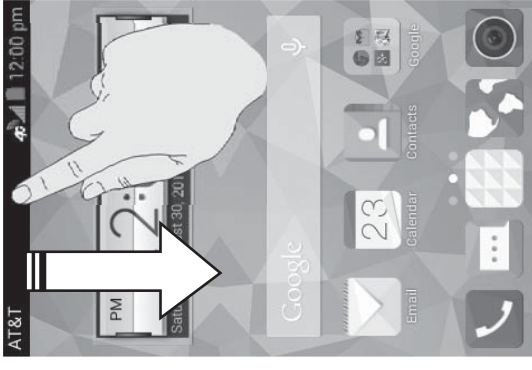

Reopen Recently Used Applications





- ① Press and hold  from any screen. The phone will display applications you used recently.
- ② Tap the application you want to open.

Phone Calls

How to Make Calls

There are many ways to make a call with your phone, and they're all easy to do.

Calling from the Dialer

- ① From the home screen, tap  > .
- ② Enter the phone number with the on-screen keypad. Tap  to delete wrong digits.
- ③ Tap  to place the call.

Tip: To make international calls, tap and hold the **0 Key** to enter the “+”.

Calling from Your Contacts

- ① From the home screen, tap **Contacts** .
- ② Swipe your finger to scroll the contacts list and tap  next to the contact you want to call.

Tips:


- You can search for a contact by tapping the search box and entering the contact name.
- You can also access your contacts by tapping  > **All Contacts**.

Calling from Your Call History

- ① From the home screen, tap  > .
- ② Tap  next to the number you want to call.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.


- ① From the home screen, tap .
- ② Tap the conversation and then the message that contains the phone number you need.
- ③ Tap the number.
- ④ Tap **Call**.

How to Receive Calls

Answering a Call

Slide  down to answer the call.


Rejecting a Call

Slide  up to reject the call.

Slide  up to send a text message to the caller. Choose the default message or send a custom one.

Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them. Tap **Mute** to turn your microphone off. To turn your microphone back on, tap **Mute** again.

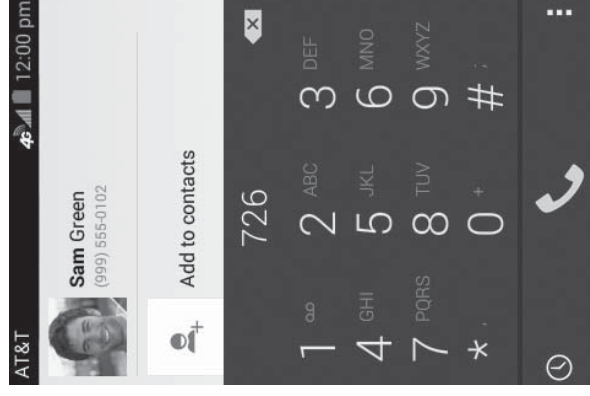

Putting a Call on Hold

During a call, you can put it on hold by tapping **More** > **Hold**.

Tip: If you accept an incoming call while you're on another call, the first call automatically goes on hold. Tap **More** > **Swap** to switch between the two callers.

Turning the Speakerphone On/Off

Tap **Speaker** during a call to turn the speakerphone on. Tap **Speaker** again to turn off the speakerphone.

Adding a Call

During a call, tap **More** > **Add call** and dial a number. When you call another number, the first call automatically goes on hold.

Swapping Calls

To switch between callers, tap **More** > **Swap**.

Merging Calls

To merge two calls and create a conference call, tap **More** > **Merge calls**.

Note: The maximum number of callers on a call varies by carrier.

Ending a Call

Tap **X End** to finish a call.

Adjusting Your Call Settings

You can open the Call Settings menu by tapping  >  >

Phone ringtone	Tap to select a ringtone. You can choose from default ringtones, music, and voice recordings.
Vibrate pattern	Choose from five different vibration patterns.
Vibrate when ringing	Check the box to enable this option.
Voicemail	Select a voicemail service provider (your carrier is the default), or edit the voicemail number if necessary.
Dialpad touch tones	Check this box to enable audible touch tones for numbers on the dial pad.
Quick responses	Edit Quick response to rejected callers.
Fixed Dialing Numbers	Restrict outgoing calls to a fixed set of numbers. To do this you must know your SIM's PIN2 code. Not all carriers support this functionality.
TTY mode	Choose a TTY mode after connecting the TTY device to the phone's headset port. A TTY device can allow people who have hearing or speech disabilities to communicate by telephone.

Adjusting Your Call Settings (continued)

Hearing aids	Turn on/off hearing aid compatibility. When you turn on the hearing aid compatibility and use a hearing aid with a Telecoil to answer the phone, it will help you hear more clearly during the phone call.
DTMF tones	Set the length of dual-tone multi-frequency (DTMF) signal tones: Normal or Long
Speed dial	Set speed dialing keys.
Call Barring Settings	Forbid certain types of calls.
Call forwarding	Forward your incoming calls to a different number. You can choose when to forward: Always forward, Forward when busy, Forward when unanswered, or Forward when unreachable.
Additional settings	Caller ID: Choose whether people you call can see your number.
	Call waiting: See new incoming calls while you're on another call.

Contacts





You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, tap **Contacts**  on the home screen. From there, you can tap the tabs on the top to quickly switch to **Groups, Contacts,** or **Favorites.**

Importing and Exporting Contacts

You can import or export contacts from/to your micro-SIM card or microSDHC card. This is especially useful when you need to transfer contacts between different devices.

Importing Contacts from the micro-SIM Card or Exporting to the Card

- ① From the Contacts screen, press  > **Import/Export.**
- ② Choose to import or export contacts. If you have more than one account set up on your phone, you will need to select the account to which you'd like to import contacts. If not, your phone will automatically display the contacts.
- ③ To import from the micro-SIM, tap  > **Export to phone.**
 - Tap the contacts you'd like to import and then tap **Done.**
 - Tap  > **Done** to import all contacts.
- ④ To export to the micro-SIM, tap the contacts you want to export and tap **Done,** or tap  > **Done** to export all contacts.


Importing Contacts from microSDHC card or Exporting to microSDHC card

- 1 From the Contacts screen, press  > **Import/Export**.
- 2 Choose to import or export contacts. If you have more than one account set up on your phone, you will need to select the account to which you'd like to import contacts.

Note: Files will be saved to/pulled from the microSDHC card when one is inserted in the phone.

- For import, you should have vCard files saved on the microSDHC card. If there's more than one vCard file, choose to import one, multiple, or all vCard files. Tap the vCard file and tap **OK**.
- For export, select a vCard type and tap **OK** to create the file on the microSDHC card.

Creating a Contact

- 1 From the Contacts screen, tap  to add a new contact.
- 2 Tap **AT&T Address Book contact** to choose where to save the contact.
- 3 Enter the contact name, phone numbers, email addresses, postal addresses, and other information.
- 4 Tap **DONE** to save the contact.

18

Contacts



Adding a Contact to Favorites

- 1 From the Contacts screen, tap the contact you want to add to **Favorites**.
- 2 Tap  next to the contact's name.

Searching for a Contact

- 1 Tap the **Find contacts** field at the top of the Contacts screen.
- 2 Enter the contact name you want to search for. Matching contacts will be listed.

Creating a New Group

- 1 From the Contacts screen, tap .
- 2 Tap .
- 3 If you have added contact accounts other than the phone, select an account for the new group.
- 4 Enter the group name.
- 5 Tap **Add member** and select the contacts you wish to be the group members.
- 6 If desired, tap **Default** below **RINGTONE** or **NOTIFICATION RINGTONE** to set a special ringtone for incoming calls or messages from the group members.
- 7 Tap **DONE**.

To send messages to the group members, you can tap a group and then tap  > **Send group message**.

19

Contacts

Entering Text

When you tap a field that needs text or numbers, a keyboard automatically appears on the screen. Open the Notifications panel and tap **Choose input method** to change input method.

Google Keyboard

The Google keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape.

To use the landscape keyboard, from the home screen, press **☰** > **System settings** > **Display** > **Auto-rotate screen**.

Note: The landscape keyboard is not supported in all applications.



- Tap the alphabetic keys to enter letters. Tap and hold the keys to enter associated accented letters or numbers. For example, to enter É, tap and hold **E** and the available accented letters and number 3 appear. Then slide your finger to choose **É**.
- Tap **⇧** to use uppercase or lowercase letters. This key also changes to indicate the current case you are using: **⇧** for lowercase, **⇧** for uppercase, and **⇧** when locked in uppercase. Double tap **⇧** to lock the keyboard in uppercase.

20

Entering Text

- Tap **✕** to delete any text you have entered.

- Tap **123** to select numbers and symbols. You can then tap **=v>** to access more.

- Tap **😊** and then swipe to choose emoticons.

- Tap **🗎** to use Google's networked voice input.

- Tap and hold **🗎** and then release it to change the input language or the Google keyboard settings.

Google Voice Typing

Google Voice typing uses the Google voice recognition service to convert speech to text. You must have a data connection on a mobile or Wi-Fi network to use it.

- ① When entering text, open the Notifications panel and tap **Choose input method** > **Google voice typing**. Or tap **🗎** to access the voice-typing feature when you are using the Google keyboard.

- ② When you see **🗎**, speak what you want to type.

- ③ You can continue entering text to keep it or to delete it.

Tip: Say "comma," "period," "question mark," "exclamation mark," or "exclamation point" to enter punctuation.

TouchPal X Keyboard

The TouchPal X keyboard offers three layouts: **T26**, **T12**, and **T+**. To Switch the Keyboard Layout

- ① From the home screen, press **☰** > **System settings** > **Language & input** > **Default** > **TouchPal X**.

Entering Text

21

© On a screen with a TouchPal X keyboard, tap , choose the keyboard **T26**, **T12**, or **T+**.

The T26 Layout

- Tap the alphabetic keys to enter letters.
- Tap  to use uppercase or lowercase letters. Double tap  to lock the keyboard in uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Slide right on  to enable word prediction. Slide left on  to disable word prediction
- Tap  to enter digits, symbols, emoticons and other pre-defined texts. Tap  to find more. Tap  to go back to entering letters.
- Tap  to start a new line.
- Tap or hold  to delete text before the cursor.
- Tap  to access the quick settings, theme, or more settings of TouchPal X keyboard.
- Tap  to choose the keyboard.
- Tap  to use voice input.

- Tap  to open text editing options. You can select, cut, copy, paste, and delete text, or move the cursor.
- Tap  to access Twitter.

- Tap  to hide the on-screen keyboard. You can tap the text field again to show the keyboard.

The T12 Layout

Tap a key repeatedly until the desired letter or symbol appears. If word prediction is enabled (), just tap the keys once and choose the right word.



The T+ Layout

Tap to enter the left letter on the key; Double-tap to enter the desired letter/symbol on the key. If word prediction is enabled (), just tap the keys and choose the right word.



To Enable and Use TouchPal X Curve

- 1 On the TouchPal X keyboard screen, tap  and check the box next to **Curve**.
- 2 Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.

Note: TouchPal X Curve is only available in the **T26** layout.



Tips:

- To enter a single letter, tap it.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

Choosing Touch Input Settings

Choose the touch input settings by pressing  > **System settings** > **Language & input** from the home screen.

In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for input methods.

Messaging







Your SMS (text message) and MMS (multimedia message) are combined into one menu under .

Message Box

Instead of an inbox and outbox your phone organizes all messages you sent and received into one box, where messages exchanged with the same number are grouped into one message thread on the Messaging screen. You can tap a thread to see the conversation you have had with someone.


Message threads are sorted in chronological order with the latest one on top.

Sending a Message

- 1 From the home screen, tap .
- 2 Tap .
- 3 Enter the recipient's number or name in the **To** field. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient or tap  to access your contacts or call logs.
- 4 Tap the **Type message** field and enter your message.
 - Press  to insert a smiley, contact, or Quick Text.
 - If you are sending an MMS, tap  to attach a file to the message.
- 5 Tap  to send your message.

Note: Add an attachment to a text message and it will be converted into an MMS automatically. Likewise, if you remove all attachments from an MMS, it will automatically become a text message.

Changing Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, press  > **Settings** from the Messaging screen.

SMS Enabled: Change your default SMS app from Messaging to Hangouts.

Storage settings:

- **Delete old messages:** Delete old messages as limits are reached.
- **Text message limit:** Set the maximum number of text messages allowed in a single thread.
- **Multimedia message limit:** Set the maximum number of multimedia messages allowed in a single thread.

Text (SMS) message settings:

- **Manage SIM card messages:** Manage the messages stored on your SIM card.
- **Service Center:** Enables you to view and edit the service center number.

Multimedia (MMS) message settings:

- **Group Messaging:** Use MMS to send a single message when there are multiple recipients.
- **Auto-retrieve:** Automatically download multimedia messages.

Display settings:

- **Bubble and background:** Set the appearance of message bubble and background.

26

Messaging

Notification settings:

- **Notifications:** Show message notifications in the status bar.
- **Choose ringtone:** Choose a ringtone for your incoming messages.
- **Vibrate:** Make your phone vibrate when a new message arrives.

Signature settings:

- **Edit signature:** Edit your signature, which can be added automatically to outgoing messages.
- **Add signature:** Add the signature to all outgoing messages.

WAP push switch settings:

- **Enable WAP push receiving:** Allow your phone to receive WAP push.

Emergency alert settings:

- **Receive emergency alerts:** Choose the types of alerts you'd like to receive.
- **Notification for unread alerts:** Set a notification reminder for every 10 minutes.
- **Alerts notification preview:** Preview settings for alert tones and vibration cadence.


Messaging

27

Email

With the Email application, you can access your email from various providers, including Yahoo!® and Gmail.

Creating an Email Account

- ① From the home screen, tap  and select an email account type.
- ② Enter your email address and password.
- ③ Tap **Next** to let the phone retrieve the network parameters automatically.

Note: You can also enter these details manually by tapping **Manual setup** or when automatic setup fails.

- ④ Follow the on-screen instructions to finish the setup. Your phone will display your email inbox and start to download email messages.

Tip: To add more email accounts, open **Email** to get the Inbox screen and press  > **Settings** > **ADD ACCOUNT**.

Receiving Email

When you are in an email account, tap  to download recent emails.

You can adjust how often your account downloads new email by pressing  > **Settings** > **name of the account** > **Inbox check frequency**. Tap an option to select it.

Composing and Sending an Email




After creating an email account, you can compose and send email messages.

- ① From your inbox, tap .
- ② Tap the **To** field and enter the recipient's address or tap  to select a contact or group. When you enter the address, matching contacts on the phone will be displayed. Separate each recipient with a comma.

Tip: You can also press  > **Add Cc/Bcc** to add more recipients.

- ③ Enter the subject and the content of your email.
- ④ Press  > **Attach file** to add files to the email.
- ⑤ Tap **Send** to send the message.

Replying to or Forwarding an Email

- ① From your inbox, open the email you want to reply to or forward.
- ② Tap  or  to reply to or forward the email. You can also tap  to reply to all recipients of the email.
- ③ Enter the contents/recipients of your email.
- ④ Tap **Send**.

Deleting an Email Account

- ① From your inbox, press  > **Settings**.
- ② Tap the account you want to delete and then tap **Remove account**.

- ③ Tap **OK** to confirm. All email messages in the account will be deleted.

Email Settings

General settings apply to all email accounts you add.

- ① From your inbox, press  > **Settings** > **General**.
- ② Make the changes you want and press  when you're finished.

Connecting to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease. You can use default connection settings to connect to the web via your mobile network (GPRS/EDGE/3G/4G) or Wi-Fi. The GPRS/EDGE/3G/4G connection can be enabled/disabled manually. From the home screen, press  > **System settings** > **Mobile networks** and check or uncheck the **Data enabled** check box.

Adding a New GPRS/EDGE/3G/4G Connection


To get connected via GPRS/EDGE/3G/4G, you need a data plan with your service provider. If the GPRS/EDGE/3G/4G settings are not pre-configured on your phone, please contact your provider to get the necessary information.

- ① From the home screen, press  > **System settings** > **Mobile networks** > **Access Point Names**.
- ② Tap  to add new APN.
- ③ Tap each item to enter the information you receive from your service provider.
- ④ Press  > **Save** to complete.


Tip: To set the APN to default settings, press  > **Reset to default** > **Continue**.

Turning on Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet (90 meters).

Open the **Notifications panel** and tap  > **WI-FI**.

Connecting to a Wi-Fi Network

- ① From the home screen, press  > **System settings** > **Wi-Fi**. The Wi-Fi network points, or “hotspots,” that your phone has detected are displayed with their names and security settings.
- ② Tap a network to connect to it. If security features are implemented, you'll need to enter a password and then tap **Connect**.
- ③ To disconnect from a network, tap the network name and then tap **Forget**.




Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar. Or, go to the Wi-Fi screen and tap the name of the network that the phone is connected to. You can then check the network status from the pop-up window.

Browsing the Internet


 



Your phone has two options for Internet access. Use the Browser or Google Chrome to view web pages and search for information. From the home screen, tap .

Opening a Web Page

- Tap the address bar, enter the website you want to browse, and tap **Go**.
- Tap  beside the address bar or press  > **Bookmarks**. Tap a bookmark to open it.
- Press  > **Bookmarks**. Choose an item from the **HISTORY** tab or **SAVED PAGES** tab.

Browsing Options

While viewing most web pages, you can do the following:

- **Scroll:** Swipe the screen in any direction.
- **Zoom out:** Tap the screen or pinch two fingers together.
- **Zoom in:** Tap the screen or spread two fingers apart.
- **Go back:** Press  to return to the page you viewed previously.
- **Go forward:** Press  and tap **Forward**.
- **Refresh the page:** Tap .
- **Find text on the page:** Press  > **Find on page** and type the terms you want to search for.
- **Send the page URL to friends:** Press  > **Share page** and select how you want to send the URL.

• **Follow a link:** Tap a link on the web page to open it.

• **Save the page for offline reading:** Press  > **Save for offline reading**. To read saved pages, press  > **Bookmarks** > **SAVED PAGES**.



Opening Another Browser Window

You can have multiple windows open in the browser. While in the browser, tap  >  to open a new window. To view your open windows, tap . Tap  on a window to close it.

Using Bookmarks

To bookmark a web page, open it and tap , or press  and then tap **Save to bookmarks**. Give the bookmark a name and tap **OK**.

Editing a Bookmark

- 1 From the home screen, tap .
- 2 Press  > **Bookmarks**.
- 3 Tap and hold the bookmark you want to edit until the shortcut menu pops up.
- 4 Tap **Edit bookmark**.
- 5 Edit the name (Label) or location (Address), and then tap **OK** to save it.

Deleting a Bookmark

- 1 From the home screen, tap .
- 2 Press  > **Bookmarks**.

- 3 Tap and hold the bookmark you want to delete until the shortcut menu pops up.




- 4 Tap **Delete bookmark** > **OK**.

Changing Browser Settings

Press  > **Settings** from a browser window to change browser settings.

Using Google Chrome



Use Google Chrome to browse the Internet. Chrome on your ZTE Z667 can sync bookmarks, browsing history, and opened tabs from your Google account.

- 1 From the home screen, tap  > **Chrome**.
- 2 Read the terms of service and tap **Accept and continue**.
- 3 You can choose to **Sign in** to Chrome to sync it with your open tabs, bookmarks, history, and more from your computer. If you choose **No thanks**, you can sign in later via the Settings menu.
- 4 To enter a URL, tap the web address bar, enter an address and tap **Go**.
- 5 Scroll to navigate and tap links to open them. Use a pinching gesture to zoom out. Spread your fingers apart to zoom in. Press  to access additional settings.
- 6 To open a new browser tab, tap  > **New tab**.

Bluetooth

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 32 feet (10 meters). The Bluetooth devices must be paired before the communication is performed.

Using Bluetooth

- 1 Before you begin, place the Bluetooth device in pairing mode. From the home screen, press  > **System settings** and slide the **Bluetooth** switch to the **On** position to turn on Bluetooth. When Bluetooth is on, the  icon will appear in the status bar.
- 2 Tap **Bluetooth**. Your phone will automatically search for Bluetooth devices and will show all visible devices in range.
- 3 Tap the device you want to pair with.
- 4 If necessary, confirm that the Bluetooth passkeys are the same between the two devices and tap **Pair**. Alternately, enter a Bluetooth passkey and tap **Pair**.
Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

Notes:




- The Bluetooth passkey may be fixed for certain devices, such as headsets or hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device.

- To allow compatible Bluetooth devices to find your phone for pairing, tap **Z667** on the Bluetooth settings screen. Your device will be visible for 2 minutes.

Entertainment

Taking Pictures with Your Camera

Your phone has a 2-megapixel camera.

- ① From the home screen, tap .
- ② Zoom in or out by spreading/pinching two fingers or pressing either Volume Key. To change shot modes, tap  and select an option.
- ③ Tap  to take a picture. To view it, tap the picture thumbnail in the corner of the screen.

Adjusting Camera Settings

Before taking a photo, you can tap  to open the following camera settings.


Grid	Set the composition line to help you to aim the camera at the subject.
Self-timer	Set a time delay before the camera takes a picture automatically after you tap the shutter icon, or turn off this feature.
Auto-review	Set the lapse time for viewing a photo after you take it.
Picture size	Choose the size of the photo.
Shutter tone	Select a shutter tone or turn shutter tone off.

Sharing a Picture

- ① After taking a picture, tap the thumbnail in the corner of the screen, tap the screen, and then tap .
- ② Scroll through options to send via MMS messaging or email, Picasa™, and more.

Opening Your Gallery

Gallery helps you view pictures and play videos. You can also do some basic editing of your pictures, set them as wallpaper or contact photos, or share with friends.



- ① From the home screen, tap  >
- ② Tap an album.
- ③ Tap a photo or video to view it.



Number	Function
1	Tap to return to the album or thumbnails of all the pictures and videos in the album, which are displayed in a grid.
2	Swipe horizontally to see more; tap a picture to view it in full screen.
3	Delete, edit, share, or set the picture as contact photo, wallpaper, or lock screen wallpaper.

Number	Function
4	Rotate the photo, view details, rename the photo, or access slideshow settings.
5	Browse the album contents in a slideshow.

Shooting Video with Your Camcorder

- From the home screen, tap .
- Zoom in or out by spreading/pinching two fingers or pressing either volume key.
- Tap  to begin recording and  to stop.
- Tap the video thumbnail in the corner of the screen to view the video you've just taken.



Tip: Take a photo while recording by tapping .

Adjusting Your Video Settings

Before recording a video, you can tap  >  to open the following camcorder settings.


Video quality	Choose the video quality.
Time lapse	Set the lapse time for recording video.
Silent camcorder	Capture silent video clips.

Adjusting Other Settings

You can tap  >  to open the following additional settings.


Geo-tagging	Choose to store location information with each photo you take.
Restore defaults	Restore default camera and camcorder settings.

Sharing a Video

- 1 After recording a video, tap the thumbnail in the corner of the screen and then tap .
- 2 Scroll through options to send via MMS messaging or Gmail, Picasa, and more.

Playing Your Videos

From the home screen, tap  > **Video Player**. This will open your video library and show the video files saved in your memory card. Tap a video file to start playing.

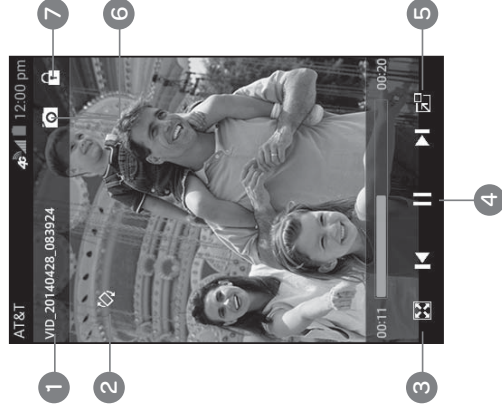

Number	Function
1	Video name.
2	Rotate the video.
3	Crop or fit the video to the screen.
4	Pause or resume playback.
5	Use video pop.
6	Tap to take a photo.
7	Tap to lock the screen.

Adding Music to Your Phone

You can add music to your phone's internal storage or to a removable microSDHC card (see *Phone Setup*).


Note: Steps may vary depending on your operating system.

- 1 Connect your phone to your computer with a USB cable.
- 2 Tap **Media device (MTP)**.
Note: If you have a microSDHC card in your phone, you may be presented with additional options.
- 3 On your PC, choose to view files through Windows Explorer. If you have a Mac, visit <http://www.android.com/filetransfer> to download the necessary software.
- 4 Choose whether you want to add files to your phone's internal storage or to the microSDHC card, and then drag and drop the files you want to transfer.
- 5 When you're finished transferring files, open the Notifications panel and tap **Connected as a media device > Charge only**. You may now safely disconnect your phone from the computer.

Playing Your Music

You can play the audio files stored in your phone's microSDHC card in Music.

- From the home screen, tap **Music** to access the music player.
- Select **Songs/Playlists/Folders/Albums/Artists/Genres** to find the songs you want to play.
- Tap an item from the list to start playing.
- Adjust the volume with the **Volume Keys**.

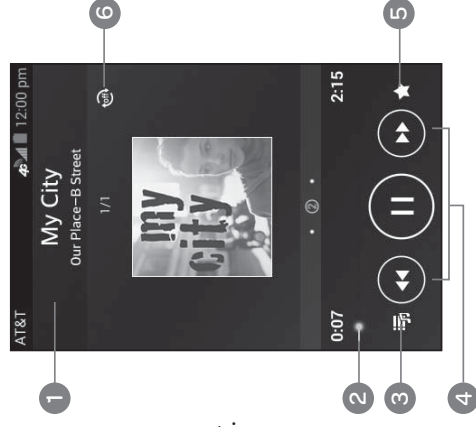

Number	Function
1	Song and artist information.
2	Drag the slider to jump to any part of the song.
3	Tap to open the current playlist.
4	Skip songs or pause and resume playback.
5	Add to Favorite playlist.
6	Tap to play the current playlist in shuffle mode, where tracks are played in random order; Tap to toggle repeat mode.

Creating Playlists

Playlists help you organize your music files.

- Tap **+** next to the song in the music library.
- Tap **Add to playlist**.
- Tap **New**.
- Type the playlist name and tap **Save**.

Managing Playlists

- Tap the **Playlists** tab in the music library to see your playlists.
- Tap **+** next to a playlist.
- Tap **Play**, **Add to favorites**, **Rename Playlist**, or **Delete Playlist**.

Adding a Song to a Playlist

- Tap **+** next to the song in the music library.
- Tap **Add to playlist**.
- Tap a playlist.

Setting a Song as Ringtone

- Tap **+** next to the song in the music library.
- Tap **Use as ringtone**.
- Tap **Phone Ringtone** or **Notification Ringtone**.


Making Memorable Memos

Sound Recorder enables you to record your voice memos.

- 1 From the home screen, tap  > **Sound Recorder**.
- 2 Tap  to start recording.
- 3 Tap  to stop recording or tap  > **OK** to cancel recording.
- 4 Tap  to play the memo.

Tip: You can find your recordings by tapping **My recordings**.




Play Any Saved Memo

- 1 From the home screen, tap  > **Sound Recorder**.
- 2 Tap **My recordings**.
- 3 Tap the title of a memo to play it.


Note: You can also tap  next to the memo to delete, share, rename, tag, trim, view file details, or use as a ringtone.

Applications


Clock

- 1 From the home screen, tap  > **Clock** > **Alarm**.
- 2 Tap a default alarm to configure it or tap  to create a new alarm.
- 3 Set up the alarm options, such as time, repeat, alarm sound, and label.
- 4 Tap **SAVE** to save and exit.
- 5 Tap  next to an alarm to turn on the alarm.

Calculator


From the home screen, tap  > **Calculator**.

You can also turn the phone to landscape to see all of the calculator buttons.

Tip: Tap  to access the Tip Calculator.

File Manager

From the home screen, tap  > **File Manager**. The folders are organized by category, phone storage, and SD card.

- Tap folders and files to access stored items.
- Tap and hold a file for options such as delete, share, copy, and move.
- Tap **Phone** or **SD Card** and then tap  to create a new folder in the current directory.


Kingsoft Office

Create, view, and edit Word documents, PowerPoint presentations, spreadsheets, and other types of files. From the home screen, tap  > **Kingsoft Office**.

Tip: Tap  and scroll to view options.


Note

From the home screen, tap  > **Note** to save and view your text notes.

- 1 Tap a note type.
- 2 Tap  to create a new note.
- 3 Enter your text and tap **Save** to save it.
- 4 Tap a note to view it. You can also edit, delete, share, or export it.

Task Manager

From the home screen, tap  > **Task Manager** to view or stop applications.

- Tap a task in the **Tasks** tab to force stop or disable the app, uninstall the app, clear data and cache, or move the app between the internal storage and the memory card; or tap  next to a task to close it.
- Tap the **Apps** tab to manage all the apps on your phone.
- Tap the **Resources** tab to view the real-time system resources information.

Tip: If your phone is running slow, close applications you are not using by pressing and holding  and swiping left or right on applications you wish to close.

Timer

From the home screen, tap  > **Clock** > **Stopwatch** or **Countdown**.

Note: You can set up to 20 laps with the stopwatch.

World Time

From the home screen, tap  > **Clock** > **World time** to check local time for cities around the world. Tap  at the bottom to add a new city or country.

Twitter

- 1 From the home screen, tap  > **Twitter** and sign up for or sign in to your account.
- 2 Tap  to compose a tweet.

Google Applications

Signing in to your Google account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. If you don't have an account, you can easily create one.

- ① Tap a Google application that needs a Google account, such as Gmail or Google+.
- ② If you've got a Google account, tap **Existing**. Enter your user name and password and then tap . (Or tap **New** if you don't have a Google account.)
- ③ Read the instructions and tap **OK**.
- ④ Set the backup and restore option and tap .

Google Search and Google Now

Find whatever you're looking for with Google Search. Google Now tailors your search options over time, learning your preferences and making more accurate predictions for your needs. Google Now will also keep track of what you're doing and appear when you need it, like showing the next appointment on your calendar and what the traffic is like to get to it.

Performing a Search




From the home screen, tap  > **Google**. You can type in search terms, or say "Google" to begin a voice search.

You will see results for your search. To search images, places, and more, tap an option on the bar at the bottom of the screen. For additional web results, simply scroll down the screen.

Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web.

Creating and Sending an Email Through Gmail

- ① From the home screen, tap the **Google** folder > **Gmail**.
- ② Tap  to compose.
- ③ Enter an email address in the **To** field. If you're sending the email to several people, separate the email addresses with commas. You can add as many recipients as you want.
- ④ Enter the email subject, and then write your email. To add an attachment, press  > **Attach file**.
- ⑤ Tap  to send your email.

Adding Another Account

- ① From the home screen, press  > **System settings** > **Add account** > **Google**.
- ② Choose to add an existing account or create a new one and follow on-screen instructions to finish account setup.

Accessing Account Settings



- ① From your Gmail inbox, tap  > **Settings**.
- ② Tap an account name, or tap **General settings** to change settings for all accounts.

Google Play Store

Google Play Store gives you access to thousands of free and paid apps, games, books and magazines, music, and movies. From the home screen, tap  > **Play Store**.

Navigating Google Play Store

From Play Store, you will have multiple ways to search for apps, games and more.

- ① Tap a category to browse popular apps, games, movies, books, and music organized by popularity or category.
- ② Tap  to search the Play Store for a specific item, such as a game or app.
- ③ To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in the App tray .

Note: A Google Wallet™ payment method is required to purchase apps.

Adding a Password

Help prevent unauthorized app purchases by requiring a password.

- ① While in Google Play, tap  > **Settings** > **Require password for purchases**.
- ② Tap an option, enter a password, and tap **OK**.

Using Google Calendar

From the home screen, tap **Calendar** to use Google Calendar, Google's time management application. You can use the calendar to schedule appointments, including meetings and other events. Your appointments will be displayed on the screen as they are scheduled. You can also synchronize appointments to your Google account, which enables you to manage your schedule online on your PC.

Accessing Calendar Settings

- ① While in the calendar, press  > **Settings**.
- ② Tap an account name, or tap **General settings** to change settings for all accounts.

Google Maps

Find local businesses, view maps, and get driving directions.

- ① From the home screen, tap the **Google** folder > **Maps**. Your phone will find your location and display it on the screen.
- ② Search for addresses and businesses by tapping  and typing in keywords.
- ③ Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Google Maps, find out how to get there, or call the business.

Google Music

You can access up to 20,000 songs from your music collection by storing them in the cloud. You can also purchase music through Google Play with this app.

From the home screen, tap the **Google** folder > **Play Music** to access Google Music.

The app searches your online library and your phone for music and playlists before displaying your combined music library, organized by **GENRES**, **ARTISTS**, **ALBUMS**, and **SONGS**. You can tap  > **My Library** to view your library or tap  > **Playlists** to view existing playlists.

Google+

Connect with friends and family via Google's social networking site. Set up circles to organize people into groups for sharing content. Create hangouts for group video chats, upload photos and videos, and much more.

Hangouts

With Google Hangouts, you can bring groups of friends together into a simple group conversation with text, photos, and video chat.

Play Newsstand

Tap the **Google** folder on in the home screen and select **Play Newsstand** to access the digital magazines you have purchased from the Google Play Store.

Voice Search

Find what you're looking for by speaking your search terms into your phone.

YouTube

View videos and share your own with your friends, family, and the world.

Phone Settings

Mobile Network Services

From the home screen, press  > **System settings** > **Mobile networks** to enable or disable data service, allow data services when roaming, or set access point names for data access.

Note: Data roaming may incur significant roaming charges.

Sound Settings

From the home screen, press  > **System settings** > **Sound** to adjust volumes, toggle sound and mute, set up ringtone and notification sound, and select system sounds.

Tap **Silent mode** to turn off all sounds except media and alarm, or enable silent mode with vibration.

Display Settings

You can adjust your phone's display settings. From the home screen, press  > **System settings** > **Display**.

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Select a background image for the home screen or lock screen.
- **Auto-rotate screen:** Change the orientation of some on-screen content based on the position of the phone.
- **Sleep:** Set the length of time of inactivity before the screen turns off.
- **Daydream:** Set colors, photo frame, or photo table.
- **Font size:** Set the font size of the text on the screen.

- **Pulse notification light:** Flash the notification light to notify you of missed calls and other events.

- **Cast screen:** Access the casting screen.

- **Touch key navigation light duration:** Set the backlight duration of the touch keys.

Setting Date and Time

- ① From the home screen, press  > **System settings** > **Date & time**.
- ② Uncheck the **Automatic date & time** and **Automatic time zone** check boxes if you want to set the time, date, and time zone by yourself.
- ③ Set date, time, time zone, and date/time format.

Language Settings

You can change the language of your phone system in two simple steps.

- ① From the home screen, press  > **System settings** > **Language & input** > **Language**.
- ② Tap a language to select it.

Managing Your Device Memory

From the home screen, press  > **System settings** > **Storage**. You can view the space information of the microSDHC card as well as the phone storage.

- **Unmount/Mount SD card:** You can unmount the microSDHC card to safely remove it, or mount the card.
- **Erase external SD card:** Erase all data on the microSDHC card.

Managing Applications

From the home screen, press  > **System settings** > **Apps** to see apps installed on your phone and manage them.

Tap an app in the **Downloaded, On SD Card, Running, or All** tabs to see its information. You can stop the app, uninstall the app, clear data and cache, or move the app between the internal storage and the memory card.

Note: Not all applications can be moved or uninstalled.

From the home screen, press  > **System settings** > **Security** and check the **Unknown sources** check box if you want to install applications from sources other than Google Play Store.

Note: Installing applications from unknown sources may compromise your phone and personal data.

Make sure that you select an application developed for your phone and processor type before installing it.

① Copy the application file to the microSDHC card and install the card on your phone.

② From the home screen, tap  > **File Manager**, and open the folder where the application file is.

③ Tap the file to start installation.

④ Read the installation instructions that come with the application and follow them to complete the setup.

Security Settings

Protect your phone and micro-SIM card from unauthorized use.

Protecting Your Phone with a Screen Unlock Pattern

Creating your screen unlock pattern

① From the home screen, press  > **System settings** > **Security** > **Screen lock** > **Pattern**.

② With a finger, draw your pattern and tap **Continue**.

③ Draw the pattern again and tap **Confirm**.

Tip: Uncheck the **Make pattern visible** check box if you want to hide the pattern as you draw it on the screen.

④ Press the **Power Key** to lock the screen.

Unlocking the Screen with Your Pattern

① Press the **Power Key** to wake up the screen.

② Draw the pattern you set to unlock the screen.

If you make a mistake, your phone will ask you to try again.


Cannot Recall Your Screen Unlock Pattern?

You have up to five attempts to unlock your phone. If you still cannot recall the screen unlock pattern, tap **FORGOT PATTERN?** and enter your Google account user name and password to reset the screen unlock pattern.

Note: You must sign in or create a Google account on your phone before using the preceding method to reset the pattern.

Protecting Your Phone with a PIN or Password

Creating a PIN or Password

- ① From the home screen, press  > **System settings** > **Security** > **Screen lock**.
- ② Tap **PIN** or **Password**.
- ③ Enter a numeric PIN or any password you like, and tap **Continue**.
- ④ Enter it again and tap **OK** to confirm.

Unlocking the Screen with Your PIN or Password

- ① Press the **Power Key** to wake up the phone.
- ② Enter the PIN or password you set.
- ③ Tap **OK**.

Cannot Recall Your PIN or Password?

You have up to five attempts to unlock your phone. If you still cannot recall the PIN or password, you will need to either contact your carrier for the PUK (PIN Unlock Key) code for the device or return it for service.

Disabling Screen Lock Settings

If you have created an unlock pattern, PIN or password, you can disable it.



- ① From the home screen, press  > **System settings** > **Security** > **Screen lock**.
- ② Draw the screen unlock pattern or enter the PIN/password you have created.

- ③ Tap **None**.

Setting Up Credential Storage

This lets you select applications to access secure certificates and other credentials.

Enabling Secure Credentials

- ① From the home screen, press  > **System settings** > **Security**.
 - ② Tap **Install from SD card** to install certificates from your microSDHC card.
- ### Deleting Secure Credentials
- ① From the home screen, press  > **System settings** > **Security**.
 - ② Tap **Clear credentials** > **OK** to clear credentials.

Factory Reset

Reset your phone to factory default settings. All your personal data from the phone's internal storage will be erased, including your Google account, system and app data and settings, and downloaded apps. You can also erase the data on the memory card during the process.

From the home screen, press  > **System settings** > **Backup & reset** > **Reset to factory** > **Reset phone** > **Erase everything**.

WARNING! All your personal information and downloaded applications on your phone will be erased after resetting the phone.

Managing Other Settings

Search Settings

From the home screen, tap  > the **Google** folder > **Google** > **Settings**.

You can set searchable items.

Voice Interaction

From the home screen, press  > **System settings** > **Language & input** > **Voice Search** or **Text-to-speech output** to set text-to-speech and voice recognition options.

Accessibility

From the home screen, press  > **System settings** > **Accessibility** to configure options for accessibility-related applications.

TalkBack: Device provides spoken feedback, such as describing what you touch, select, and activate, to help blind and low-vision users.

Captions: Enable or disable captions.

Magnification gestures: When this feature is turned on, you can zoom in and out by triple-tapping the screen.

Large text: Use large font size.

Power button ends call: When enabled, you can press the **Power Key** to end phone calls without turning the screen off.

Auto-rotate screen: Change the orientation of some on-screen content based on the position of the device.

Speak passwords: Check this box to enable the speak passwords function.

Accessibility shortcut: Enable this option to get spoken feedback when you tap the screen or press a key.

Text-to-speech output: Change settings for text to speech and adjust the rate at which your phone speaks, to help blind and low-vision users.

Touch & hold delay: Select the time delay for the phone to distinguish finger tap and hold gestures.

AT&T Software Update


















From the home screen, press  > **System settings** > **AT&T Software Update**. You can check your system's software version, check for updates, or continue update.

About Phone

From the home screen, press  > **System settings** > **About phone** to check system updates, phone status and battery use, or view legal information and software version.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at gas stations.
	Keep your phone at least half an inch (10 mm) away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Don't dispose of your phone in a fire.
	Your phone can produce a loud sound.		Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don't rely on your phone for emergency communications.		

FCC Regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States, Industry Canada of Canada.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 0.4 inches (10 mm). Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. **The SAR limit set by the FCC is 1.6 W/kg, and 1.6 W/kg by Industry Canada.**

This device is complied with SAR for general population / uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and Canada RSS 102, and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C, and Canada RSS 102. This device

has been tested, and meets the FCC, IC RF exposure guidelines when tested with the device directly contacted to the body.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on **FCC ID: SRQ-Z667**.

For this device, the highest reported SAR value for usage against the head is **1.31 W/kg**, for usage near the body is **1.43 W/kg**.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 0.4 inches (10 mm) between the unit and the human body. Carry this device at least 0.4 inches (10 mm) away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 0.4 inches (10 mm) between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing

68

For Your Safety

aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings.

(Note that not all hearing devices have telecoils in them.)

Your phone meets the M3/T4 level rating.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

CTIA

- a) Do not disassemble or open crush, bend or deform, puncture or shred.
- b) Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.

For Your Safety

69

- c) Only use the battery for the system for which it is specified.
- d) Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- e) Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- f) Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- g) Promptly dispose of used batteries in accordance with local regulations.
- h) Battery usage by children should be supervised.
- i) Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- j) Improper battery use may result in a fire, explosion or other hazard.
- k) The phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

For those host devices that utilize a USB port as a charging source, the host device's user manual shall include a statement that the phone shall only be connected to CTIA certified

adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.

- Do not expose your phone or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw, or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 23°F and maximum 122°F (minimum -5°C and maximum +50°C).
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.


Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

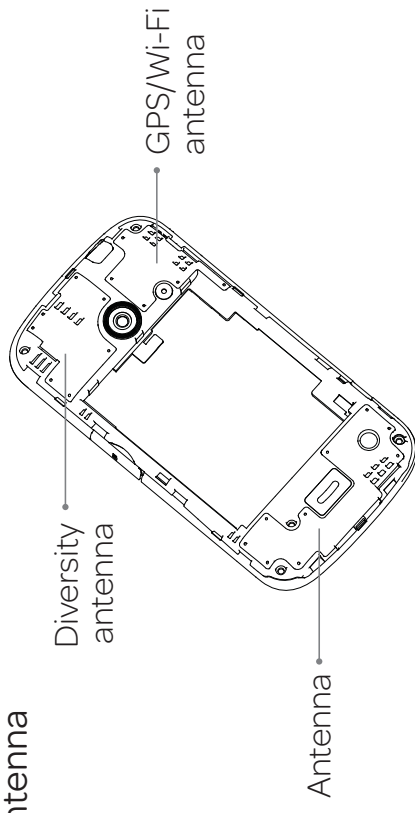

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom toward your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Store the phone safely before driving your vehicle.

Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the keys lightly.
- Use the special features that are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* stereo headsets or other audio devices.

74

For Your Safety

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

For Your Safety

75

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 cm) be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics, or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

76

For Your Safety

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted with power off "two-way radios" or "electronic devices" notices to avoid interfering with blasting operations.

For Your Safety

77

Specifications

Handset specifications are shown in the following table.

Handset standards	GSM 850/1900MHz UMTS 850/1900MHz
Dimensions (LxWxH)	4.57"(L) x 2.44"(W) x 0.47"(H)
Weight	4.06 oz.
Display	3.5" HVGA 480 x 320
Camera	2.0 megapixels
Video capture	Up to 30 fps (VGA)
Removable memory card	Up to 32 GB microSDHC card
Battery	1,500 mAh
Features	Bluetooth, Wi-Fi Direct®, Google Maps, Kingsoft Office, Email, Browser, Play Store, YouTube, Twitter, Chrome, Gmail, Google, Google+, Play Music, Voice Search
Supported file types	AAC, M4A, AMR, MID, MP3, WAV, OGG
Continuous idle time	Up to 360 hours
Continuous talk time	Up to 4 hours
Charge time	4 hours
WAP browser version	Webkit 537.36

Warranty

ZTE offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end user purchaser of the Product and provided that your purchase was made from a supplier authorized by the Seller. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States.

1. This product or phone is warranted for 12 (twelve) months from date of purchase.
2. For warranty service information, please call ZTE service number (877) 817-1759 (Toll Free). The manufacturer's website, <http://www.zteusa.com>, is also available for assistance.
3. This warranty only applies if the product has been used in accordance with the manufacturer's instructions under normal use and with reasonable care.
4. What this warranty does not cover:
 - a) Defects or damages resulting from the misuse of this product.

- b) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture, dampness or corrosive environments, unauthorized modifications, unauthorized repair, neglect, rough handling, abuse, accident, alteration, improper installation, incorrect voltage application, food or liquid spillage, acts of God.
- c) Normal wear and tear.
- d) If the Product has been opened, modified or repaired by anyone other than a warranty service center or if it is repaired using unauthorized spare parts.
- e) If the serial number or mobile accessory date code has been removed, erased, defaced, altered or are illegible in any way subject to sole judgment of ZTE.

LIMITED WARRANTY

TO THE EXTENT PERMITTED BY APPLICABLE LAW, THIS LIMITED WARRANTY IS YOUR SOLE AND EXCLUSIVE REMEDY AGAINST ZTE AND ZTE'S SOLE AND EXCLUSIVE LIABILITY IN RESPECT OF DEFECTS IN PRODUCT. HOWEVER, THIS LIMITED WARRANTY SHALL NOT EXCLUDE NOR LIMIT ANY OF YOUR LEGAL (STATUTORY) RIGHTS UNDER THE APPLICABLE NATIONAL LAWS.

TO THE EXTENT PERMITTED BY APPLICABLE LAW ZTE DOES NOT ASSUME ANY LIABILITY FOR LOSS OF OR DAMAGE TO OR CORRUPTION OF DATA, FOR ANY LOSS OF PROFIT, LOSS OF USE OF PRODUCTS OR FUNCTIONALITY, LOSS OF BUSINESS, LOSS OF REVENUES OR LOSS OF ANTICIPATED PROFIT,

INCREASED COSTS OR EXPENSES OR FOR ANY INDIRECT, OR SPECIAL OR CONSEQUENTIAL LOSS OR DAMAGE. TO THE EXTENT PERMITTED BY APPLICABLE LAW, ZTE'S LIABILITY SHALL BE LIMITED TO THE PURCHASE VALUE OF THE PRODUCT. THE ABOVE LIMITATIONS SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CAUSED BY DEFECT OF PRODUCT IN MATERIAL, DESIGN AND WORKMANSHIP.

How to Get Warranty Service

To obtain warranty service, please call (877) 817-1759. Please have the following information available when you send the phone in for repair:

- A valid Proof of Purchase
- Return address
- Daytime phone number or fax number
- Model #
- IMEI # (Look for the 15-digit IMEI # behind the battery of the device.)
- Complete description of the problem
- Transportation prepaid

Other Warranty Programs

You may have other warranty programs with your purchase, such as warranty exchange. If so, please refer to equipment package or the original point of sale.

Notes