



Hydro^o|AIR

User Guide

Table of Contents

1 Phone Basics	6	Call a Number with Pauses	22
Phone Overview	6	Call Using a Speed Dial Number	22
Key Functions	7	Call Using the Plus (+) Code Dialing	22
Get the Phone Ready	8	Call Using Internet Call	23
Charge the Battery	8	Receive Phone Calls	23
Replace the SIM Card	8	Answer an Incoming Call	23
Optional: Insert the MicroSD Card	9	Mute the Ringtone	23
Turn the Phone On and Off	10	Send an Incoming Call to Voicemail	24
Turn the Phone On	10	Reject a Call and Send a Text Message	24
Turn the Phone Off	10	Visual Voicemail	24
Turn the Screen On and Off	10	Set Up Visual Voicemail	24
Turn the Screen On and Start	10	Retrieve Your Voicemail Messages	24
Turn the Screen Off When Not in Use	10	Voice Mail (Traditional)	24
Setup Wizard	10	Set Up Voicemail	24
Touchscreen Navigation	10	Voice Mail Notification	25
Function Buttons	13	Retrieve Your Voicemail Messages	25
Home Screen	13	Phone Call Options	25
Home Screen Overview	13	In-Call Options	25
Manage the Home Screens	14	Call Waiting	25
Weather	15	Conference Calling	26
Status Bar	16	Call Settings	26
2 Text Entry	19	Phone Ringtone	26
Touchscreen Keyboard	19	Dial Pad Touch Tones	26
Google Keyboard	19	DTMF Tones	26
Google Voice Typing	20	Vibrate When Ringing	26
Tips for Editing Text	20	Incoming Call	27
3 Phone Calls	21	Voicemail	27
Make Phone Calls	21	Quick Responses	27
Call Using the Phone Dialpad	21	Call Rejection	27
Call from Recent Calls	21	Fixed Dialing Numbers (FDN)	27
Call from Contacts	21	Call Forwarding	28
Call an Emergency Number	21	Additional Settings	28
Enhanced 9-1-1 (E911) Information	22		

Caller ID	28	Text Messaging and MMS	41
Call Barring	28	Compose Text Messages	41
TTY Mode	28	Send a Multimedia Message (MMS) ..	41
Auto Answer	29	Save and Resume a Draft Message ..	42
Call Timer	29	New Messages Notification	42
Recent Calls	29	Text and MMS Settings	43
View Recent Calls	29	Social Networking Accounts	44
Recent Calls Options	29	Facebook	44
Filter Recent Calls	29	Google+	44
Delete Recent Calls	29	YouTube	44
4 Contacts	31	Hangouts	45
Display Contacts	31	6 Apps and Entertainment	46
Add a Contact	32	Google Play Store App	46
Save a Phone Number	32	Find and Install an App	46
Edit a Contact	33	Create a Google Wallet Account	46
Add a Group Contact	34	Request a Refund for a Paid App	46
Edit a Group Contact	35	Open an Installed App	47
ICE (In Case of Emergency)	35	Uninstall an App	47
Synchronize Contacts	36	Navigation	47
Share a Contact	36	Google Maps	47
5 Accounts and Messaging	37	Music	48
Gmail	37	Music Player	48
Create a Google Account	37	Google Play Music	49
Sign In to Your Google Account	37	7 Web and Data	51
Access Gmail	37	Wi-Fi	51
Send a Gmail Message	38	Turn Wi-Fi On and Connect to a	
Read and Reply to Gmail Messages ..	38	Wireless Network	51
Gmail Account Settings	38	Check the Wireless Network Status ...	51
Delete a Gmail Account	39	Connect to a Different Wi-Fi	
Email	39	Network	51
Add an Email Account	39	Data Connection Status and	
Compose and Send Email	39	Indicators	52
View and Reply to Email	40	Virtual Private Networks (VPN)	52
Manage Your Email Inbox	40	Prepare Your Phone for VPN	
Email Account Settings	40	Connection	52
Delete Email Accounts	40	Install Security Certificates	52

Add a VPN Connection	52	World Clock	66
Connect to or Disconnect from a VPN	52	Calculator	66
Web Browser	53	Sound Recorder	67
Launch Web Browsers	53	Voice Search	67
Learn to Navigate Web Browser	53	Eco Mode	68
USB Tethering and Mobile Hotspot	54	Bluetooth	68
USB Tethering	54	Turn Bluetooth On or Off	68
Bluetooth Tethering	54	The Bluetooth Settings Menu	68
Mobile Hotspot	54	Disconnect a Bluetooth Device	68
8 Camera and Video	56	Send Information from Your Phone to Another Device	68
Take Pictures	56	Receive Information from Another Device	69
Open the Camera App	56	microSD Card	70
Close the Camera App	56	Insert a microSD Card	70
Viewfinder Screen	56	Remove a microSD Card	70
Take a Picture or Record a Video	56	View the microSD Card Memory	70
Review Screen	57	Unmount the microSD Card	70
Camera and Video Settings	57	Format the microSD Card	70
Choose Camera Settings	57	Use the Phone's microSD Card as a Media Device	71
Choose a Shooting/Recording Mode	59	10 Settings	72
View Pictures and Videos Using Gallery	60	Access to Phone's Settings Menu	72
Work with Pictures	60	Wireless & Networks Settings	72
Share Pictures and Videos	61	Wi-Fi	72
9 Tools and Calendar	63	Bluetooth	72
Calendar	63	Data Usage	72
Add an Event to the Calendar	63	Airplane Mode	73
Calendar Event Alerts	63	Default SMS App	73
Edit Calendar Events	64	Tethering & Mobile Hotspot Settings	73
Erase Calendar Events	64	VPN Settings	73
Clock	65	Cellular Networks Settings	74
Desk Clock	65	Emergency Alerts	74
Alarm	65	Device Settings	75
Stopwatch	66	Display Settings	75
Timer	66	Sound & Notification Settings	76


Storage Settings	78
Usage Manager.....	78
Battery Settings.....	79
Connectivity Settings	79
Apps Settings	79
Personal Settings.....	79
Location Settings	79
Lock Screen Settings.....	80
Security Settings	81
Accounts Settings	82
Language & Input Settings	83
Backup & Reset Settings	85
System Settings	85
Date & Time Settings	85
Accessibility Settings	86
Printing	88
About Phone	88
11 Get Help.....	89
Customer Support.....	89
Qualified Service.....	89
12 Notes	90
Index.....	91
Copyright Information	95

1 Phone Basics

Phone Overview




Key Functions

 **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.

- **Front Camera** takes pictures and records videos while facing the screen, and allows you to video conference.
- **Proximity Sensor/Light Sensor** detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call.
- **Earpiece** lets you hear the caller and automated prompts.
- **Touchscreen** displays all the information needed to operate your phone. Use finger gestures to navigate and interact with items on the screen.
- **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
- **Secondary Microphone** suppresses background noise improving audio quality for the other party during voice calls except in speakerphone mode.
- **Power Button** lets you turn the phone on/off, turn the screen on/off, or switch your phone to silent mode, vibration mode, or airplane mode. Press and hold for more than 10 seconds to restart the phone.

- **Charger/USB Port** allows you to connect the micro-USB cable (included) to charge the battery or to transfer files to and from a computer.

- **Primary Microphone** transmits your voice and ambient sound during voice calls, voice recordings and videos.

 **Note:** Do not cover the microphones during a call as it may compromise the hearing quality.

- **Flash** helps illuminate subjects in low-light environments when taking a picture or recording a video.
- **Back Camera** lets you take pictures and videos.
- **SIM Card Holder** (Internal) holds the nano SIM card.
- **microSD Card Holder** (Internal) holds an optional microSD card to provide external memory.
- **Speaker** lets you hear the different ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
- **Internal Antennas** facilitate reception and transmission. To maximize performance, do not obstruct while using the phone.
- **Volume Button** allows you to adjust the ringtone or media volume when you are not on a call, or adjust the voice volume during a call.

Get the Phone Ready

You need to insert a SIM card into your phone and charge the battery to begin setting up your phone.

Charge the Battery

1. Plug the smaller end of the micro-USB cable into the phone's charger/USB port.



 
2. Plug the other end of the USB cable into the charger and then plug the charger into an electrical outlet.

Note: Your phone's battery should have enough charge for the phone to turn on and find a signal, set up voicemail, and make a call. You should fully charge the battery as soon as possible.


Replace the SIM Card

Your phone comes with the SIM card already installed. If you need to replace your SIM card, follow these steps.

1. Insert your fingernail into the slit at the bottom of the back cover and lift the cover up gently.
2. Open the SIM/microSD card holder cover, located on the upper right side of the phone.

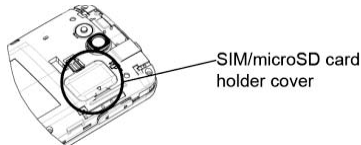


 3. Slide the flap of the SIM card holder in the direction of the arrow to unlock it (1). Lift the flap (2) and then remove the original SIM card (3).

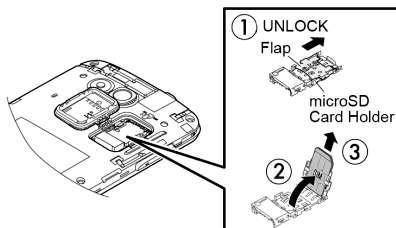


CAUTION! Do not twist the flap or it may break off.

 4. Insert the new nano SIM card into the flap of the SIM card holder, making sure the cut-off corner is at the top right and the card is inserted behind the SIM guide tabs (④).

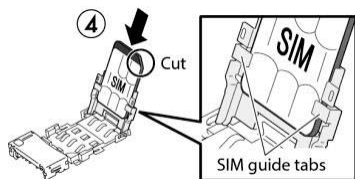

 5. Slide SIM card fully into SIM card holder flap until bottom of SIM card contacts bottom of SIM socket. Lower the flap of the SIM card holder (⑤) and slide the flap in the direction of the arrow to lock it (⑥). Bottom of SIM card should rest against stopper (⑦).

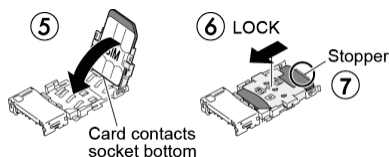

- ⚠ **CAUTION!** To avoid damage when handling the flap of the SIM card holder, do not use high pressure or force.

 
6. Close the SIM/microSD card holder cover and replace the back cover.

⚠ **Warning:** To ensure that your phone is waterproof, make sure the SIM/microSD card holder cover is properly sealed.

Optional: Insert the MicroSD Card

⚠ **Note:** The microSD card is optional.

1. Remove the back cover and open the SIM/microSD card holder cover
2. Insert the microSD card into the microSD card holder with the gold contacts facing down. Gently push the card in until it snaps into place.

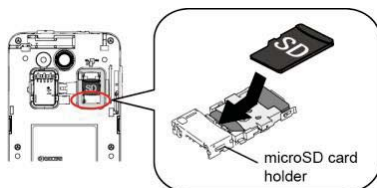

3. Close the SIM/microSD card holder cover and replace the back cover.

⚠ **Warning:** To ensure that your phone is waterproof, make sure the SIM/microSD card holder cover is properly sealed.

Turn the Phone On and Off

Turn the Phone On


- ▶ Press and hold the **Power Button** .


Turn the Phone Off

- ▶ Press and hold the **Power Button**  and tap **Power off** > **OK**.

Turn the Screen On and Off

Turn the Screen On and Start

1. Press the **Power Button** .
2. From the Lock screen:
 - (↑) Swipe up anywhere on the screen to access the Home screen.
 - (📞) Swipe right to launch the Phone app.
 - (📷) Swipe left to launch the Camera app.

 **Tip:** To set up a screen lock for security, see “Lock Screen Settings” on page 80.

Turn the Screen Off When Not in Use

- ▶ Press the **Power Button** .

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle.

You will still be able to receive messages and calls while the phone’s screen is off. For information on how to adjust the time before the screen turns off, see “Sleep” on page 75.

Setup Wizard

Your phone has a Setup Wizard to set up your phone quickly and easily. When you turn on your phone for the first time, the Setup Wizard starts automatically.


The Setup Wizard consists of the following sections:

- Google account setup
- Sign in to Social Network

Follow the onscreen instructions to quickly set up your phone.

Touchscreen Navigation

Your phone’s touchscreen lets you control actions through a variety of tap gestures.

 **Warning:** Do not touch with a pen or stylus. It may damage the touchscreen.

Tap

Tap the screen with your finger to select or launch a menu, option, or application. A light tap works best.



Drag

Touch and hold your finger before you start to move it. Do not release your finger until you have reached the target position.



Touch and Hold

To open the available options for an item (for example, a keyboard), touch and hold the item.



Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.



 
Flick

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes.




Pinch and Spread


Pinch the screen using your thumb and forefinger to zoom out or spread the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

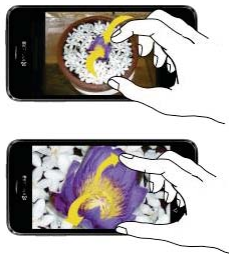

Rotate

 For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger keyboard.

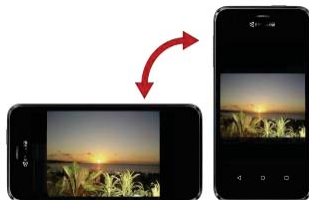


Note: The Auto-rotate feature needs to be turned on for the screen orientation to automatically change. To turn this on or off, from the Home screen, tap **Apps**  > **Settings** > **Accessibility** > **Auto-rotate screen**.

Function Buttons

At the bottom of touchscreen, you will find a row of three buttons that let you perform specific functions.

 - **Back** (◀) - Tap to return to the previous screen, or close a dialog box, options menu, the Notifications panel, or onscreen keyboard.
- **Home** (○) - Tap to open the Home screen.
- **Overview** (□) - Tap to open a list of thumbnail images of screens you have worked with recently. To open one, tap it. To remove a screen from the list, swipe it left or right or tap on the **X**.

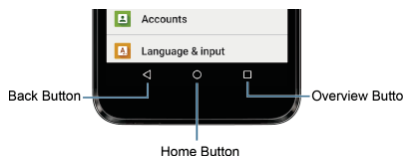


Home Screen

The Home screen is the starting point for your phone's applications, functions, and menus. You can customize your Home screen by adding application icons, shortcuts, folders, widgets, and more.


Home Screen Overview

The following illustration describes the basics of the Home screen.

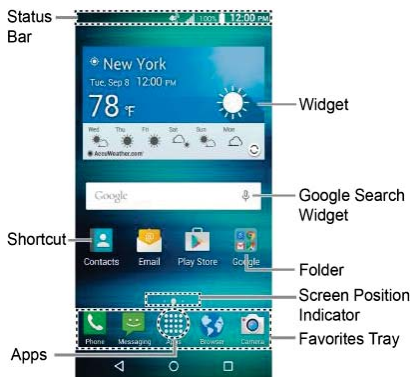 

Note: The screen image is simulated.

- **Status Bar:** Displays the time, notifications, and phone status icons. Slide down to display the Notifications panel.
- **Shortcut:** Allows you to quickly launch applications.

- **Apps:** Displays all of your apps.
- **Favorites Tray:** Contains up to five icons and appears on every home screen. You can customize these icons except the Apps icon in the center of the tray.
- **Screen Position Indicator:** Indicates where you are among the home screens.
- **Folder:** Allows you to store multiple application icons as a group.
- **Google Search Widget:** Allows you to enter text or spoken keywords for a quick search on the phone or on the Internet. Tap to enter text or tap  to speak your keyword.
- **Widget:** Allows you to access quickly at-a-glance information or simple interactive functions.

 **Tip:** Tap **Home**  to return to the Home screen from any other screen.

Manage the Home Screens

In addition to the main Home screen, your phone has extended Home screens to provide more space for adding icons, widgets, and more.

Add or Remove the Home Screens

To add a new Home screen:



- Swipe to the rightmost Home screen and drag an app or widget to the right edge.
- or –

Touch and hold the background of any Home screen. From the thumbnail view, tap the thumbnail with a plus sign (+) on it.

To remove a Home screen:


- Touch and hold the background of any Home screen. From the thumbnail view, touch and hold a thumbnail you want to delete, drag it to “**Remove**” and release it when it turns red.

Add App Shortcuts to the Home Screen

1. Tap **Apps**  on the favorites tray.
2. Find the item you want to add to the Home screen.
3. Touch and hold the app icon and drag it to a Home screen thumbnail where you want to add it.
4. Release your finger.
 - or –
1. Touch and hold the background of any Home screen.
2. Tap **APPS**  and find the item you want to add to the Home screen.
3. Tap and hold the app and drag it to a Home screen thumbnail where you want to add it.
4. Release your finger.

Add Widgets to the Home Screen

1. Touch and hold the background of any Home screen.

2. Tap **WIDGETS**  and choose a widget.
3. Tap and hold the widget and drag it to a Home screen thumbnail where you want to add it.
4. Release your finger.

Move or Remove Items on the Home Screen

- ▶ Touch and hold the item you want to move or remove on the screen.
 - To move the item, drag it to a new area and release it.
 - To remove the item, drag it over **“Remove”** at the top of the screen and release it when it turns red.

Favorites Tray

To add a new icon to the favorites tray:


1. Remove the current icon on the tray.
2. Touch and hold an app icon and drag it to the favorites tray.
3. Release your finger.

Use Folders

To create folders:

- ▶ Touch and hold an app icon and drag it over another. A new folder icon appears.
 - You can now drag more apps to the folder if you wish.

To add more apps to the folders:

1. Tap a folder icon and tap  in the top-right corner.


2. Slide the screen to browse through the available apps and place checkmarks on those apps you want to put in the folder.

3. Tap **OK**.

To manage folders:

1. Tap a folder icon you want to manage.
2. The following options are available:
 - If this is a new folder, tap the **Unnamed Folder** field. The keyboard opens and you can name the folder.
 - To rename a folder, tap the name.
 - To remove an app, drag it out of the folder and drop it anywhere on the Home screen.
 - To remove an app completely from the Home screen, drag it to **“Remove”** at the top of the screen.

Change the Wallpaper

1. Touch and hold the background on the Home screen.
2. Tap **WALLPAPERS** .
3. Tap **Pick image** to use your own image, or browse through the choices.
4. Tap the item to use and then tap **SET WALLPAPER** or **Set wallpaper**.


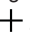
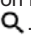
Weather

Your Weather widget can display multiple weather information.



Retrieve the Current Location Information

1. Tap **Tap to start** on the widget.
2. Read the message and tap **OK** to enable data connection.
3. Your phone will display the weather forecast for your current location.


Add a Location

1. Tap the weather image on the widget and then tap  > .
2. Enter a location in the Search location field and tap . The matching location(s) will be listed.
3. Tap the location you want to add to the location list.
4. Tap the added location to access the details screen.

Delete a Location

1. Tap the weather image on the widget and then tap  > .
2. Select the check box next to the location you want to delete.
 - Tap **SELECT ALL** to select all the locations.
3. Tap **DONE**.

Configure the Settings

1. Tap the weather image on the widget and then tap .








2. The following options are available:








- **Temperature scale:** Select **Fahrenheit** or **Celsius**.
- **Cycle time:** Select the frequency of auto update.
- **When launching:** Update the weather information when the application is opened.
- **When the current location changes:** Update the weather information when your current location changes. Data usage may increase when this is on.

Status Bar




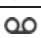





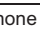
The status bar at the top of the screen provides phone and service status information on the right side and notification alerts on the left.




Status Icons

Icon	Description
	Bluetooth® enabled
	Wi-Fi® active (full signal)
	Vibrate
	Silent
	Network (full signal)
	Network (no signal)
	4G (data service)

Icon	Description
	4G LTE (data service)
	GPRS; General Packet Radio Service (data service)
	EDGE; Enhanced Data Rates for Global Evolution (data service)
	Airplane mode
	Battery (charging)
	Battery (full charge)
	Battery (discharged)

Notification Icons

Icon	Description
	Missed call
	New Gmail
	New Email
	New message
	New voicemail message
	Event
	Music application is running background
	Alarm set
	GPS is active
	Downloading

Icon	Description
	Music is playing/Music is paused
	Mobile Hotspot active
	Usage Manager

 
Note: All icons are simulated. Actual images may vary.

Notifications Panel


Open the Notifications panel to view the Quick Settings panel and a list of your current notifications.

To open the Notifications panel:

- Swipe down from the top of the screen.

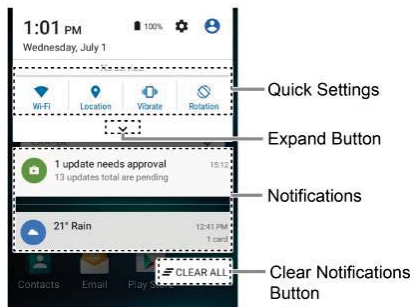



- When you are finished with a notification, swipe it away to the left or right.


- To clear all notifications, tap  **CLEAR ALL** at the very bottom of the notifications list.




Tip: You can control what notifications show on your screen when your phone is locked. See “Notification Settings” on page 77 for details.

- Tap the profile icon  at the top right to see the profiles.
- To open the main Settings app, tap the settings icon . For details, see “Settings” on page 72.


To close the Notifications panel:

- ▶ Swipe up from the bottom of the screen.
– or –
Tap **Back** .

Quick Settings Panel

The Quick Settings panel allows you easy access to common phone settings. Tap  to expand the Quick Settings panel.

- The following options are available:
 - **Wi-Fi** to turn Wi-Fi on or off.
 - **Location** to enable or disable the location feature.
 - **Sound** to configure the sound settings.
 - **Rotation** to enable or disable the auto-rotate screen feature.
 - **Brightness** to adjust the screen brightness.

- **Eco Mode** to enable or disable the Eco Mode feature.
- **Airplane** to enable or disable the Airplane mode.
- **Bluetooth** to turn Bluetooth on or off.
- **Hotspot** to turn Hotspot feature on or off.
- **Flashlight** to turn the flashlight on or off.
- **Interruptions** to access the Interruptions settings.
- **Usage Mgr** to launch the Usage Manager app.
- To change the positions of items, tap  **EDIT**. Touch and hold the item you want to move, and then drag it to a different location and release your finger. Tap **OK**.

2 Text Entry

Touchscreen Keyboard

 
The touchscreen keyboard lets you enter text directly onscreen. Your phone provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text. The keyboard appears automatically onscreen when you tap a text entry field and can be used in either portrait or landscape mode. You can also use the Google voice typing option to enter text

Google Keyboard Overview

using your voice (see “Google Voice Typing” on page 20 for details).

Google Keyboard



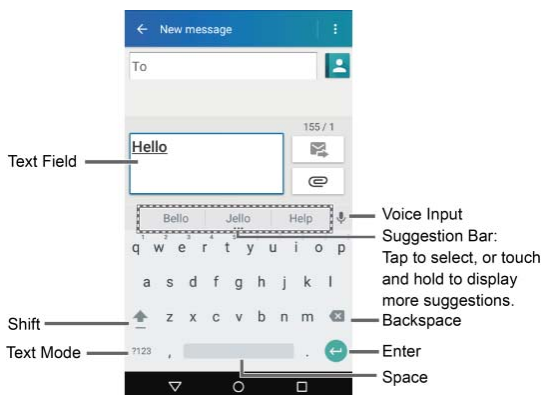


Google Keyboard lets you use a traditional QWERTY setup to enter text. Additional options expand your ability to enter text faster and more accurately.




Note: Key appearance may vary depending on the selected application or text field.

Tip: To close the keyboard, tap .


Text Mode

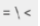
- ▶ Tap  to select ABC mode. Tap  to select Number & Symbol mode.
 - In ABC mode, tap  to alter the capitalization.
 - You can select the caps lock by double-touching or touching and holding  to make all letters in a word uppercase.
 - In Number & Symbol mode, tap  to display more symbols.
 - Some keys have alternate characters. In either mode, if a key displays an extra character at the upper right corner, touch and hold the key to enter the character. Or, touch and long hold a key to call up a list of all the characters available on that key.


 **Tip:** For more information about the Google Keyboard settings, see “Google Keyboard Settings” on page 83.

Google Voice Typing

To enter text by speaking:





1. Tap the microphone icon  on the keyboard.
2. If you see **Speak now**, say the text you want to enter into the microphone. If you see **Tap to pause**, Google Voice Typing recognizes your voice.

3. Confirm the text you want to enter is displayed. Tap  again to continue entering.

 **Tip:** For more information about the settings of Google voice typing, see “Google Voice Typing Settings” on page 84.

Tips for Editing Text


To copy and paste the text:

 
1. In a text entry field, touch and hold the text body.
2. Selection tabs appear and the currently selected words or characters are highlighted. Drag the tabs to expand or reduce the range of the selected text.
3. Tap an onscreen option from the edit menu bar. Available options may vary:
 -  **Select all:** Highlights and selects all the text in the field.
 -  **Cut:** Removes the selected text and saves it to the clipboard.
 -  **Copy:** Copies the selected text to the clipboard.
 -  **Paste:** Inserts the last copied or cut text into the current field.



3 Phone Calls

Make Phone Calls


Call Using the Phone Dialpad

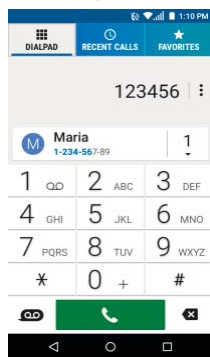
1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD** tab to display the phone dialpad.
2. Tap the number keys on the dialpad to enter the phone number.






3. Tap  to call the number.
4. To end the call, tap .

Call from Recent Calls

1. From the Home screen, tap **Apps**  > **Phone** to display the phone app.
2. Tap the **RECENT CALLS** tab to display the recent calls list.

3. Tap the Phone icon  next to the name or number you want to place a call.


Call from Contacts

1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab.
2. Tap a contact.
 - Tap  to search for your contact.
3. Tap  next to the number you want to call.
 - For additional information on contacts, see “Contacts” on page 31.

Call an Emergency Number


You can place calls to 9-1-1 even if the phone's screen is locked or your account is restricted.

To call the 9-1-1 emergency number:

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.

2. Enter **911** and tap .


To call the 911 emergency number when the screen is locked:

1. Tap **EMERGENCY CALL** on the screen.
2. Tap  next to **911**.


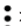

Enhanced 9-1-1 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.


When you place an emergency 9-1-1 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

 **Important:** Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your phone.

Call a Number with Pauses

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.
2. Enter all or part of a number.
3. Tap  > **Add 2-sec pause** or **Add wait**.
4. Enter additional numbers.
5. Tap  to dial the number.

Call Using a Speed Dial Number



1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.

2. For speed dial numbers 2-9, touch and hold the number on the dialpad.



– or –

For speed dial numbers 10-99, tap the first digit and then touch and hold the second digit on the dialpad.



Set Up Speed Dialing

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.
2. Tap  > **Speed dial setup**.
3. Tap **Add speed dial** next to the location number you want to assign a number to.
4. Select a contact and, if the contact has more than one number, select a number.

To remove a number from a speed dial location:

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.
2. Tap  > **Speed dial setup**.
3. Tap the assigned contact you want to remove and tap **Remove** > **OK**.


Call Using the Plus (+) Code Dialing

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.
2. Touch and hold **0** until you see a “+” on the display screen.
3. Enter the country code and phone number and then tap . The



phone automatically prepends the access code for international dialing, followed by the country code and phone number.

Call Using Internet Call



When a Wi-Fi network is available, you can make and receive calls through an Internet calling account.


 **Important:** Calling a phone number using Internet calling may incur additional charges.

Add an Internet Call Account



1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Internet call settings** > **SIP accounts** > **ADD ACCOUNT**.
3. Enter your account details and tap **SAVE**.

Receive Internet Calls



1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Internet call settings**.
3. Select the **Receive incoming calls** check box.

 **Note:** This requires the phone to maintain a connection with a Wi-Fi data network, which reduces the life of your phone's battery.



Make an Internet Call

1. From the Home screen, tap **Apps**  > **Contacts**.
2. Tap a contact and tap  **SIP**.

Internet Call Settings

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Settings** > **Call settings** > **Internet call settings** > **Make calls with**.
3. Make your desired selection.

SIP Settings

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Internet call settings** > **Use SIP calling**.
3. Select **For all calls** or **Only for SIP calls**.

Receive Phone Calls


Answer an Incoming Call

- On the Incoming call screen, swipe .


Mute the Ringtone

- Press the **Volume Button** down.

Send an Incoming Call to Voicemail

- On the Incoming call screen, swipe  to send the call to your voicemail inbox.

Reject a Call and Send a Text Message


- On the Incoming call screen, swipe  to ignore the call and send a message to the caller.

⚠ **Note:** If your phone is turned off, all calls automatically go to voicemail.



Visual Voicemail

Visual Voicemail allows you to manage your voicemail directly from your phone rather than calling to your voicemail box. Visual Voicemail displays a list of your messages and allows you to choose which message(s) to listen to or delete. Or you can choose the traditional voicemail service.

Set Up Visual Voicemail

1. From the Home screen, tap **Apps**  > **Visual Voicemail**.
2. Read the message and tap **Call Voicemail**.
3. Follow the onscreen instructions to complete the setup.



Retrieve Your Voicemail Messages

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.
2. Tap .
3. Tap the voicemail that you would like to view or listen to.

Voicemail (Traditional)

In addition to Visual Voicemail, you can also access your voicemail regularly through the voicemail services.


Set Up Voicemail


1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.
2. Touch and hold **1**  to dial your voicemail number.
3. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

- ⚠ **Important: Voicemail Password** – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

Voicemail Notification



There are several ways your phone alerts you to a new voicemail message.


- By sounding the assigned notification sound.
- By vibrating the phone when the vibrate setting is on.
- By displaying  in the notifications area of the status bar when new unheard voicemail message(s) is received.

 **Note:** Your phone accepts messages even when it is turned off. However, your phone notifies you of new messages only when it is turned on and you are in the service area.

Retrieve Your Voicemail Messages

Use Your Phone to Access Messages

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.
2. Touch and hold . If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

 **Note:** Depending on your plan, you may be charged when you are accessing your voicemail from your wireless phone.


Use Another Phone to Access Messages

1. Dial your wireless phone number.

2. When your voicemail answers, press the asterisk key (*) on the phone.
3. Enter your password.



Phone Call Options

In-Call Options


-  **Hold:** Tap to hold the current call.
-  **End call:** End the current call.
-  **Add call:** Tap to initiate a conference call.
-  **Mute:** Mute or unmute the microphone during an active call.
-  **Speaker:** Turn the speaker on or off.
-  **Bluetooth:** Route the phone's audio through a connected Bluetooth headset or through the speaker.
-  /  **Dialpad/Hide:** Toggle the appearance of the onscreen dialpad to enter additional numbers, for example, an extension or access code.

Call Waiting

To enable Call waiting:

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD**.
2. Tap  > **Call settings** > **Additional settings**.
3. Select the **Call waiting** check box.

To respond to an incoming call while you are on a call:

- ▶ On the Incoming call screen, swipe .




To switch back to the first caller:

- ▶ Tap  **Swap calls**.

To create a conference call between your existing call:

- ▶ Tap  **Merge calls**.

Conference Calling


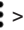
1. On the Phone screen, enter a number and tap .
2. Once you have established the connection, tap  **Add call**, and dial the second number. (This puts the first caller on hold and dials the second number.)
3. When you are connected to the second party, tap  **Merge calls**.
4. If you want to add another call to the existing conference, repeat steps 2 and 3.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.


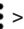
- ▶ To end the conference call, tap .

Call Settings



Phone Ringtone

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Phone ringtone**.
3. If prompted, select an app to use and make your desired selection.
4. Select the file or tap **OK** to assign the ringtone.



Dial Pad Touch Tones

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings**, and select the **Dial pad touch tones** check box to enable or disable the option.



DTMF Tones

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **DTMF tones**.
3. Select **Normal** or **Long**.



Vibrate When Ringing


1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings**, and select the **Vibrate when ringing** check box to enable or disable the option.

Incoming Call


1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Incoming call**.
3. Select an option:
 - **Swipe** to swipe the available icon to respond to an incoming call.
 - **Tap & hold** to touch and hold the available icon to respond to an incoming call.


Voicemail

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Voicemail**.
3. Configure the following settings:
 - **Service** to select the voicemail service provider.
 - **Setup** to configure the voicemail number if necessary.
 - **Sound** to select the sound to ring for a new voicemail message.
 - **Vibrate** to select whether the phone responds with vibration to a new voicemail message.

 **Note:** This Voicemail settings do not affect settings for Visual Voicemail.




Quick Responses

1. From the Home screen, tap **Apps**  > **Phone**.



2. Tap  > **Call settings** > **Quick responses**.


3. Create and edit text phrases that you can add to messages.

Call Rejection



1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Call rejection**.
3. Select the check box next to **Call rejection** and tap **Call rejection list**.
4. Select the check box next to **Unknown number** to reject calls from numbers not registered in Contacts.
5. Tap  to add numbers you want to reject to the Call rejection list.

Fixed Dialing Numbers (FDN)

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Fixed Dialing Numbers**.
3. Tap **Enable FDN, Change PIN2** or **FDN list**.

 **Note:** To use this feature you will have to enter your PIN2 number, which is associated with your SIM card. If you do not know your number, please contact your carrier to obtain it.



Call Forwarding

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Call forwarding**.
3. Select **Always forward**, **When busy**, **When unanswered**, or **When unreachable**.



⚠ **Note:** You are charged a higher rate for calls you have forwarded.

Additional Settings

Caller ID



1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Additional settings** > **Caller ID**.
3. Select **Network default**, **Hide number**, or **Show number**.

Call Barring

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Additional settings** > **Call barring**.
3. Select from **All outgoing calls**, **International calls**, **INT'L calls except home**, **All incoming calls**, or **Incoming when roaming**.

TTY Mode

You can connect the phone to a teletype (TTY) device for the hearing impaired. (TTY device sold separately.)

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **TTY mode**.
3. Tap **TTY Full**, **TTY HCO**, or **TTY VCO** to turn TTY mode on.



– or –

Tap **TTY Off** to turn TTY mode off.

⚠ **Note:** When enabled, TTY mode may impair the audio quality of non-TTY devices connected to the headset jack.



⚠ **Warning:** 911 Emergency Calling
It is recommended that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Auto Answer



1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Auto answer**.
3. Select **Hands free** or **Speakerphone**.
4. Select the delay time to automatically answer the phone.

Call Timer

To view the call timer and call duration:


1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Call timer**.

To reset the call timer:

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap  > **Call settings** > **Call timer**.
3. Touch and hold the item you want to reset and tap **OK**.

Recent Calls

View Recent Calls







1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap the **RECENT CALLS** tab to display the recent calls list.

 = Incoming calls



 = Outgoing calls

 = Missed calls


Recent Calls Options


1. From the Home screen, tap **Apps**  > **Phone** > **RECENT CALLS** tab to display the recent calls list.
2. Tap an entry to view the contact.
 - Tap  to call the number.
 - Tap  to send a text message.
 - If applicable, tap  to add the number to Contacts.
 - Tap  > **Delete from recent call** to remove the log.
 - Tap  > **Edit number before call** to edit the number before calling.

Filter Recent Calls

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap the **RECENT CALLS** tab to display the recent calls list.
3. Tap  > **Filter by**.
4. Select **All calls**, **Missed calls**, **Outgoing calls**, or **Incoming calls**.


Delete Recent Calls

1. From the Home screen, tap **Apps**  > **Phone**.
2. Tap the **RECENT CALLS** tab to display the recent calls list.









3. Tap  > **Delete recent calls**.
4. Tap the entry you want to clear to place a check mark in the adjacent box.
5. Tap **DONE** > **OK**.

4 Contacts

Display Contacts



- ▶ From the Home screen, tap **Apps**  > **Contacts**. You will see the Contacts list.

Contacts List

-  **FAVORITES**: Tap to display your favorite contacts.
 -  **Add new favorite**: Tap to add a new favorite contact. See “Add a Contact to Favorites” on page 34.
-  **CONTACTS**: Tap to display all the contacts you save.
 -  **Add new contact**: Tap to add a new contact. See “Add a Contact” on page 32.
-  **GROUPS**: Tap to display the group contacts.
 -  **Add new group**: Tap to add a new group contact. See “Add a Group Contact” on page 34.
-  **Search**: Tap to search a contact.
- Tap  :
 - **Clear frequents**: Allows you to clear the frequently contacted list under the favorites tab.
 - **Delete**: Allows you to select contact(s) you want to delete.



- **Import/export**: Imports/exports your contacts from/to the microSD card, SIM card and phone or shares your visible contacts.
- **Contacts to display**: Selects contacts to be displayed on Contacts.
- **Settings**: Opens the display settings screen.
- **Change order**: Allows you to change the order of the listed contacts under the favorites tab.

Display Options



1. From the Home screen, tap **Apps**  > **Contacts**.
2. Tap  > **Contacts to display**.
3. Select one of the following options:
 - **All contacts** to display all the contacts you save.
 - **Phone** to display all the contacts saved in your phone.
 - **SIM** to display all the contacts saved in your SIM card.
 - An account (for example, **Google**) to display only its contacts.
 - **Customize** to select whether to display all the contacts saved in your phone or SIM card and to select contact types for each account. Tap **Phone**, **SIM** or an account name,


make your selection and then tap **DONE**.

You can also select how your contacts are displayed.

1. From the Home screen, tap **Apps**  > **Contacts**.
2. Tap  > **Settings**.
3. Set the following options:
 - **Position of index tab** to choose where to place the index tab.
 - **Sort by** to choose how your contacts are sorted.
 - **Name format** to choose how your contacts names are displayed.
 - **Accounts** to open the account settings.

Add a Contact

1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab.
2. Tap .
 - If prompted, select the location where you want to save the contact, such as **Phone**, **SIM**, and an account (for example, **Google**). If you want to change the location later, tap the location name, and select the desired location.
3. Use the keyboard to enter as much information as you want.


-  (**Contacts icon**): Tap the picture icon to assign a picture to the contact.
- **Name**
- **Phone**
- **Email**
- **Address**
- **Incoming settings**
- **ADD ANOTHER FIELD**: Tap to include additional information such as **Phonetic name**, **Organization**, **IM**, **Notes**, **Nickname**, **Website**, **SIP**, etc.

⚠ **Note**: To select a type (label) for a phone number, email address, or postal address (such as **MOBILE**, **HOME**, **WORK**, etc.), tap the box to the left of the field and select the appropriate type.

⚠ **Note**: To add more phone numbers, email addresses, etc., tap **Add new** under the current numbers or addresses.

4. When you have finished adding information, tap **SAVE**.

Save a Phone Number

1. From the Home screen, tap **Apps**  > **Phone** > **DIALPAD** tab to display the phone dialpad.
2. Enter a phone number and tap **Add to contacts**.



3. To add the number to an existing entry, tap the contact, select a number type for the new number and then tap **OK**.

– or –



To add the number to a new entry, tap **Create new contact** and select an account to use. Then, enter the name and any additional information and tap **SAVE**.

Edit a Contact

Add or Change Information for a Contact

1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab.
2. Tap a contact to display it, and tap .
3. Tap any field you want to add or change.
4. Add or change the information and then tap **SAVE**.

Assign a Picture to a Contact

1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab.
2. Tap a contact to display it, and tap .
3. Tap the contact icon to the right of the name.
4. To assign a stored picture, tap **Choose photo**, select the app to use, and locate and select a picture.



– or –

To assign a new picture, tap **Take photo** and take a picture.



5. You may be prompted to size the picture for use with entries. Tap and drag the square to frame the portion of the picture to use. Tap and drag the side of the square to resize the square and complete the action.

6. Tap **SAVE** to save the entry.



Assign a Phone Ringtone to a Contact

1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab.
2. Tap a contact to display it, and tap .
3. Tap **Incoming settings** > **Phone ringtone**.
4. If prompted, select an app to use and select a ringtone.
5. Tap **OK** to save the settings.

Assign a Message Ringtone to a Contact






1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab.
2. Tap a contact to display it, and tap .
3. Tap **Incoming settings** > **Message ringtone**.
4. If prompted, select an app to use and select a ringtone.
5. Tap **OK** to save the settings.

Assign a Vibration Pattern to a Contact



1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab.
2. Tap a contact to display it, and tap .

3. Tap **Incoming settings > Vibration pattern**.
4. Select a vibration pattern.
5. Tap **OK** to save the settings.

Add a Contact to Favorites



1. From the Home screen, tap **Apps**  > **Contacts > CONTACTS** tab.
2. Select a contact to display it.
3. Tap . The icon changes to  when the contact is added to Favorites.
– or –
1. From the Home screen, tap **Apps**  > **Contacts > FAVORITES** tab.
2. Tap  and select the check box next to the contact(s) that you want to add to your Favorites list.
3. Tap **DONE**.

Add a Contact Widget to the Home Screen


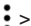
1. From the Home screen, tap **Apps**  > **Contacts > CONTACTS** tab.
2. Tap a contact to display it and then tap  > **Place on Home screen**. The contact widget is added to your home screen.

Delete Single or Multiple Contacts



1. From the Home screen, tap **Apps**  > **Contacts > CONTACTS** tab.

2. Tap  > **Delete**, select the check box next to the contact(s) you want to delete, or tap **SELECT ALL**.
3. Tap **DONE** and then tap **OK** to confirm the deletion.
– or –
Tap a contact to display it, and tap  > **Delete > OK**.

Join Contacts



1. From the Home screen, tap **Apps**  > **Contacts > CONTACTS** tab.
2. Select the contact you want to appear as the primary listing.
3. Tap  > **Join**.
4. Choose the contact you wish to join with the primary listing.

Add a Group Contact



1. From the Home screen, tap **Apps**  > **Contacts > GROUPS** tab.
2. Tap .
3. Select the account in which you want to create a group contact.
4. Enter the group's name.
5. Tap **Add/remove contacts** and check the entries that you want to add to the group contact.
6. Tap **DONE > SAVE**.

Edit a Group Contact



Add or Remove a Group Contact Entry, or Rename a Group

1. From the Home screen, tap **Apps**  > **Contacts** > **GROUPS** tab.
2. Tap a group contact, and tap .
3. The following options are available:
 - Tap the group's name to rename it.
 - Tap **Add/remove contacts** to add or remove entries.
4. Tap **SAVE**.



Assign a Ringtone to a Group Contact

1. From the Home screen, tap **Apps**  > **Contacts** > **GROUPS** tab.
2. Tap a group contact, and tap .
3. Tap **Ringtone**. If prompted, select an app to use and select a ringtone.
4. Tap **OK** to save the settings.

Assign a Vibration Pattern to a Group Contact

1. From the Home screen, tap **Apps**  > **Contacts** > **GROUPS** tab.
2. Tap a group contact, and tap .
3. Tap **Vibration pattern** and select a vibration pattern.
4. Tap **OK** to save the settings.

Delete a Group Contact




1. From the Home screen, tap **Apps**  > **Contacts** > **GROUPS** tab.
2. Tap a group contact that you have created, and tap  > **Delete** > **OK**.

ICE (In Case of Emergency)



Registering ICE information might help rescue workers, such as paramedics, police and hospital personnel identify your primary contact. You can register up to five contacts.

ICE Contacts



To add an ICE contact:

1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab and then tap **ICE- In Case of Emergency**.
2. Tap .
-  **Note:** You will be prompted to enable the Location access settings if they are disabled. Read the onscreen information and follow the instructions.
3. Tap the entry to register.


To change or remove an ICE contact:

1. From the Home screen, tap **Apps**  > **Contacts** > **Contacts** tab and then tap **ICE- In Case of Emergency**.
2. Tap  and tap the contact to remove.
3. Tap **OK**.



Personal Information

1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab and then tap **ICE- In Case of Emergency**.
2. Tap **My emergency information** > .
3. Enter or edit the necessary information and tap **SAVE**.

Access the Registered ICE Information When the Screen is Locked


1. Tap **Emergency Call** on the screen.
2. The following options are available:
 - Tap **My emergency information** to display the registered information.
 - Tap  next to the ICE contact to place a call to the contact.

Synchronize Contacts

1. From the Home screen, tap **Apps**  > **Contacts**.
2. Tap  > **Settings** > **Accounts**.
3. Select the account type and tap the account you want to sync your contacts with.
4. Tap the **ON/OFF** switch next to **Contacts** to turn contacts sync on or off.

Share a Contact

1. From the Home screen, tap **Apps**  > **Contacts** > **CONTACTS** tab.

2. Tap an entry, and tap  > **Share**.
3. In the **Share contact via** menu, select a method.

5 Accounts and Messaging

Gmail


Create a Google Account

If you do not already have a Google Account, you can create one online or using your phone.


Create a Google Account Online

1. From a computer, launch a Web browser and navigate to **google.com**.
2. On the main page, click **Sign in**.
3. Click **Create account**.
4. Follow the onscreen prompts to create your free account.



Create a Google Account Using Your Phone

1. From the Home screen, tap **Apps**  > **Settings** > **Accounts** > **Add account**.
2. Tap **Google**.
3. Tap **Or create a new account**.
4. Enter your First name, Last name, and tap **NEXT**.
5. Enter your desired username, which will be the first part of your Gmail address, and tap **NEXT**.
6. When prompted, enter and reenter a password and tap **NEXT**.
7. Follow the onscreen prompts to create your free account.







Sign In to Your Google Account

1. From the Home screen, tap **Apps**  > **Settings** > **Accounts** > **Add account**.
2. Tap **Google**.
3. Follow the prompts to enter your Google Account and password, and choose options for your account on your phone.





Access Gmail


1. From the Home screen, tap **Apps**  > **Gmail**.
2. Do any of the following:
 - View more email messages: If the screen is full, swipe your finger up the screen to view more messages and conversations.
 - Read a new email message: Tap the unread message or the conversation with an unread message (just-arrived items display in bold).
 - Select messages and conversations: Tap the circle icon to the left of the email or conversation.
 - View the inbox of your other Gmail account: If you have more than one Google account set up on your phone, tap  at the top left of the screen and then choose an account to view.

Send a Gmail Message




1. From the Home screen, tap **Apps**  > **Gmail**.
 2. In any folder, tap .
 3. Enter the message recipient's email address in the **To** field.
 4. If you want to send a carbon copy (Cc) or a blind carbon copy (Bcc) of the email to other recipients, tap  to the right of the **To** field.
 5. Enter the subject and then compose your message.
-  **Note:** If you want to attach a picture or video, tap , select the app to use and then locate and choose the picture or video you want to attach.
6. After composing your message, tap .

Read and Reply to Gmail Messages

1. From the Home screen, tap **Apps**  > **Gmail**.
2. Tap a message to display it.
3. To reply to or forward a message:
 - Tap  to reply to the message.
 - Tap  > **Reply all** to reply to all recipients.
 - Tap  > **Forward** to forward the message.



4. After composing your message, tap .

Gmail Account Settings

1. From the Home screen, tap **Apps**  > **Gmail**.
2. Tap  at the top left of the screen to display menu.
3. Tap **Settings** > **General settings**.
4. Configure the following settings:
 -  **Note:** Depending upon the email account type, the available options may vary.
 - **Gmail default action:** Select whether you want delete or archive to be the default option.
 - **Conversation view:** Check to turn Conversation view on.
 - **Swipe actions:** Check to archive a conversation when you swipe it.
 - **Sender image:** Check to display an image of the sender in conversation list.
 - **Reply all:** Check to display the Reply all option as default.
 - **Auto-fit messages:** Check to shrink the messages to fit the screen and allow zooming.
 - **Auto-advance:** Choose which screen to show after you delete a message.

- **Confirm before deleting:** Check to display a confirmation before deleting a message.
- **Confirm before archiving:** Check to display a confirmation before archiving a message.
- **Confirm before sending:** Check to display a confirmation before sending a message.



Delete a Gmail Account


1. From the Home screen, tap **Apps**  > **Settings** > **Accounts** > **Google**.
2. Tap the account you want to delete.
3. Tap  > **Remove account**.
4. Tap **REMOVE ACCOUNT**.

Email





Add an Email Account

You can add several types of personal email accounts on your phone.





1. From the Home screen, tap **Apps**  > **Email**.
2. Tap a desired account.
3. Enter your email address and password and tap .
 - To set up your account manually, tap **MANUAL SETUP**.
4. Enter any other necessary information and follow the onscreen instructions.




 **Important:** If the account type you want to set up is not in the phone database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

Add a Microsoft Exchange Account




1. From the Home screen, tap **Apps**  > **Email** > **Microsoft Exchange**.
 2. Enter your Exchange email address and password and tap .
 3. Configure the account options as necessary and tap .
 4. Follow the onscreen instructions.
-  **Note:** You may need to contact your Exchange Server administrator for required sign-in information.

Compose and Send Email






1. From the Home screen, tap **Apps**  > **Email**.
2. On the email account Inbox, tap .
3. Tap fields to compose your message:
 - Tap the **To** field and enter the recipient's email address or tap  to add recipients.
 - To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the email to other recipients, tap  to the right of the **To** field.



- Tap the **Subject** field and enter the email subject. Tap the exclamation point to set a priority.
 - Tap the text entry field and compose your email.
 - To add an attachment, tap  > **Attach file**. You can choose from **Pictures**, **Take picture**, **Videos**, **Record video**, **Audio**, or **Others**.
4. Tap  to send the message.
- To save the current email as a draft, tap  > **Save draft**.

View and Reply to Email


1. From the Home screen, tap **Apps**  > **Email**.
2. On the email account Inbox, tap a message to view it.
3. Tap  (Reply) or  (Reply all) to reply to the message.

Manage Your Email Inbox

1. From the Home screen, tap **Apps**  > **Email**.
2. You have the following options:
 - Tap  at the top of the screen to select a different email account.
 - Tap  to compose a new email message.
 - Tap  to search an email.
 - Tap  to display folders.

- Tap  to refresh your email box.
- Tap  > **Settings** to display the email settings or to show all folders.

Refresh an Email Account



- While in the account you want to synchronize, tap .

Delete Email Messages




- On the email account Inbox, swipe an email message left or right.
 - or –
1. On the email account Inbox, touch and hold the message you want to delete.

2. Tap  > **OK**.

Email Account Settings

1. From the Home screen, tap **Apps**  > **Email**.
2. On the email account Inbox, tap  > **Settings**.
3. Select the account you want to edit.


Delete Email Accounts

1. From the Home screen, tap **Apps**  > **Email**.
2. Tap  > **Settings**
3. Tap  and select the checkbox(es) next to the account(s) you want to delete.

4. Tap **Done** > **REMOVE ACCOUNT(S)**.



Text Messaging and MMS

Compose Text Messages

1. From the Home screen, tap **Apps**  > **Messaging**.

2. On the Messaging screen, tap **+** .


3. Fill in one or more recipients. You can enter phone numbers or email addresses in the **To** field. If you are sending the message to several recipients, separate the phone numbers or email addresses with a comma.

 **Tip:** You can type a name or email address saved in your Contacts to call up the contact information, or tap  to add recipients.

4. Tap the **Type message** field and then start composing your message.

5. When done, tap .



Send a Multimedia Message (MMS)

1. From the Home screen, tap **Apps**  > **Messaging**.



2. On the Messaging screen, tap **+** .


3. Fill in one or more recipients. You can enter phone numbers or email

addresses in the **To** field. If you are sending the message to several recipients, separate the phone numbers or email addresses with a comma.



 **Tip:** You can type a name or email address saved in your Contacts to call up the contact information, or tap  to add recipients.

4. Tap **Type message** and then start composing your message.

 **Tip:** Tap  to select options for composing messages, such as **Attach**, **Add slide**, or **Add preset message**.


5. Tap  and select from the following file attachments:

- **Pictures:** Select a stored picture to attach.
- **Capture picture:** Take a picture to attach.
- **Videos:** Select a stored video to attach.
- **Capture video:** Record a video to attach.
- **Audio:** Select an audio file to attach.
- **Record audio:** Record an audio file to attach.
- **Contact (vCard):** Select a contact entry or contact entries to attach.
- **Event (vCalendar):** Select an event entry to attach.


 **Tip:** To remove an attachment, tap  beside its information.

6. When done, tap .

Save and Resume a Draft Message

While composing a text or multimedia message, tap **Back**  **> YES** to save your message as a draft.

To resume composing the message:

1. On the Messaging screen, tap the message to resume editing it. “**Draft**” in red appears at the right of the message in the list.
2. When you have finished editing the message, tap .



New Messages Notification

Depending on your notification settings, the phone will play a ringtone, vibrate, or display the message at your lock screen and in your Notifications panel to notify you of a new text or multimedia message.


Read a Message

- ▶ Do one of the following:
 - On the Messaging screen, tap the message thread to open and read it.
 - If you have a new message notification, swipe down from the top of the screen to open the Notifications panel. Tap the new message to open and read it.



Reply to a Message

1. From the Home screen, tap **Apps**  **> Messaging**.
2. On the Messaging screen, tap a text or multimedia message thread to open it.
3. Tap the text box at the bottom of the screen, enter your reply message, attach files if desired and then tap .

Delete a Message Thread

1. From the Home screen, tap **Apps**  **> Messaging**.
2. On the Messaging screen, touch and hold the message thread that you want to delete. Tap another thread to select multiple threads.
3. Tap **DELETE**.
4. When prompted to confirm, tap **DELETE**.

Delete All Message Threads


1. From the Home screen, tap **Apps**  **> Messaging**.
2. On the Messaging screen, tap  **> Delete all threads**.
3. When prompted to confirm, tap **DELETE**.

Delete a Single Message



1. While viewing a message thread, touch and hold the message that you want to delete.

2. Tap **DELETE**.
3. When prompted to confirm, tap **DELETE**.

Delete Multiple Messages

1. While viewing a message thread, tap  > **Delete message** > **Choose message(s)**.
 - Select **All messages** to delete all messages.
2. Tap the message you want to delete.
 - The thread is highlighted and the number of the selected thread appears next to **Choose message(s)**. Tap another message to select multiple messages.
3. When prompted to confirm, tap **DELETE**.

Text and MMS Settings

1. From the Home screen, tap **Apps**  > **Messaging**.
2. On the Messaging screen, tap  > **Settings** to configure message settings:
 - **SMS Enabled:** Select your default SMS app.
- **Storage**
 - **Delete old messages:** Automatically delete older messages when the set limits are reached.

- **Text message limit:** Choose the maximum number of text messages to store in each conversation thread.
- **Multimedia message limit:** Choose the maximum number of MMS messages to store in each conversation thread.
- **Storage for attachment:** Select your desired storage for attachments.
- **Preset message:** Edit text that you frequently insert when composing messages.
- **Text (SMS) messages**
 - **Manage SIM card messages:** Select this option to manage messages stored on your SIM card.
- ⚠ **Note:** This option is only available if you have inserted a nano SIM card into your phone.
- **Multimedia (MMS) messages**
 - **Group messaging:** Use MMS to send a single message when there are multiple recipients.
 - **Auto-retrieve:** Select this option to automatically retrieve messages.
 - **Creation mode:** Select **Restricted** if you want to restrict the specifications of the file you can send as an attachment.
 - **Signature:** Select this option to append text to messages that you send.

- **Notifications:** Select this option if you want to display a notification in the status bar when a new text or multimedia message arrives.
- **Sound:** Select a ringtone that is specific to new text and multimedia messages.
- **Vibrate:** Select this option if you want the phone to vibrate when a new text or multimedia message arrives.


Social Networking Accounts

Facebook

Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.


⚠ **Note:** Before you use Facebook on your phone, you must download and install the app from the Google Play Store app.

Sign in to Your Facebook Account

1. From the Home screen, tap **Apps**  > **Facebook**.
2. Tap **Sign Up for Facebook** on the main Facebook home page.
3. Enter your Facebook details and follow the onscreen prompts to complete.

Google+


With Google+ you can check your friends' updates, post updates of your own, and chat with friends in your Google+ circles.

1. Sign in to your Google Account.
2. From the Home screen, tap **Apps**  > **Google+**.
3. If you are signed into more than one Google Account, select the account you would like to use with Google+.
4. Follow the onscreen instructions to use Google+.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos.

Open YouTube



- From the Home screen, tap **Apps**  > **YouTube**.

⚠ **Note:** Terms of Service may appear. Tap **ACCEPT** if you agree to the Terms of Service.

Watch YouTube Videos


1. On the YouTube screen, tap a video.
2. Tap the screen to show the progress bar at the bottom. Tap the screen while the bar is displayed to pause/play the video. Move the slider on the bar to the left or right to rewind or fast-forward the video.

Search for Videos

1. On the YouTube screen, tap  at the upper right of the screen to open the search box.
2. Enter the keyword to search. Search results appear below the status bar.
3. Tap one of the results, or tap  on the keyboard.
4. Scroll through the results and tap a video to watch it.

Hangouts

Hangouts is an application for instant messaging offered by Google.


1. From the Home screen, tap **Apps**  > **Hangouts**.
2. If you have already signed in to a Google account, it displays on the Hangouts screen.
— or —
Tap **Or create a new account** to create a new Google account, or sign in to an existing Google account.
3. Follow the onscreen instructions.

6 Apps and Entertainment

Google Play Store App



Google Play™ is your digital content destination to discover Android apps, books, movies, music and much more on your phone and on the web.

Find and Install an App


1. From the Home screen, tap **Apps**  > **Play Store**.

- The first time you launch the app, tap **ACCEPT** to accept the Terms of Service.

2. Find an app you want and tap it to open its details screen.

 **Tip:** Tap  to add the app to your wishlist for future reference.

3. Tap **INSTALL** (for free applications) or the price button (for paid applications).

 **Note:** You need a Google Wallet account to purchase items on Google Play.

4. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your phone. If you agree to the conditions, tap **ACCEPT** to begin downloading and installing the app.

 **Warning:** Read the notification carefully! Be especially cautious with


apps that have access to many functions or a significant amount of your data. Once you tap **ACCEPT** on this screen, you are responsible for the results of using this item on your phone.

Create a Google Wallet Account



- On your computer, go to **accounts.google.com** to create a Google Wallet account.

– or –

The first time you use your phone to buy an item from Google Play, you are prompted to enter your billing information to set up a Google Wallet account.



 **Warning:** When you've used Google Wallet once to purchase an app from the Google Play Store app, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission. (For more information, see "Security Settings" on page 81.)

Request a Refund for a Paid App



1. From the Home screen, tap **Apps**  > **Play Store**.
2. Swipe right or tap  at the top left of the screen and then tap **My apps**.

3. Tap the app to uninstall for a refund.
The details screen for the app opens.
4. Tap **Refund**.

Open an Installed App

1. From the Home screen, tap **Apps**  > **Play Store**.
2. Swipe right or tap  at the top left of the screen and then tap **My apps**.
3. Locate the app and tap the icon.
4. Tap **OPEN**.

Uninstall an App

1. From the Home screen, tap **Apps**  > **Play Store**.
2. Swipe right or tap  at the top left of the screen and then tap **My apps**.
3. Tap the app you want to uninstall and then tap **UNINSTALL**.
4. When prompted, tap **OK** to uninstall the app from your phone.


Navigation

Your phone offers a number of location-based navigation programs to help you figure out where you are and get you where you are going.

⚠ **Note:** You may be asked or redirected to enable your phone's location features for using location-based apps, if you have not enabled them yet. See "Location Settings" on page 79.


Google Maps

Open Google Maps

- ▶ From the Home screen, tap **Apps**  > **Maps**.
 - The first time you launch the app, tap **ACCEPT & CONTINUE** to accept the Terms of Service and Privacy Policy.
 - To move in any direction, drag or flick the map.
 - Pinch and spread to zoom in or out. Tap the screen twice quickly to zoom in.


Search Maps

1. On the Google Maps screen, tap inside the Search bar at the top of the screen.
2. Type the place that you want to search for. You can enter an address, a city, or type of establishment.

💡 **Tip:** Tap  to search by speaking the location you are searching for.

3. Tap a matching result on the drop-down list or tap the magnifying glass key on the keyboard.
4. Tap the red callout to open the menu for the location.

Layers and Additional Options


- ▶ To access the available layers and additional options menu, tap  at the top left of the screen or touch and hold

the left side of the Google Maps screen and slide it to the right.



- **Traffic:** Provides real-time traffic information. The colors on the roads indicate the traffic conditions.
- **Public transit:** Provides available transit information.
- **Bicycling:** Provides possible cycling routes.
- **Satellite:** Provides the hybrid view of road labels overlaid on a satellite image.
- **Terrain:** Provides the shaded relief view of topographic features.
- **Google Earth:** Launches the Google Earth app and displays your location in Google Earth.

⚠ **Note:** Tap **Tips and Tricks**, **Settings**, **Help**, or **Send feedback** for additional options.

Get Directions

1. On the Google Maps screen, tap .
2. Do one of the following:
 - The starting point is set to your current location as default. If you want to change the starting point, tap **Your location**, and type the new point in the **Choose starting point** field or tap a location from the available list.
 - To enter your destination, tap **Choose destination**, and type your

destination in the **Choose destination** field or tap a destination from the available list.

- You can switch the starting point and destination by tapping .
3. Select the way to get to the destination (by car, by public transit, or by foot).
 - You may tap  or **OPTIONS** to configure available settings options.
 4. Tap the result to see the details.



Music


Music Player

Your phone's built-in music player app lets you listen to and organize music files you have loaded into your phone's memory or microSD card.









💡 **Tip:** For information about loading music onto your phone, see "Use the Phone's microSD Card as a Media Device" on page 71.

Access the Music Player App

1. From the Home screen, tap **Apps**  > **Music Player**.
2. Swipe right or tap  at the top left of the screen.
3. You will find six categories in which all songs are classified: **Playlists**, **Artists**, **Albums**, **Songs**, **Genres** and **Composers**.
4. You may do any of the following:

- Tap an item to display the contents or play the item.
- Tap , or touch and hold an item for available options.
- Tap the song tab at the bottom of the screen to manage the song, if available.

Listen to Music Using the Music Player


1. On the Music Player app, browse for the item you want to play.
2. Tap the item. The music starts to play on the Playback screen.
3. The following control options are available:
 - Drag the slider to rewind or fast-forward.
 - Tap  to pause. Tap  to resume playing.
 - Tap  to go back to the start of the current item. Tap  to jump to the start of the next item.
 - Tap  to display the Now Playing list.
 - Tap  to add the song to your favorites.
 - Tap  for toggling the shuffle options.
 - Tap  for cycling through the repeat options.


- Tap  for available options.

Google Play Music



The Play Music app plays digital audio files saved on the microSD card. You need to copy music files to your card first to use this application.

Open the Music Library

- From the Home screen, tap **Apps**  > **Play Music**. The music library screen appears.







 **Note:** If you have signed up for Google Music™, the first time you open the Play Music application you will be prompted to select the account you want to access. Follow the onscreen instructions to continue.

Manage the Music Library

1. From the Home screen, tap **Apps**  > **Play Music**.
2. Swipe right or tap  at the top left of the screen to display the Google Play Music options.
 - **Listen Now:** Your starting point to play music.
 - **My Library:** Your music is sorted by **PLAYLISTS, GENRES, ARTISTS, ALBUMS, and SONGS**.
 - **Shop:** Launches the Google Play Music store.

- **Downloaded only:** Allows you to show only the downloaded music on your device. Tap the switch to turn the feature on or off.
- **Settings:** Allows you to change your settings on the Google Play Music.
- **Help & Feedback:** Displays Play Music help page.

The Listen Now Screen

1. From the Home screen, tap **Apps**  > **Play Music**
2. Swipe right or tap  at the top left of the screen and then tap **Listen Now**.
3. You may do any of the following:
 - Tap **Shuffle all** to play the music on your phone in shuffle mode.
 - Tap an album image and then tap a song in the album to play it.
 - Tap  for available options.
 - Tap  to search for music.
 - Swipe right to display the Google Play Music options.
 - The label of the currently playing song appears at the bottom of the screen when you play music. Simply tap  or  on the label to manage the music or tap the label for more control options.

Back Up Your Downloaded Music Files


It is recommended that you back up your downloaded music files to your computer.


1. Connect your phone to your computer using a USB cable.
2. Use your computer to navigate to the phone's desired folders (Internal storage or SD card).
3. Select and copy the music files to a folder on your computer's hard drive.


7 Web and Data

Wi-Fi


Turn Wi-Fi On and Connect to a Wireless Network

1. From the Home screen, tap **Apps**  > **Settings** > **Wi-Fi**.
2. Tap the **ON/OFF** switch to turn Wi-Fi on. The network names of detected Wi-Fi networks are displayed.
3. Tap a Wi-Fi network to connect. If you selected an open network, you will be automatically connected to the network. If you selected a network that is secured with a password, enter the password and then tap **CONNECT**.

When your phone is connected to a wireless network, the Wi-Fi icon () appears in the status bar and tells you the approximate signal strength.

If **Network notification** in Advanced Wi-Fi settings is enabled, the open network icon () appears in the status bar whenever the phone detects an available open wireless network within range.


Check the Wireless Network Status


1. From the Home screen, tap **Apps**  > **Settings** > **Wi-Fi**.

2. Tap the wireless network that the phone is currently connected to. You will see a message box showing the Wi-Fi network name, status, signal strength, speed, and other details.


⚠ **Note:** If you want to remove the wireless network settings, tap **FORGET** on this window. You need to enter the settings again if you want to connect to this wireless network.

Connect to a Different Wi-Fi Network

1. From the Home screen, tap **Apps**  > **Settings** > **Wi-Fi**. Detected Wi-Fi networks are displayed in the Wi-Fi networks section.





- To manually scan for available Wi-Fi networks tap  > **Refresh**.

2. Tap another Wi-Fi network to connect to it.

⚠ **Note:** If the wireless network you want to connect to is not in the list of detected networks, tap  > **Add network**. Enter the wireless network settings and tap **SAVE**.

Data Connection Status and Indicators

Your phone displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:

Icon	Description
	Your phone is connected to the high-speed 4G LTE network.
	Your phone is connected to the 4G network.
	Your phone is connected to the EDGE network.
	Your phone is connected to the GPRS network.

Virtual Private Networks (VPN)


Prepare Your Phone for VPN Connection

Depending on the type of VPN you are using at work, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.


Install Security Certificates

1. Download and install the certificates needed to access your local network

into a microSD card. Your network administrator can tell you how to do this.


2. Insert the microSD card into your phone. See "Insert a microSD Card" on page 70.
3. From the Home screen, tap **Apps**  > **Settings** > **Security** > **Install from SD card**, and install the necessary security certificates.

Add a VPN Connection

1. From the Home screen, tap **Apps**  > **Settings** > **More** > **VPN**.
2. If you are asked to set up a screen lock, tap **OK** and set up a required type of lock.
3. Tap **+** and enter the information for the VPN you want to add.
 - Information may include Name, Type, Server address, PPP encryption (MPPE), and advanced options.
 - Set up all options according to the security details you have obtained from your network administrator
 - Tap **SAVE**. The VPN is then added to the VPNs section of the VPN settings screen.

Connect to or Disconnect from a VPN

Connect to a VPN

1. From the Home screen, tap **Apps**  > **Settings** > **More** > **VPN**.



2. In the VPNs section, tap the VPN that you want to connect to.
3. When prompted, enter your login credentials and then tap **CONNECT**. When you are connected, a VPN connected icon appears in the notification area.
4. Open the Web browser to access resources such as intranet sites on your corporate network.

Disconnect from a VPN

1. Swipe down from the top of the screen to open the Notifications panel.
2. Tap the VPN connection to return to the VPN settings screen and then tap the VPN connection to disconnect from it.

Web Browser

Launch Web Browsers

- From the Home screen, tap **Apps**  > **Browser**.
— or —
From the Home screen, tap **Apps**  > **Chrome**.

Learn to Navigate Web Browser

Scrolling

- In a single motion, tap and drag across or up and down a page.

Selecting

- Tap an item or onscreen link.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

Pinching and Zooming


To zoom in:

1. Place your thumb and index finger on the screen.
2. Expand them outward (spread) to zoom in.

To zoom out:

1. Place your thumb and index finger on the screen.
2. Bring them together (pinch) to zoom out.


Go Back

- Tap **Back**  on your phone. Repeat this process to keep going back through your Web page history of recently visited pages

USB Tethering and Mobile Hotspot


USB Tethering

Turn USB Tethering On

1. Connect a computer to your phone using the supplied USB cable.
2. From the Home screen, tap **Apps**  > **Settings** > **More** > **Tethering & Mobile Hotspot**.
3. Tap the **ON/OFF** switch next to **USB tethering** to turn it on.
4. Follow the onscreen instructions.


Bluetooth Tethering

Turn Bluetooth Tethering On

1. From the Home screen, tap **Apps**  > **Settings** > **More** > **Tethering & Mobile Hotspot**.
2. Tap the **ON/OFF** switch next to **Bluetooth tethering** to turn it on.
3. Pair your phone with a Bluetooth device. If they are already paired, establish their connection.

Mobile Hotspot




Turn Mobile Hotspot On

1. From the Home screen, tap **Apps**  > **Settings** > **More** > **Tethering & Mobile Hotspot**.

2. Tap the **ON/OFF** switch to turn Mobile Hotspot on, if it is not enabled.
 - If your phone's mobile data access is not enabled, you will be prompted to turn it on. Follow the onscreen instructions.
3. Follow the onscreen instructions.


Mobile Hotspot Settings

To set up Mobile Hotspot:

1. From the Home screen, tap **Apps**  > **Settings** > **More** > **Tethering & Mobile Hotspot** > **Mobile Hotspot settings** > **Configure Mobile Hotspot**.
 2. Confirm and change your Wi-Fi network SSID (Service Set Identifier) if necessary.
 3. Tap  in the Security field and select the security level for your Mobile Hotspot.
 4. Enter your password if you selected a security level that uses a password.
 5. Tap **SAVE**.
-  **Note:** The best way to keep using the phone as a hotspot is to have it connected to a power supply.


 **Tip:** Once Mobile Hotspot has been turned on, your SSID and password will be displayed under "Mobile Hotspot."

To set the timer for turning Mobile Hotspot off:

1. From the Home screen, tap **Apps**  > **Settings** > **More** > **Tethering & Mobile Hotspot** > **Mobile Hotspot settings** > **Mobile Hotspot turn off timer**.


2. Select a timer option.


To limit maximum connections:

1. From the Home screen, tap **Apps**  > **Settings** > **More** > **Tethering & Mobile Hotspot** > **Mobile Hotspot settings** > **Maximum connections**.
2. Select the number of devices you will allow to connect.


Connect to Mobile Hotspot

1. Enable Wi-Fi (wireless) functionality on your target device (laptop, media device, etc.).
2. Scan for Wi-Fi networks from the device and select your phone's hotspot from the network list.
3. Select this device and follow the onscreen instructions to enter the passkey (provided on the Mobile Hotspot page).
4. Launch your Web browser to confirm you have an Internet connection.

 **Note:** Wi-Fi is turned off when USB tethering or Mobile Hotspot is enabled and active. To turn on Wi-Fi, turn off USB tethering and Mobile Hotspot.

 **Note:** You need to insert a nano SIM card in your phone to share your phone's data connection with other


devices using USB tethering and Mobile Hotspot for Internet access.

 **Note:** Using both data service and Mobile Hotspot drains your phone's battery at a much faster rate than when using any other feature combination.



8 Camera and Video

Take Pictures

 
Open the Camera App

- ▶ From the Home screen, tap **Apps**  > **Camera**.

Close the Camera App

- ▶ On the Camera screen, tap **Home**  or **Back** .

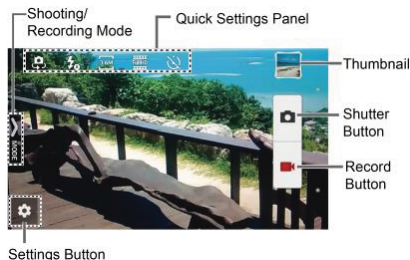


Viewfinder Screen





- **Settings Button:** Opens the camera and video settings menu to select basic and advanced settings.
- **Shooting/Recording Mode:** Opens the navigation drawer to switch the shooting/recording mode.
- **Quick Settings Panel:** Displays the settings you use most frequently.

- **Thumbnail:** Displays the thumbnail of the latest image.
- **Shutter Button:** Takes a picture.
- **Record Button:** Records a video.

Take a Picture or Record a Video

 
1. From the Home screen, tap **Apps**  > **Camera**.
2. Do the following to change the settings:
 - Tap  to change the camera and video settings as desired. See “Camera and Video Settings” on page 57.
 - Select the shooting/recording mode by tapping **MODE** icon.
3. Frame your subject on the screen.
4. Tap  to take a picture.

– or –

Tap  to record a video. Tap  to stop recording.

Review Screen

After taking a picture or video, tap the thumbnail image to see the item in the review screen. For example, when you tap a picture thumbnail image, you may see the following options:

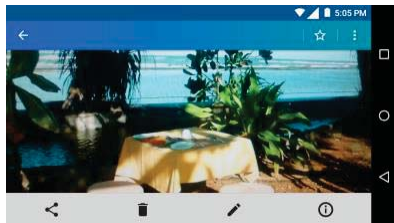

- **Share:** Displays the available applications to share your image.
- **Delete:** Deletes the currently displayed image. Confirm the deletion by tapping **OK**.
- **Effects:** Choose an effect to add to your image. See “Edit a Picture” on page 61.
- **Details:** Shows the details of the image.
- **Menu:** Displays additional image options. Available menus may vary:
 - **Slideshow** to start a slideshow of the images stored.

- **Set as** to set the currently displayed image as a contact photo or wallpaper.
- **Captions** to add captions to your video.

- **☆ Favorites:** Tap ☆ to add the image to your Favorites album.

Camera and Video Settings

Choose Camera Settings

1. From the Home screen, tap **Apps** > **Camera**.

2. Tap **Settings** to display the advanced settings menu. You can change the following settings from the Settings menu:

⚠ **Note:** Available options may vary according to the subject and shooting/recording mode.

• PHOTO

- **Size** to choose the default size for pictures. Front camera: Select from **HD(1280x720)**, **2M(1600x1200)**, or **1M(960x960)**. Back Camera: Select from **3.6M(2560x1440)**, **FullHD(1920x1080)**, **5M(2560x1920)**, **3.2M(2048x1536)**, or **3.6M(1920x1920)**
- **Flash** to choose a flash setting (back camera only). Select from **Auto**, **ON**, or **OFF**.

- **Self-timer** to choose a timer setting. Select from **10 seconds**, **5 seconds**, **2 seconds**, or **OFF**.
- **HDR*** to combine multiple exposures into a single image (back camera only). Select **ON** or **OFF**.
- **Image stabilization*** to minimize the effect of camera movement while shooting. Select **Auto**, **ON**, or **OFF**.
- **Touch shutter** to take a picture by tapping the screen. Select **ON** or **OFF**.
- **Smile shutter** automatically detects a smile on a face and shoots a smile without touching the shutter button. (back camera only). Select **ON** or **OFF**.
- **Blink detection** allows you to know right away whether one of your subjects blinked (back camera only). Select **ON** or **OFF**.

⚠ ***Note:** The **HDR** and **Image stabilization** settings are only available when the camera is in the Manual mode.

• VIDEO


- **Size** to choose the default size for videos. Select from **FullHD(1920x1080)**, **HD720p(1280x720)**, **VGA(640x480)**, **QVGA(320x240)**, or **QCIF(176x144)**.
- **Light** to choose a light setting (back camera only). Select from **Auto**, **ON**, or **OFF**.

- **Image stabilization** to minimize the effect of camera movement while recording. Select **ON** or **OFF**.



• GENERAL

- **Switch camera** to switch between the back camera and the front camera.
- **EV compensation*** to make adjustments to exposure (back camera only). Tap the slider bar to increase or decrease the value.
- **White balance*** to set the white balance (back camera only). Select from **Auto**, **Sunlight**, **Cloudy**, **Fluorescent(White daylight)**, **Fluorescent(Daylight)**, or **Incandescence lamp**.
- **Focus*** to choose areas of the screen to focus on (back camera only). Select from **Face priority** or **Center**.
- **Auto exposure*** to adjust the metering mode of pictures (back camera only). Select from **Frame average**, **Center weighted**, or **Spot metering**.
- **ISO speed*** to set the ISO level (back camera only). Select from **Auto**, **100**, **200**, **400**, or **800**.
- **Contrast** allows you to use the slider bar to set the contrast (back camera only).

- **Add location info** to store the location information of the image. Select from **ON** or **OFF**.
- **Auto review** to set the duration of the auto review function. Select from **No limit**, **2 seconds**, or **OFF**.
- **Grid line** to enable grid lines. Select from **ON** or **OFF**.
- **Volume key** to set the behavior of the volume button. Select from **Zoom** (back camera only), **Take a picture**, or **Record a video**.
- **Shutter sound** to set the shutter sound. Select from **ON** or **OFF**.
- **Data Storage** to select where to store your pictures and videos. Select from **Internal storage** or **SD card**.
- **Edit quick settings** to customize the quick settings panel on the viewfinder. To replace an icon, select a replacement icon in the settings menu, touch and hold it and then drag onto the icon to be replaced.
- **Reset settings** to reset all the camera settings to the factory default settings.


 ***Note:** The **EV compensation**, **White balance**, **Focus**, **Auto exposure**, and **ISO speed** settings are only available when the camera is in the Manual mode.

Choose a Shooting/Recording Mode



1. From the Home screen, tap **Apps**  > **Camera**.
2. Tap  **MODE** icon.
3. Choose a shooting mode. Modes include:
 - **Normal** to take a picture in the normal mode.
 - **Continuous shooting** to capture a series of photos continuously while holding down the Shutter button (back camera only).
 - **Effect** to add an effect to the picture.
 - **Scene** to set the scene mode (back camera only). Select from **Normal**, **Person**, **View**, **Food**, **Night view**, **Sports**, or **Memo**.
 - **Manual** to manually adjust your camera settings for taking photos and videos.
 - **Time-lapse** to capture in the interval shooting mode (back camera only). Select from **1 second**, **1.5 seconds**, **2 seconds**, **2.5 seconds**, **3 seconds**, **5 seconds**, or **10 seconds**.



View Pictures and Videos Using Gallery

Open the Gallery App




1. From the Home screen, tap **Apps**  > **Gallery**.
2. When you first open Gallery, you find that content has automatically been arranged in categories.



3. From the Gallery screen, you can use these options:
 - Tap a thumbnail to view a picture or video.
 - Touch and hold thumbnails to select them (indicated by a check mark).
 - Tap  for the following options:
 - **Time** to group pictures and videos based on the time they were captured.
 - Tap  to see your pictures and videos organized by months.

- Tap  to launch the camera app.
- Tap  for additional actions.
- **Albums** to view pictures and videos in an album.
- **Favorites** to view pictures and videos you have marked as a favorite.

View Pictures and Videos


1. From the Home screen, tap **Apps**  > **Gallery**.
2. Select a folder location and tap an image to view the picture or video.
 - To play a video, tap . Tap  to pause the video, or drag the dot on the timeline to rewind or forward the video.

Zoom In or Out on a Picture







- To zoom in, “spread” the screen with your thumb and finger. To zoom out, “pinch” the screen.

Work with Pictures



Picture Options Menu







1. From the Home screen, tap **Apps**  > **Gallery**.
2. Select a folder location and tap an image to view a picture.

3. With a picture displayed, tap the following icons:

-  **Share** to display the sharing options.
-  **Delete** to delete the displayed image. Tap **OK** to confirm the deletion.
-  **Effect** to choose an effect to add to the pictures.
-  **Details** to show the details of the picture.
-  **Favorites** to add the image to your Favorites album.
- Tap  for additional options:
 - **Rename** to rename pictures in the gallery.
 - **Slideshow** to start a slideshow of the pictures stored.
 - **Set as** to set the picture as a contact photo or wallpaper.

Edit a Picture


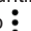


1. From the Home screen, tap **Apps**  > **Gallery**.
2. Select a folder location and tap an image to view a picture.
3. Tap  to display the editing screen.
4. Select from the following options:


-  **EFFECT**: Displays options to adjust the exposure, contrast, sharpness, etc.
-  **FRAME**: Displays options to add a frame.
-  **TRIM**: Displays options to crop, rotate, or mirror image.
-  **PAINT**: Displays options for paint tools.
- Tap  to undo an action.
- Tap  to redo an action.

5. When finished, tap **SAVE**.





Share Pictures and Videos

Send Pictures or Videos by Gmail




1. From the Home screen, tap **Apps**  > **Gallery**.
2. Tap the folder that contains the pictures or videos you want to share.
3. Touch and hold the picture or video until you see a blue frame around it or tap  > **Select**. Tap multiple pictures and videos to select them.
4. Tap  > **Gmail**.
5. Compose your message and then tap .

 **Note:** If you have multiple email accounts, the default email account will be used.

Send Picture or Videos by Messaging


1. From the Home screen, tap **Apps**  > **Gallery**.
2. Tap the folder that contains the pictures or videos you want to share.
3. Touch and hold the picture or video until you see a blue frame around it or tap  > **Select**. Tap multiple pictures and videos to select them.
4. Tap  > **Messaging**.
5. Compose your message and then tap .




Send Pictures or Videos Using Bluetooth

1. From the Home screen, tap **Apps**  > **Gallery**.
2. Tap the folder that contains the pictures or videos you want to share.
3. Touch and hold the picture or video until you see a blue frame around it or tap  > **Select**. Tap multiple pictures and videos to select them.
4. Tap  > **Bluetooth**.
5. In the next few steps, you will be asked to turn Bluetooth on and connect to the





receiving Bluetooth device so the files can be sent.

Share Pictures and Videos on Google+

 **Note:** You need to be signed in to a Google Account to share pictures and videos on Google+.


1. From the Home screen, tap **Apps**  > **Gallery**.
2. Touch and hold the picture or video until you see a blue frame around it or tap  > **Select**. Tap multiple pictures and videos to select them.
3. Tap  > **Google+**.
4. Follow the instructions on the screen.

Share Videos on YouTube


1. From the Home screen, tap **Apps**  > **Gallery**.
2. Tap the folder that contains the videos you want to share.
3. Touch and hold the video until you see a blue frame around it or tap  > **Select**. Tap multiple videos to select them.
4. Tap  > **YouTube**.
5. Enter the prompted information, such as description and tags, and select a privacy option.
6. Tap .

9 Tools and Calendar

Calendar

⚠ **Note:** If you have not added an account to sync with on your phone, you need to set one up. From the Home screen, tap **Apps**  > **Settings** > **Accounts** > **Add account**.

Add an Event to the Calendar

1. From the Home screen, tap **Apps**  > **Calendar**.

2. If you have more than one calendar, select a calendar to add the event to.

⚠ **Note:** You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you will be able to see them in the Calendar application on your phone. For more information about creating and managing multiple Google Calendars, visit the Google website: calendar.google.com.

3. Tap **+**.

4. Enter a name for the event.

5. Enter the event location.

6. To specify the date and time of the event, do one of the following:

- If there is a time frame for the event, tap the **FROM** and **TO** dates and times to set them.

- If the event is a special occasion such as a birthday or an all-day event, tap **All day** and set the dates.
- To change the time zone, tap the time zone field and select an option from the displayed list or type a country name.

7. Enter email addresses to invite guests to your event and add the event descriptions.

8. If the event occurs on a regular basis, tap the **REPETITION** field and set the frequency.

9. Set the event reminder time and select how you are notified. Tap the default option to change or tap **Add reminder** to add another reminder.


10. Select your status to be displayed on your calendar.

11. Set the privacy status of this event.


12. Tap **DONE**.

Calendar Event Alerts

There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringtone or vibration.
- By showing the event icon  on the status bar.
- By showing the Alert pop-up screen.


Event Reminders

If you have received an alert for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you.


To view, dismiss, or snooze the reminder:


1. Swipe down from the top of the screen to open the Notifications panel.
2. Tap the event name to access the event. The following options are available:
 - Tap **SET SNOOZE DURATION** to set the snooze interval.
 - Tap **SNOOZE** to postpone the event reminder for the set duration.
 - Tap **DISMISS** to dismiss the reminder.
 - Tap the event name to access the edit screen of the event.

To set default reminder settings:






- ▶ On any Calendar view, tap  > **Settings** > **General settings**, and set the items under **Notifications & reminders**.

View Calendar Events


You can display the Calendar in daily, weekly, monthly, agenda or task view. To change the Calendar view, tap  at the upper left corner, and tap **Month**, **Week**, **Day**, **Agenda**, or **Task**.


 **Note:** The Google Calendar options may vary depending on the version installed on your phone.

Edit Calendar Events

1. From the Home screen, tap **Apps**  > **Calendar**.
2. Open the calendar event details.
 - In **Agenda**, **Day**, and **Week** views, tap the calendar event you want to edit.
 - In **Month** view, tap the date where the calendar event occurs, and tap the calendar event.
3. The following options are available. If the event is repeating, a pop up appears asking which event(s) you want to edit or delete:
 - Tap  to assign a color to the event.
 - Tap  to share the event.
 - Tap  to edit the event.
 - Tap  > **OK** to delete the event.
4. Modify the event and tap **DONE**.


Erase Calendar Events

1. From the Home screen, tap **Apps**  > **Calendar**.
2. Open the calendar event details.
 - In **Week**, **Day**, and **Agenda** views, tap the calendar event you want to delete.
 - In **Month** view, tap the date where the calendar event occurs, and tap the calendar event.



3. Tap .
4. If the calendar event is recurring, select **Only this event** or **This and future events** or **All events in the series**, and tap **OK**.

Clock


Desk Clock

- From the Home screen, tap **Apps**  > **Clock** > **WORLD CLOCK** tab.
 - Touch and hold the screen to turn the night mode on.
- 💡 **Tip:** When enabled, you can easily turn off night mode by touching the screen.

Change Clock Settings




1. From the Home screen, tap **Apps**  > **Clock** > **WORLD CLOCK** tab.
2. Tap  > **Settings** and choose from the following options:
 - **Style:** Select to change the clock style. Choose from **Analog** or **Digital**.
 - **Automatic home clock:** Check if you want to add a clock for home while traveling.
 - **Home time zone:** Select to set your home time zone.
 - **Silence after:** Select to set how long the alarm sounds.
 - **Snooze length:** Select to change the snooze interval.

- **Alarm volume:** Select to set the alarm volume.
- **Volume button behavior:** Select to set the behavior of the volume button when pressed while the alarm sounds. Choose from: **Silent**, **Snooze**, **Dismiss**, or **Do nothing**.

💡 **Tip:** You can change the date & time settings by tapping  > **Date & time**. For more information, see “Date & Time Settings” on page 85.




Alarm

Set an Alarm


1. From the Home screen, tap **Apps**  > **Clock** > **ALARM** tab.
- ⚠ **Note:** When you first open the tab, two alarms are set up by default and ready for you to customize. These alarms are turned off by default.
2. Tap  to add a new one and set the alarm time.
3. Set the hours and minutes you want and tap **OK**.
4. Select the **Repeat** check box and choose the days of the week you want the alarm to repeat.
5. Tap  to select a ringtone that will play as an alarm.
6. Select the **Vibrate** check box to add a vibration feature to the alarm.

7. Tap **Add label** to enter a name for the alarm.


Delete an Alarm


1. From the Home screen, tap **Apps**  > **Clock** > **ALARM** tab.
2. Tap  on the alarm you want to delete.
3. Tap .

Stopwatch





1. From the Home screen, tap **Apps**  > **Clock** > **STOPWATCH** tab.
2. Tap **START** to start the stopwatch.
3. Do any of the following:
 - Tap **STOP** to stop timing.
 - Tap **LAP** to record the time.
 - Tap **RESET** to reset the stopwatch to zero.
 - Tap **SHARE** to share your results via Keep, Bluetooth, Google+, Messaging, and more.



Timer

1. From the Home screen, tap **Apps**  > **Clock**.
2. Tap the **TIMER** tab to display the Timer screen, if necessary.
3. Set the countdown time and tap **START** to start the countdown.
4. Do any of the following:
 - Tap **STOP** to pause the timer.


- Tap **Add label** to add a label to a timer.
- Tap **RESET** to reset the timer.
- Tap **+1 MIN** to add an additional minute to the timer.
- Tap **-1 MIN** to subtract a minute from the timer.
- Tap  to delete the timer.
- Tap **+** to add a new timer.


World Clock

1. From the Home screen, tap **Apps**  > **Clock** > **WORLD CLOCK** tab.
2. Tap  to display the world clock list.
3. Tap the check box next to the city you want to display on the world clock screen.
4. Tap **Back**  or  in the top-left corner of the screen to confirm. (You will see the clocks you selected and what time it is in those locations.)

 **Tip:** You can enable daylight-saving time by tapping  on the world clock screen.








Calculator

1. From the Home screen, tap **Apps**  > **Calculator**.
2. Enter numbers by tapping the onscreen keys.




3. Tap **DEL** to clear a number. Touch and hold to clear an entire number.
 - To access more advanced features, flick the screen left.
4. Tap **Back**  to close the calculator.



Sound Recorder

Record a Sound File




1. From the Home screen, tap **Apps**  > **Sound Recorder**.
2. Tap  to configure the following options:
 - **Recording file format:** Select **Normal** or **High quality**.
 - **Storage:** Select **Phone** or **SD card**.
3. Tap  to start recording a sound file.
4. Tap  to pause recording. Tap  again to resume recording.
5. Tap  to stop recording.
 - Tap  to play the recorded sound file.

Play Voice Data



1. From the Home screen, tap **Apps**  > **Sound Recorder**.
2. Tap  to view all saved voice files.
3. Tap the name of a voice file to play it.
 - Tap the rewind button  to rewind 5 seconds.

- Use the playback slider to fast forward or rewind the recording.
- Tap  to share selected voice file.
- Tap  for additional options:
 - **Delete** to delete selected voice file.
 - **Rewind settings** to change the length of rewind.

Voice Data List Options

1. From the Home screen, tap **Apps**  > **Sound Recorder**.
2. Tap  to list the recorded sound files.
3. Tap  and choose from the following options.
 - **Share** to share voice data via Bluetooth, Gmail, Messaging, etc.
 - **Delete** to delete the file.
 - **Edit file name** to edit the file name.
 - **Details** to view the detail information about the file.





Voice Search

1. Tap  on the Google Search Widget.
– or –
From the Home screen, tap **Apps**  > **Voice Search**.
2. Speak clearly into the phone's microphone when **Listening...** is

displayed on the screen. If an error occurs, try again.



3. Tap a matching item from the onscreen list.

Eco Mode




1. From the Home screen, tap **Apps**  > **Eco Mode**.
2. Tap an option to enable or disable the Eco Mode:
 - **On:** Enables the Eco Mode. The Eco Mode On icon  appears on the status bar when selected.
 - **Auto on:** Enables the Eco Mode when the remaining battery level falls below the set level. Tap  to set the battery level. The Eco Standby icon  appears on the status bar when selected.
 - **Off:** Disables the Eco Mode.

Bluetooth



Turn Bluetooth On or Off

1. From the Home screen, tap **Apps**  > **Settings** > **Bluetooth**.
 2. Tap the **ON/OFF** switch to turn Bluetooth on or off.
-  **Note:** Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless phone is prohibited.

The Bluetooth Settings Menu

- From the Home screen, tap **Apps**  > **Settings** > **Bluetooth**.
- Turn Bluetooth on to search for other visible in-range Bluetooth devices.
 - Tap  and choose from the following options.
 - **Refresh** to update the Available devices list.
 - **Rename this device** to rename your phone for Bluetooth access.
 - **Show received files** to view all files you have received via Bluetooth.
 - **Save to** to select the location to store the files to be received via Bluetooth.
-  **Note:** Your phone is visible to nearby devices while Bluetooth settings is open.

Disconnect a Bluetooth Device




1. From the Home screen, tap **Apps**  > **Settings** > **Bluetooth**.
2. On the **Paired devices** list, tap  next to the device you want to disconnect.
3. Tap **FORGET**.

Send Information from Your Phone to Another Device


You can send the following types of information, depending on the device you are sending to.

- Images and videos

- Contacts

1. Set the receiving device to discoverable mode. You may also need to set it to "Receive Beams" or "Receive Files." Refer to the device's documentation for instructions on receiving information over Bluetooth.
2. On the phone, open the application that contains the information or file you want to send.
3. Follow the steps for the type of item you want to send:
 - Picture or video (in Camera): After capturing a picture or video, tap the thumbnail and then tap  > **Bluetooth**.
 - Pictures and videos (in Gallery): On the Albums tab, tap an album, tap the items you want to share and then tap  > **Bluetooth**.
 - Contacts: Display a contact and tap  > **Share** > **Bluetooth**.
4. If you are prompted to turn on Bluetooth, tap **TURN ON**.
5. Tap the name of the receiving device.
6. If prompted, accept the connection on the receiving device, and enter the same passcode on both your phone and the device, or confirm the auto-generated passcode.
7. On the receiving device, accept the file.

Receive Information from Another Device

1. From the Home screen, tap **Apps**  > **Settings** > **Bluetooth**.
2. Tap the **ON/OFF** switch to turn Bluetooth on.
3. Keep this screen open to make your phone visible to unpaired devices.
4. On the sending device, send one or more files to your phone. Refer to the device's documentation for instructions on sending information over Bluetooth.
5. If prompted, enter the same passcode on both your phone and the device, or confirm the auto-generated passcode. A Bluetooth authorization request is displayed on your phone.
6. Tap **OK**.
7. When your phone receives a file transfer request notification, slide down the Notifications panel and tap **ACCEPT**.
8. When a file is transferred, a notification is displayed. To open the file immediately, slide down the Notifications panel and tap the relevant notification.