


ALL RIGHTS RESERVED

Spice Retail Ltd ©2015. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners. While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause.

We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice. Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with Spice, and Spice does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/ downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you.

To the extent permitted by applicable law(s), Spice does not warrant that any Spice software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

 ***User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.***

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/ headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

Notice:

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator,

or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.

- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.



If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.

Myths and Facts

- Various Myths about Mobile Handsets & Mobile base stations:
- Myth -Mobile phone use cause headaches.
- Fact - Headaches are not related to Mobile phone use and there is no scientific evidence.
- Myth- It is safer using a mobile phone in a car as the car shields from the radiation.
- Fact - The RF radiation is increased by Mobile phones when used in a car to overcome the shielding.
- Myth- Mobile phones cause brain cancer to the people who use it.
- Fact - There is no scientific evidence that Mobile Phone can cause brain cancer.
- Myth - Nobody is investigating the health effects of RF radiation.
- Fact - The World Health Organization, many national & international organizations and independent expert groups are coordinating to investigate health effects of RF radiation.

SAR (Specific Absorption Rate)

Your device conforms to the Indian guidelines for exposure to radio waves. The limits are given in terms of a unit referred to as the Specific Absorption Rate (SAR), which is a measure of the amount of radio

frequency energy absorbed by the body when using a mobile phone. The SAR value as per the Indian guidelines standard is 1.6 Watts per kg (Watt/kg), averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of human tissue. The highest SAR value of this device when tested is **0.953 Watt/kg**.

TABLE OF CONTENTS

ALL RIGHTS RESERVED	1
SAFETY PRECAUTIONS	2
TABLE OF CONTENTS	5
WHAT'S IN THE BOX?	7
1. UNDERSTANDING YOUR DEVICE	8
1.1 GENERAL INFO.....	8
1.2 DRAGON TRAIL GLASS.....	8
1.3 DEVICE OVERVIEW.....	9
2. CHARGING THE BATTERY	10
3. BASIC OPERATIONS	11
3.1 CALLING.....	11
3.2 MESSAGING.....	13
3.3 CONTACTS.....	15
3.4 EMAIL.....	16
4. HOME SCREEN	17
4.1 STATUS BAR.....	17
4.2 CUSTOMIZING SCREEN.....	18
5. MULTIMEDIA	20
5.1 MUSIC PLAYER.....	20
5.2 CAMERA.....	20
5.3 VIDEO PLAYER.....	21
5.4 GALLERY.....	21
5.5 FILE EXPLORER.....	22
5.6 SOUND RECORDER.....	22
5.7 FM RADIO.....	23
6. NETWORK	25
6.1 WI-FI.....	25
6.2 3G.....	26
6.2 BLUETOOTH.....	26
7. SETTINGS	27
WIRELESS & NETWORKS.....	27
SIM CARDS.....	27
MORE.....	27
DEVICE.....	27
DISPLAY.....	27
AUDIO PROFILES.....	27
PROMPT & NOTIFICATIONS.....	28

STORAGE	28
BATTERY	28
SMART WAKE SETTING	28
APPS	28
PERSONAL	28
LOCATION	28
SECURITY	29
ACCOUNTS	29
LANGUAGE & INPUT	29
FACTORY DATA RESET	30
SYSTEM	30
DATE AND TIME	30
ACCESSIBILITY	30
ABOUT PHONE	30
8. APPLICATIONS & UTILITIES	31
CALCULATOR	31
CALENDAR	31
CLOCK	31
FLIPKART	31
FUNSTORE	31
GMAIL	31
HANGOUTS	32
MAPS	32
NEWSHUNT	32
OPERA MINI	32
PAYTM	32
PLAY STORE	33
QUIKR	33
SNAPDEAL	33
SPICE ARENA	34
WHATSAPP DOWNLOADER	34
YOUTUBE	34
9. SPECIFICATIONS	35
10. SUPPORT AND CONTACT	36
ENVIRONMENTAL CONCERN	37

WHAT'S IN THE BOX?

Your package comes with the following items. If any of these is missing, please contact your retailer.

- 1 Mobile Handset
- 1 Flip Cover
- 1 User Manual
- 1 Service Centre list
- 1 Battery
- 1 Travel charger
- 1 Earphone
- 1 USB data cable

1. UNDERSTANDING YOUR DEVICE

1.1 GENERAL INFO

Spice Xlife-M46q is a multi SIM phone that encloses features, such as **10.16cm FWVGA, 3G Smart Phone, 1600mAh Battery, 8GB ROM+1GB RAM, Camera 5.0MP+3.2MP**. This phone is provided with two SIM slots. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM. You can select to operate SIMs as per your personal and professional needs.



1.2 DRAGON TRAIL GLASS

Your smartphone needs protection against shocks resulting from touch, accidental drops and scratching inside a pocket or bag. In order to ensure protection to your phone, this device is bestowed with Dragon Trail Glass which offers defense to your device from scratch and breakage. It is highly durable against external shocks or rubbing and features a beautiful, pristine finish compared to resin. Dragon trail is chemically strengthened and is six times stronger than conventional soda-lime glass, resulting in high resistance to scratches.

1.3 DEVICE OVERVIEW



Keys

Keys	Function
Power on/off key	Press and hold it to switch on/off the phone Press it to lock/unlock the screen
Volume key	Press it to increase or reduce the volume
Menu key	Tap to view the menu options
Home key	Tap to go back to the idle screen
Back key	Tap to go back to the previous screen

2. CHARGING THE BATTERY

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.



Charging.....  Fully Charged..... 

You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

3. BASIC OPERATIONS



3.1 CALLING



To Make Calls

 
If the icon  /  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:

- Enter the Main Menu, select Phone.
- Enter the phone number using the on-screen keyboard.



 Tap  to erase a wrong number. Tap and hold it to erase the entire number.

- After entering phone number, tap .
- To end the call, tap  to end the call.

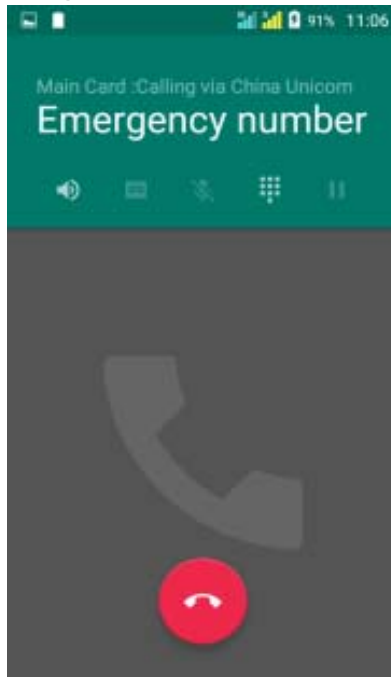

Answer/Reject an Incoming Call

 When you receive an incoming call, a notification message appears on the




screen. In order to accept the call, click  . If you wish to reject the call, click  .

Other Options during the call

To put a call on hold






If you are having a call conversation and there is another incoming call, select hold to put the first call on hold. To unhold the call, select unhold.


To set up conference calls

- If you are already having a call conversation, select  to put the call on hold.
- Select  to make another call.
- After connecting to the second call, select  to set up the conference call.

Manage other voice call features

During a call, please select:



-  : to mute/unmute the microphone.
-  : to hold the call.
-  : to open loud speaker.
-  : add/make another call.
-  : use the dial pad.

 
 **Note:** *'The provision of Smart Call Recording is only an additional feature being provided by the manufacturer; however its proper usage, in accordance with law of the land, shall be the responsibility of buyer. The buyer of this phone shall be responsible to ensure that the Smart Call Recording is not used for any illegal or immoral purpose. The use of audios recorded through Smart Call Recording, as legal evidence, shall be subject to applicable laws in this regard.'*

3.2 MESSAGING

Your device features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). Go to Main Menu and then select Messaging.

Creating a Message

- Tap  to compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type message to compose field.
- Tap  to Send.

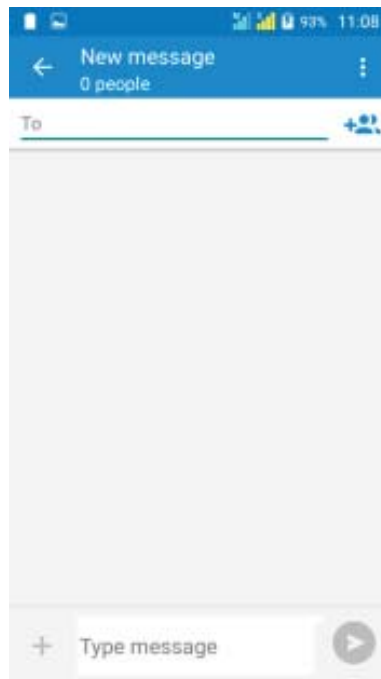

Receiving and Managing Messages

When you send and receive messages to/from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

To reply to a text message

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Select Type text message to enter your message.

- Click  to Send.

To forward a text message

- Enter the Main Menu, select Messaging.
- Tap to view a message thread.
- Press and hold a message to view the message options.
- Select Forward.
- In the Type name or number field, enter the recipient's phone number.

- Click  to Send.

To delete all text messages

- Enter the Main Menu, select Messaging.
- Tap Menu > Delete thread.
- All the messages will be deleted.


To copy message text



You can use this function to copy the text from a message to a new message you are composing.

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Press and hold the message to view the submenu options.
- Select 'Copy text'.
- Go to Compose new message.
- Press and hold Type text message.
- Select 'Paste' to paste the copied text to your new message.

MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:


- Enter the Main Menu, select Messaging.
- Select .

- In the Type name or number field, enter the recipient's phone number or email address and enter the Subject.
- Tap  > Add subject.
- To insert a picture or video file, tap .
- To insert text, tap Type message, and then enter your message.

3.3 CONTACTS

Contacts refer to the phonebook that lets you store names, phone numbers, e-mail addresses and other information. You can save information such as name, picture, phone numbers, e-mail addresses, etc. for each contact listed in your Contacts menu.

To add a Contact

- In standby mode, tap .
- Tap **+** to create New contact.
- Select the storage
- You can enter contact information such as name, phone number, email address etc., if you select storage as "Phone".
- Tap Save to save the contact.

Tip: Or enter the Main Menu and select People, tap **+** create New contact.

To import contacts

- Enter the Main Menu select People.
- Tap Menu > Import/export.
- Select to import contacts from Phone/ Internal storage/ SIM Card/ Memory Card.
- Select a particular source to import the contacts from.
- Select Next.
- Select the destination, such as Phone to copy contacts to.
- Select Next.
- Select "Select all" to import all contacts or mark the required contacts.
- Select OK.

 
3.4 EMAIL

Your device allows you to compose, read and send emails.

Setting up an Email Account



- Enter the Main Menu, tap Email.
- Enter your Email address and Password.
- Tap Next. The device will automatically retrieve email settings.
- Enter Name and Account display name.
- Tap Next.

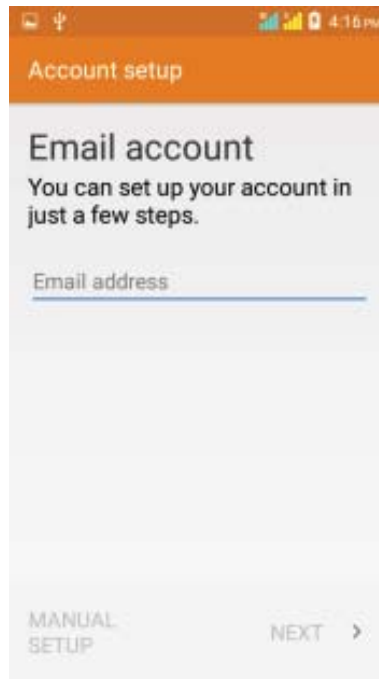

4. HOME SCREEN





From Home screen, you can quickly access common features, view notifications of missed calls, received messages and check connection status.




 

Tap Application Drawer to access applications and settings of the device. The Application tab enables you to access the Main Menu and choose among the various utilities/ features available in the device.



4.1 STATUS BAR

The Status bar icons indicate different types of information. The table below lists various icons that might appear on the status bar of the device.

	Network intensity of SIM card 1 or SIM card 2
	Battery level of the device
	New message of SIM1
	New message of SIM2

	Missed call notification
	Wi-Fi connected
	USB connected
	Headset is plugged in
	Bluetooth is activated

4.2 CUSTOMIZING SCREEN

The device features a touch screen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

Shortcuts

In order to add a shortcut on the screen:

- Long press on the desired application to add on the screen.

Widgets

Save time with live updates right on Home screen and get all of your personalized updates at one place.



Setting the wallpaper

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- In the idle mode, tap Menu Key > Wallpapers.
- Select your desired wallpaper from the various options

5. MULTIMEDIA

 
Your device features various multimedia options, such as Music Player, Camera, FM Radio, Sound Recorder and Video Player.

5.1 MUSIC PLAYER

Use the Music player to play music files. The songs saved in your SD Card can be played using the Music Player of the device.

➤ Tap  select Application tab

➤ Select Music 

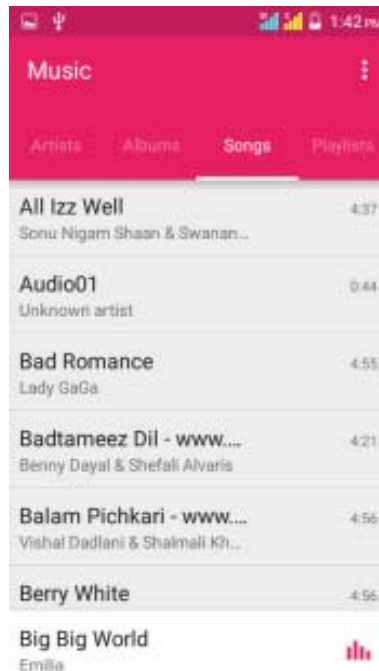

5.2 CAMERA

Your device is equipped with camera and camcorder, which enables you to capture photos and videos.

Capturing an Image

➤ Select Camera 

 
➤ Aim the phone at the subject, then tap to take the shot.



5.3 VIDEO PLAYER

You can view/play your videos stored on your SD Card through the Video Player.

Tap  select Application tab > Video player to play videos on the memory card.

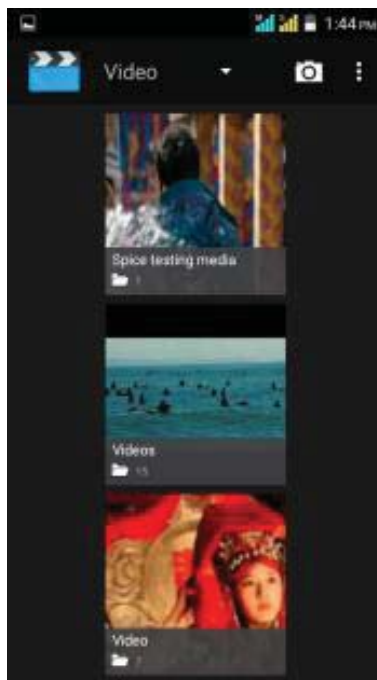


5.4 GALLERY

You can view the captured images, recorded video clips, and downloaded

images in the Gallery.

The picture folder and video folder will be displayed. Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

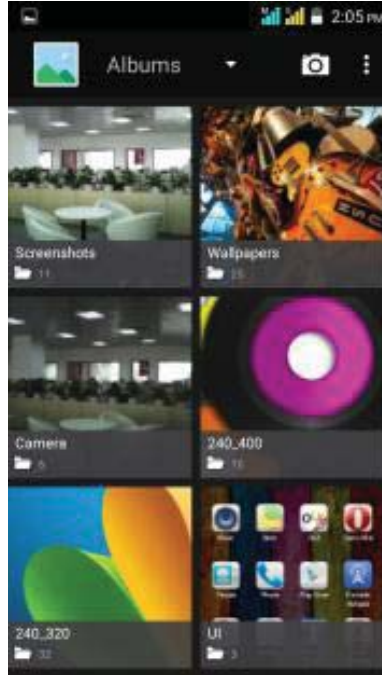 


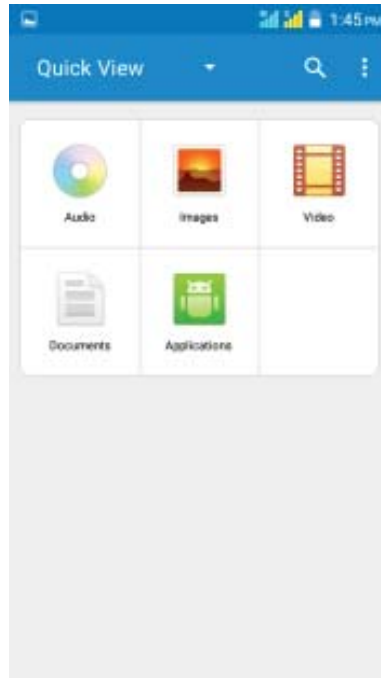 
5.5 FILE EXPLORER

You can browse, open and manage the data saved in the Device and Memory card by accessing this sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

5.6 SOUND RECORDER




You can use the sound recorder to record sounds and also select to save

the recordings in your phone. Tap  select Application tab > Sound Recorder. When in the sound recorder interface, press menu key to set save path.



5.7 FM RADIO

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust

music volume. Tap  to stop the FM radio. Tap the ( ) to search the channels.

 


6. NETWORK

6.1 WI-FI

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap 'ON' to activate Wi-Fi.
- Tap Wi-Fi > Network notification to start detecting networks. The available networks will then be listed.
- Tap Menu > Add network to add a connection.

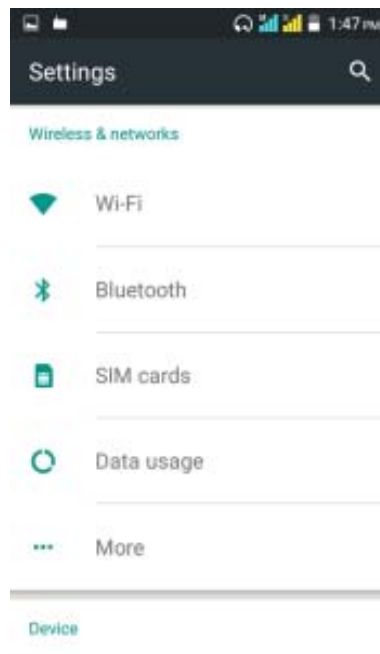

Note:

- If the device before the connection is successful, the equipment information will be saved in the pop-up window selected connection, select forget to remove device information.
- If the device does not encrypt selected connection in the pop-up window to connect.
- If the device is encrypted, the pop-up window will appear, enter the password.
- Network connection is successful; the status bar icon appears Wi-Fi connection.

6.2 3G

The device supports WCDMA protocol. Please make sure that your device is turned off, then insert or remove the SIM card.

Settings > Wireless& network > Cellular networks > 3G service

- Power off insert USIM or SIM card
- Power on
- Open Settings, select Wireless& network, tap 'More'
- Select Cellular networks ,enter 'Access Point Names' interface
- Select a card
- Touch menu button, select New APN;
- Set as below:
- Name: (any name like airtel);
- APN: airtelgprs.com;
- Touch menu button, select save;
- Go back to access point names interface, confirm the new APN selected.

6.2 BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu
- Click Bluetooth to turn on Bluetooth
- To make your device discoverable, select bluetooth settings and check discoverable.

7. SETTINGS

Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & network, Device, Personal, System.

WIRELESS & NETWORKS

Access this sub-menu to change/view the Wi-Fi, Bluetooth, Mobile Networks and VPN settings. Please refer to network section for detailed information on Wi-Fi and Bluetooth.

SIM CARDS

Your device supports two SIM cards, which can be managed by accessing the SIM cards sub-menu. You can view/change the roaming settings of the cards using this menu.

MORE

Access this sub-menu to change/view the Wi-Fi, Bluetooth, Data usage, Cellular networks and VPN settings. Please refer to network section for detailed information on Wi-Fi and Bluetooth

DEVICE

DISPLAY

With this function you can configure the display characteristics of the device including brightness, wallpaper, etc.

AUDIO PROFILES

Your device provides four pre-defined user profiles that allow the operations of the device to best suit the environment you are in. The profiles are General, Silent, Vibration and Outdoor.

PROMPT & NOTIFICATIONS

Configure the notification settings.

STORAGE

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the micro SD card installed in your device and the amount you have used to store photos, videos, music, and other files.

Un-mount SD Card: Un- mounts the micro SD card from your device so that you can format the card or safely remove it when the device is on.

Available Space: The amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

BATTERY

You can check the battery status of the device by accessing this sub-menu.

SMART WAKE SETTING

You can open it and use Double tap to wake up and Screen scribble for easy access.

APPS

This sub-menu enables you to manage all the installed, running and applications saved in the device memory and SD card. You can remove and manage installed applications, view and control running applications, allow installation of non-Spice build in market applications.

PERSONAL

LOCATION

The settings related to the location can be configured using this

sub-menu.

SECURITY

You can protect your device from unauthorized users by setting the PIN code or entering a password.

Enable or Disable SIM card PIN

When PIN code is enabled, you are required to enter the PIN code before making a call.

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Select a SIM card.
- Tap Lock SIM card to use PIN. Check to enable, uncheck to disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

Setup Screen Lock

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security
- Set up screen lock
- Select a desired form (Swipe, Pattern, PIN code or password)

ACCOUNTS

Use the Add account to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

LANGUAGE & INPUT

Use the Language & Keyboard settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

FACTORY DATA RESET

You can use the Privacy settings to manage your personal information, such as backup of the data, automatic restore and factory date reset. The default password is 1122.

SYSTEM

DATE AND TIME

You can select to set date, time and time zone using this sub-menu. Use Automatic unless you need to override the network values.

ACCESSIBILITY

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

ABOUT PHONE

You can view system information Including Status, Legal information, Model number, Android version and so on.

8. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

CALCULATOR

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

CALENDAR

This phone supports Calendar. You can view calendar or edit an event using it.

CLOCK

The clock function gives you an access to alarm clock.

- Tap Application Tab to enter the Main Menu
- Select Clock
- Select from the various options available, select Alarm

FLIPKART

Flipkart helps you to shop the Online Megastore with your device. Choose from the massive selection of original products in Fashion, Electronics, Books, Mobiles and other categories. Get timely alerts on great deals with big discounts, every day!

FUNSTORE

Enjoy the rich repository of trendy multimedia content and games for your favorite pass time.

GMAIL

Gmail is Google's web-based email service. Google Mail is configured when you first set up your device. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google Mail account on the web.

Go to Main Menu > Gmail.

Select Create or Sign in your Google account.

Follow the on screen instructions to login or create your Gmail username and password.

Once logged in, you can begin reading and sending emails from your Gmail account.

HANGOUTS

Hangouts bring one-on-one and group conversations to life with photos, Emoji, and video calls for free. Connect with friends across computers, Android and Apple devices with Hangout app.

MAPS

Maps is Google's mapping service to search for places of interest.

NEWSHUNT

Get the latest updates on news on your device. Please ensure that you have GPRS settings in your device to access News and Weather. Contact your operator for GPRS settings.

OPERA MINI

It is one of the world's fastest browsers for Android Phone. Opera Mini is free, secure and customizable for all your browsing needs. You can browse faster, content-heavy webpages with lots of images and graphics load faster. Reduce webpages down to 10% of their normal size. That saves you data, giving you faster, cheaper internet.

PAYTM

Use Paytm for prepaid mobile recharge, DTH or data card recharges, or pay your mobile or utility bills and even shop online. With endless payment options and seamlessly secure transactions, you are bound to have an incredible experience. Now you can pay with Paytm on your favorite sites as well. You get all of this and more for free!

And now Paytm has joined hands with GOSF, the Great Online Shopping Festival. In addition to an up to 50% cashback offer on recharges & bill payments, you will be able to find the best deals across various categories, be it men or women clothing, home furnishings, home décor & utility items, health & wellness accessories, stationery, books, toys & games.

PLAY STORE

Play store allows you to find and download applications and fun games for your device.

- Go to Main Menu > Play Store and setup your Google account.
- Select Create to create a new account or Sign in to sign in your existing account.

Once you are signed in you can begin searching and downloading programs from the market. Tap Apps to view the list of applications available and tap Games to view the list of games available.

QUIKR

Quikr is one of best local classifieds app which will help to buy, sell, rent or find anything! Either finding the perfect job near your home, rent/ buy apartments, find tuition classes etc. Even you can post a free ad in less than a minute & sell your stuff - phones, antiques, baby stuff, furniture, cars/bikes, etc.

SNAPDEAL

Snapdeal app makes you enjoy shopping from anywhere, at any time. Now make your shopping simple and delightful. Get the best deals and discounts on your favorite products ranging from clothing to books and many more.

SPICE ARENA

Spice Arena provides links to websites and content of third parties as service to those interested in this information. You can find apps, deals and fun with this application.

WHATSAPP DOWNLOADER

Access this menu to download the WhatsApp directly. Download the application and enjoy chatting with your friends and colleagues over network. This messenger is a smartphone messenger which allows you to enjoy unlimited conversations Download the latest version of WhatsApp by clicking the WhatsApp Downloader and chat with your friends anytime anywhere. It is a third party network based application; please contact your operator.

YOUTUBE

YouTube is an online video streaming service that allows you to view, search, and upload videos.

To start using YouTube

Tap the Application Tab to enter Main Menu > Select YouTube.

Videos are grouped into various categories. Tap a category to see the available videos for that category.

9. SPECIFICATIONS

Screen	4.5" FWVGA
Battery	1600mAh Li-ion
Dimensions	134.2*67.4*8.7mm
Band	GSM:900/1800Mhz WCDMA:2100Mhz
Standby Time	Up to 220 hours
Maximum Talk Time	Up to 7 hours
Power Adapter	5V/1000mA

** The standby time and maximum talk time depend upon the network signals and settings.*

10. SUPPORT AND CONTACT

- You can visit www.si2imobility.com/spicemobiles for additional information, downloads and services related to your Spice handset.
- For further assistance or queries, you can call on SPICE customer helpline number **1860 200 1003** or mail at customercare@smobility.in or product@smobility.in.

Note: After sales service of the device is confined to the country in which the purchasing is done.



ENVIRONMENTAL CONCERN

Help us save Our Environment...GO GREEN..!!

All our endeavors are directed towards providing environment friendly products to you. The materials used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

DOs

Recycle your handset and its accessories.

To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

DON'Ts

Do not dispose off your mobile and its battery in fire.

Do not dispose your mobile with the regular waste.

Do not over charge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it



This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body;

When burned, create cancer-producing dioxins which are released into the air we breathe; if thrown in landfills, may leach into groundwater affecting your local community;

In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

How to Recycle

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care. Help us to GO GREEN.

Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder: maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers; and maximum concentration value of 0.01% by weight in homogenous materials for cadmium.