

INFOCUS

# **InFocus**

## **Quick Start Guide**

Bingo 20 | Bingo 21  
(M425) | (M430)



## Introduction

 
Thank you for choosing InFocus Bingo 20 & 21 phone. It is recommended that you first read this **Quick Guide** to understand the basic operation of the phone.

## Content

Your Phone .....	2
Installing SIM Card(s), Memory Card, and Battery .....	3
Charging the Battery .....	4
Initial Start Up .....	4
Home Screen .....	4
Making Your First Call .....	5
Contacts .....	6
Sending a Text Message .....	7

 
Setting up WLAN .....	7
Setting up Email Account .....	8
Sending and Receiving Emails .....	8
Using Chrome Browser .....	9
Using Bluetooth .....	10
Taking Photos and Videos .....	10
Viewing Photos and Videos .....	12
Basic Phone Settings .....	13
Important Safety Information .....	14
Compliance Information .....	18
Warranty Statement .....	20

# Your Phone

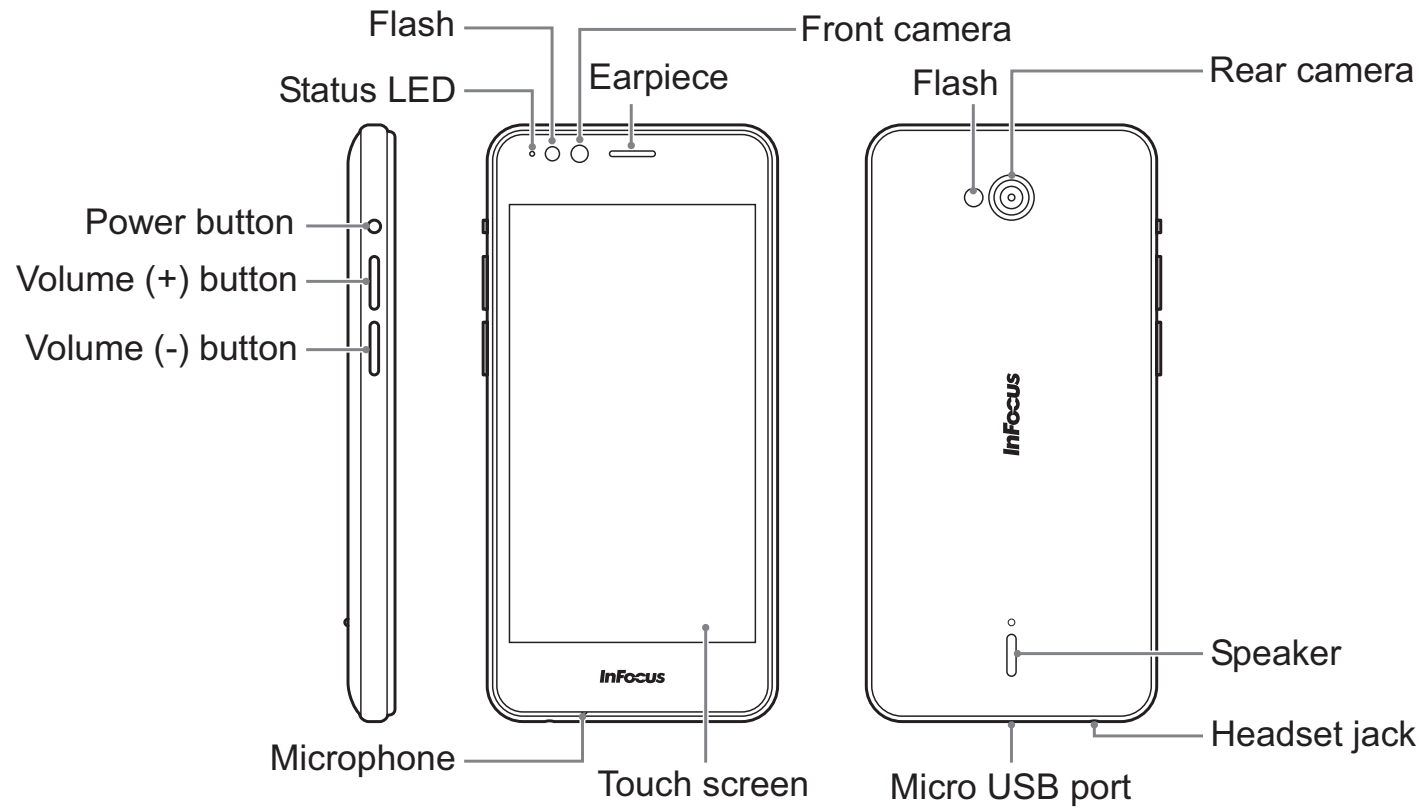

# Installing SIM Card(s), Memory Card, and Battery

1. With your phone display facing down, locate the latch opening on the bottom-right corner of your phone.
2. Pry the back cover loose and then remove the cover.
3. Insert the micro SIM card into one of the slots and push it forward until it clicks into place.

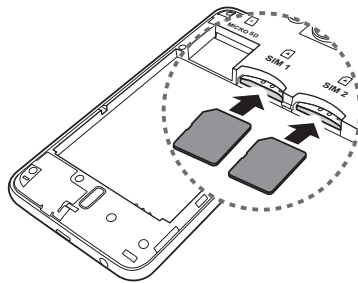 


## NOTE:

 
- If you want to use multiple SIM cards, repeat the same procedure on the other micro SIM card.
- To remove the micro SIM card, push the micro SIM

- card firmly into the slot first to eject it, then pull it out.
- When using the card adapter (Nano SIM -> Micro SIM), do not use excessive force to remove the SIM card as this can damage the card.

4. Insert the micro SD card into the slot with golden contacts facing down.

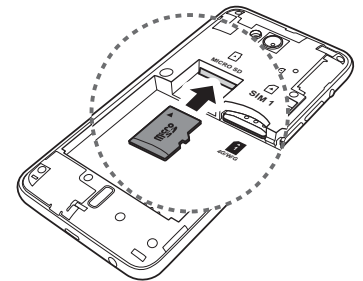

5. Insert the battery. Make sure the contacts of the battery are aligned with the connectors on the battery compartment.

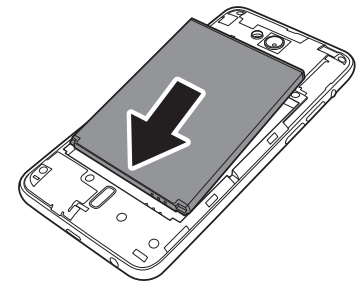 


6. Replace the back cover and press along the edges until you have a secure seal.

## Charging the Battery

Before using the phone, it is recommended to fully charge the battery first.

1. Connect the smaller end of the USB cable to the USB port of the device.
2. Connect the other end of the cable to the USB charger or other USB port with power source (for example, laptop).
3. Plug the AC adapter to a wall outlet to start charging.

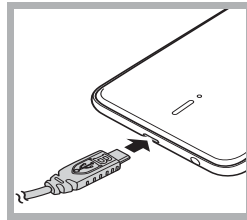

### Warning


- Charge only indoors and in dry environments.
- For safety, the overheat protection will be active during charging. If the system temperature reaches above the maximum level, the device will automatically stop charging. The device will only resume charging when normal operating temperature is reached.
- If there is no response after you press the Power button or touch the panel, press and hold the Power button for 8 seconds to force shutdown. If you hold the Power button for 2 seconds more, it will restart.

## Initial Start Up

After installing the SIM card(s) and charging the battery, the device is ready to be used.

## Home Screen

From the Home screen, you can quickly access common features and view notifications of missed calls, received messages, check battery and connection status.





Tap  to access all the applications installed on the device.



 
## Making Your First Call

From the Home screen, tap .



### To make a call

1. Enter the phone number on the keypad.
2. Tap  to correct any number. Tap and hold  to erase the entire number.
3. Tap  to make a call.
4. To end the call, tap .

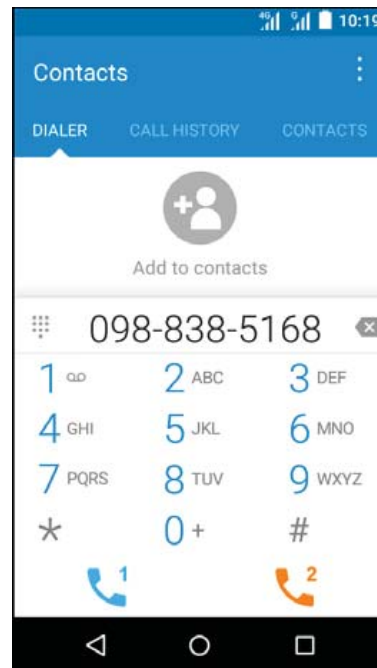**NOTE:** If you have inserted two SIM cards, select the desired SIM network.






## To receive a call

 
To answer a call, tap  and drag it to the right (.






# Contacts

 
## Adding contacts

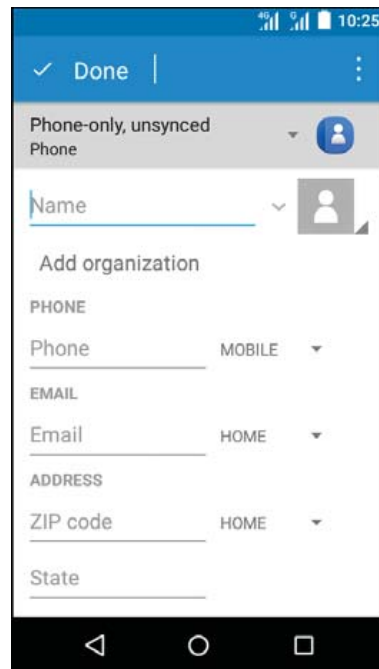1. From the Home screen, tap  > .
2. Tap  to add a contact.
3. Select one of the location to store the contact to.
4. Enter the contact information such as name, phone number, email address, etc.
5. Tap **Done** to save the contact.





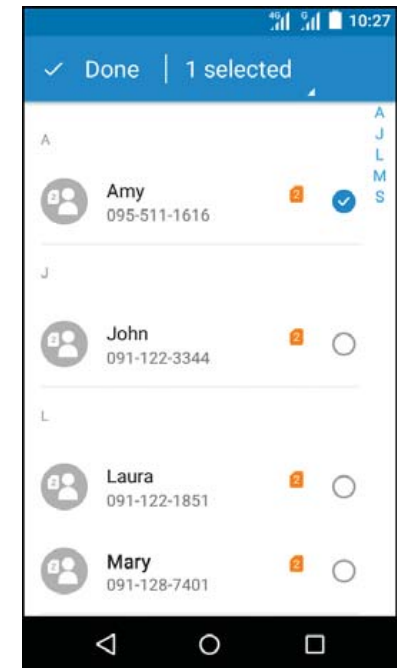

 
## Importing contacts

1. From the Home screen, tap  > .
2. Tap  > **Import/export**, and choose one of the *Import* options.
3. Select the contacts location that you want to copy to.
4. Select the contacts to copy and tap **Done**.






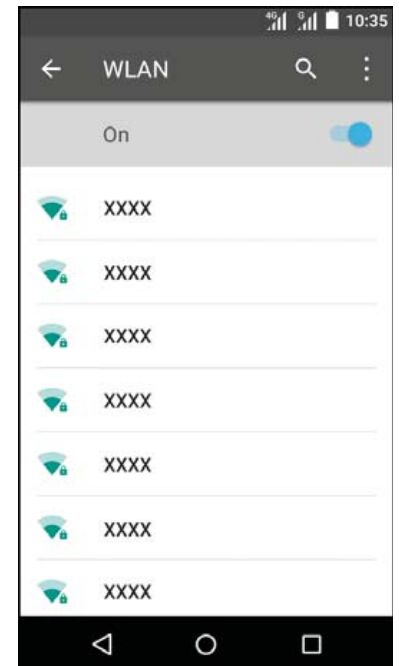 
## Sending a Text Message

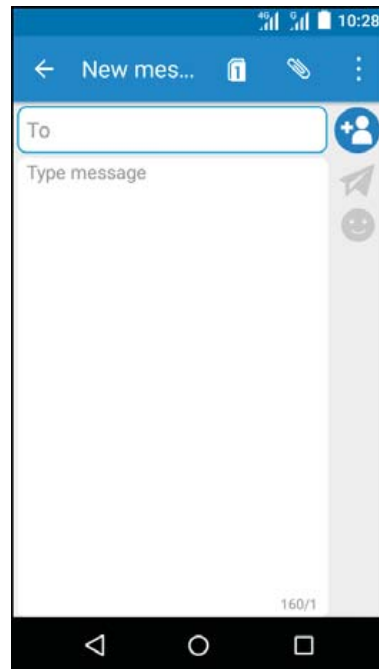1. From the Home screen, tap .
2. Tap .  
**NOTE:** If you have inserted two SIM cards, select the desired SIM network first before tapping .
3. In the **To** field, enter the recipient's phone number or name.
4. Compose your message.
5. Tap  to send your message.




## Setting up WLAN

 
1. From the Home screen, tap  > .
2. In **Wireless & networks**, tap **WLAN** and set it to **On**.
3. Available networks are listed. Tap a network to connect to or tap  > **Add network** to manually add a connection.  
**NOTE:** Connecting to a secured network will prompt for a password. Enter the password, then tap **CONNECT**.








## Setting up Email Account

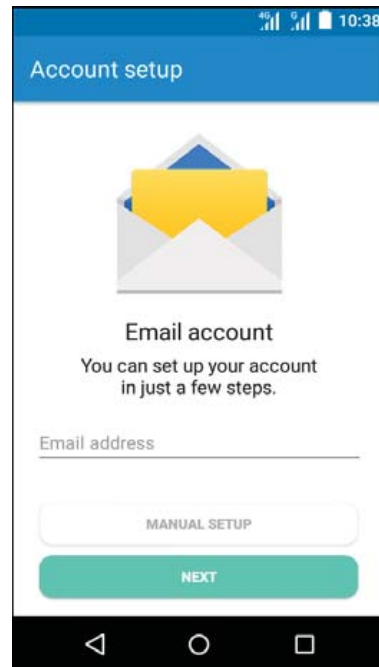 
1. From the Home screen, tap .
2. Enter your email address and tap **Next**.
3. Enter your password and tap **Next**.
4. Set the account options and tap **Next**.
5. Enter the account name (optional) and your name.
6. Tap **Next**. Once the account setup is complete, the device will automatically retrieve your emails.



## Sending and Receiving Emails

 
### Composing and sending emails

1. From the Home screen, tap .  
**NOTE:** If you have more than one email account, select an email account that you want to access.
2. Tap .
3. In the **To** field, enter the recipient's email address.
4. Tap **Subject** and type a subject.
5. Compose your email.
6. Tap  to send your email.

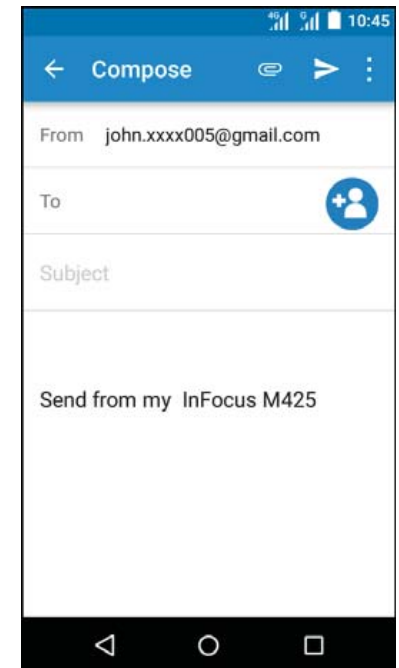

## Receiving emails

 
Emails are automatically received in the Inbox folder when the device connects to a network. To manually retrieve new emails, swipe down to refresh.

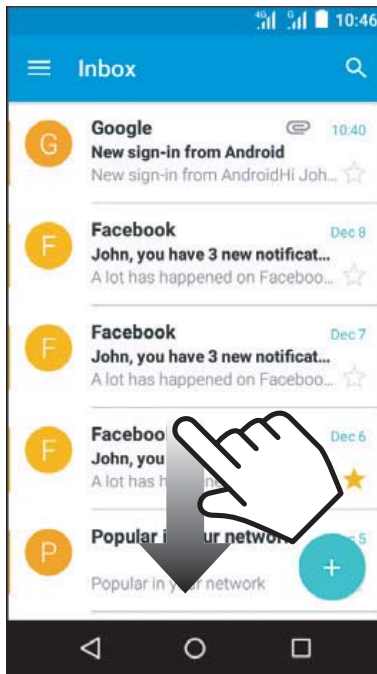




## Using Chrome Browser

### To open a web page

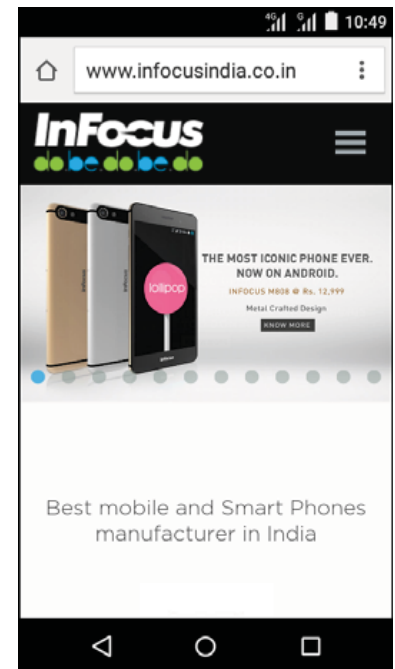1. From the Home screen, select **Google™** folder and tap **Chrome™**.
2. Tap the address bar.
3. Type the URL then tap .
4. Tap **:** to access more functions.



## Using Bluetooth






1. From the Home screen, tap  > .
2. In **Wireless & networks**, tap **Bluetooth** and set it to **On**.
3. Available devices are listed. To search for a new device, tap  > **Refresh**.
4. Tap a detected device.
5. A “Bluetooth pairing request” message appears on the screen. Tap **PAIR** to start pairing.

 
### NOTE:

- On some devices, you need to enter the PIN code to start pairing.
  - The PIN of the device must be the same PIN on the other bluetooth device.
6. The paired bluetooth device name is displayed.







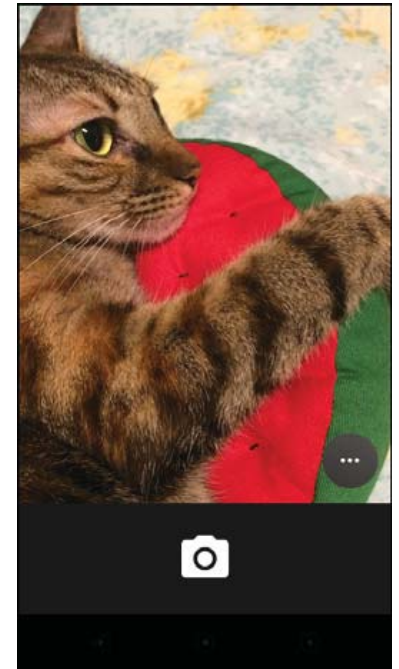


## Taking Photos and Videos

This device is equipped with rear and front cameras to take photos and videos.

1. From the Home screen, tap .
2. Aim the device at the subject.
  - To switch to the front camera, tap  > . To switch back to the rear camera, tap .
  - Pinch the screen to zoom in or out.
  - Tap another part of the screen to move the focus area.
3. Tap  to take the shot.







 
## To record a video

1. From the Home screen, tap .
2. Swipe from left to right, then tap  to switch to Video mode.
3. Aim the device at the subject.
  - To switch to the front camera, tap  > .
  - To switch back to the rear camera, tap .
4. Tap  to start recording.
  - To pause the recording, tap . To resume, tap .
  - To take a photo, tap anywhere in the screen.
5. Tap  to stop recording.




## To take a panorama shot

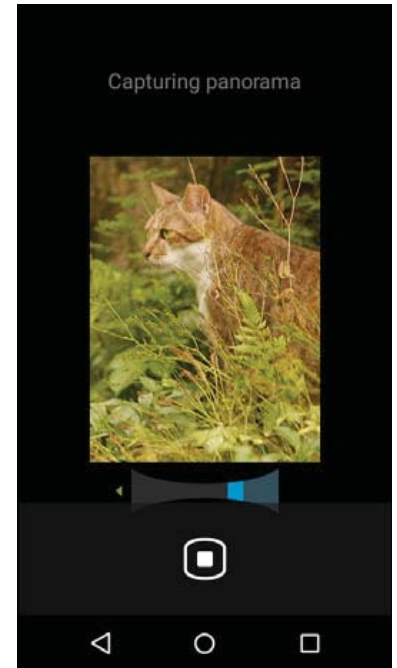


1. From the Home screen, tap .
2. Swipe from left to right, then tap  to switch to Panorama mode.
3. Aim the device at the subject.
4. Tap  to take the shot.
5. Move the device slowly toward the direction shown on the screen.
6. When the shooting guide reaches the end point, the shooting ends. You can also manually stop recording by tapping .



## Viewing Photos and Videos

1. From the Home screen, tap .
2. Tap a folder to view the recorded files in thumbnails.
3. Tap an image or a video to view in full screen.

4. Swipe your finger to the left/right to view the previous/next file.

- To share the photo/video, tap , then tap an application for sharing.
- To play the video, tap .
- To delete the file, upload the file to the cloud storage, play the slideshow, edit an image, share the photo, or show more options, tap .

 


# Basic Phone Settings






## Adjusting the volume

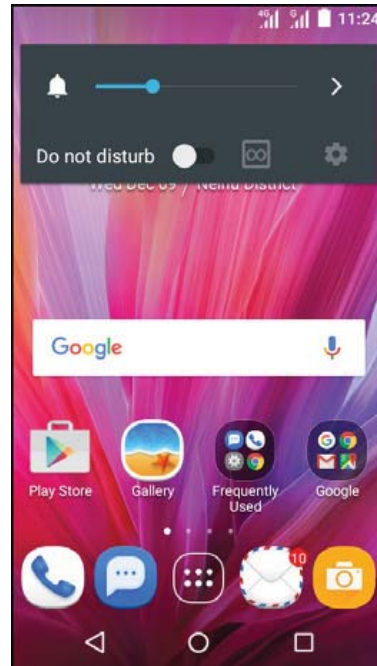There are two ways to adjust the volume:

- Press the Volume (+/-) button repeatedly to adjust the volume.
- Press the Volume button once. Drag the volume slider to adjust the volume.



## Setting an alarm

1. From the Home screen, tap  > .
2. Tap .
3. Tap  to add a new alarm.
4. Slide the pointer to set the time, and tap **OK**.
5. Check **Repeat** option to set the repeat mode. Then select the desired week days and tap **OK** to confirm.
6. Tap  to set the ringtone. Then select the desired alarm sound and tap **OK** to confirm.
7. Check **Vibrate** option to let your phone to vibrate when the alarm sounds.
8. Tap **Label** to enter the alarm label and tap **OK**.

**NOTE:** By default, the alarm is set on.

# Important Safety Information

## Please read before proceeding

- DO NOT place objects on top of the device, as they may scratch the screen.
- DO NOT drop your device or subject it to severe impacts. Bending the body and pushing the display or keys with extreme force could damage the device.
- DO NOT use a pen or any sharp object to tap the screen.
- DO NOT expose the device to dirty or dusty environments.
- DO NOT place the device on an uneven or unstable surface.
- DO NOT insert any foreign objects into the device.
- DO NOT expose the device to strong magnetic or electrical field.
- DO NOT use or store this equipment in a place where it will be exposed to high temperatures, such as near an open flame or heat-emitting equipment.
- DO NOT use it or store it where fluids such as water can splash onto it. Raindrops, water spray, juice, coffee, steam, or other types of liquids will also cause malfunctions.
- InFocus standard for water ingress criteria
  - I. Water ingress label become red color or contaminated.
  - II. Water marks or corrosions on device PCB or components.
- Using this device for long periods of time may cause the device to get warm. If you feel the device is too warm, avoid sustained contact with exposed skin otherwise this might cause discomfort, or eventually a burn.
- Refer to the rating label on the device and be sure that the power adapter complies with the rating. Only use accessories specified by

the manufacturer.

- Disconnect the device from an electrical outlet and power off before cleaning the device.
  - NEVER attempt to connect or disconnect the power adapter with wet hands.
  - Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
  - DO NOT disassemble the device. Only a certified service technician should perform repair.
  - Please check with your Local Authority or retailer for proper disposal of electronic products.
  - For USB connection, users must use a USB 2.0 (or higher version) cable.
  - The adapter shall be installed near the equipment and shall be easily accessible.
- The temperature of the device might increase while the CPU is busy handling resource consuming activities such as high resolution video decoding. The SW protection mechanism will ensure stop charging whenever the temperature is over the predefined threshold and prepare for shut down if necessary. Please worry not.
  - Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
  - Make sure the cell phone has a low SAR.
  - Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women.
  - Use cell-phone when the signal quality is good.
  - People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.



## Safety Precautions for Battery Use

- Keep the battery dry and away from any liquid since this may cause a short circuit.
- Keep the battery away from metal objects since this may cause a short circuit.
- Do not use damaged or deformed batteries.
- If the battery emits a foul odor, discontinue use.
- Keep the battery away from babies and small children.
- If the battery leaks:
  - Do not allow the leaking fluid to come in contact with your skin, eyes or clothing. If already in contact, rinse with clean water immediately and seek medical advice.
- Keep the battery away from fire since this may cause the battery to explode.
- Do not attempt to open or service the battery yourself.

- Do not dispose battery in fire or water.
- Recycle or dispose used batteries according to the local regulations.



### **CAUTION:**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

## Road and Environmental Safety

- Turn off the phone in areas with a potentially explosive atmosphere or where flammable objects exist such as gas stations, fuel depots, and chemical plants among others. Sparks from these areas could cause explosion or fire and result in injury or even death.
- Do not use hand-held phones while driving a vehicle. Use hands-free devices as an alternative.

## **Safety in Aircraft**

Do not use the phone on board an aircraft. The phone's network signals may cause interference to the navigation system. As a safety measurement, it is against the law in most countries to use the phone on board an aircraft.

## **Copyright Information**

- Copyright© InFocus Corporation, 2015. All rights reserved.
- This product has an Android™ platform based on Linux, which can be expanded by a variety of JME-based application SW.
- Android, Google, Google Play and other marks are trademarks of Google Inc.
- microSD™ is a trademark of SD Card Association.
- All products use in this device and trademarks mentioned herein are

trademarks or registered trademarks of their respective owners.

- LTE is a trade mark of ETSI.

## **Intellectual Property Right Information**

Right to all technologies and products that comprise this device are the property of their respective owners:

This product has an Android platform based on Linux, which can be expanded by a variety of Java-Script-based application SW.

## Compliance Information

### SAR Information

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 1.6 W/kg averaged over 1 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified

power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.956 W/kg and at the body is 1.190 W/kg (The measure distance of 1.5 cm). Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

## **WEEE Notice**

The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserve natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

## **RoHS Compliance**

This product is in compliance with DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8 June 2011, on the restriction of the use of certain hazardous substances in electrical and electronic equipment and its amendments.

# Warranty Statement

## Limited warranty

InFocus provides “Product Warranty Statement”, at the time of its original purchase, from the InFocus or its authorized distributor, describing the product warranty service.

Notes: InFocus does not provide global cross border warranty. This limited warranty (free of defects in materials and workmanship causing malfunction and defective) shall last for twelve (12) months for the device and six (6) months for the battery from the purchase date. Other than battery, the in-box accessories, including cosmetic parts, button, cables, earphone, AC ... etc. if applied; six (6) month open-box functional failure warranty is provided. The customer shall present the PROOF OF PURCHASE upon claiming the warranty. Throughout the warranty period InFocus

or its authorized agent will, at own discretion and subject to section Non-Warranty below repair or replace a defective product. All replaced defective parts or components will become the property of InFocus after returning the repaired/replaced product in good working condition. This repair on the same symptom, one (1) month repair warranty is provided.

## Non-Warranty

No warranty may be asserted or claimed if (1) the product serial number, date code, IMEI, water indicator or the warranty seal has been removed, erased, defaced or altered; or (2) the defect is found to be caused by:

- (1) By engineering judgement, the product is mishandled/misused carelessly or accidentally. Unauthorized disassembling or repair, repair by use if unauthorized spare parts, or other

actions beyond the reasonable control of InFocus.

- (2) Improper shipping and packing.
- (3) Forces of nature or willful misconduct.
- (4) Rough handling, exposure to moisture, dampness or extreme thermal or environmental conditions or a rapid change in such conditions, corrosion, oxidation, unauthorized modifications or connections.
- (5) Deterioration of the product due to normal wear and tear. Products installed or integrated with software or applications which are not made or authorized by InFocus.

Be sure to back up data and remove any confidential, proprietary or personal information from the product when asking service. InFocus is not responsible for the damage to or loss of any

programs, data, or removable storage media inside or sent with the products.

As to Non-warranty product, InFocus will check if a repair is economical/ available and provide a chargeable service to customer's consideration.

IN NO EVENT SHALL InFocus BE LIABLE UNDER THIS LIMITED WARRANTY FOR LOSS OF PROFIT. LOSS OF ANTICIPATED SAVINGS, LOSS OF DATA OR INDIRECT LOSS, LOSS OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, INCIDENTAL OR CONSEQUENTIAL LOSSES OR DAMAGES OF ANY NATURE WHATSOEVER TO THE FULLEST EXTENT THAT THOSE LOSSES OR DAMAGES CAN BE DISCLAIMED BY LAW.





PKHG055003A