

# STUDIO M LTE

USER MANUAL

# Table of Contents

Safety Information .....	3
Introduction .....	8
Navigation Bar.....	9
Notifications Bar.....	10
Call Functions .....	13
Contacts .....	15
Messaging.....	19
Bluetooth & Wi-Fi .....	21
Opera Browser .....	24
Gmail .....	25
Play Store.....	27
Amazon Services.....	29

<b>Camera.....</b>	<b>34</b>
<b>Chameleon.....</b>	<b>36</b>
<b>Gallery.....</b>	<b>37</b>
<b>Music.....</b>	<b>40</b>
<b>FM Radio .....</b>	<b>43</b>
<b>Sound Recorder.....</b>	<b>45</b>
<b>File Explorer .....</b>	<b>46</b>
<b>Calendar .....</b>	<b>47</b>
<b>Alarm Clock .....</b>	<b>49</b>
<b>Settings.....</b>	<b>50</b>
<b>Storage .....</b>	<b>56</b>
<b>Troubleshooting.....</b>	<b>57</b>

## **Safety Information**

Please carefully read the terms below:

### **Use Safely**

Do not use the phone in situations where it might cause danger.

### **Transportation Safety**

Please observe all transportation laws and regulations.

Please drive with both hands on the wheel.

**PLEASE DRIVE RESPONSIBLY - DO NOT TEXT AND DRIVE**

### **Hospital Safety**

Please follow hospital rules and limitations.

Please turn off your mobile phone when near medical instruments.

### **Airport Safety**

Remember to follow all airport and flight safety regulations.

### **Chemical Warning**

Do not use your mobile phone around fuels or chemicals.

### **Temperature Warning**

Do not subject your phone to extreme temperature conditions.

### **Water Hazard**

Your phone is not waterproof. Keep your phone away from water or liquid to avoid damage.

### **Emergency Calls**

Make sure your mobile phone is switched on and in a service area. In home screen, tap the phone key and dial the emergency number.

### **Accessories and Batteries**

Use only Blu authorized batteries and accessories.


### **Information Backup**


Remember to keep a written record of important information.


### **Battery Safety and Precautions**

- For better performance and longer battery life, it is recommended that you charge the battery fully before using the mobile phone for the first time.
- The optimum performance of a new battery is typically achieved after two or three complete charge cycles. **Note:** Keep in mind that continuous overcharging will affect long-term battery life.
- While charging, keep the mobile phone out the reach of children.
- Store the battery in a cool and dry place away from direct sunlight and water.
- Do not expose batteries to extreme temperatures (below -8°C (18°F) or above 43°C (110°F)).
- Immediately stop using the battery if it produces an odor, cracks and leaks, overheats, distorts or has any other type of physical damage.

- Avoid using the charger near or around liquids. If the charger is exposed to water or any liquids, immediately unplug it from the outlet to reduce the risk of overheating, charger malfunction, electric shock or fire.

BATTERY   BATERÍA   BATERIA   BATTERIE			
CAPACITY CAPACIDAD CAPACIDADE CAPACITÉ	VOLTAGE VOLTAJE VOLTAGEM TENSION	BATTERY TYPE TIPO DE BATERÍA TIPO DE BATERIA TYPE DE BATTERIE	POWER POTENCIA POTÊNCIA PUISSANCE
2300 mAh	3.8 V 	Li-ion	8.74 Wh

CHARGER   CARGADOR   CARREGADOR   CHARGEUR			
	VOLTAGE VOLTAJE VOLTAGEM TENSION	CURRENT CORRIENTE CORRENTE COURANT	FREQUENCY FRECUENCIA FREQUÊNCIA FRÉQUENCE
INPUT ENTRADA ENTRÉE	100V-240V ~	0.3 A	50Hz/60Hz
OUTPUT SALIDA SAÍDA SORTIE	5.1 V 	1.0 A	

TELEPHONE   TELÉFONO   TELEFONE   TÉLÉPHONE	
CONSUMPTION ALIMENTACIÓN CONSUMO CONSOMMATION	3.8 V 

## Hazardous Waste – Battery Disposal

**Warning:** *Do not throw away batteries with uncontrolled daily waste.*

The marking in this manual indicates that the batteries in this product should not be disposed of with household trash at the end of its working life. If the batteries are not disposed of properly, the substances included can cause harm to human health and the environment. Please follow environmental laws and guidelines for proper waste disposal.



## Cleaning and Maintenance

- Avoid using the handset and accessories in excessively moist areas to avoid malfunction.
- Use a soft dry cloth to clean the handset, battery, and charger.
- Do not use alcohol, thinner, benzene or any other solvent to clean the handset.

# Introduction

## Power On and Off

---

**On** - Please ensure the SIM card has been properly inserted into the phone. Long press the Power key to



turn the phone on.

**Off** - In standby mode, long press on Power key until an options menu appears. Select Power Off in the menu to turn off the phone.

## Navigation Bar

The navigation bar is a dedicated area that displays device navigation buttons. These system buttons allow the user to control the phone seamlessly.



### Back

---

Returns to the previous screen; Closes the keyboard, any open program, or any menu option.



### Home

---

The home button pauses any current action and returns to the home screen.



### Recent Apps

---

Opens a list of recently opened applications that allows you to switch conveniently between them. This option can also close any open applications by swiping to the side.

 
---

# Notifications Bar

The notification bar is located on the top of the screen that contains useful and important information regarding your phone and the applications that are installed.



On the notification bar, several icons will appear such as signal bar, battery indicator, data indicator, Bluetooth and Wi-Fi. You may slide the notification bar down with your finger to display any pending notifications or actions.

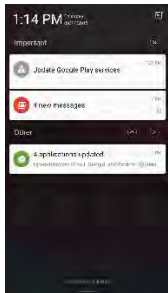

**Clear  
Notification  
Button**

**Pending  
Notifications and  
Applications**




**Quick  
Notification  
Settings**

To clear notifications, drag down the notification bar and click the clear notification icon on the upper right hand part of the notification screen (an X as shown in the figure).

### **Quick Notification Settings**

 The notification settings window provides shortcuts to different phone settings for quick access. Click on

any of the shortcut notification icons to power on or off. The quick notification settings menu is accessed by dragging your finger upward from the navigation bar. Some settings include Wi-Fi, Bluetooth, Location, Sound, and Vibrate.

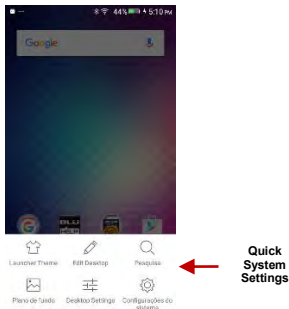

## Quick System Settings

---

To access system settings, drag your finger upward from the home screen. This option allows you to change wallpaper, set theme, edit desktop, and adjust desktop settings.

## Call Functions

At the dialing interface, enter the phone number and then click the dial key.

### **Placing a Call**

---

» Click the phone icon to open the dial keyboard. At the dial keyboard, enter the phone number you wish to dial.

You may also press and hold the 0 key to add a (+) sign when adding an international dialing prefix.

» Click the dial button to make the call.

If dialing an extension, you may click on the keypad button to open the keypad interface and enter the number of the extension.

» Click the end button to end the call.

### **Call Options**

---

There are different options that can be used in the call log and dialing interface. Clicking on the More key while in the dial pad brings up the dial menu option which gives access to Blacklist, Speed Dial, and Call Settings options.



To maintain organized, the call log has Recent Calls and Contact set up in quick tabs.

 
## **Call Logs**

Every telephone number called and received will be saved in the phone's call log. All numbers in the call log can be dialed by clicking the dial icon on the screen. When the number appears on the list, click it to view details. To delete a call from the call history, press the menu key and select delete call log.

# Contacts

**Enter:** Click on the applications menu and select contacts.

- The default display is the phone contacts and SIM card contacts.
- The contacts are organized alphabetically by default.

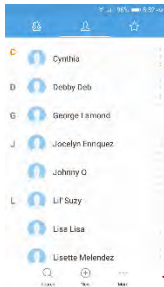

**Note:** Saving your contacts to your Google account facilitates both storage and synchronization with multiple entries across different handsets and tablets. When synchronizing your Gmail with a new phone, all your stored Google contacts are automatically synced with the new phone.



**Search & Add Contact**

 
Click the Search icon to enter the contact search interface. Any numbers or letters associated with any of the contacts saved in the list will be shown in the search results.

### **Add New Contact**

---

- Click the add contact icon (+) to add contact icon in the bottom.
- Select to save your contacts to your Google account, the phone or the SIM card.
- You may enter different contact details that include adding a picture, name, telephone number, group, address, and email among other options.
- Click to save contact.

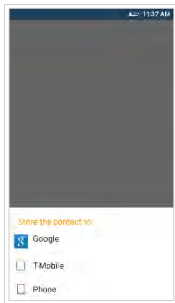

A screenshot of a contact entry form. At the top, there are "Discard" and "Save" buttons. Below is a profile picture placeholder and a "Name" field. Under the "PHONE" section, there is a "Mobile" field with the placeholder text "Type number". Under the "EMAIL" section, there is a "Home" field with the placeholder text "Type email address". Under the "OTHER" section, there are "Groups" and "Ringtone" fields, both with dropdown arrows. At the bottom, there is an "Add another field" button.

**Contact  
information  
entry field**

**Note:** You may add individual contacts to any of the home screens by entering the contacts menu, clicking on the specific contact, pressing menu, and then selecting the 'Place on home screen' option. You can also share contacts via MMS, Gmail, Bluetooth, and other share options within the same settings menu.

## **Delete Contact**

---

- Click on the Contacts icon to enter the phonebook.
- Click the menu key to access the Contacts menu.
- Click on Batch Operation and scroll to select which contact(s) you wish to delete.

Batch operation

Import/Export

Blacklist

Merge contacts

### **Import / Export Contacts**

---

The phone allows you to import and export contacts to synchronize information between different storage types that include the SIM card, Gmail account and your phone.

#### **To import or export contacts:**

1. Press the Contacts icon to enter the phonebook.
2. Press the menu key and select Import / Export
3. Select the source you want to copy the contacts. Once selected click next and select the destination where you want the contact to be copied to then select the desired contacts to be copied.

 
# Messaging

You may use this function to exchange text messages and multimedia messages with your family and friends. The messages to and from the same contact or phone number will be saved into a single conversation so you may see the entire message history conveniently.

## **Open Messaging**

---

To access » Click on the Application Menu then on the Messaging icon.

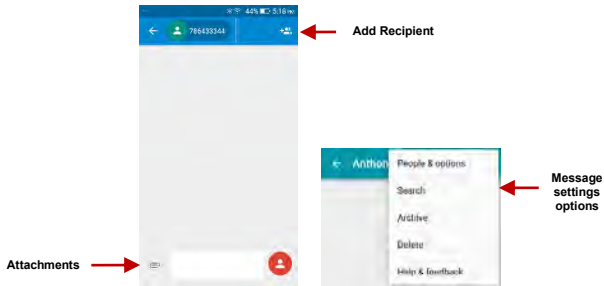

## **Sending an SMS**

### **Application Menu > Messaging > New message**

- » Click the contact icon to enter text message recipient
- » Compose Text Message and click Send

## **Sending an MMS**

---

When creating message, the default message style is SMS. The message will automatically convert to MMS when adding an attachment or when surpassing 10 pages of SMS messages.

- » Click the attachment icon in the messaging interface.
  - » Click to add attachments and create an MMS message

## **Bluetooth & Wi-Fi**

Bluetooth is a short-range wireless communications technology that devices can use to exchange information and connect to different types of devices that include headsets and other devices.



## **Power on Bluetooth**

---

Settings » Bluetooth and select to power on Bluetooth.

- The Bluetooth icon will appear in the notification bar. The Bluetooth will then start to scan for all devices within its range and will start display all available devices.
- Once the scan is complete, all the devices found will be displayed in a list under available devices.

Once the device has been identified, click on it to connect.



**List of available  
Bluetooth devices**

**Note: The maximum  
detecting time of the  
phone is 2 minutes**

## **Power on Wi-Fi**

 
---

Settings » Wi-Fi and select to power on Wi-Fi

- Click on the desired Wi-Fi network to be connected.

**Note:** Unsecured networks can be connected to directly - secured networks require a password or credentials prior to connection.

To display advanced options, click on the available option tab.

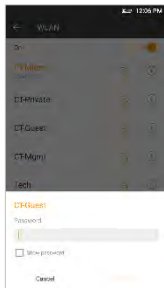

The network connection screen displays the password field

# Opera Browser

Opera is the fast and secure way to navigate with your Android phone.

## **Quick Access Tab**

---

### **History**

Displays your recent browsing history

### **Speed Dial**

Displays your favorite sites, bookmarks, and saved pages as a gallery of images. Add folders or reorganize your Speed Dial with the swipe of a finger

### **Discover**

Get recommendations for top stories, arts, business, entertainment, and other popular categories based on your preferences.

## **Menu Options**

---

### **App Layout**

» This option changes the layout of the browser

### **New Tabs**

» This option adds additional tabs

 
### **Data Savings**

» This option enables/disables data savings mode



## Clear Browsing Data

» This option clears any data stored

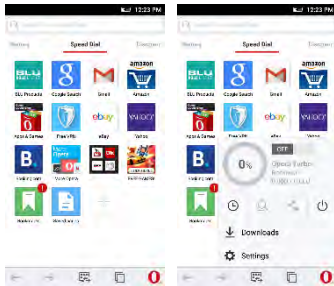

Click menu to access  
the Opera internet  
browser options

## Gmail

Gmail is Google's free email service. To access the Gmail program, click the applications menu and click on the Gmail icon and either sign in with your existing account or follow the instructions to create a new account.

**Note:** In order to keep accounts streamlined with Google services, your Gmail account user name and password will be used for some Google programs that include Google Play Store, Google Drive, Google Photos, Google +, Google Calendar, and Google Wallet.

### **Open Gmail**

 
---

To access » Click on the Gmail icon.

### **Sending an Email**

---

- » Click the Compose button to create a new email.
- » Enter the recipient's email address.
- » Enter a subject
- » Compose your message. Click the attachment button to add an attachment.
- » Click the Send button to send the email.

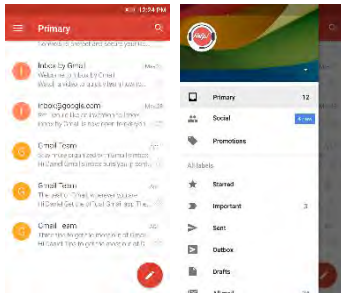

**The Gmail inbox is separated by default in three different categories.**

**These categories include primary inbox, social inbox where all your Facebook, Twitter, and social media emails are separated to and your Promotions inbox where all your commercial emails are separated.**

**You may adjust these categories in Gmail settings**

## Play Store

Google Play allows you to download music, movies, and games directly to your device.

 
To access the Google Play Store, click on the applications menu and then the Play Store icon.

**Note:** You will need to log in to your Google account when configuring the phone or entering the Play Store for the first time.

## Open the Play Store

---

To access » Click on the Play Store icon


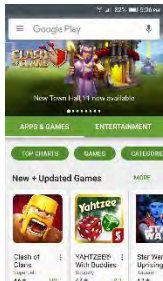


Search and select  
between different Play  
Store categories

## Installing an Application

  ---

- » Browse through the categories available or enter the name on the search text box to find your desired application.
- » Click on the application.
- » Click on **INSTALL** (for free applications) or click on the **PRICE** (for paid applications).
- » Follow the on-screen instructions to complete the installation.

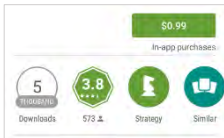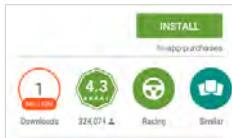

## Amazon Services

The Amazon Shopping app lets you shop millions of products and manage your Amazon orders from anywhere. You can browse, shop by department, compare prices, read reviews, share products with friends, and check the status of orders already placed. You can compare prices and availability by

scanning a barcode, through an image with your camera, or using your voice.

## **Amazon Shopping**

 
---

To access » Click the applications menu then on the Amazon Shopping icon.

**Amazon  
search bar**



**Click on the menu  
bar for additional  
options**

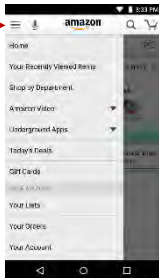


## **Amazon Search Options**

---

You may search the Amazon Shopping app through practical and convenient methods such as voice

 recognition and picture recognition.

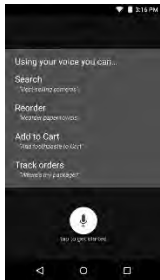

**Picture  
recognition scans  
whatever is being  
displayed and  
automatically  
searches for it**



## **Amazon App Store**

To access » Click the applications menu then on the Amazon App Store icon.



Search  
available Apps  
and Games

Click on the menu  
bar for additional  
options

 


## Installing an Application

- » Browse through the categories available or enter the name on the search text box to find your desired application.
- » Click on the application.
- » Click on **Get / Download** (for free applications) or click on **Buy App** (for paid applications).



» Follow the on-screen instructions to complete the installation.

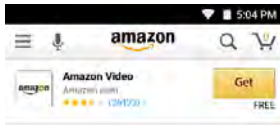


Do not forget to download and try the App of the Day!

## Amazon Kindle

 To access » Click the applications menu then on the Amazon Kindle icon.



**Click the menu  
bar for additional  
options**

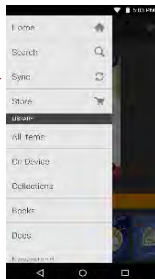

**Kindle  
recommended  
options tailored  
for you**



## Camera

**Prior to use:** It is suggested that you insert SD card before using the camera or video camera. All photos or videos taken by the phone should be typically stored in the memory card for storage of large capacity images and videos.

## **Open the Camera**

---

To access » Click the on the Camera icon

**Note:** You may place a camera shortcut icon on any of the screens

## **Taking a Picture**

---

 
- » Aim at the object or scene that the picture will be taken.
- » Click the Shutter button on the screen to capture the image.
- » After taking the picture, the file will be saved in the cameras gallery folder.
- » You can view the photos by clicking the preview box button.

## **Recording a Video**

---

- » Aim at the object or scene that the video will be taken.
- » Click the Video button to start recording.
- » Click on the Video button to stop recording.

You may adjust various settings for the camera by pressing Menu while in the camera interface. When in the standard camera mode, you can switch to video to record or click the gallery preview box.

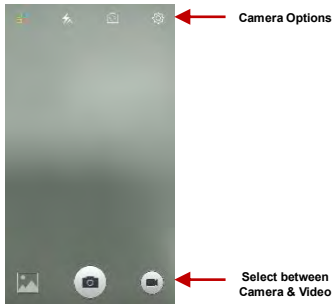


## Chameleon

### Theme Color

---


Take a picture of any scene or object and change the phone's theme colors to match the picture that was

 taken.

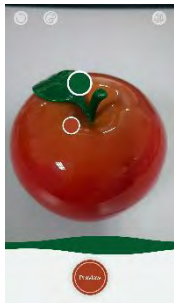

**Take a picture and  
move the circle  
around to select the  
color or shade. Once  
selected click preview**

 **Preview the color  
selected**

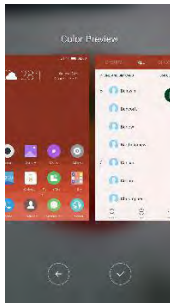

# Gallery

The gallery organizes all your pictures and videos in a single application.

### **Open the Gallery**

---

 
To access » Click on the Gallery icon

### **Viewing Pictures and Videos**

---

» Click on an image to view in full screen. To play a video clip, click the play button.

» To navigate through the gallery, slide your finger to the left or right.

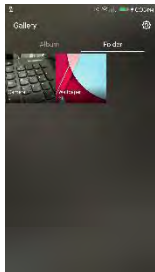

**Pictures and videos are stored in separate albums or folders**

## **Share Pictures**

You may share pictures by sending them through different types of installed applications. You may also send pictures through the MMS message function by attaching a picture and via Bluetooth.

## **Adjust Image**

Press Menu and select edit to adjust images. You may select from different effects that may include Vintage, Black and White, Instant, Latte, Litho, X-Process, Crop, Rotate, Mirror, Straighten, Vignette,

Contrast, Exposure, Auto color, Shadows, and Vibrancy among other options.

### **Crop Pictures**

---

Click menu and crop to adjust the size of the picture. Once the picture appears, pinch your fingers in or out to adjust the size. To keep proportion, hold down any of the four corners of the image and adjust.

## **Music**

 
### **Open Music**

---

Click on the Music icon to open the Music Player



**Song Status**

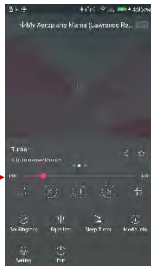


**Track Controls**



## **Search Music**

You may choose to search for music from media folder through artist name, song name, album name. The following formats are available: AMR, MIDI, MP3, WAV, and OGG.

 **You may search  
music from Artist  
or Song**

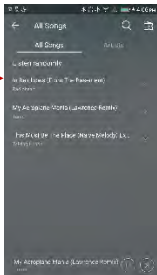

**You may also save, play,  
and organize music  
through playlists**

## **Set Music Player in the Background**

Click on the Home key to move the Music Player to the background. You will see an icon on the status bar indicating that the music player is active.

Music icon while the music player is in the background

Scroll down on the notification bar for music player controls while on background



 
## FM Radio

### Open the FM Radio

---

To access » Click the applications menu then on the FM Radio icon.

**Note:** The FM radio uses the wired headphones as an antenna in order to receive signal. Before using this function, connect the original equipment headphones that came with the phone.

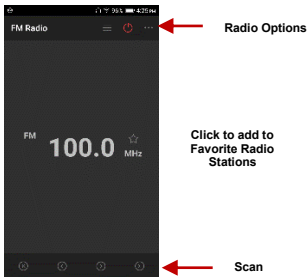

### **FM Radio as Background**

Click on the Home key to move the FM Radio to the background.

### **Favorite Channels**

Click to scan FM channels automatically then click to add any of your favorite radio stations.

 
# Sound Recorder

You may send any recorded audio via the File Manager by selecting any of the default share options that include Bluetooth, MMS, Google Drive and Gmail.

## Record

---

- Keep the phone's microphone near the sound source.
- Click the record button to record the audio and click the stop button to end the recording.

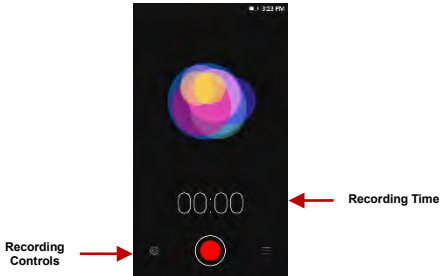

It is suggested that you save all your recordings in your SD card for maximum storage capacity. Please ensure the SD card is installed for extended storage space.


## File Explorer

 The file manager allows you to search and organize your stored phone files conveniently and efficiently through one program.

### **Open the File Explorer**

---

To access » Click on the File Manager icon.

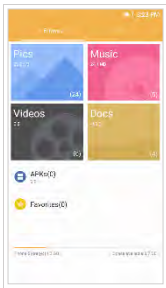

**Scroll and search through the File Manager for stored phone files.**



**You may also search or add new folders from the File Manager interface**

## Calendar

The calendar helps keep track of your life's most important moments in one application.

### **Open the Calendar**

---

 
To access » Click on the Application Menu then on the Calendar icon.

## Creating an Event

- » Long press on the specific date to add a new event. In the new event window, click Edit.
- » Enter the new event details including name, location, start date and time.
- » Click to save the settings.



**Enter Calendar information that ranges from Name, Location, Date among other options**

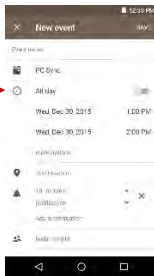



**Click to add a new event**



# Alarm Clock

Click on the Clock icon then click the alarm tab to enter the alarm clock interface.

  This option allows you to add and edit alarms.

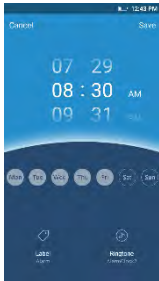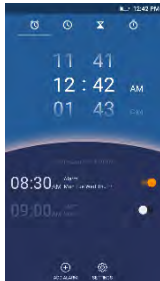

Click to add, edit or delete alarms

Then click on the specific hour and minute to set the alarm.

# Settings

## Wireless & Networks

---



### Airplane Mode

- Turn on Airplane Mode.

*Note: When in flight mode, all network connections will turn off automatically.*



### Mobile Networks

- Mobile Data Connection settings (APN, Preferred Networks)



### Wi-Fi

- **Settings » Wi-Fi** to power on. When on, the Wi-Fi will automatically search for available networks. Any unsecured network can be used directly and any secured network requires a password or credentials prior to connection



### Bluetooth

- Power on Bluetooth. Once on, Bluetooth will automatically scan for any nearby open devices
- Click to connect device



### **More Wireless & Networks**

- Tethering, Portable Hotspot, VPN
- Airplane Mode

***Note:** Airplane mode will turn off all network connections automatically.*

---

## **Basic Settings**



### **Date & Time**

- Date and Time adjustment.
- Select Date Format - There are 3 kinds of formats you can choose from: Month-Day-Year, Day-Month-Year and Year-Month-Day.



### **Sound & Vibration**

This option sets the phone ring tones for receiving calls and notifications. Some of the settings include:

- Vibrate, volume, ring tones, ring tones notification, dial touchpad, and haptic feedback and tones



### **Notification Center**

- Manage alert and update notifications for installed applications



## Control Center

- Setup quick settings permissions



## Display

- Brightness, Wallpaper, Sleep, Daydream, Font Size, and Rotation



## Security

Set up basic screen locks: Use slide, pattern, PIN or password to lock the screen.

- Pattern: The initial set up will include simple unlock instructions and examples. Click to continue the security pattern step. **Note:** You can add additional pattern security at power on.
- PIN: Enter a PIN number to unlock the screen
- Password: Use a password to unlock the screen

**Note:** You may stop this security feature at any time.

### Set up SIM card PIN lock

- SIM card PIN (Personal Identification Number) is used to prevent unauthorized use of SIM card.

To change a blocked PIN code, you will need to unlock the SIM lock then go to the Change Password screen. The phone will automatically prompt you enter the old PIN code and ask to enter a new PIN code

twice. The phone will then prompt you that the change was successful. If you enter the PIN incorrectly three times, the SIM and PIN codes will be automatically locked.

You will need the PUK code to unlock the phone that is available through your service provider. If you enter the PUK code incorrectly 10 times, the SIM card will be permanently locked. Please see your service provider for a new SIM card

- Unknown Sources – Allow installation of apps from unknown sources



### **Location**

- High Accuracy – Use Wi-Fi and Mobile Networks to determine location.
- Battery Saving – Use Mobile Networks to determine location.
- Device Only – Use GPS to determine your location.



### **Power Management**

- View general power consumption information.

---

## **Operation**



### **Smart Gestures**

- Set Smart Gesture configuration. Click on the gesture and follow the on-screen instructions.



## **Suspend Option**

- Sets a quick access button on the home screen. You may long the press the button to hide it in notification bar.

---

**Hardware**



## **Storage**

- View phone memory usage information and set default write disk.

---

**System**



## **Scheduled power on & off**

- Set the phone to automatically turn on or off at a specific time.



## **Language & Input**

- Language – Change the language of the phone
- Personal Dictionary - Add or delete words to the custom dictionary keyboard,
- Spell checker, voice typing, text-to-speech, Google voice typing.



## **Backup & Reset**

- Backup Data – Will back up all application data, WLAN passwords, and other settings to Google's servers
- Restore to Factory Settings – Restores phone and erases all stored data completely.



### **Accounts**

- Add and manage accounts (IMAP, POP3, Corporate, and application accounts)



### **Apps**

- Manage Applications - Manage and delete installed applications
- Running Applications- Press the Stop button to terminate any of the applications from the running apps list and clear any RAM usage.



### **Accessibility**

- Power button ends call, auto rotate screen, Talk Back, speak passwords and large text



### **Printing**

- You may print files via Cloud Ready printers

(Please check Google Cloud Print website for printer compatibility information)



## Developer Options

If the phone does not display Developer options, press build number seven (7) times in the about phone tab.

- The developer option gives access to USB Debugging and other developer tools.

---

**Others**



 
## About Device

- Phone information status and firmware updates

# Storage

Connect the phone with the USB cable provided. Once connected, a connection interface will appear. In the connection mode interface, select one of the available options to transfer files to your computer.



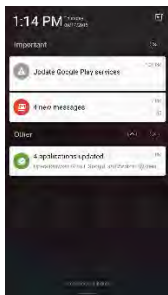

#### USB connection

Charge only ☐

File copy ☒  
Transfer music, videos, documents and other files

View photos ☐  
Browse photos in DCIM and Pictures libraries

Install driver ☐  
If you are unable to connect, select this item

Interim USB debugging ☐  
Enable only when USB is connected

MTP help [Access files on phone through PC](#)



**You may select to transfer files through File Copy. For pictures or images, select View Photo**

## Troubleshooting

Below is a list of common problems that may occur when using your mobile phone. Try these easy troubleshooting steps to resolve any type of issues you may encounter.

**The phone does not power on**

- Press and hold the power key until the startup sequence appears on the display.
- Check the battery level and ensure there is sufficient charge.

**The phone does not respond after several minutes**

- Remove and insert the battery – If the phone has an internal battery, please press and hold the power button.

**The phone powers off by itself**

- Check if the screen lock of the phone is enabled.
- Check if the phone needs to be charged.

**The battery will not charge**

- Check if the battery is already fully charged.
- Make sure that the battery is inserted correctly.
- Ensure that the battery being used is a BLU approved battery.
- Double check if the charger connector is properly connected to the phone.

**Note:** Connect charger only after the battery has been inserted.

**The standby time is too short**

- Please keep in mind that standby time relates directly to phone usage (Internet, Text, Voice Calls, Maps, etc.).
- Batteries typically have to be replaced after a year of use.

**The phone cannot connect to the network (Voice or Data)**

- Verify if you have active service with your service provider.
- Contact your local network service provider and verify if you are within its network coverage area.

#### **The phone displays a SIM Error**

- Make sure the SIM is properly inserted and in its intended slot.
- Make sure that the SIM card is not damaged or scratched.

#### **The PIN code was entered incorrectly three times**

- The SIM card will lock and you will need to enter the PUK code (PIN Unlock Code). Please contact your local service provider to obtain the PUK.

#### **I cannot make calls**

- Make sure that the number you dialed is correct and the dial key has been pressed.
- Use the full national area code when dialing out of your area or when abroad, use country-specific international access codes.

#### **I cannot receive calls**

- Make sure that your phone is connected to a network.

#### **The caller ID does not display on incoming calls**

- Contact your local network service provider and verify you have the caller ID feature enabled on your account or verify if the caller may have blocked his number from appearing.

#### **The caller cannot leave a voicemail message**

- Contact your local network service provider and verify if the voicemail service is active on your account or check if the network is busy.

### **The phone does not connect to the internet**

- Ensure with your service provider that your account has the appropriate internet/data plan enabled.
- Ensure internet APN settings are configured (Carrier dependent).

### **Text Messages cannot be Sent / Received**

- Ensure text messaging is enabled with your service provider.
- Ensure APN settings are configured (Carrier dependent).

The information provided in this user manual is subject to change without notice and BLU Products reserves the right to modify the manual at any given time. BLU Products has made every effort to ensure that this user manual is accurate and disclaims responsibility and liability for any inaccuracies or omissions.