Prestigio PSP3537 DUO



Youmay find detailed warranty information at: **www.prestigio.com/support/warranty-terms**. © Copyright 2017 Prestigio. All rights reserved.

Prestigio Unboxing



Inside your package Your phone at a glance **Buttons**



Back

Troubleshooting

Next

Inside your package

THESA

٠

•

٠

Prestigio

MultiPhone

USBcable

Battery

Adapter

UK only)

Travel adapter (for

٠


٠

٠

•

٠

Your phone at a glance

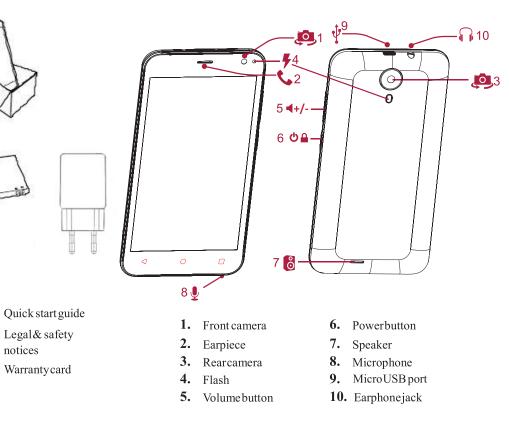



Inside your package Your phone at a glance Buttons

Buttons

 $The back, start\, and\, search\, keys \, help\, you navigate$

yourphone.

- Tap 合 to return to the home screen.
- Tap 📥 toreturntothepreviousscreen.



Do not cover the antenna area with your hands or other objects. This may cause connectivity problems or drain the battery.

 


Pleasereadthe "Legal and safety notices" in your package before use.

Menu Menu



Back



Prestigio Getting started

Installation Power onyour phone Home screens List menu

Menu

Back






Congratulations on your purchase and welcome to Prestigio. To get the most from your product and enjoy all that Prestigio has to offer, please visit: www.prestigio.com/catalogue/MultiPhones For more detans about your product, please visit: www.prestigio.com/support

Installation


Follow the steps below to prepare your phone for using. Remember to turn off your mobile phone before removing the rear panel.

1


Remove the rearpanel.

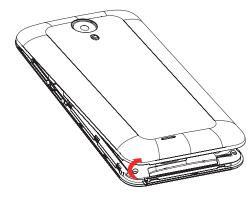

2 Take out the battery.

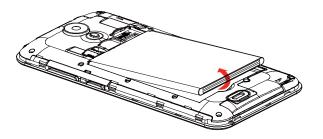

3 Insert the SIM card. Insert the SIM card.

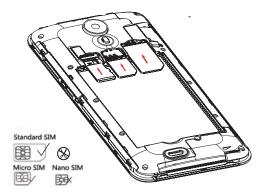




Installation Power onyour phone Home screens List menu



 
Back










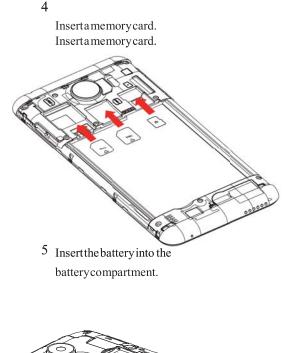

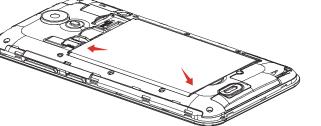

6 Puttherearpanelback.

- The use of incompatible SIM cards, manually cut SIM cards, or SIM card adapters may damage the cards or the device, and it may corrupt the data stored on the cards.
- Scratching or bending of the SIM cards may result in the loss of contacts and information, so be careful when handling, inserting, or removing the cards.

Frequent writing and erasing of data shortens the lifespan of memory cards.



Installation Power onyour phone Home screens List menu





Troubleshooting




Dual SIM standby



The device supports two SIM cards for voice calls and data connection. During avoice call or data transfer via one SIM card, the other SIM card becomes inactive (not registered with your mobile network operator). This means that you cannot receive incoming calls or use data connection via the inactive SIM card. When the call or data transfer ends, both SIM cards will become active and show on the list of registered networks.


Power on your phone

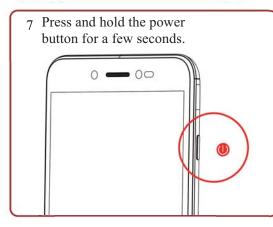

When turning on the device for the first time, follow the on-screen instructions to set up your device.



Toturnoffyourphone, press and hold the powerkey, and and then tap **Power off** on the pop-up screen.

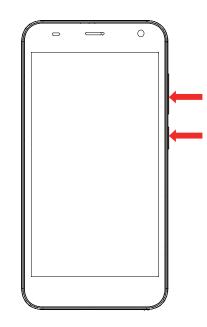



Installation Power onyour phone Home screens List menu

Menu

Back

Tr

Troubleshooting

Nort



Homescreens

Yourhome screen is the starting point to access all of yourphone's features. The home screen can have multiple panels. To viewother panels, swipe left or right.

Tap \frown to return to the home screen. Yourphone's home screen consists of the following:



Personalise your wallpaper

Pick your favourite photo as your Home wallpaper. Choose from the available wallpapers, or use any photo you have taken with the camera.

- 1. On the home screen, tap => Wallpaper
- 2. Selectan image and tap Setwallpaper.

Add an appicon to home screen

- 1. On the homescreen, tap (***) to open the list menu.
- 2. Tapandholdan application icon.
- 3. Dragit into a panel preview.

Remove an item on home screen

- 1. Tapandholdan item toremove.
- 2. Dragtheitem to the **Remove** option.
- **3.** When the **Remove** option turns red, release the item.



Installation Power onyour phone Home screens List menu

List menu

All your apps' icons can be found on the list menu. On the home screen, tap to is open the list menu. Tap is or to return to the home screen. Your phone's list menu consists of the following:



🔪 Menu

Back



Troubleshooting

Prestigio Basics



Finger tips

Charge the battery Connect toyour PC Rotate the screen Lockand unlock the screen Use the notifications panel Enter text System update Status icons




Troubleshooting


Next

Finger tips

Only use your fingers to use the touch screen.

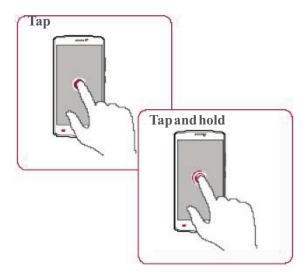

- To open an application, to select amenu item, to press an on-screen button, or to enter a character using the on-screen keyboard, tap it with a finger.
- Tap and hold an item for more than 2 seconds to access available options.

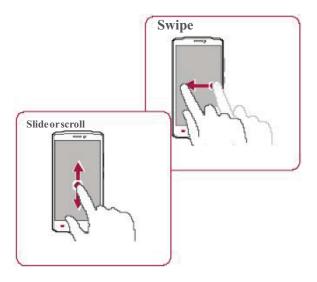

Quickly swipe your finger vertically or horizontally across the screen to go to other home pages, scroll through documents, and more.

•

٠

Slide your finger vertically across the screen to opendrop-down menu. Dragupor down to scroll.

 
Finger tips

Charge the battery Connect toyour PC Rotate the screen Lockandunlockthe screen Use the notifications panel **Enter text System update Status icons**







Back





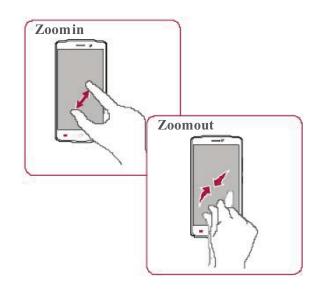

- Spreadtwo fingersapart on a webpage, map, . orimagetozoom in apart.
- Pinchtwo fingers together on a web page, map, ٠ orimagetozoom outapart.

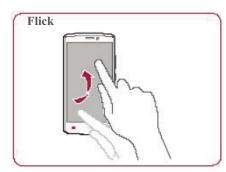

Flick left orright on the home screen or the ٠ applications screen to see another panel. Flick up or down to scroll through a web page or a list, such as contacts.

 


Finger tips Charge the battery Connect toyour PC Rotate the screen Lockandunlockthe screen Use the notifications panel Enter text **System update Status** icons






Back



Charge the battery

 A new battery is partially charged. The battery iconat the upper-right cornershows the level of chargingstatus.



- 1. Plugthesmall end of the charger into the micro USB port of the device, and plug the large end of the charger into an electric socket.
- 2. Afterbeing fully charged, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket.

Always use authentic accessories to optimise your battery performance. Non-authentic accessories (eg. chargers) candamage your battery and even your phone.

Optimise your batteryperform ance Here are sometips to help you optimise your batteryperformance.

- Always ensure that your phone profile is appropriately set to meet your actual usage.
- If you are not using Bluetooth, Wi-Fi, GPS or other applications, turn them off.
- Adjust the intensity of your display screen's backlight to low or medium level and for the shortest duration.
- Avoid using orplacing yourphonenear magnetic objects (eg. aradio ortelevision) or on metal surfaces, which will impact the network connection and ultimately drain power from your battery.



Finger tips Charge the battery Connect toyour PC Rotate the screen Lockandunlockthe screen Use the notifications panel **Enter text System update Status icons**



Menu

Back




Troubleshooting



Connect to your PC

You may need to connect your phone to a PC in order to complete activation. Your phone's micro USB portallows you to exchange media and other files with a PC.

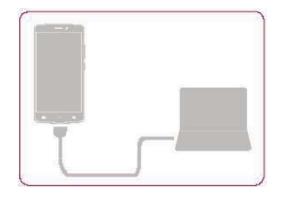


Loadfiles from your PC

- 1. Connect your phone to the PC with the included USBcable.
- 2. Open the notifications panel, and then tap Connected as a mediadevice > Media device (MTP).
- **3.** Transfer files between your phone and the PC.

Rotate the screen

For many screens, you can automatically change the screen orientation from portrait to landscape by turning yourphonesideways. Whenentering text, you can turn your phone side ways to bring up a biggerkeyboard.

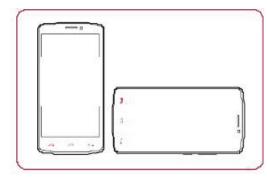



To prevent the display from rotating automatically, open the notifications panel and deselect Autorotation.



Some applications do not allow screenrotation.

Some applications display a different screen depending on the orientation.

 


Finger tips Charge the battery Connect toyour PC Rotate the screen Lockandunlockthe screen Use the notifications panel **Enter text** System update **Status icons**










Back



Lock and unlock the screen

When not in use, lock your phone to prevent unwanted operations and save the battery power.

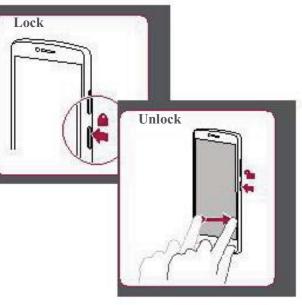

Autolock

Youcanset a time span for the screen to be locked automatically.

1. On the list menu, tap Sleep.

Settings>Display>

2. Selectyour desired time span. **Setscreenlockpattern**

Protectyour personal information and prevent others from using your phone without your permissionby setting a screen lock pattern, PIN, or password.

On the list menu, tap ٠ Screen lock.





When your phone is locked, Your phone canstill:

- Receive calls, text messages, and other updates.
- Play music. •
- Adjust the volume. .



Finger tips Charge the battery Connect to your PC Rotate the screen Lockand unlock the screen Use the notifications panel Enter text System update Status icons



Menu


Troubleshooting

Back



Use the notifications panel

Slide down from the top of the screen to open thenotifications panel. When you get a new notification, you can open it to see what event or new info you have received. You can also quickly access settings from it. It allows you to easily turn airplane mode, Wi-Fi, and Blue tooth on and off. It also provides a shortcut to set the brightness and orientation of your screen.

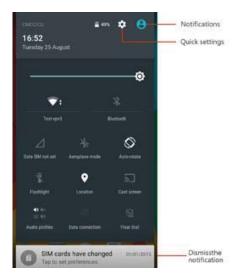

Entertext

Use the on-screen keyboard to entertext, such as contact information, mail, and webaddresses.

Use the keyboard



- 1. Characterkeys
- 2. Shiftkey
- $\mathbf{3.}$ Numbers and symbols key
- 4. Entertext by voice
- 5. Spacekey
- 6. Enterkey
- 7. Backspacekey



Finger tips Charge the battery Connect toyour PC Rotate the screen Lockandunlockthe screen Use the notifications panel Enter text **System update Status icons**



Menu

Back





Next

Enter text by voice

Youalsocanenterthetext by activating the voice input featureand then speak into the microphone. Yourphone displays what youspeak. Voicetyping: tap 🖢 onthe screen.

Copyandpastetext

Tapaword, dragthecircles before and after •

the word to highlight the section you want to copy, and tap.

Topastethetext, tap and hold at the point ٠ where you want to paste the text. Tap Paste.

Systemupdate

Yourphone can check and notify you if there is a new upgrade available. You can also manually check if there is an available update. You can set this option in Settings>About phone>updates.



Do not press any keys while the device is upgrading.

Statusicons

The icons in the status barat the top of the screen give information about yourphone:

×	Silent mode activated	3Gnetworkconnected
Q ,	Vibrationmode activated	wi-Ficonnected
×	Airplane mode activated	Roaming (outside of
	Batterypower level	Bluetoothisactivated
e.	Callsinprogress	Connected to PC
ř		microphone connected
ļ.		Connected
G/	GPRSnetworkconnected	NoSIMcarddetected
E.1	EDGE network connected	Alarmisset
H	HSPA network connected	

Prestigio Phone

 


Calls **Contacts Contact groups**



Menu





Next

Learntouse calling functions, such as making and answering calls, using options available during a call orcustomising and using call-related features.

Calls

Make and end a call

1. On the home screen or list menu, tap

Phone.

- 2. Tap III to open the dial pad. 📞
- 3. Enterthephonenumber, and then tap.
- 4. Tap **a** toend a call.

Answer a call

When you receive a phone call from a contact, the incoming call screen appears. To pick up the phone, Slide 🕓 to 🐛

Silence an incoming call

When acall comes in, press the power button or volume button to mute the ringing sound without rejectingthecall

Set up a conference call

If network is available, you can make the first call or acceptacall. Then simply dial each subsequent call toadditto the conference.

- 1. During a call, tap 👤 to make a call to another person.
- 2. The second number is dialled, and the first call is put on hold at this time.
- 3. Tap I to add the contact to a conference call.



Makesure your SIM card is enabled with conference calling service. Contact your mobile operator for details.

 


Calls **Contacts Contact groups**

u







Make an emergency call

In some regions, you can make emergency calls even if you do not have a SIM card installed or your SIM card has been blocked.

- 1. Onthe homescreen, tap **Phone**.
- 2. Tap III to open the dial pad.
- 3. Dial the emergency number for your location, and then tap **C**.



If you are out of base station coverage, you will not be able to make an emergency call.

In Europe, the standard emergency number is 112; in the UK, it is 999.

Contacts

Contacts are stored in one of the two available phonebooks: SIM phonebook (located on your SIM card) or the Smart phone book (located on your phone).

To view your contacts, tap People on the • homescreen or list menu.

Search for a contact

- 1. Scroll up or down the contact list.
- 2. Tap and enter the first few letters of the name in the search bar.
- 3. Select the contact from the option list.

Adda new contact

Methodone:

- 1. On the home screen or list menu, tap Phone.
- 2. Tap toopen the dialpad.
- 3. Enteranumber, tap 2. Addtocontacts.
- **4.** Add details as desired.
- 5. TapDoneto finishandsave.

Method two:

- 1. Goto People to view the contact list.
- 2. Tap 🔔 to add anew contact.



Calls **Contacts Contact groups**



Menu

Back

Troubleshooting



Import/Export contacts

- 1. Go to People to view the contact list.
- Tap >Import/export. 2.
- Select the contacts storage. 3.
- 4. Followthepromptstofinish.

Delete contacts

- 1. Go to People to view the contact list.
- Tap **Delete contact**. 2.
- 3. Choose the contacts you wish to remove.
- 4. TapOK to delete the contacts.

Contact groups

Youcan group your contacts as different groups. For different groups, you can use different identifications, and send messages to agroup.

Addcontacts to a group

- 1. Go to **People** to view the contact list.
- 2. Tap 🙅 toviewcontactgroups.
- 3. Tap 🛖 toadd contacts to a group.
- 4. Enteryourgroup'sname, and tap 🔍 to add contacts.

Prestigio Messages



Send a message

Checkyour message Reply to a message Forward or delete a message **Delete a conversation**

Messages let you exchange text messages with other SMS and MMS devices via your cellular connection. Your sent and received messages are neatly grouped into conversations, by contact name orphone number.

Send a message

On the home screen or list menu, tap **Messaging**. And then tap **I** to start composing a new message. 2 B 10 14: New message 0 people 1 tro 5 Type message 2 3 4 5 6 7 8 9 0

- 1. Enteraphonenumber
- 2. Add picture/video/audio/slideshow
- 3. Moreoptions
- 4. Add arecipient from your contacts list
- 5. Sendthemessage



There is a limit on the number of characters for a single text message (displayed above the send button). If you exceed the limit, your text message will be delivered as one but will be billed as more than one message.

www.prestigio.com



Menu

Back



Troubleshooting













Send a message **Checkyour message Reply to a message** Forward or delete a message **Delete a conversation**



Menu



Troubleshooting



Checkyour message

Depending on your notification settings, your phone plays a sound, vibrates, or displays the message briefly in the status barwhen you receive anew message.

• On the home screen or list menu, tap Messaging. Tocheckamessage, tapa conversation.

Reply to a message

- 1. On the messages screen, tap the conversation containing the message.
- 2. Inthetext box, enteryour message.
- 3. Tap > to send the message.

Forward or delete a message

- 1. On the messages screen, tap the conversation containing the message.
- **2.** Tapandhold amessage.
- 3. Inthe pop-up window, select Forward or Delete.

Delete a conversation

- 1. On the home screen or list menu, tap Messaging to display the messages screen.
- 2. Tapandholda contact or phone number.
- 3. Tap 📋 at the bottom of the screen.

 
Prestigio Mail



Set up an email account Send a mail View your mails Reply to a mail Delete mails



Tı



Use this application to sendor view email messages. Learn to sendor view email messages via your personal or company email account.

Set up an email account

- 1. On the home screen or list menu, tap **Email** and do one of the following:
- If this is your first time adding an email account in Mail, move to the next step.
- If you have already added an email account, then tap >Settings>add account.
- 2. Enterthe email address and password for your email account.

 


When you finish setting up the email account, the email messages will download to your device.

Delete an email account

- 1. Go to Settings>Accounts.
- 2. Tap the email account your want to delete.
- **3.** Tap **>Removeaccount**.

Send a mail





- 1. Enterarecipient
- 2. Enterthemail subject
- 3. Moreoptions
- 4. Sendthemail



Set up an email account

Send a mail View your mails Reply to a mail Delete mails



Back

Menu



Next

Viewyour mails

- 1. On the email inbox, tap \mathcal{O} to check whether there is a new mail.
- **2.** Tapthedesired mail toreadit.
- Use < or > to view the previous or next mail.

Search for a mail

- 1. Tap to display the search bar.
- 2. Choose as earch option in the drop-down list.
- 3. Enter the first few letters of the mail sender or subject in the search bar.
- 4. Select the mail from the list.

Reply to a mail

- **1.** On the email inbox, tap the email message.
- 2. Tap **(**, and then compose your mail.
- 3. Tap \rightarrow to send the mail.

Delete mails

• Tap the mail you wish to delete, and then tap

Prestigio Camera



Yourcameraatagalance Take a photo **Record** a video **Photo and video settigns**



Back


Troubleshooting

Next

With your phone, you can take both photos and videos as desired. In addition to a rear camera, there is a camera on the front for video calls and self-portraits.

- Tousethecamera, on the home screen or list menu, tap Camera.

Your camera at a galance

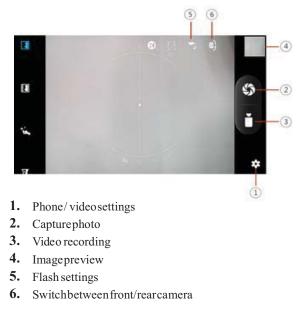

Takeaphoto

- 1. Turn on the camera.
- 2. Changethe camera setting if necessary.
- 3. Point the cameraat what you want to capture.
- 4. Tap o tocapture the photo.

Take a photo of yourself

- **1.** Turn on the camera.
- 2. On the screen, tap
- 3. Tap or to capture the photo.

Take a panoramic photo

You can capture anything wide or tall objects in a single photo with your phone.

- 1. Turn on the camera.
- 2. Scroll down the capture modes, and then tap
- 3. When you are ready to take the first shot, tap -
- 4. A directional arrow appears. Panyour phone as smoothlyas youcan.
- 5. The camera will stitch the shots into a single photo.



Your camera at a galance Take a photo Record a video Photo and video settigns



Back



Next

Record a video

- 1. Turnonthecamera.
- 2. When you are ready to start recording, tap
- 3. Tostop recording, tap.

Photo and video settigns

Before you take a photo or record a video, customise your photo/video settings.

Generalsettings		
GPSlocation info	Attacha GPS location tag to the photo.	
Exposure	This determines how much light the camera's sensor receives.	
Scenemode	Select your desiredscene mode.	
Whitebalance	Select anappropriate white balance, so images have a true-to-life colour range.	
Anti-flicker	Select a bandto avoid the impacts on photos caused by flickers from lighting sources.	
Restoredefaults	Restore to default settings.	
Photosettings		
Zeroshutter delay	The ZSD(zeroshutter delay) function helps youcapture photos immediately.	
Facedetection	Set the ideal exposure and clarity of faces.	
Selftimer	Select a time span for shutter delay to take a self-por trait.	

Picture size	Select from various standard sizes for your picture.
Previewsize	Set the preview screenratio before you take a photo.
ISO	$\label{eq:AnISOvalue} AnISO value indicates the light sensitivity of$
	your camera's imaging sensor. Higher values are for fast-moving or poorly-lit objects.
Videosettings	
EIS	The EIS (Electronic Image Stabilization) function helps reduce blurringassociated with the motion of a camera during exposure
Timelapse interval	Set the time lapse interval to adjust the speed of your videooutput.
Videoquality	Set the quality level for videosas this setting will affect your file size.

Prestigio MultiMedia



Gallery

Video player Musicplayer FM radio







Next



Gallery

View your photos

1. On the home screen or list menu, tap

Gallery.

- 2. Browseanalbum or a group of photos.
- 3. Tapaphoto to viewit full-screen.

$Zoom \, in \, and \, out$

Spread two fingers aparton any place to zoom in. Pinch to zoom out, or double-tap to return.

Edityour photos

When viewing a photo, use the keys on the screen to edit the photos.



- 1. Edit thephoto
- **2.** Moreoptions
- 3. Share your photo



Gallery Video player Musicplayer FM radio

Video player

You can use the video player on your phone to watch videos.

Watchavideo

- 1. On the home screen or list menu, tap Videos.
- 2. Select the video that you want to watch.
- **3.** Tap the on-screen keys to control the video playback.
- 4. Press the volume button to adjust the sound.
- 5. Tap to select more options.

Music player

You can listen to your favourite music with the music player. The music app is a central hub for your favourite music whether it is stored in your phone or streamed through a music service.

Listen to music

- 1. On the home screen or list menu, tap Music.
- **2.** Tapasong from the list, or tap **4** to find your desired song.
- **3.** Taptheon-screenkeys to control the music playback.
- 4. Press the volume button to adjust the sound.
- **5.** Tap toselect more options.

Menu

Back







Video player Musicplayer FM radio

FM radio

You can listento radio programs with your phone.



You must connect a headset before using the FM radio on your phone.

Listento a radio station

 
- 1. On the some screen or list menu, tap FM Radio.
- 2. Tap >Search. It will start scanning automatically and save the available channels.
- **3.** Use the on-screen keys to control playback:
- 4. Press the volume button to adjust the sound.
- 5. Tap toselectmore options.



Menu



Back



Prestigio Web&network



Connect to the Internet Web browse





Next

You can connect your phone to the Internet and browse a web page.

Connect to the Internet

Yourphone connects to the Internet whenever necessary, using a Wi-Fi connection (if available) or your mobile operator's data connection.

Data connection

You can use your mobile operator's data connection.

Turnon data connection

- 1. Go to Settings>More...>Mobile networks >Data connection.
- 2. Tapto turn on or off data connection.



Some apps and services may transfer data over your mobile operator's cellular network, which may result in additional fees. Contact your mobile operator for details.

Turn on data roaming

Connect to your mobile operator's partner networks and access data services when you are out

ofyour mobile operator's coverage area.

Goto Settings>Datausage.
Tap >Dataroamingtoturnitonoroff.



Using data services while roaming may be cos tly. Check with your mobile operator for data roaming rates before you use data roaming.

Use your phone as a wireless router

Share your dataconnection with other devices by turning your phone into a wireless router.

- 1. Goto Settings>More...>Tethering& portablehotspot.
- 2. Taptoturnonportable Wi-Fi hotspot.



The other device uses data from your data plan, which may result in data traffic costs. For info on availability and costs, contact your network service provider.

 


Connect to the Internet Web browse





Back





Connect the device to a Wi-Fi network to use the Internet or share media files with other devices.

Connect toa wireless network

- 1. Goto Settings>Wi-Fi.
- Make sure Wi-Fi is switched to On. 2.
- **3.** The Wi-Fi section will show the list of networks detected.
- 4. Tapthedesired Wi-Finetwork youwant to connect to.
- If you selected a secured network, you will be asked to enterthe network key or password.

Webbrowse

You can use your phone to browse websites. Before browsingawebsite, please confirm that you have turnondata connection or Wi-Fi.

Browse a webpage


- 1. On the home screen or list menu, tap Browser.
- 2. Enteryoursearchkeywords or a web page address.



- 1. The previous web page
- 2. The next webpage
- 3. Webpagepreview
- 4. View Bookmarks, History and Savedpages.




Connect to the Internet Web browse

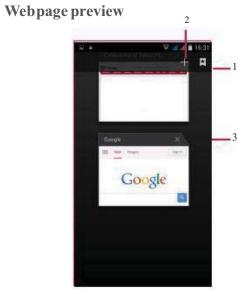

- 1. View Bookmarks
- 2. Open a new page
- 3. Closethewebpage



 Back



Prestigio Bluetooth



Pair with a Bluetooth device **Receive datavia Bluetooth** Send data via Bluetooth



Menu







Troubleshooting

Yourphone can connect to a compatible Bluetooth device for exchanging data. Bluetooth creates a direct wireless connection between two devices overshort distances.

Pair with a Bluetooth device

- 1. Goto Settings>Bluetooth.
- 2. Makesure Bluetooth is switched to On.
- 3. Alist of available Bluetooth devices will appear.
- Tap the device you wish to connect with. 4.
- 5. Thepairing is made if your pairing request is accepted by the other device.

Receive data via Bluetooth

- 1. Makesure **Bluetooth** is switched to **On**.
- 2. Tapyourphone model to make it visible to all nearby Bluetooth devices.
- 3. Accept the request and pair with the other Bluetoothdevice(s).
- 4. Slide to open notifications panel, tap Accept.

Send data via Bluetooth

- 1. Select the file you want to share.
- Tap < to send the file via Bluetooth. 2.
- 3. Select a device to start sending the file.

 


 
The files received via Bluetoothare stored in the Bluetooth folder.

Prestigio Play store



Search and install an app Uninstall an app





Use the Google Play Store to purchase and download applications and games that are able to runon your phone. Choose from a wide variety of free and paid apps ranging from productivity apps, entertainment, to games.



A Google Wallet[™] payment service is required to purchase a paid app. You will be asked to confirm the method of payment when you purchase an app.

• The availability of Store and the selection of items available for download depend on your region.

Search and install an app

- 1. Onthe list menu, tap **Play store**.
- **2.** Browseapplications by category, or tap **4** to search with a keyword.
- 3. Select an application to view information.
- 4. Todownload it, tap Install.
- If there is a charge for the application, tap the price, and follow the prompts to complete the purchase.



Usea Wi-Fi connection to download large files.

Uninstall an app

- 1. On the list menu, tap **Play store**.
- **2.** Tap $\equiv \square$ > MyApps.
- 3. Selectan app you want to uninstall.
- 4. TapUninstall.

Prestigio Maps&navigation

 


Use Google maps Find a location Search for a place Get directions Maps settings





Trouble



Next V

Use this application to pinpoint the location of your phone, search for places, or get directions.

Use Google maps

٠

GoogleMaps lets you track your current location and receive detailed directions to your destination. It also provides a search tool where you can locate places of interest or an address on a map, or view locations at street level.

On the home screen or list menu, tap **Maps**.

- 1. findanaddress orplace
- 2. Mapsettings
- 3. Getdirections
- 4. Show your location

Find a location

Turnon or offlocationservice

Inorder to find your location on your phone, you need to enable location service.

- 1. Goto Settings>Location.
- 2. Switch Location to On.

Findyour location

• On the Maps screen, tap (to find your location on the map.



Ifyouareinanareawheretherearea

lot of surrounding buildings, Locations may have ahard time pinpointing your location.



Use Google maps Find a location Search for a place Get directions Maps settings

Menu

Troubleshooting

Back



Search for a place

Youcansearch for a name of an establishment, street, or city. Suggested matches will be shown while you type.

- 1. On the Maps screen, tap .
- 2. Enterthe placeyou want to search for.
- 3. Select the desired place in the result list.

Get directions

Get detailed directions to where you want to go.

- 1. On the Maps screen, tap Υ to get directions.
- 2. Enteryourstart point and endpoint.
- 3. Select the desired place in the result list.
- **4.** Choose how you want to get to your destination.
- 5. The map opens showing the route to your destination.

Mapssettings

Youcanset up the Google Maps, tap >Settings while viewing the maps.

Prestigio Utilities



Google search Alarm Calendar



Back



Next

Googlesearch

Use this application to search not only the Internet, but also apps and contents on your phone.

• On the home screen or list menu, tap **Google**.

Searchon the web or your phone

- 1. Tapthe search field, and then enter a keyword.
- 2. Select one of the suggested keywords that appear.

Search with your voice

Use Google Voice Search to find information on the web just by speaking to your phone.

- 1. On the home screen or list menu, tap Voice search.
- If the Google search bar is available on the Homescreen, you can also tap
- 2. Speak akeyword orphrase when **Speaknow** appears on the screen.
- **3.** Select one of the suggested keywords that appear.
- 4. If what you are searching for is in the list, tap the item to open it in its compatible app. Otherwise, tap **Retry** to search again.

Alarm

You can set upone or more alarms.

Setanalarm

- 1. On the home screen or list menu, tap Clock.
- 1. On the clock screen, tap 🌑
- 2. Tap 🌗 toaddanewalarm.
- 3. Set the alarm time, and then tap **Done**.
- 4. If you want the alarm for multiple days, tap **Repeat**.

Turnoffanalarm

• Select the alarm, and drag the check button to **Off.**

Stop an alarm

When the alarm sounds,

- Slideto 🔆 : thealarmstops.
- Slideto Z^{Z^z}: the alarmwill sound again after a specific length of time.

Deleteanalarm

 
• Tap the alarm, and then tap.



Google search Alarm Calendar



Back



Calendar

Youcancreate events and make plans on your calendar.

Create an event

- 1. On the home screen or list menu, tap Calendar.
- 2. Select a date, and then tap > New event.
- 3. Editremindersettings.
- 4. TapDone to save the event.

Manage your events

Editanevent

You can only edit events you have created.

- 1. While viewing your calendar, tap the event your want to edit.
- 2. Tap Andthen make changes to the event.
- 3. TapDone.

Deletean event

Select the event your want to delete, and then ٠ tap 📋







AndroidTM6.0(Marshmallow[®])

RAM 512MB+8GB eMMC



MicroSDHC/SDXC≤32GB

5.0"FWVGA 480x854 display

Quad core 1.2GHz

Menu

Back

Troubleshooting





2MP+5MP



UMTS:900/2100MHz GSM:850/900/1800 /1900MHz



Wi-Fi(802.11b/g/n/gps),3G, Bluetooth2.1 A2DP



GPS,A-GPS



2000mAh



144*72*9.8(H*W*D)

 
115g

Prestigio Troubleshooting



Menu





Thephonedoesnotswitchon

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug thechargerandtry to switch the phone on.

The displayshows IMSI failure This problem is related to your subscription. Contact your operator.

The network symbol is not displayed

The network connection is lost. Either youare in a radioshadow(inatunnel or between tallbuildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when a broad), or contact your network operator for assistance/information.

The touchscreen responds slowly or improperly If your device has a touch screen and the touch screenis not responding properly, try the following:

- Removeany protective covers from the touch screen. Protective covers may prevent the device from recognizing your inputs and are not recommended fortouch screen devices.
- Ensure that your hands are clean and dry when tappingthetouchscreen.
- Restartyour device to clear any temporary

softwarebugs.

- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local dealer.

Your battery seems to over heat

You might be using a charger that was not intended for use with your phone. Make sure you always use theauthentic accessory shipped with your phone.

You cannot send text messages

Some networks do not allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

You feel that you have missed some calls Check your call divert options.

The display shows SIM failure

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card maybe damaged. Contact your operator.





Troubleshooting

Back



You rphone is not charging

If the battery is completely flat, it might take several minutes of precharge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the phone camera is not clear Make sure that the camera lens on both sides is clean.

 $You\, r\, device\, freezes\, or\, has\, fatal errors$

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is frozen and unresponsive, remove the battery and try to switch the phone on. The device reboots automatically. If this does not solve the problem, perform a factory datareset. On the list menu, tap **Settings > Backup** & reset > Factory data reset.

 $Others\, cannot \, hearyou \, speaking on \, a \, call$

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly

connected.

Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your device.
- Ensure that the Bluetooth wireless feature is activated on the device you wish to connect to, if necessary.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).