

SHARP



User Manual

SHARP AQUOS C10

Model: SH-Z01

EN

Table of Contents

Chapter 1: Getting Started.....	1
1.1 Your Device.....	1
Front View.....	1
Back View	1
Left View.....	2
Right View.....	2
1.2 Accessories	3
1.3 Installing SIM Card and Memory Card.....	3
Remove the card tray.....	3
Install the SIM card	4
Install the memory card	4
Replace the card tray	4
1.4 Charging the Battery	5
1.5 Turning the Device On or Off	6
Turn Device On or Off	6
Restart Device	6
Set Device to Aeroplane Mode.....	6
Set Device to Ring, Vibrate or Silent Mode.....	6
Set Device to Sleep Mode	6
1.6 Locking and Unlocking the Screen	7
1.7 Using the Headset	8
1.8 Adjusting the Volume	8
 Chapter 2: The Basics.....	 9
2.1 Home Screen	9
Status Bar.....	10
Notifications Panel	11
Open Apps	11
View Recently-Used Apps	11
Control Panel	12
Widgets.....	12
Folders	13
Set Wallpaper	14
Manage Resources	14
Configuring Appearance Settings.....	15
Managing Home Screen Panels.....	15
Changing Phone Settings.....	15
 Chapter 3: Contacts	 16
3.1 Adding Contacts.....	16
3.2 Copying Contacts.....	17
3.3 Communicating with Contacts.....	17
Call Contacts	17
Text Contacts.....	17
Email Contacts.....	18

3.4 Managing Contacts	18
Edit Contacts	18
Delete Contacts.....	19
Send Contact Information.....	19
Add Contact to Blacklist	19
3.5 Favorite Contacts	20
View Favourites.....	20
Add to Favourites	20
Remove from Favorites	20
3.6 Searching for Contacts.....	21
3.7 Grouping Contacts.....	21
 Chapter 4: Using the Phone	 23
4.1 Making a Call	23
4.2 Answering a call	24
4.3 Ending a call	24
4.4 In-Call Options.....	25
4.5 Call Log	25
 Chapter 5: Email & Messaging.....	 26
5.1 Text Message.....	26
Create and Send Text Messages	26
Receive and Manage Messages	26
5.2 Multimedia Message	28
Create and Send MMS Messages	28
5.3 Customizing Message Settings	29
5.4 Email Accounts	30
Set Up Email Account	30
Add More Email Accounts	31
Select Email Accounts.....	32
Delete Email Accounts	32
5.5 Using Email.....	33
Compose and Send Emails	33
Receive Emails	33
Read and Reply to Emails	34
Manage Email Folders.....	35
Customize Email Settings.....	37
 Chapter 6: Using Internet	 39
6.1 Connecting to Internet	39
Wi-Fi.....	39
Cellular Data Network.....	41
6.2 Browsing a Web Page.....	42
Manage Web Page.....	42
 Chapter 7: Using Bluetooth.....	 44
7.1 Connecting to Bluetooth Devices.....	44


Chapter 8: Multimedia Apps.....	45
8.1 Photos and Videos	45
Take Photos	45
Record Videos	46
Capture Modes.....	47
Review Photos	48
Review Videos.....	49
Configure Camera Settings.....	49
8.2 Viewing Photos & Videos	51
 Chapter 9: Programs.....	 52
9.1 Chrome.....	52
9.2 Calculator.....	52
9.3 Camera	52
9.4 Gmail	52
9.5 File Manager	53
9.6 Clock.....	54
9.7 Using Torch	56
9.8 Messaging.....	56
9.9 Gallery	56
9.10 Contacts	56
9.11 Phone	56
9.12 Settings	56
9.13 Recorder.....	57
9.14 Note	58
9.15 Calendar	58
 Chapter 10: Managing Your Phone.....	 59
10.1 Device Settings.....	59
10.2 Changing Basic Settings	64
Date and Time	64
Display Settings.....	65
10.3 Using Wireless & networks	66
10.4 Protecting Your Phone	66
Encrypt Phone	66
Enable SIM Card Lock.....	66
10.5 Configuring Mobile Data Limit	67
10.6 Resetting the Device	68
 Chapter 11: Specifications	 69

Chapter 1: Getting Started

NOTE: Screenshots in the user manual may appear differently on your phone.


1.1 Your Device

 Front View

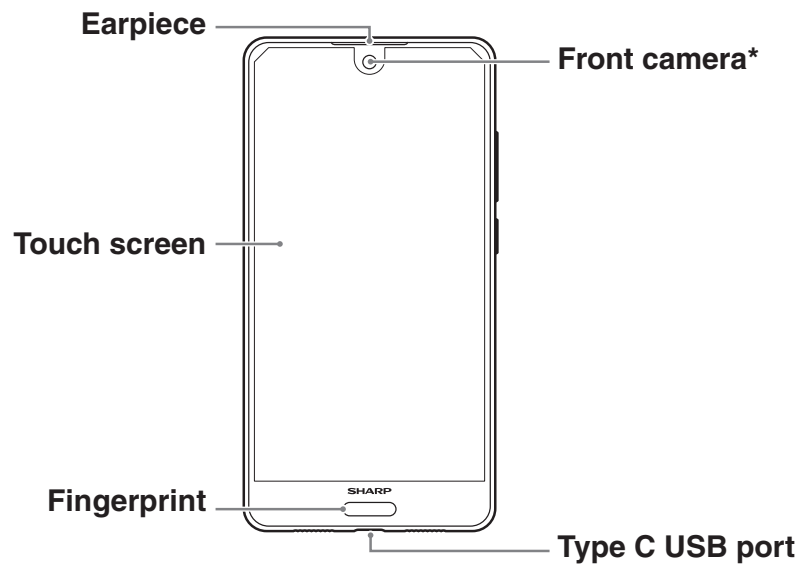


NOTE: *The proximity sensor is located on top of the front camera.

 
Back View

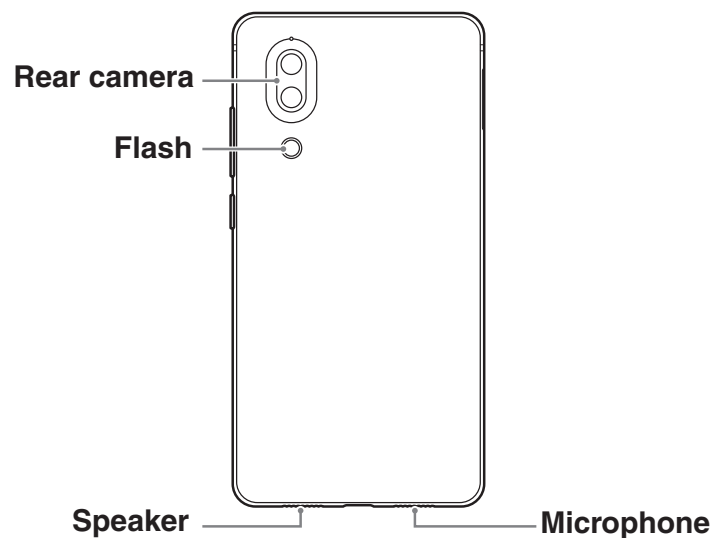

Left View

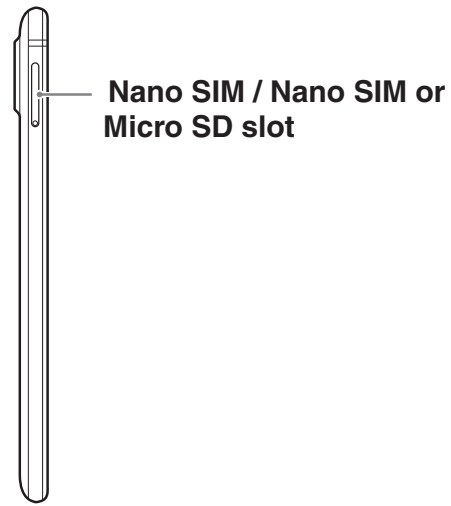 

Right View

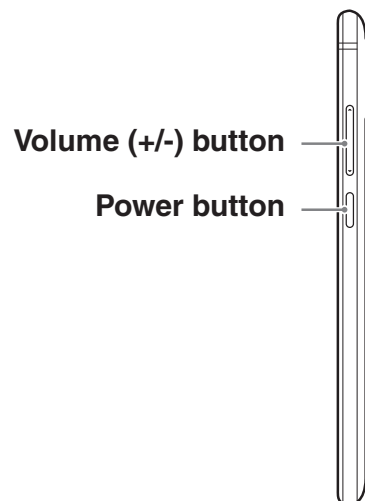 


1.2 Accessories


Your package comes with the following items. If any of them is missing, please contact your retailer.



 
Smartphone

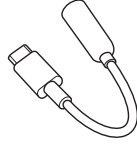

Audio Adapter

 


USB cable

 


Charger



 
Pin

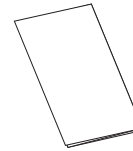

Quick Guide

 

Warranty card

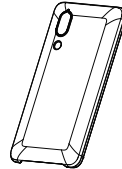 


Protection case

1.3 Installing SIM Card and Memory Card

Remove the card tray

 
1. Turn the device off.
2. Insert the bundled pin through the hole on the card tray.
3. Push to eject the card tray.

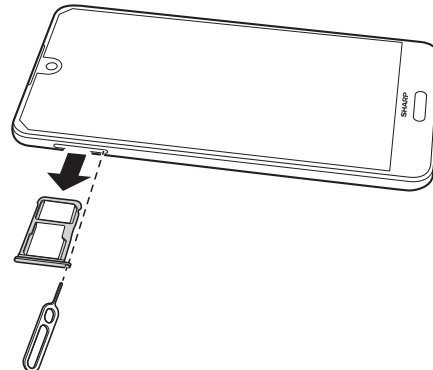

Install the SIM card


The card tray can be used to install two (2) nano sim cards or one (1) nano sim and one (1) memory card.

 Place the two (2) SIM cards onto the tray as illustrated.

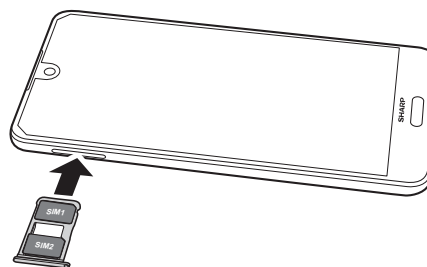

Install the memory card

 Place the memory card onto the tray with the golden connectors facing down.

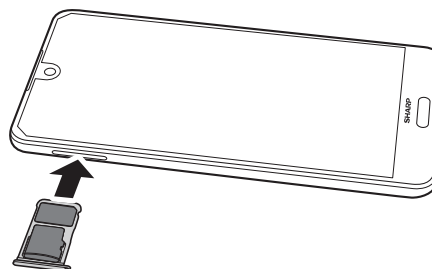

Replace the card tray

 
Push the card tray into the card slot.



1.4 Charging the Battery

The battery that came with the device is only partially charged.

Charge the battery

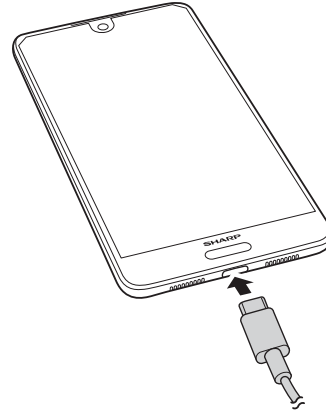1. Connect one end of the USB cable to the USB port of the device.
2. Connect the other end of the USB cable to the AC adapter.
3. Plug the AC adapter to a wall outlet to start charging.



When the battery is charging and the device is turned on, the  icon is displayed on the status bar. When the battery is fully charged, the  icon is displayed on the status bar.

Warning

- Please use indoors and in dry places.
- Overheat protection mechanism is activated, the device will temporarily stop charging:
When the system temperature reaches the maximum operating temperature, the device will automatically activate the overheat protection mechanism and temporarily stops battery charging. When the system temperature drops, the system will automatically restart the battery charging.

NOTE: Battery life varies depending on network, apps, and ambient temperature.

1.5 Turning the Device On or Off

After installing the SIM card and charging the battery, the device is ready to be turned on.

Turn Device On or Off

Turn on the device

Press and hold the **Power** button until the device turns on.

Turn off the device

1. Press and hold the **Power** button for 2 seconds.
2. Tap **Power off**.
3. Tap **Tap to power off** to confirm.

Restart Device

1. Press and hold the **Power** button for 2 seconds.
2. Tap **Restart**.

 


Set Device to Aeroplane Mode

1. Slide the status bar down to display the menu.
2. Further slide the menu down to display the extended menu.
3. Tap **Aeroplane mode**.

Set Device to Ring, Vibrate or Silent Mode

1. Slide the status bar down to display the menu.
2. Further slide the menu down to display the extended menu.
3. Tap the icons for **Ring**, **Vibration**, **Mute** to scroll through these options.

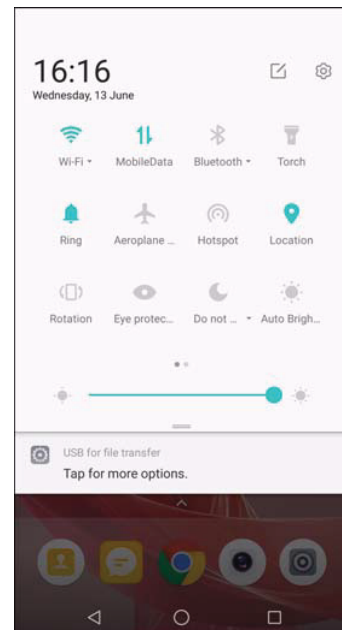

Set Device to Sleep Mode

To set the device to sleep mode, press the **Power** button. This turns the display off.

To turn the display on, press the **Power** button again.

1.6 Locking and Unlocking the Screen

 
Lock the screen to prevent it from accidentally being touched. By default, the screen locks after being idle for a period of time (see “Display Settings” on page 65).

Lock the screen

To manually lock the screen and turn off the display, press the **Power** button.

Unlock the screen

1. If the display is turned off, press the **Power** button.
2. Slide up, to unlock the screen.

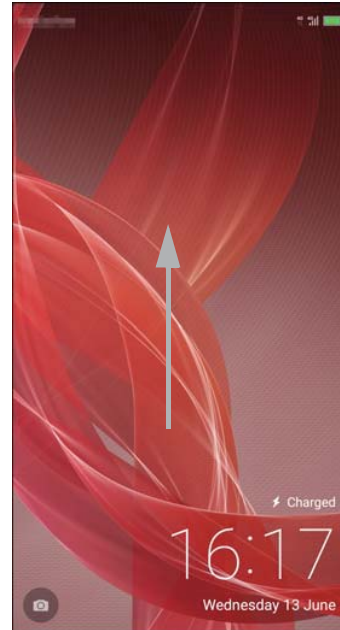

NOTE:

- Tap (📷) to use the Camera
- While screen is locked, slide to the left and tap the icons to use the functions directly.

Flashlight

Calculator



Recorder

Notepad

1.7 Using the Headset

For hands-free conversation or listening to music, first connect an audio adapter to the phone and then plug a headset to the adapter's headset jack.

NOTE:

- When using a headset, your ability to hear outside sounds may be limited. Do not use a headset if it will endanger you.
- Do not set the headset volume to its maximum as it may damage your hearing.

1.8 Adjusting the Volume

There are two ways to adjust the volume:


- Press the volume (+/-) button repeatedly to adjust the volume.
- Press the volume button once.
Drag the volume slider to adjust the volume.



Chapter 2: The Basics

2.1 Home Screen

 From the Main Home screen, you can quickly access common features and view notifications of missed calls, received messages, check battery, and connection status.

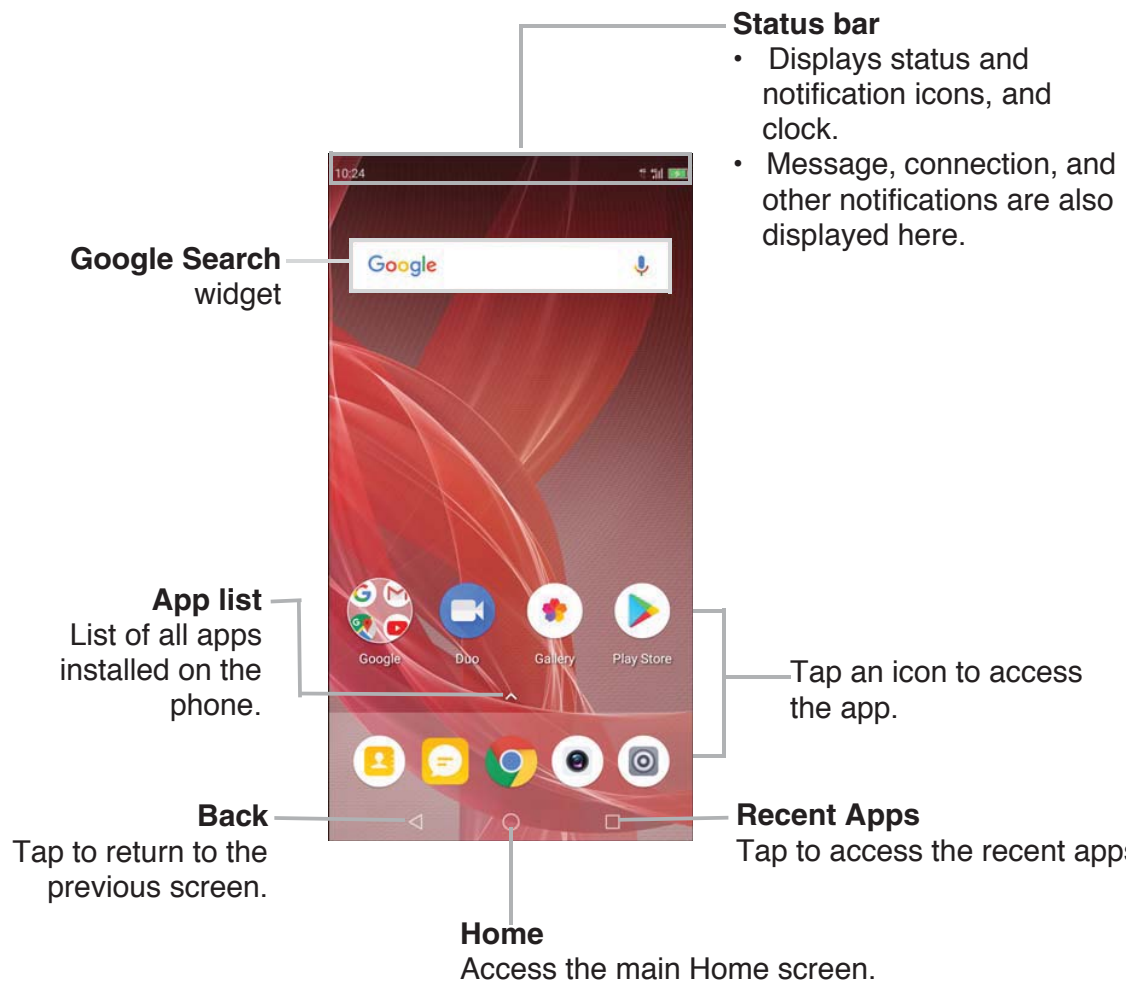


TIP:







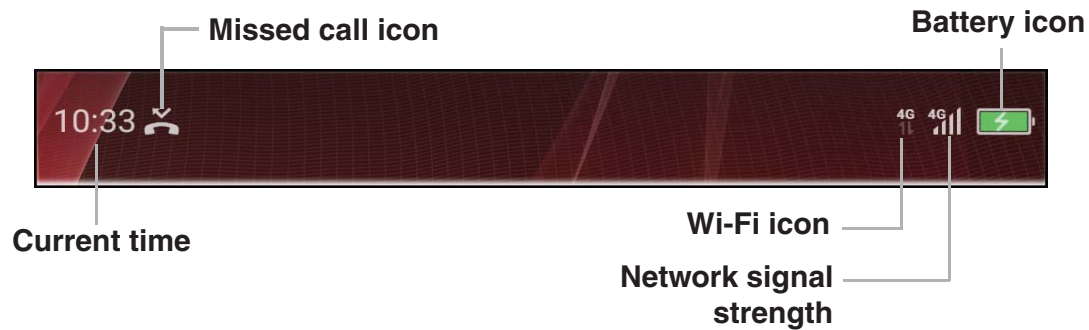 

- Tap and hold on the Home screen to add, manage or modify features.








Status Bar

Status bar icons indicate different types of information.

The icons on the status bar indicate the following information:



Icon	Description
	Battery is full.
	Battery is charging.
	Battery is completely discharged.
	4G-enabled network signal strength. Fewer bars indicate lower signal strength.
	Wi-Fi is connected.
	Bluetooth connection is active.
	An alarm is set.
	File has been downloaded.

Icon	Description
	Incoming call.
	Missed call notification.
	New text message notification.
	New email notification.
	Silent mode is activated.
	Vibrate mode is activated.
	Aeroplane mode is activated.

Notifications Panel

The notifications panel displays the device activities, details of status, or other notifications.

Open the notifications panel

Tap and slide the status bar downwards.

 
To open related apps, touch a notification.

Close the notifications panel

Tap and slide the status bar upwards to close the notifications panel.

NOTE:

- When you missed the call, you can see the notification on the Notifications Panel.
- The missed call will not be visible on the Phone app icon.

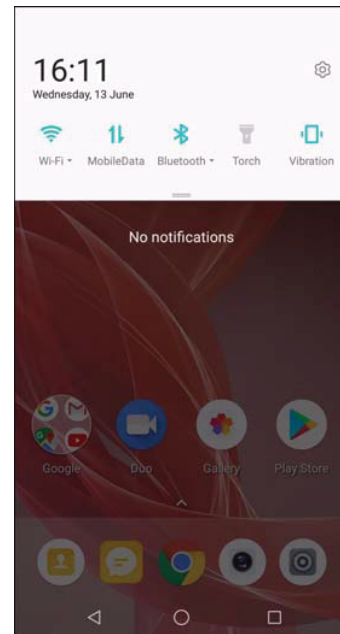


Open Apps

Tap an icon to open the app.

View Recently-Used Apps

 Tap . The recently-used apps are displayed.

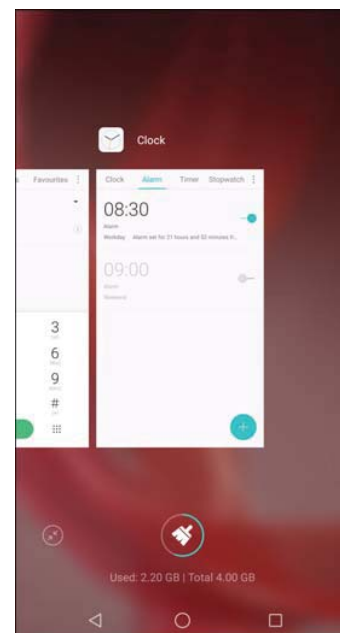

Control Panel

Tap and hold on an empty spot on the Home screen to directly manage the Home screen panels and access the control panel.

 


Widgets

Save time with live updates right on the Home screen and get all your personalized updates in one place.

Add a Widget

1. Tap and hold on an empty spot on the Home screen.
2. Tap **WIDGETS**.
3. Swipe the screen until you find the Widget you want to add.
4. Tap and hold on the Widget. Then drag it to the preferred location on the Home screen.

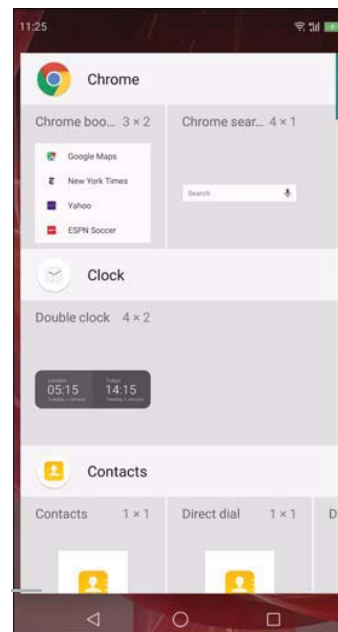

Remove a Widget

Tap and hold the widget, then drag it to **X Remove**.

Folders

Save the space on your Home screen, group similar apps into a folder.

Add a Folder

1. Drag one app to another to group them to a folder.
 2. Tap on the folder to open it.
 3. Tap on the folder name and type the folder name.
- NOTE:** The default folder name is “Unnamed Folder”.

 


Modify a Folder

1. Tap to open the folder you wish to modify.
2. Do one of the following:
 - To remove an app from the folder, tap on the app icon then drag it out of the folder.
 - To remove the app totally from the device, drag the icon to the **X Remove** or **Uninstall**.
 - To review the app information, tap on the app icon and then tap **i**.


NOTE: Uninstall option is not available for phone's default apps.

- To rename the folder, tap on the folder name.

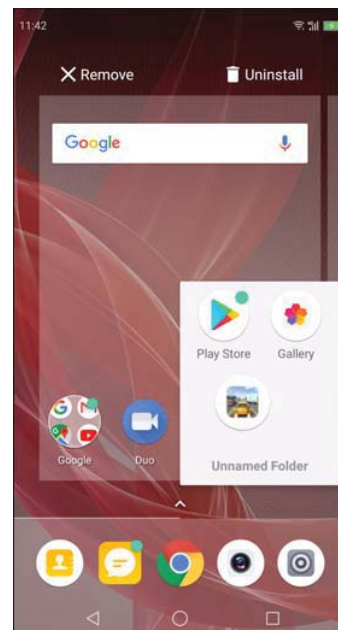

Remove a Folder

 Tap and hold on the folder you wish to remove and drag it to **X Remove**.

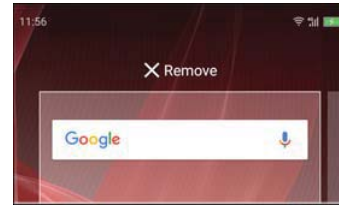





Set Wallpaper

 
Customize the device wallpaper.

1. From the Control Panel, tap **Wallpapers**.
2. Select the wallpaper from Gallery, Live wallpapers, Photos, or from Wallpapers folder.
3. Tap on a wallpaper to use it.

Manage Resources

Manage the resources on your phone by closing the recent active apps.


1. From the Home screen, tap .
2. Do one of the following:
 - Swipe an app upwards to end the individual app.
 - Tap  to end all active apps and optimize the phone's performance instantly.
 - Tap  to maximize view of the recent app list.
 - Tap  to minimize view of the recent app list.

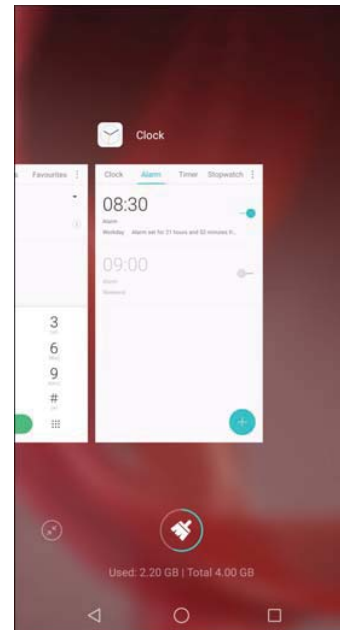

Configuring Appearance Settings

In the Appearance Settings menu, you can configure the appearance and layout of the Home screens icons.

 1. Tap and hold on an empty space on the Home screen to view the Control Panel, then tap **Settings**.
2. Enable and configure the settings, as needed.

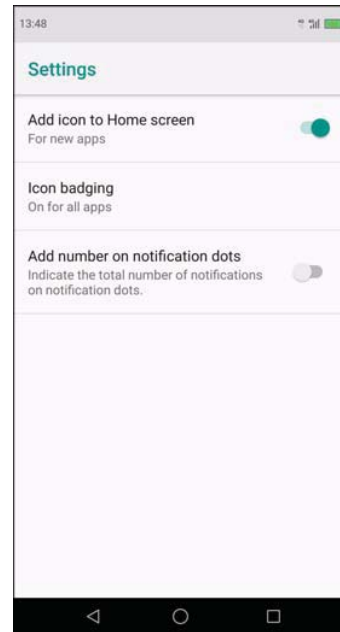


Managing Home Screen Panels

By default your phone has one main Home Screen. A new Home Screen is added automatically in special occasions, for example after you download an app from **Play Store**.



 To add an additional Home screen, simply drag the application icon to the right.

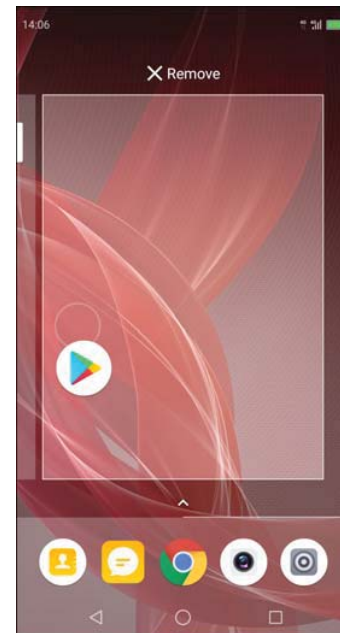To remove a Home screen, remove all the items on that Home screen and the Home screen will be deleted automatically.



Changing Phone Settings

In Settings menu you can configure the network connections, device, personal settings, accounts, and more.


To access the Settings menu, tap  or slide the status bar downwards, then tap . For more information on **Settings** menu, please refer to “Device Settings” on page 59.


Chapter 3: Contacts



Contacts is your phonebook that lets you store names, phone numbers, email addresses and other information. You can also add the frequently used contacts to the favorites list. See “Favorite Contacts” on page 20.


3.1 Adding Contacts

 1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap one of the following:
 - **Create a new contact:** To create a new contact manually.
 - **Sign in to an account:** To import contacts from an email account.
 - **Import contacts:** To import contacts from SIM card or from a storage.

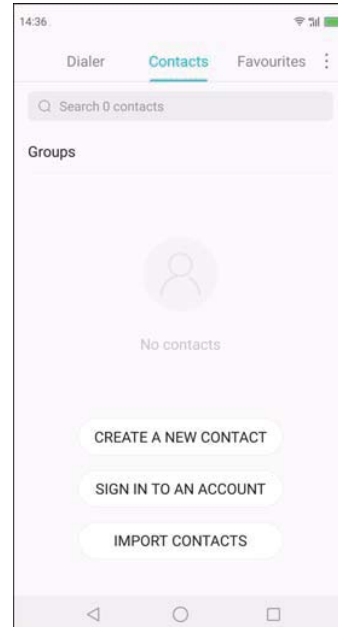NOTE: If you have already configured Google account in your phone, tap  to add a new contact.



 
3. Tap one of the following:
 - **Saving to Device:** To save the contact to phone memory.
 - **Saving to SIM 1 (or Saving to SIM 2):** To save the contact to the SIM card.
 - **Saving to Google:** To save the contact to the Google account. This option is available only if you have already configured Google account in your phone.
4. Enter contact information such as name, phone number. Tap **ADD MORE** to add other contact information.
To add a contact picture, tap the photo icon ().
5. Tap  to save the contact.

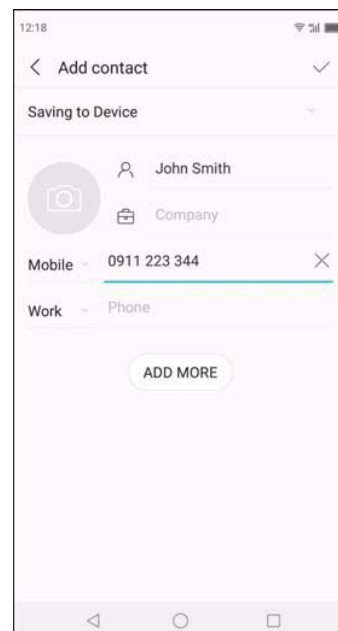

3.2 Copying Contacts

You can copy contacts to and from the SIM card, the device, memory card, or USB storage.

 1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap **⋮** > **Settings** > **Import Contacts** or **Export Contacts**.
3. Choose to Import/Export contacts from or to the SIM card/storage.
4. Select the contacts to copy and tap **Done**.

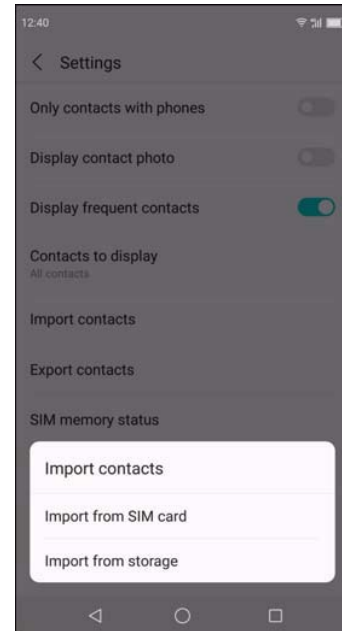


3.3 Communicating with Contacts

Call Contacts

NOTE: The available call options vary depending on the phone number(s) saved for a specific contact and the number of SIM cards installed on the device.

1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap a contact.
3. Tap the phone number to call the contact. See “Making a Call” on page 23.

 NOTE: Swipe the screen to see the call history, messages, and contact-related agenda on your phone.

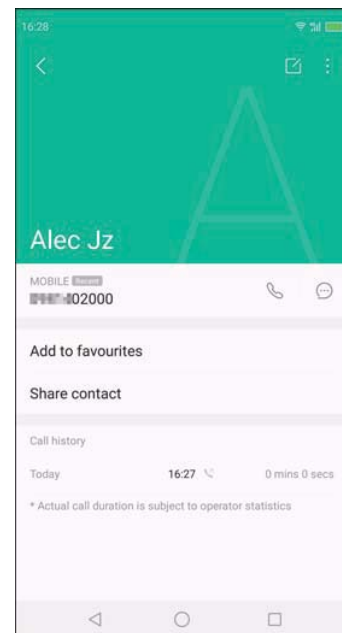

Text Contacts



1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap a contact.
3. Tap **⋮**.
4. Compose and send your message. See “Create and Send Text Messages” on page 26.

 
Email Contacts

1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap a contact.
3. Tap the email address.
4. Compose and send your email. See “Compose and Send Emails” on page 33.

3.4 Managing Contacts


Edit Contacts

1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap the contact that you want to modify.
3. Tap .
4. Modify the necessary information or add additional information by tapping **ADD MORE**.
5. Tap  to save changes.

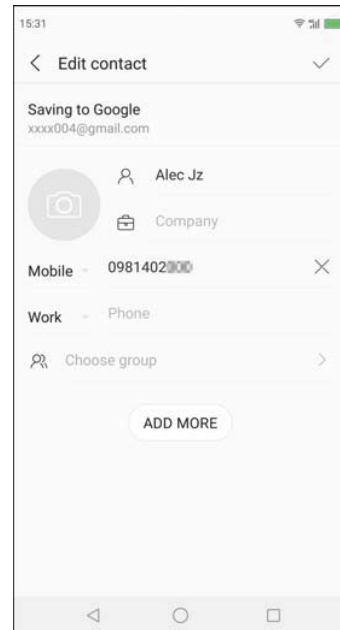

Delete Contacts

 1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap and hold the contact that you want to delete.
3. On the list, mark other contacts you want to delete.
4. Tap **Delete**.
5. Tap **Delete** to confirm.

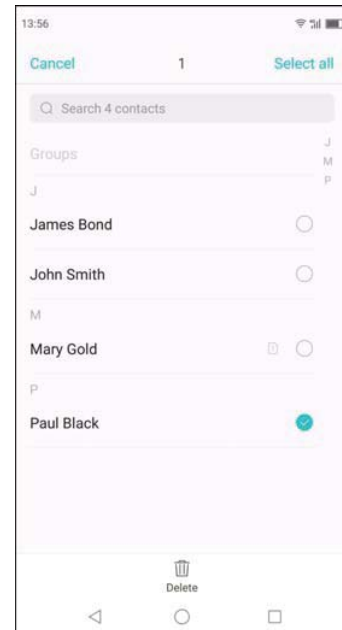



Send Contact Information

You can send contact information to other devices via a sharing app such as Text or vCard.

1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap a contact.
3. Tap **Share contact**.
4. Tap a sharing app to send the contact information.

Add Contact to Blacklist

1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap the contact that you want to modify.
3. Tap  > **Add to blacklist**.
4. To undo,  > **Remove from blacklist**.

3.5 Favorite Contacts

Add the most frequently called contacts to Favorites to access contacts quickly and easily.

View Favourites

 
From the Home screen, tap **Phone** and select **Favourites** tab.

Add to Favourites

1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap the contact you want to add to the Favourites list.
3. Tap **Add to favourites**.

Remove from Favorites


1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap the contact you want to remove from the Favourites list.
3. Tap **Remove from favourites**.

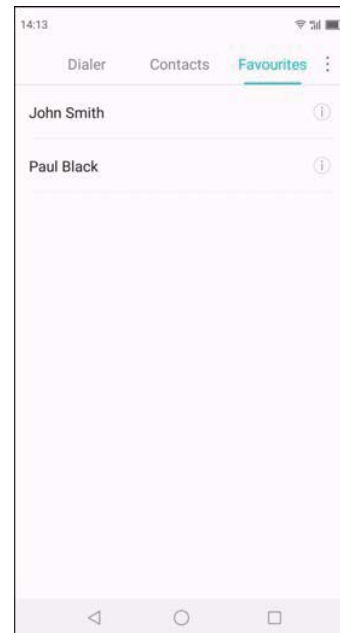

3.6 Searching for Contacts


On the Contacts screen, do any of the following to easily search for contacts:

 - Flick your finger up or down the screen to scroll the contacts list.
- In the search box, type the first few letters of the contact to search or enter an alphabetical index to view contact names that start with the letter. For example, to view names that start with “B”, tap “B” and the list of contacts will be displayed.

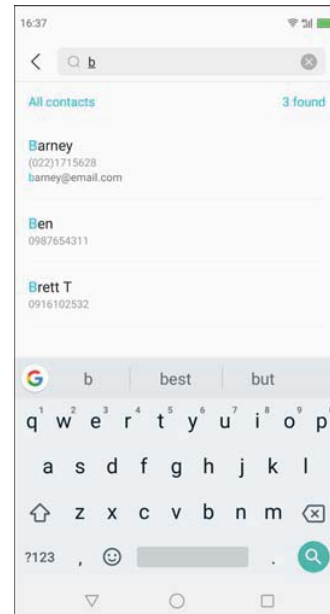


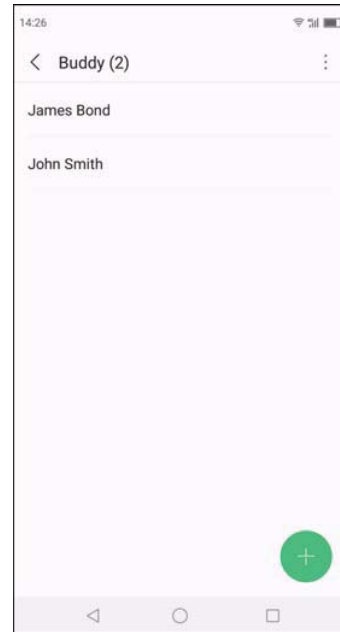 
3.7 Grouping Contacts

You can create groups of contacts to make it easier to find specific contacts, such as your classmates, colleagues, and more.

1. From the Home screen, tap **Phone** and select **Contacts** tab.
2. Tap **Groups**.
3. Tap  to create a new group.
4. Choose to create a group under **Phone**, **SIM card** or **Google** account.
5. Give a name to the group.




6. Tap  to add contacts to the group.
7. Tap the contacts from the list to start adding contacts.
8. Tap **Done**.



Chapter 4: Using the Phone

 To open the Phone screen, from the Home screen, tap **Phone**.

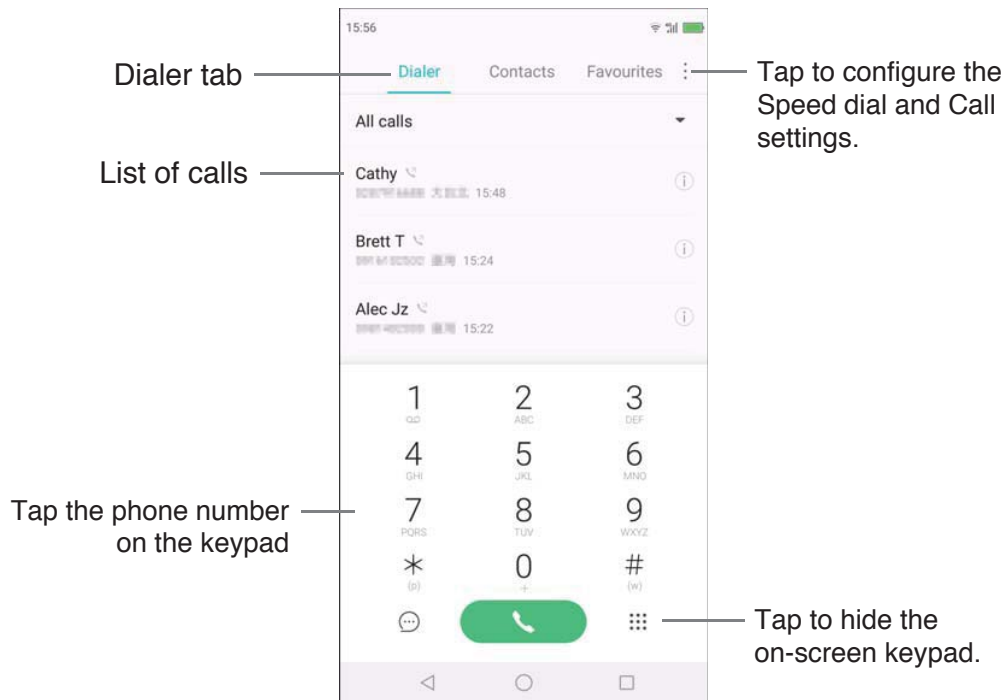


4.1 Making a Call

Make a call from the Phone screen


1. From the Home screen, tap **Phone**.
2. Tap the phone number on the keypad.

 TIP: As you enter the number, matching contacts appear. To call a contact, tap the contact from the list. Tap to erase a wrong number. Tap and hold to erase the entire number.



 3. Tap to call the number.
 - If you are using dual SIM cards, select one of the available network.

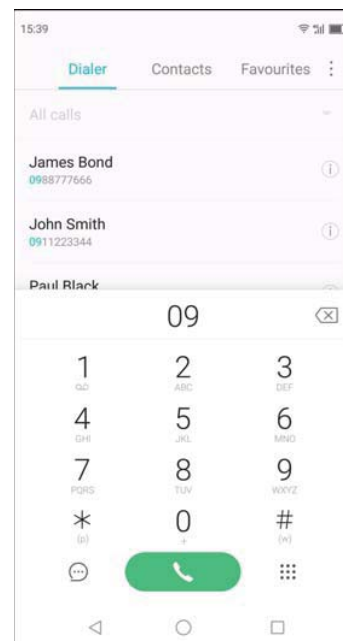


4. To end the call, tap .



 Make a call from Contacts



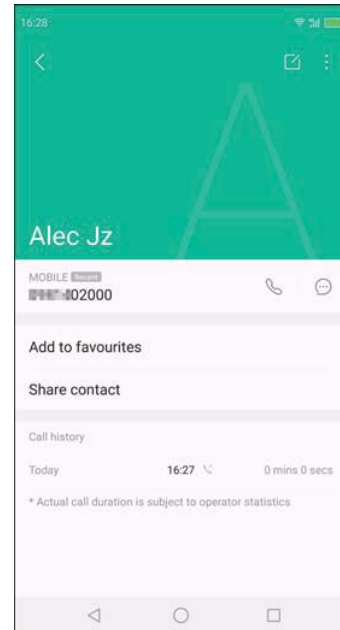


1. From the Home screen, tap **Phone**.
2. Tap the contact name.
3. Tap  icon next to the desired contact phone number to make a call.
4. To end the call, tap .

 


4.2 Answering a call

When an incoming call is received, the device may ring or vibrate and the screen displays an incoming call message. If the caller is listed in your Contacts, the contact's name appears. You may also see the caller's phone number, if available.

Accept or reject an incoming call



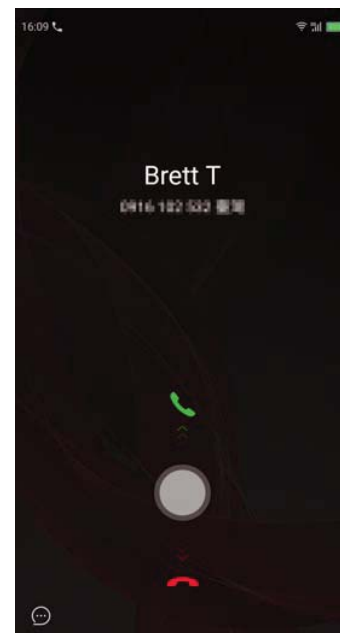


- To answer a call, tap  and drag it up to towards .
- To reject the call, tap  and drag it down towards .
- To reject the call with a message, tap and drag  towards the middle of the screen, then choose a message text from a list.

 


4.3 Ending a call

To end a call, tap .

4.4 In-Call Options


- To mute or unmute the microphone, tap .
- To display the on-screen keypad, tap .
- To use the speakerphone, tap .
- To set up a conference call, tap  and enter the second phone number.
- To put the call on hold, tap .

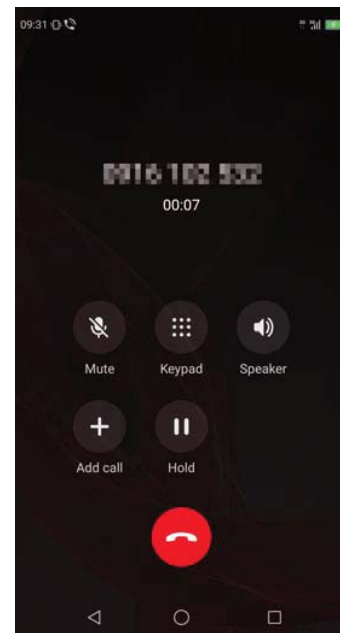

4.5 Call Log

The Call Log screen displays the most recent outgoing, received, or missed calls.

 To view the call history, from the Home screen, tap **Phone**.

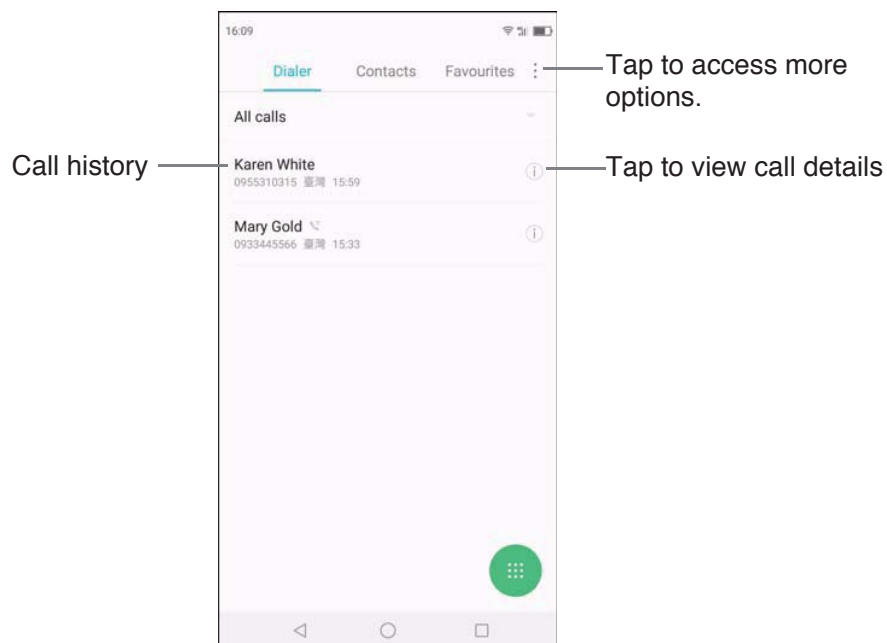

- To call an entry, tap the corresponding contact.
- To remove the entry from the list, tap and hold on the entry, you can select other entries from the list, then tap **Delete**. When a confirmation message appears, tap **Delete** to confirm deletion.


Chapter 5: Email & Messaging


Use **Messaging** to send and receive text and multimedia messages. Use **Gmail** to send and receive email messages using your internet email accounts.


5.1 Text Message

A text message can only contain letters, numbers, and symbols.

Create and Send Text Messages

1. From the Home screen, tap **Messaging**.
2. Tap .
3. In the **To** field, enter the recipient's phone number.

 
TIP: To add recipients from Contacts, tap  and select contact(s). Then tap **Done**.

4. Compose your message.
5. Tap  to send your message.
 - If you are using dual SIM cards, select one of the available network.



NOTE:


- If you close Messaging before sending your message, the unsent message will be automatically saved as a draft.
- You can also send text messages via **Contacts** app. See “Text Contacts” on page 17.

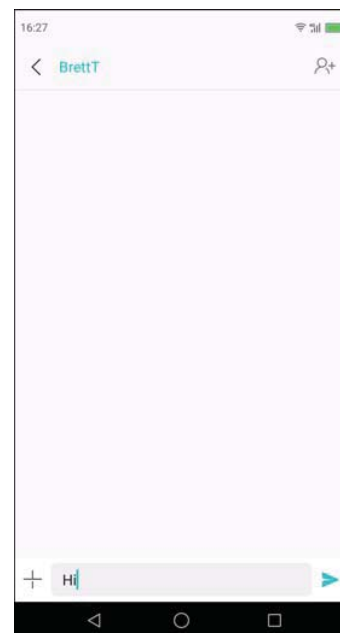

Receive and Manage Messages

 
When you send and receive messages from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

Reply to a text message


1. From the Home screen, tap **Messaging**.
2. Tap a message thread to open it.
3. Compose your message.
4. Tap  to send your message.

Delete a message thread

1. From the Home screen, tap **Messaging**.
2. Tap the message thread you want to delete.
3. Tap **:** > **Delete thread**.
4. Tap **Delete** to confirm.

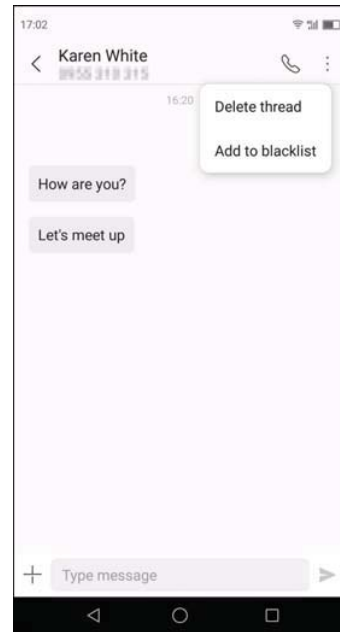**Delete all message threads**

 
1. From the Home screen, tap **Messaging**.
2. Tap and hold a message thread.
3. Select the message threads you want to delete.
4. Tap **Delete**.
5. Tap **Delete** to confirm.

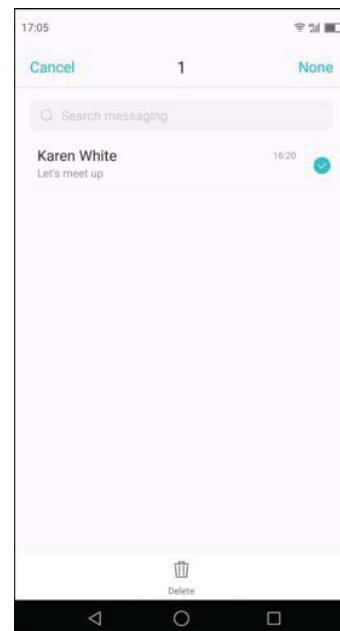



5.2 Multimedia Message

A multimedia message or MMS can contain letters, images, an audio or video file.


Create and Send MMS Messages

 
1. From the Home screen, tap **Messaging**.
2. Tap .
3. In the **To** field, enter the recipient's phone number.

TIP: To add recipients from Contacts, tap  and select contact(s). Then tap **Done**.

4. To attach files to your message, tap , then tap one of the following:
 - **Photo:** Attach pictures from **Gallery**.
 - **Take photo:** Take a picture to attach.
 - **Audio:** Attach an audio file.
 - **Template:** Attach a message template.
 - **Video:** Attach a video file.
 - **Take video:** Record a video to attach.
 - **Contacts:** Attach a contact information.
 - **Subject:** Add a subject line to the message.

The message automatically converts to an MMS message.

5. Compose your message.
6. Tap  to send your message.

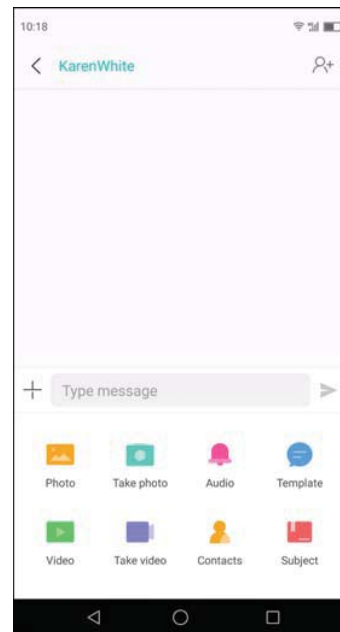

5.3 Customizing Message Settings

 
1. From the Home screen, tap **Messaging**.
2. Tap **:** > **Settings**.

The following message settings are available:

- **Harassment blocking settings:** Use this setting to view intercepted calls and manage blacklist.
- **Mobile broadcast:** View the history of alert or emergency messages from your area.

Text (SMS) messages

- **Service center:** Set the phone number of the service center.
- **Delivery reports:** Enable to receive delivery reports for each message you send.
- **SMS Validity Period:** Set the validity period of unsent message.
- **SMS storage location:** Select where to store the received messages.
- **Manage SIM card messages:** Manage sim card messages.

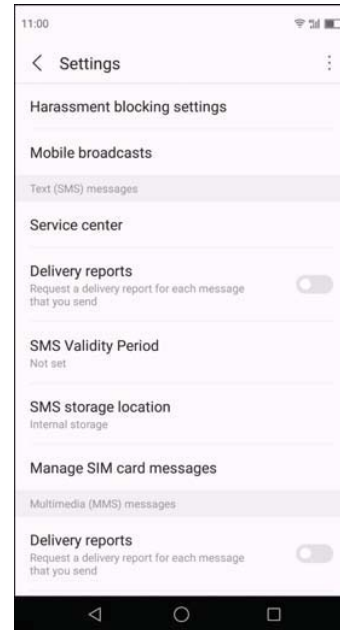

Multimedia (MMS) messages

- **Delivery reports:** Enable to receive delivery reports for each message you send.
- **Send delivery report:** Enable to send a delivery report for each message you receive.
- **Auto-retrieve:** Enable to automatically retrieve messages.
- **Roaming auto-retrieve:** Enable to automatically retrieve messages when roaming.

NOTE: If you are using dual SIM cards, select the desired network to enable its respective setting.

 
 
5.4 Email Accounts

The device can send and receive emails just as you do with a computer. It supports Google, Outlook, Hotmail, Live, Yahoo, Exchange, Office 365, and more.

Before setting up the email account, make sure the phone is connected to a wireless network or mobile data connection.


Set Up Email Account

1. From the Home screen, tap **Google > Gmail**.
2. Tap **Add an email address**.
3. Select from a list of email providers.
To manually enter the email settings, tap **Other**. Skip to step 6.
4. Enter your **Email address** and **Password**.
5. Tap **Next**.
The device will automatically retrieve the email settings.

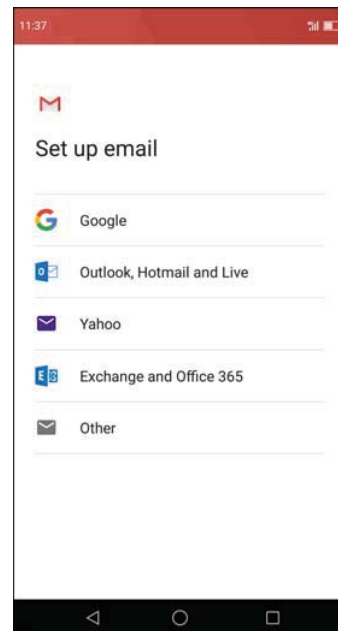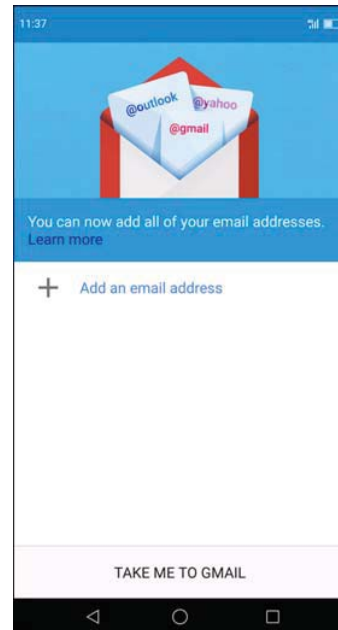

6. Select an email connection protocol which best suits your needs.

 - **Personal (POP3):** Select to download all emails from the mail server and save locally on the device. Your email cannot be accessed via any webmail or any separate client on other computers.
- **Personal (IMAP):** Select to keep all emails stored on the mail server whereas the *Sent* emails are still stored locally on the device. Your *Incoming* emails are always available on multiple computers and/or webmail.
- **Exchange:** Select to keep the *Incoming* and *Sent* emails always available on multiple computers and/or webmail (mail is synced between mailserver and client).

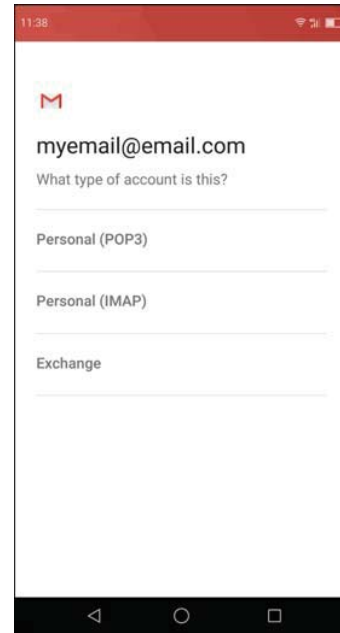


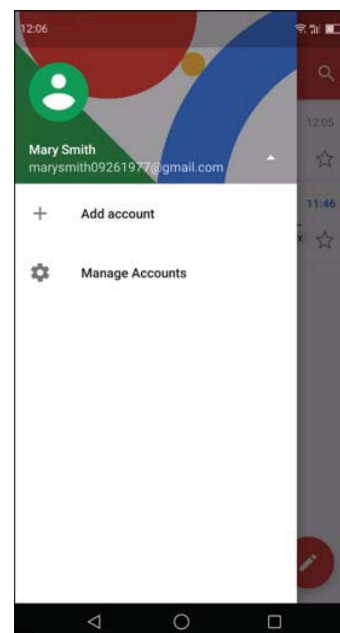 
7. Follow the on-screen instructions and enter all the server information, Domain, Username, Password, and other related information. Tap **Next** to continue.

NOTE: Your account settings may vary, depending on the kind of email service for the account. For setup parameter details, please check with your service provider.


8. Once the account setup is complete, the device will automatically retrieve your emails.

 
Add More Email Accounts

1. From the Home screen, tap **Google > Gmail**.
 2. Tap .
 3. Tap the current email account.
 4. Tap **Add account**.
 5. Select the mail service from the list.
 6. Enter the **Email address** and **Password**.
 7. Follow the on-screen instructions to complete the setup.
- Once the account setup is complete, the device will automatically retrieve your emails.




Select Email Accounts

1. From the Home screen, tap **Google > Gmail**.
2. Tap .
3. Tap the current email account.
4. Tap the account you want to access.

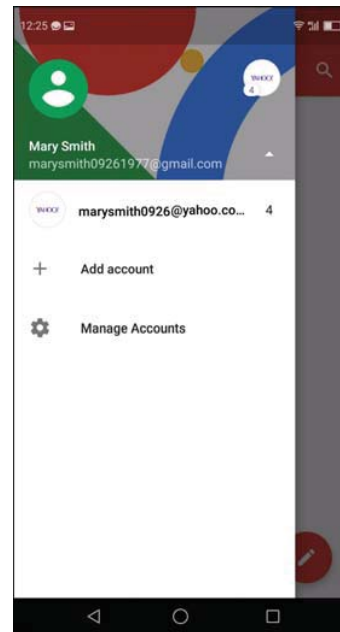


Delete Email Accounts


1. From the Home screen, tap **Settings > Accounts**.
2. Select the account you want to delete.
3. Tap  > **Remove account**.
4. Tap **Remove** to confirm.




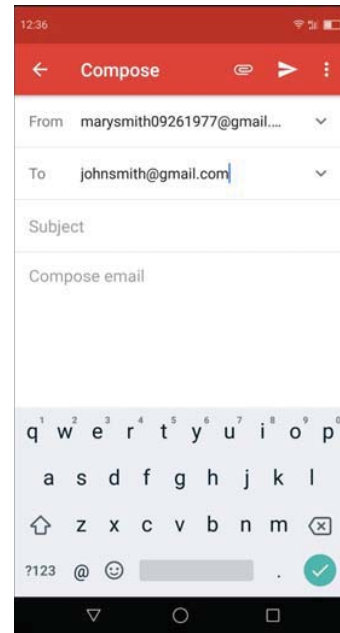 
5.5 Using Email

Compose and Send Emails


1. From the Home screen, tap **Google > Gmail**.
2. Tap .
3. In the **To** field, enter the recipient's email address.

NOTE: Tap  next to the **To** field to enter additional recipient's email addresses to **Cc** and/or **Bcc** lines.

4. Tap **Subject** then type a subject.
5. Compose your email.
6. Tap .



Add attachments to email messages

1. Before sending your message, tap  > **Attach file** or **Insert from Drive**.
2. Select the type of file then select the file you want to attach.

 
Receive Emails

Emails are automatically received in the Inbox folder when the device connects to a network.

Manually receive e-mails

1. From the Home screen, tap **Google > Gmail**.
2. Swipe down the screen to refresh.

Bold text indicate message has not been read.

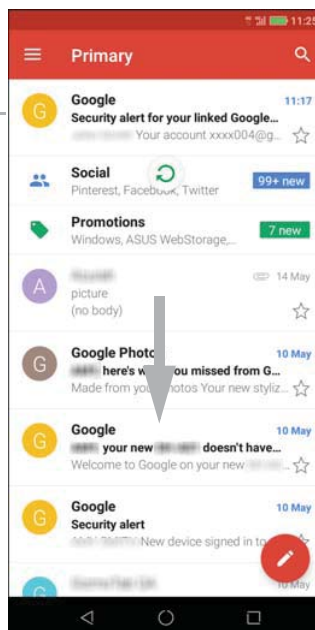




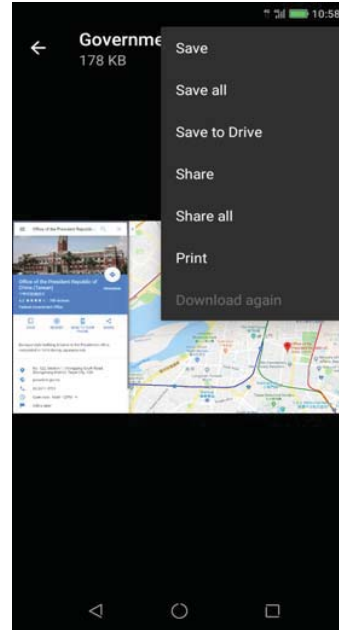 
Email contains attachment.

Read and Reply to Emails

The Inbox displays the email headers. Open the email to view the complete content.

Download attachments

1. From the Home screen, tap **Google > Gmail**.
2. On the Inbox screen, tap an email to open it.
3. Do any of the following:
 - Tap  icon on the attachment to directly download the attachment to the phone storage.
 - Tap  icon on the attachment to directly download the attachment to Google Drive.
 - Tap on the attachment > . A pop-up menu appears. Depending on the file type, tap an option:
 - **Save** to save the attachment.
 - **Save all** to download all attachments.
 - **Save to Drive** to save the attachment to Google Drive.
 - **Share** to share the attachment via Gmail, Messaging, Upload to Photos, Add to Maps, Android Beam, Bluetooth, or Save to Drive.
 - **Share all** to share all the attachments via Gmail, Messaging, Upload to Photos, Add to Maps, Android Beam, Bluetooth, or Save to Drive.
 - **Print** to send the image to the connected printer on the network or save the image as a PDF file.
 - **Download again** to redownload the image.



 
NOTE: Only supported file types can be opened on the phone.

Reply or forward e-mails

1. Open the message.
2. Do any of the following:
 - On the bottom of the message, tap **Reply**, **Reply all** or **Forward**.
 - Tap ↩ or tap ⋮ > **Reply all** to reply the email.
 - Tap ⋮ > **Forward**.
3. Compose your message.
4. Tap ➤.

Mark email as unread

1. Open the message.
2. Tap ✉.

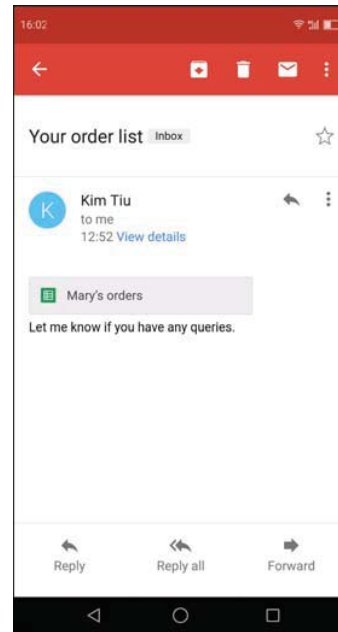

Manage Email Folders

Delete emails

 
1. From the Home screen, tap **Google > Gmail**.
2. On the Inbox screen, tap and hold the message you want to delete.
3. Tap 🗑 to delete the message.

NOTE: If deleting the message was unintentional, you can recover the message within a few seconds by tapping **UNDO**.


Archive emails to


1. From the Home screen, tap **Google > Gmail**.
2. On the Inbox screen, tap and hold the message you want to delete.
3. Tap 📁 to archive the message.

NOTE: If archiving the message was unintentional, you can recover the message within a few seconds by tapping **UNDO**.

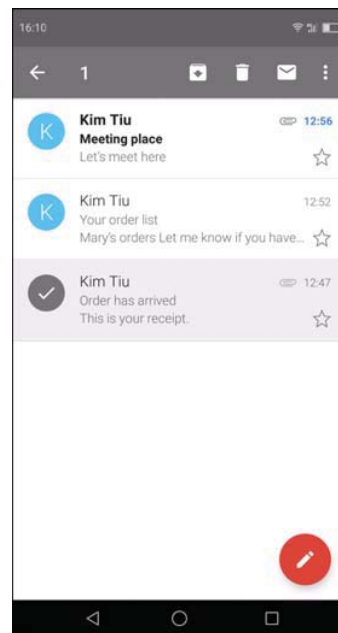


Move emails to other folders

 
1. From the Home screen, tap **Google > Gmail**.
2. On the Inbox screen, tap and hold the message you want to delete.
3. Tap  > **Move to** to view the folder list.
4. Scroll the folder list until you find the folder where you want to move the email and tap on the desired folder.

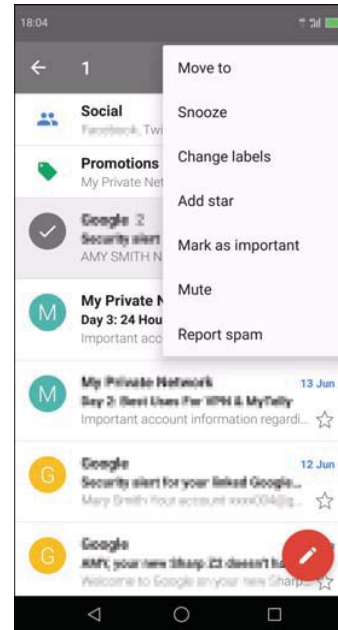


Manage emails

1. From the Home screen, tap **Google > Gmail**.
2. On the Inbox screen, tap and hold the message.
3. Tap , then tap any of the following:
 - **Snooze** the email to Later today, Tomorrow, Next week, or Select date and time.
 - **Change labels** to add label to the email.
 - **Add star** to display the email in the **Starred** folder.
 - **Mark as important** to display the email in the **Important** folder.
 - **Mute** to hide the email from the Inbox or **Primary** folder. The email can still be accessed from the **All mail** folder.
 - **Report spam** to report the email as a spam mail.

View other folders

 If you are viewing the Inbox or Primary folder, tap  to view other folder. Tap on the folder to view the content.

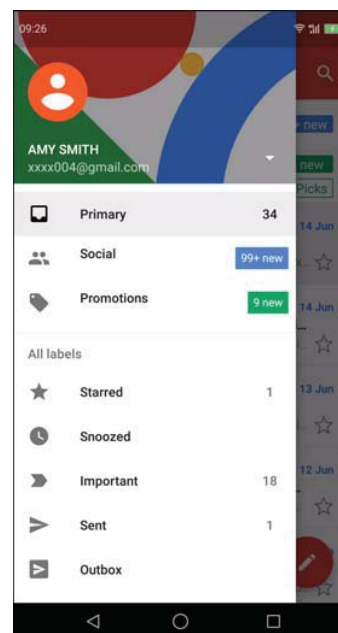


Customize Email Settings


You can configure the settings of your email account such as account name, email checking frequency, default account, notifications, and server settings.


Configure account settings

 1. From the Home screen, tap **Google > Gmail > ☰ > Settings**, then tap an email account.
2. Tap the options to configure the account settings such as:
 - **My Account** to change the account photo.
 - **Inbox type** to select the type of inbox.
 - **Inbox categories** to select the folder categories to display.
 - **Notifications** to enable notification when email is received.
 - **Inbox notifications** to set message syncing and notification options.
 - **Manage labels** to manage various labels.
 - **Manage notifications** to configure notification settings.
 - **Default reply action** to reply to the sender or reply to all.
 - **Mobile signature** to add a signature to your emails.
 - **Smart Reply** to show suggested replies when available.
 - **Out of Office AutoReply** to activate auto reply function.
 - **Inbox tips settings** to show occasional tips for unsubscribing from bulk senders that you rarely read.
 - **Sync Gmail** to sync with Gmail account.
 - **Days of emails to sync** to configure the duration when to sync emails.
 - **Download attachments** to enable auto download of attachments.
 - **Images** to configure whether to show or ask before downloading the image attachment.

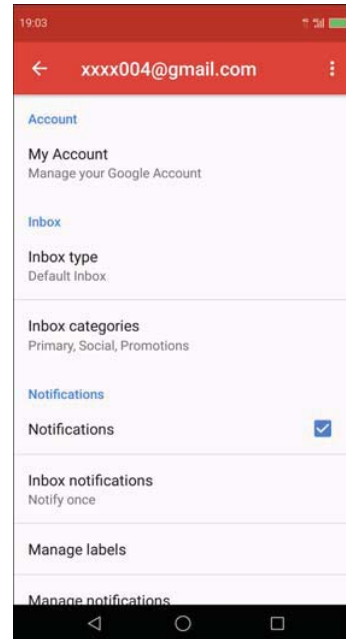

General Settings

 1. From the Home screen, tap Gmail >  > **Settings** > **General Settings**.
2. Tap the options to configure the account settings such as notifications, swipe actions, reply actions, and more.

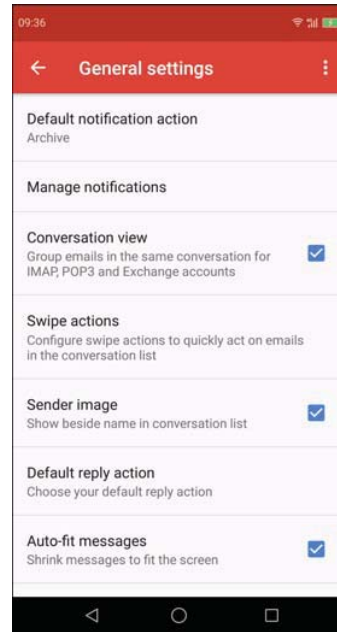

Chapter 6: Using Internet



6.1 Connecting to Internet

 
The device connects to Internet via:

- Wi-Fi
- Cellular Data Networks


Wi-Fi


Turn Wi-Fi on


1. From the Home screen, tap **Settings** or slide the status bar down and tap .
2. Tap **Wi-Fi**.
3. Tap  to enable Wi-Fi via Settings menu.

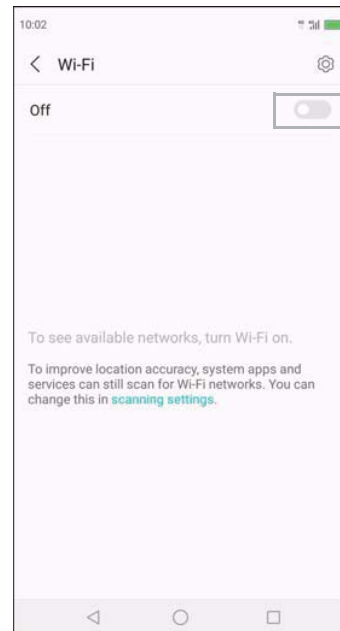



Connect to a Wi-Fi network

 
1. Turn on **Wi-Fi**.
2. The available networks are listed. Tap a network to connect to.
NOTE: You can also tap **Add network** to manually add a connection. See “Add Wi-Fi network” on page 40.
3. If you select an unsecured network, the connection is automatically established. Otherwise, proceed to the next step.
4. When connecting to a secured network, you will be prompted for the password. Enter the password, then tap .

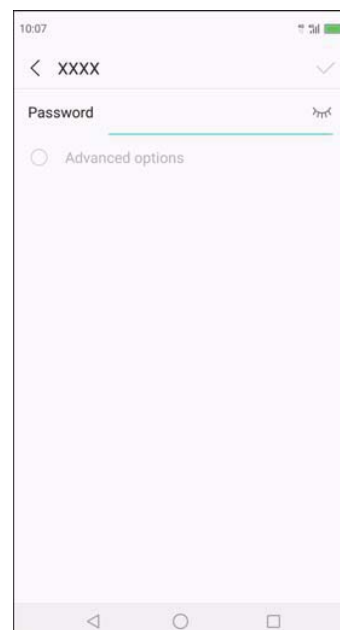When Wi-Fi is connected, the  connection icon is displayed on the status bar.





 
Add Wi-Fi network

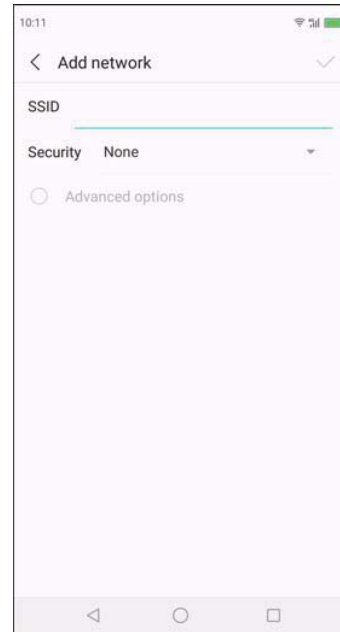1. From the Home screen, tap **Settings** or slide the status bar down and tap .
2. Tap **Wi-Fi** and turn it on.
3. If the network you want to connect to is not on the list, scroll to the bottom of the list, and tap **Add network**.
4. Follow the on-screen instructions and enter the necessary information, then tap  to save the settings.



Advanced Wi-Fi settings

 1. From the Home screen, tap **Settings** or slide the status bar down and tap .
2. Tap **Wi-Fi**.
3. Tap  to access and set up more advanced options.

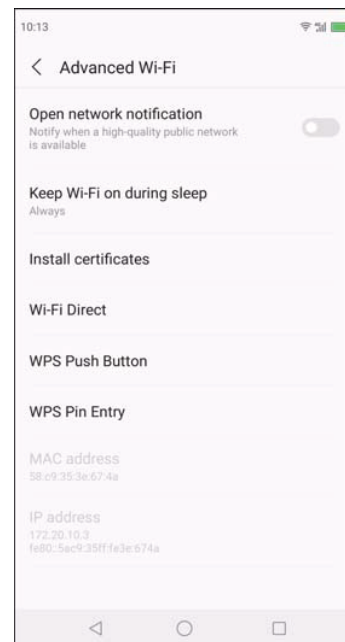


Cellular Data Network


Check the availability of service and plan rates of data connections with your network service provider.


Customize the mobile network settings

 1. From the Home screen, tap **Settings > SIM Config**.
2. Select the SIM card that you want to configure (if two SIM cards are inserted).
3. The following mobile network settings are available:
 - **On / Off**: Activate or deactivate the SIM card.
 - **Mobile data**: Turn on to enable data connection.
 - **Network type**: Select the preferred network type. Available options: **4G/3G/2G**, **3G/2G**, **2G**.
 - **Data roaming**: Turn on to enable connection to data services when roaming.
 - **APNs**: Use this setting to set up data connection. Obtain the following information from your network service provider: Access Point Names, Proxy, Port, User name, and Password.
 - **Operator selection**: Use this setting to select a network operator.
 - **Preferred networks**: Use this setting to add preferred network types.
 - **SIM Toolkit**: Initiate actions which can be used for various value-added services.
 - **SIM Lock**: Use this setting to require PIN to use the phone.

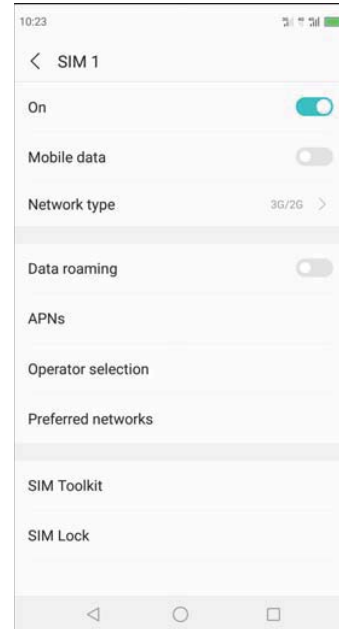

6.2 Browsing a Web Page

 1. From the Home screen, tap **Chrome**.
2. Tap the search bar.
3. Type the URL then tap  on the keypad.

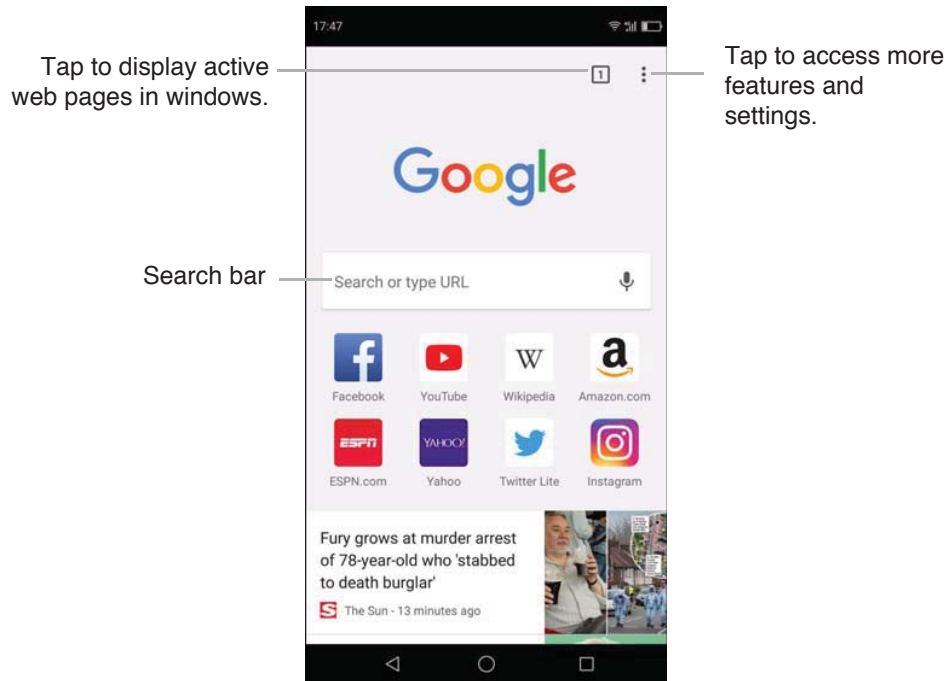





Viewing the page

- To scroll the page, swipe your finger up or down.
- To zoom in on the page, move your two fingers apart from each other at the location of the screen where you want to zoom in. In zoom mode, swipe your finger up or down and left or right.
- To zoom out on the page, move your two fingers closer together at the location of the screen where you want to zoom out.

Manage Web Page

While viewing a web page, tap  to change view settings or apply other functions.





- Tap  to bookmark the page.
- Tap  to download the page for offline reading.
- Tap  to view the page information.
- Tap  to refresh the page.


The following table lists the setting options. Depending on the function, some options may be not be available.

Menu	Description
New tab	Load a new page tab.
New incognito tab	Load a new incognito page tab.
Bookmarks	To access a bookmark page.
Recent tabs	View recent page tabs.
History	View the pages visited.
Downloads	Access the page downloaded for offline reading.
Share	Send this web page via one of the sharing apps.
Find in page	Find the text on the web page.
Add to Home screen	Add a shortcut icon of the web page to the Home screen.
Desktop site	Open the current web page in desktop viewing mode.
Settings	Configure browser settings: <ul style="list-style-type: none"> • Search engine: Select the home page to set as the default search engine. • Autofill and payments: Select to setup credit card for payments and fill up forms. • Passwords: Select to configure auto sign-in or saving of passwords. • Notifications: Select to configure notification settings. • Privacy: Select to configure privacy and security settings including navigation error suggestions, search and site suggestions, security reports, safe browsing, and more. • Accessibility: Select to configure text size, zoom, and inverted screen rendering settings. • Site settings: Select to set background sync, enable JavaScript, enable pop-ups, ads, and more. • Languages: Set your preferred website language. • Data Saver: Turn on to use Google servers to compress pages before downloading them. • About Chrome: View app information.
Help & feedback	Access help information and send feedback to developer.

Chapter 7: Using Bluetooth



 To turn Bluetooth on

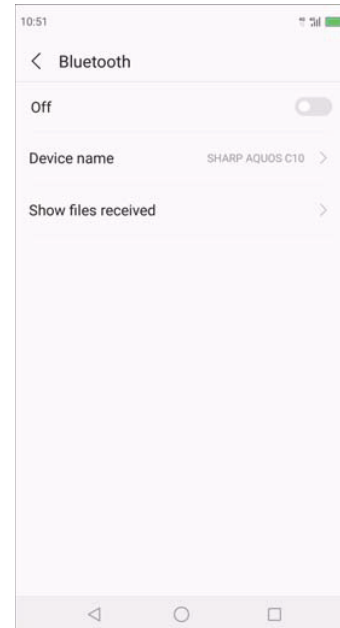1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Bluetooth**.
3. Tap  to enable Bluetooth via Settings menu.
4. To change the name of the device, tap **Device name** and type the desired name which will be shown on other devices.
5. Tap **Show files received** to review received files from other Bluetooth devices.



7.1 Connecting to Bluetooth Devices

A connection to a Bluetooth device is called a partnership. You need to pair and create a partnership with a Bluetooth device to exchange information.

1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Bluetooth**.
3. To search for a new device, tap .
4. Tap a detected device.
5. To start pairing, tap **Pair** and follow the on-screen instructions.
6. The paired bluetooth device name is displayed.


NOTE: Once a partnership has been created, connecting to that device again will no longer require pairing.

Chapter 8: Multimedia Apps

8.1 Photos and Videos



 This device is equipped with rear and front cameras to take photos and videos. By default, your device uses the rear camera to take photos or record videos.

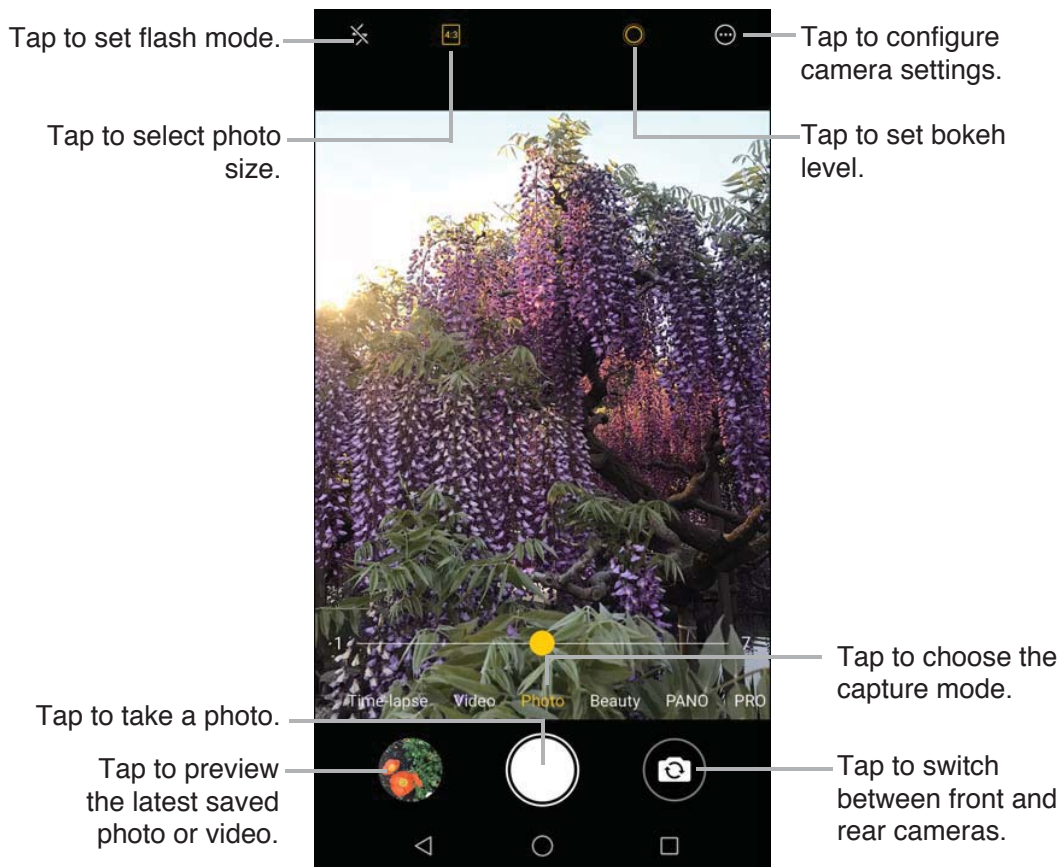Take Photos



1. From the Home screen, tap **Camera**.

NOTE:

 
- To switch between front and rear cameras, tap .
- If you want to adjust the camera settings (apply effects, choose a scene mode, and more), tap  and do the modifications before taking a shot. See more settings options in “Configure Camera Settings” on page 49.


2. Aim the device at the subject.

- To zoom in on the subject, move your fingers apart from each other at the location of the screen where you want to zoom in.
- To zoom out on the subject, move your fingers closer together at the location of the screen where you want to zoom out.



3. Tap  to take the shot.

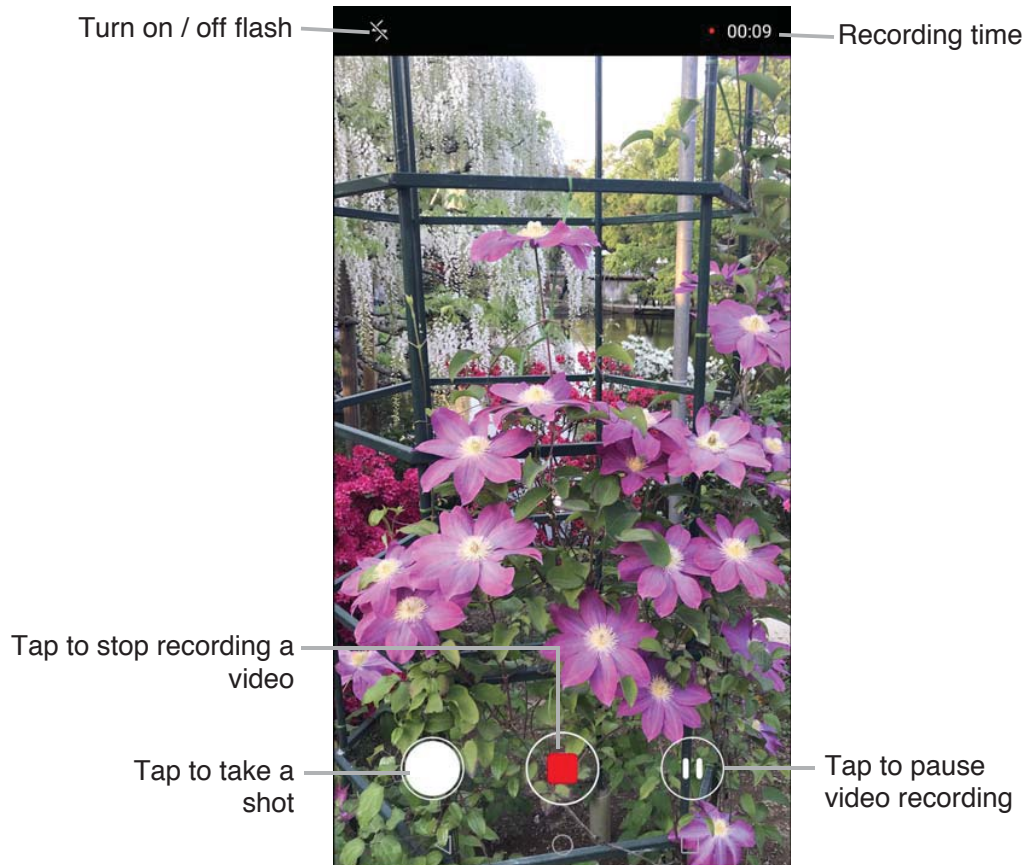Record Videos



1. From the Home screen, tap **Camera**. Then tap Video to switch to **Video** mode.
2. Aim the device at the subject.
3. Tap  start recording a video.

NOTE:

- The video recording starts immediately, after you tap .
- If you want to adjust the camera settings (video quality, timer, resolution), tap  and do the modifications before recording a video. See more settings options in “Configure Camera Settings” on page 49.
- To zoom in on the subject, move your fingers apart from each other at the location of the screen where you want to zoom in.
- To zoom out on the subject, move your fingers closer together at the location of the screen where you want to zoom out.

 
4. Tap  to stop recording.


Capture Modes


While taking photos, you can switch between several capture modes. To access the mode, tap the mode on the **Camera** app screen. The available modes are as follows:

- **Time-lapse:** Use this mode to take fast track videos.
- **Beauty:** In this mode, the camera will remove possible facial imperfection in a photo.
- **PANO:** Use this mode to capture extra wide images. It combines multiple shots into a 180- or 360-degree panoramic picture.
- **PRO:** Use this mode to customized the advanced settings such as white balance, ISO, EV, shutter speed, focus, and more, just like a professional photographer.

Take Panorama Shots

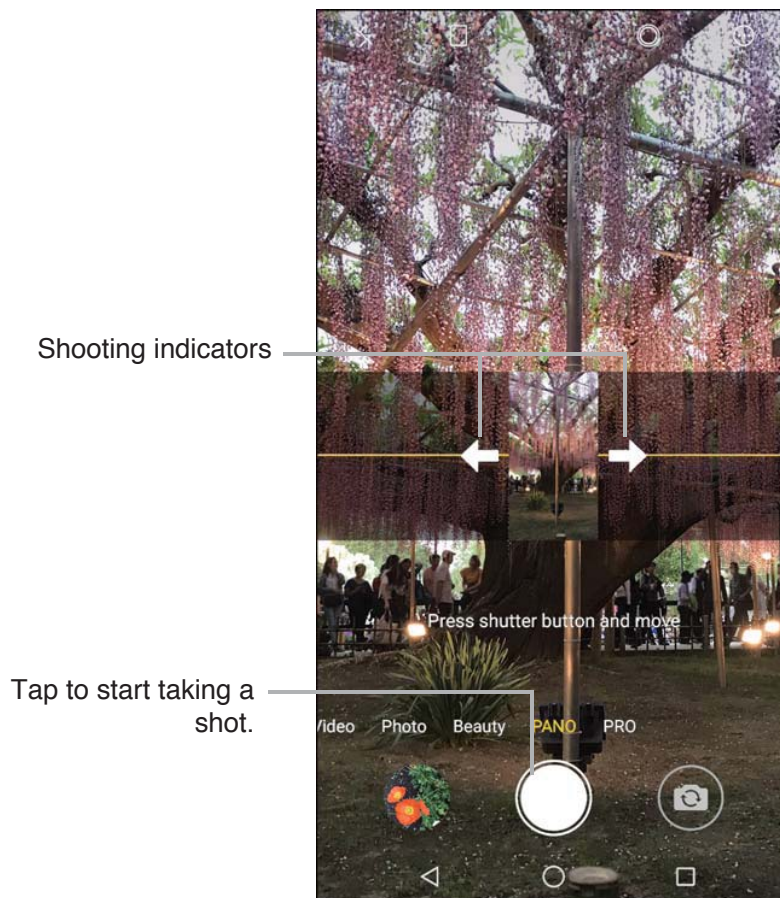
 





1. From the Home screen, tap **Camera**.
2. Tap **PANO** on the camera app screen.
3. Aim the device at the subject.
4. Tap  to start taking the shot.



5. Start slowly moving the device in one direction and continue moving towards the shooting indicators.
6. When the shooting indicators reach the end of the shooting point, the shooting ends.
You can also manually stop recording by tapping .

Review Photos

 After taking a photo, tap the mini window to preview the latest captured photo on the screen and you will be directed to the **Gallery** directly.

- To return to the **Camera** mode, tap .
- To share the photo via Gmail, Messaging, Bluetooth, Upload to Photos, Add to Maps, Android Beam, or Save to Drive, tap .
- To delete the photo, tap . When a confirmation message appears, tap **Delete** to confirm deletion.
- To edit the image, tap . Via image editing menu, you can apply a filter, rotate, crop, configure color settings, draw graffiti and add the mosaic effect on the image.

 







- To access more settings, tap .
- To add the image to the favorite folder, tap .



Review Videos


After recording a video, tap the mini window to preview the latest recorded video on the screen.

 - To return to the **Camera** mode, tap < .
- To share the photo via Gmail, Messaging, Bluetooth, Upload to Photos, Add to Maps, Android Beam, or Save to Drive, or YouTube, tap .
- To delete the video, tap . When a confirmation message appears, tap **Delete** to confirm deletion.
- To access more settings, tap .
- To add the image to the favorite folder, tap .
- To play the video, tap .

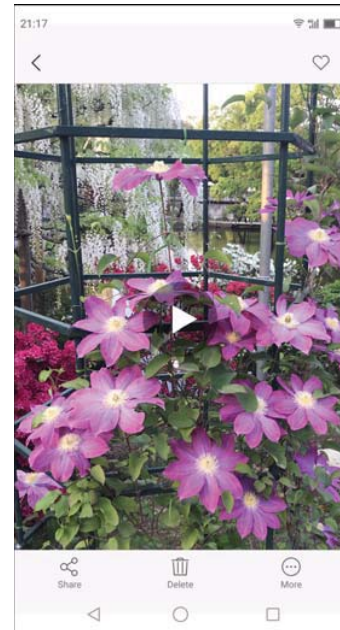


Configure Camera Settings

To access the **Camera** settings, do the following:

On the Home screen, tap **Camera** > .

Tap the setting name to open its respective menu. After you choose a function in the menu, the icon of the respective function menu will automatically change.

 For example, you chose **“Multi”**. The mode icon will become .

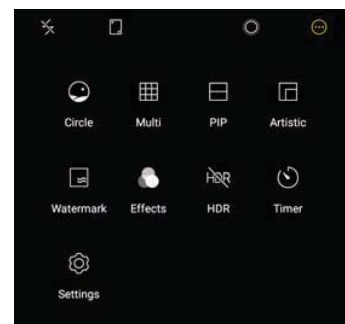





Setting	Available options
Circle	Allows you take photo with circular shape.
Multi	Allows you take 4 shots and save as one image.
PIP	Allows you to take a shot using the front and rear camera at the same time. The resulting photo will have 2 different shots.


Setting	Available options
Artistic	Allows you to add a preset artistic design on the image to be captured. Swipe the selection to scroll through the designs.
Watermark	Allows you to add a preset watermark on the image to be captured. Tap More Watermark to select the watermark.
Effects	Allows you to add effects on the image to be captured. Tap an effect to apply.
HDR	High Dynamic Range (HDR) imaging adds more ratio of light to dark in your photographs, helping to make your photos look better.
Timer	Allows you to set the timer before capturing a photo.
Settings	Allows you to adjust other camera settings. Settings include: Camera resolution, Video resolution, Volume key functions, Shutter sound, Composition, Record geolocation, Time-lapse, Restore default settings.

8.2 Viewing Photos & Videos

 1. From the Home screen, tap **Gallery**.
2. Tap a folder to view the captured images or recorded files in thumbnails.
3. Tap an image or a video to view in full screen.

TIPS: You can do any of the following:

 - a To view your photos and videos, tap **Photos** tab to switch to photos view or **Albums** tab to switch to albums view.
 - b Tap + to add a new album.
 - c Tap and hold a thumbnail to select a photo or video.
 - Tap **Share**  and then tap on the app that you want to use for sharing the photo or video.
 - Tap **Delete**  to delete the photo or video.
 - Tap **Copy**  to copy the photo or video.
 - Tap **Move**  and choose a folder to move the photo or video.
 - Tap **Cancel** to cancel the current operation with the photos or videos.
 - Tap **Select all** to select all photos or videos.
4. Tap an image or a video to view it in full screen.
 5. Swipe your finger to the left/right to view the previous/next file.

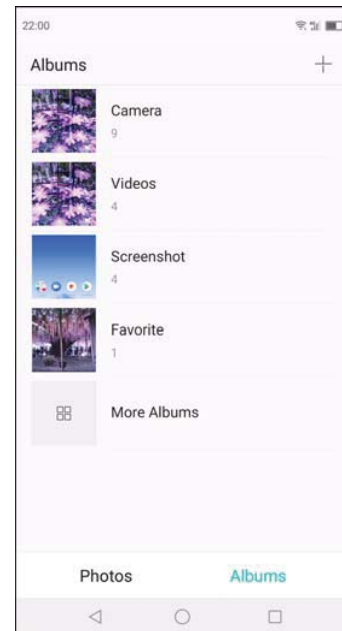

Chapter 9: Programs


This device comes with the following pre-installed programs.

 
9.1 Chrome

From the Home screen, tap **Chrome** to view web pages. See “Connecting to Internet” on page 39.

9.2 Calculator

With **Calculator**, you can perform basic arithmetic functions on this device.

From the Home screen, tap  > **Calculator**.

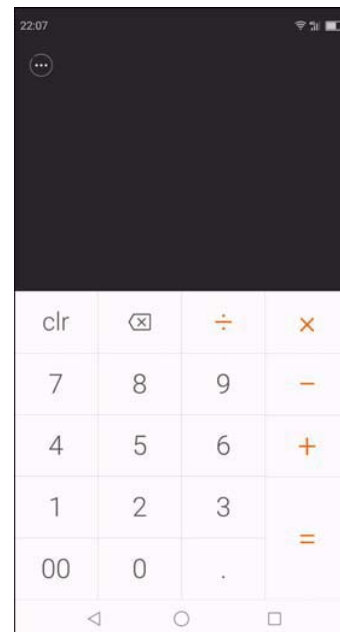

9.3 Camera


Capture images with this device. See “Photos and Videos” on page 45.

9.4 Gmail





Use **Gmail** to connect to your remote mailbox to retrieve new e-mail messages, or view previously retrieved e-mail messages offline. See “Using Email” on page 33.

 
9.5 File Manager

File Manager lets you browse the contents of your phone.

1. From the Home screen, tap  > **File Manager**.
2. Tap the folder list and tap the folder you want to explore. Or, tap the file path to select the storage to manage.

Managing files and folders

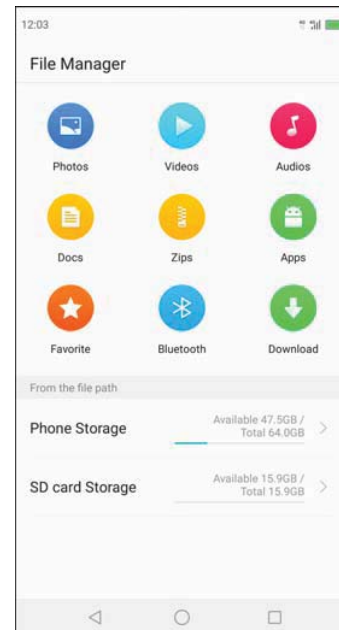


- To open a folder or file, tap on the folder or file or to access all the files saved on the phone's storage or SD card, tap **Phone Storage** or **SD card Storage** respectively.
- To delete, move, share, copy, add to favorites, compress, rename, or view file or folder details, tap and hold to view the respective options. Then tap a desired option.
- To refresh the folder content, tap .
- To sort items, tap , then tap a sorting option.
- To add a new folder, tap .
- To search for a file, tap , then enter the filename.
- To delete, move, share, copy, add to favorites, set as wallpaper, compress, rename, or view details, tap and hold a thumbnail, then tap the desired action.

 


9.6 Clock



Use Clock to add world clocks, set up alarms, or use the devices as a timer and stopwatch.


Adding world clocks

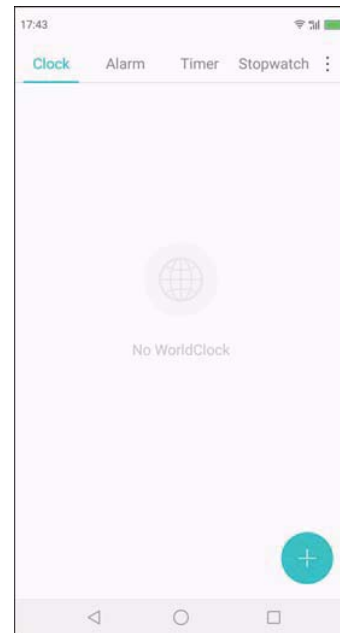
1. From the Home screen, tap  > **Clock** > **Clock**.
2. To add a world clock, tap .
3. Scroll the list and tap to select the city or type and search desired city.
4. After selecting, tap , the selected city will appear on the list.




Setting up alarms

 
1. From the Home screen, tap  > **Clock** > **Alarm**.
2. To set up an alarm, tap .
3. To set the time, slide the numbers to set the hour and minute.
4. To set repeat mode, tap **Repeat** and select the desired week days. Then tap **Done**.
5. To add an alarm label, tap **Label**. Enter the label and tap **Done**.
6. To vibrate when the alarm sounds, turn on **Vibrate**.
7. To set the ringtone, tap **Ringtone** and select the alarm sound.
8. To set the background image, tap **Select background image** and tap on the image you want to select. Then tap **OK**.
9. When done, tap **OK**.

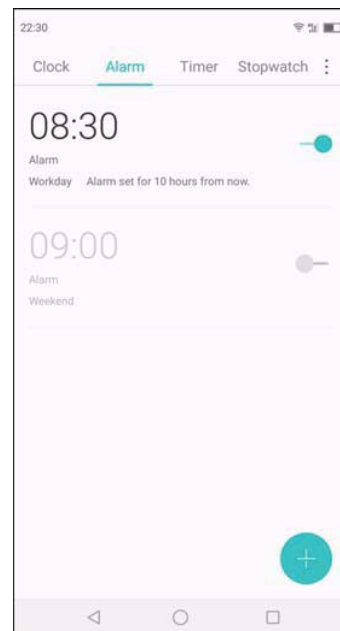


NOTE: By default the alarm is set on automatically. If you want to turn off the alarm, tap the **ON/OFF** button ().


Using the Timer

 1. From the Home screen, tap  > **Clock** > **Timer**.
2. Tap from a preset activity to automatically set the timer. Or, slide the numbers to set the hour and minute.
3. Tap **START** to start timer.

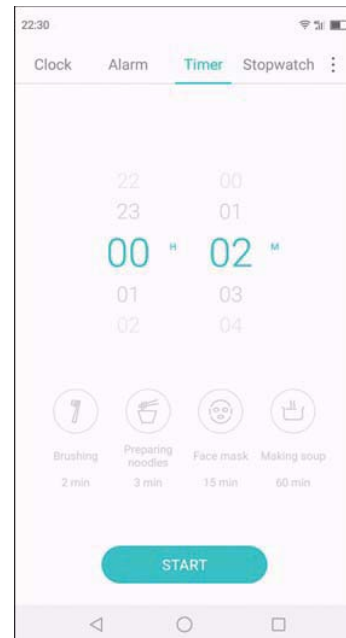



Using the Stopwatch

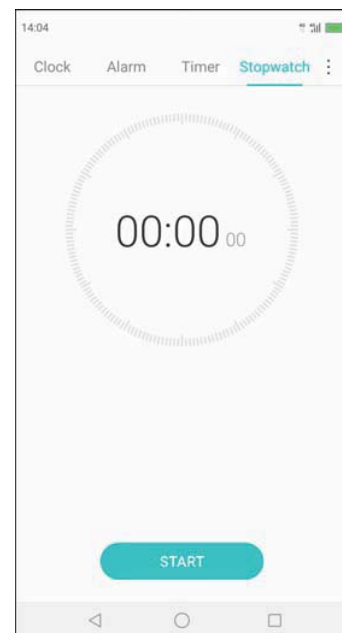 
1. From the Home screen, tap  > **Clock** > **Stopwatch**.
2. Tap **START** to start the counter.
3. Tap **Lap** to mark the lap or tap **Pause** to pause the counter.



9.7 Using Torch

When using this device in a dark environment, you can use this device as a torch.

 1. From the Home screen, slide the status bar down.
2. Tap  to switch on the torch. Tap  again to switch off the torch.

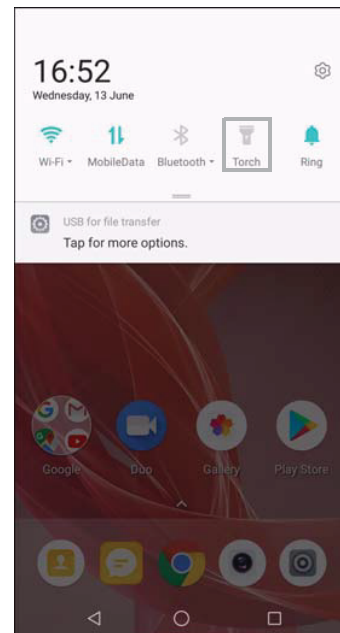

9.8 Messaging

Use **Messaging** to send or receive text and MMS messages. See “Text Message” on page 26.

9.9 Gallery

You can view your captured images, recorded video clips, and downloaded images in **Gallery**. See “Viewing Photos & Videos” on page 51.

9.10 Contacts

View or manage your contact list. See “Contacts” on page 16.

9.11 Phone

Use **Phone** to make phone calls or manage contact list. See “Making a Call” on page 23.






9.12 Settings

 
In the **Settings** menu, you can view and make adjustments for wireless & network settings, call settings, phone general settings and security settings. See “Device Settings” on page 59.

9.13 Recorder


Use **Recorder** to record a voice memo.

 
To record a voice note

1. From the Home screen, tap  > **Recorder**.
The recording screen is displayed.
2. Tap  to record your voice.
3. To stop recording, tap .
 - To pause recording, tap .
 - To mark the recording, tap .
4. Type the record name, then tap **Done** to save.

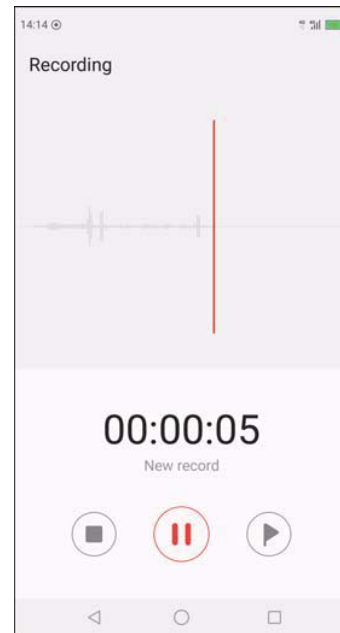



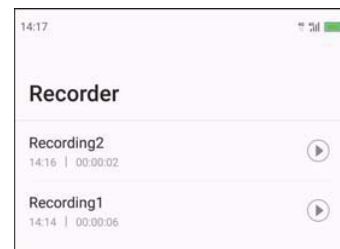


To play a voice note

 
1. From the Home screen, tap  > **Recorder**.
2. To play a recording, tap a recording file from the list.



9.14 Note



Use **Note** to type notes and attach an audio file or recording, or photo.

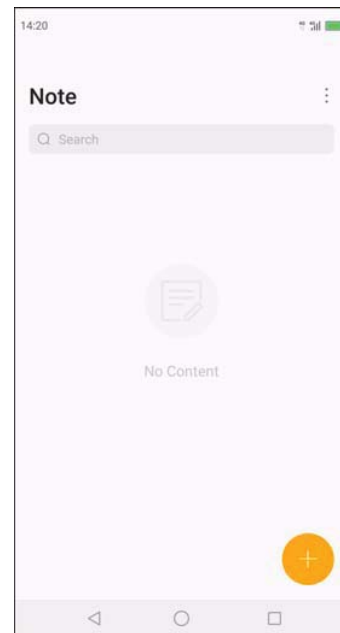
1. From the Home screen, tap  > **Note**.
2. To create a new note, tap .
 - To attach an audio file or record voice, tap .
 - To attach a photo, tap .
3. Type the notes.
4. When done, tap  to save.



9.15 Calendar


Use **Calendar** to mark important events and set reminders.

 1. From the Home screen, tap  > **Calendar**.
2. To create a new event, tap .
3. Enter the event name, location, start date/time, and end date/time.
4. Set the reminder.
5. Tap **MORE** to add more details such as Repetition, Time Zone, and Description.
6. Tap **Done** to save.

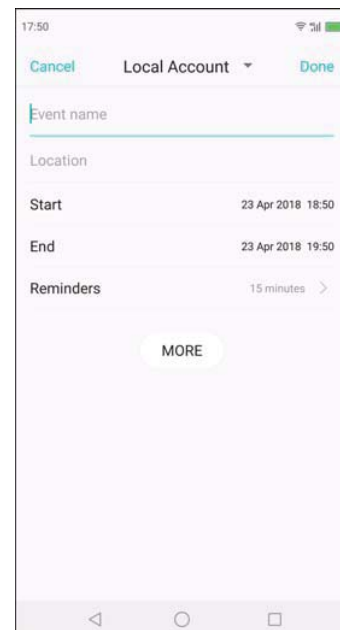

Chapter 10: Managing Your Phone

10.1 Device Settings

From the Home screen, tap **Settings** or slide down the status bar and tap  to view and adjust the settings of your device.

Setting	Description	
Wi-Fi	Manage Wi-Fi connections, scan and connect to available Wi-Fi networks.	
Bluetooth	Manage Bluetooth connections, set device name, show received files, and connect to other Bluetooth devices.	
SIM Config	Manage SIM configuration such as enable or disable the SIM card for calls and data, configure advanced settings for the SIM card, control data traffic, and more.	
More	Manage other settings such as: <ul style="list-style-type: none"> • Aeroplane mode: Disable all wireless connections • Personal hotspot: Share your phone's mobile data connection as a portable Wi-Fi hotspot • Share Network: Share your phone's mobile data connection via USB or Bluetooth • NFC: Enable data exchange when the phone is nearby another compatible device • WLAN Display: Enable beam app content to another compatible device. • Emergency broadcast: Configure and review cell broadcasts settings, such as emergency alert history, turn on notifications, set alert tone, and more. • VPN: Set up and manage Virtual Private Networks (VPNs) 	
Display	Auto control brightness	Enable to automatically control brightness settings.
	Brightness	Adjust the brightness of the screen.
	Eye Protection Mode	Configure eye protection mode and reduce the glare of the device.
	Wallpaper	Customize the device wallpaper.
	Font size	Set the font size.
	Device rotation	Enable auto rotate function and switch orientation automatically when rotating the device.
	Sleep	Adjust delay before the screen automatically goes off.
	Color temperature	Select the preferred color temperature from Cool, Natural, and Warm.
	Screen Mode	Set the default screen mode.

Setting	Description	
Sound & Vibration	Ring Volume	Adjust the volume for ringing.
	Media Volume	Adjust the volume of media files.
	Alarm Volume	Adjust the volume of alarm.
	Phone ringtone	Set your default phone ringtone.
	Message ringtone	Set your default message ringtone.
	Default notification sound	Set your default message notification ringtone.
	Also vibrate for calls	Enable or disable to vibrate when call is received.
	Vibrate on tap	Enable or disable vibration when selecting items on the screen.
	Vibrate on fingerprint	Enable or disable vibration when your phone has scanned your fingerprint.
	Vibrate on dial pad	Enable or disable vibration when selecting items on the screen.
	Increase volume in pocket	Enable to increase volume while in pocket.
	Dial pad tones	Enable or disable sound when touching keys on the dial pad.
	Screen-locking sounds	Play sounds when locking or unlocking the screen.
Application & Authority	Touch sounds	Enable or disable sound when selecting items on the screen.
	Manage Applications	Review app related information and manage apps.
Status Bar & Notification	Application Access Management	Set app permissions.
	App Notification Manager	Manage app notifications.
	Drop status bar when Screen locked	Enable or disable status bar to be slid down when the phone screen is locked.
	Notifications turn on screen	Enable or disable notifications turn on screen.
	Show status bar icon	Enable or disable notification icons on status bar, such as unanswered calls, and more.

Setting	Description	
	Show network speed	Enable or disable displaying network speed on the screen.
	Led	Enable or disable LED on notifications.
S Boost	Intelligent acceleration	Optimize the system performance.
	Defragmentation	Defragment the storage.
	Background apps management	Enable or disable running apps when the screen is off.
	Auto-start management	Enable or disable auto start apps.
Special Settings	Game assistant	Enable or disable game assistant and configure its parameters.
	Screen recorder	Configure screen recording parameters.
	Somatosensory motion	Configure various motion-related activities, such as capturing a screenshot with sliding down on the screen using your three fingers, rejecting a call by turning over the phone, and more.
Soft Key Settings	Suspension ball	Enable or disable displaying suspension ball on the screen for accessing various functions for quick access.
	Enable the fingerprint navigation key function	Configure fingerprint navigation key functions.
Face Unlock	Facial Unlocking	Enable or disable facial unlocking.
	Unlock Model	Select the phone's unlocking method.
	Add Face	Follow the on-screen instructions to add face for facial detection.
Fingerprint & Password	Screen lock	Set the lock screen by sliding the screen or with a pattern, PIN, or password.
	Fingerprint	Set up fingerprint recognition.
	Smart Lock	This option becomes available after you set a screen lock. Set your phone unlocked when it is safe with you.
	Lock screen preferences	Configure lock screen preferences, such as showing notification content on the lock screen and displaying a welcome message.
Battery	Review the battery performance and configure various settings, such as power saving mode, and more.	


Setting	Description	
Other Settings	Location	Enable or disable the phone to locate itself.
	Security & location	Configure various security settings and app usage access permissions.
	Backup	Configure your phone's backup and restore parameters.
	Storage settings	Manage phone's storage.
	Language & input	Configure language and input related settings, such as set the default language for the interface, configure spell checker, auto-fill service, personal dictionary, virtual keyboard, physical keyboard, and more.
	Date & time	Set date and time information.
	Accessibility	Configure various accessibility options, such as screen reader parameters, text-to-speech output parameters, phone auto-rotation, and more.
	Printing	Connect your phone to a wireless printer.
Accounts	Add account	Set up other accounts, such as Duo, Exchange, Google, Personal (IMAP), or Personal (POP3).
Google	Google Account	Configure your Google account settings. This option is visible only if you have already signed in to your Google account in your phone.
	Ads	Reset advertising ID, instruct apps not to use your advertising ID, and manage ads by Google.
	App preview messages	Manage application preview messages to let others share content and send messages to you - even through applications that you may not have installed.
	Backup	Configure how and what data is backed up to Google Drive.
	Cast media controls	Enable or disable controlling media from Cast devices through a notification.
	Data management	Update drive-enabled app files.
	Device phone number	Review or modify your device's phone number.
	Google Fit	Manage data and apps or devices connected to Google Fit. This option is visible only if you have already signed in to your Google account in your phone.
	Google Play	Manage payment methods when purchasing goods from Google. This option is visible only if you have already signed in to your Google account in your phone.

Setting	Description	
	Instant Apps	Use apps without installation. This option is visible only if you have already signed in to your Google account in your phone.
	Location	Enable or disable sharing your location information with Google apps.
	Nearby	Enable or disable receiving information on apps and websites that are around you.
	Restore contacts	Restore contacts from your Google account that have been backed up previously.
	Search	Configure various search settings.
	Security	Configure how your device can be located remotely and enable or disable Google to regularly check your device for detecting harmful behaviour.
	Set up nearby device	Set up your other device.
	Set up work profile	Set up your work profile to access your company emails, apps, and other work data. If you set up work profile, your personal data will be separated from your work data.
	Smart Lock for Passwords	Offer to save passwords to your Google account. This option is visible only if you have already signed in to your Google account in your phone.
System updates	Review system version and check for updates.	
About phone	Review phone related information, such as model, processor, memory, storage settings, and more.	

10.2 Changing Basic Settings


Date and Time

 
To automatically set the date and time

1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Other Settings > Date & time**.
3. Tap **Automatic date & time** to automatically set the date and time according to the network.

NOTE: To manually set the date and time, tap the on/off slider.

To manually set the date and time


1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Other Settings > Date & time**.
3. Turn off **Automatic date & time**.
4. Tap **Set date** to set the date.
 - Scroll the screen up or down to select the correct year, month, and day. Tap **Set date** again to exit.
5. Turn off **Automatic time zone** to manually select the time zone from the list.
6. Tap **Set time** to set the time.
 - Scroll the screen up or down to set the correct time. Tap **Set time** again to apply the values.
 - To use a 24-hour format, enable **Use 24-hour format**.

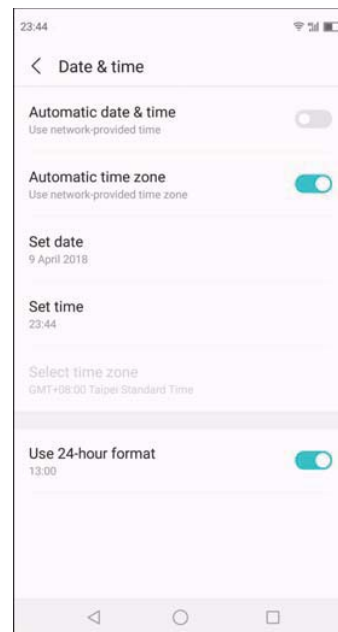


Display Settings


The display settings of the device affect the battery and external power level.

Turn off backlight when the phone is idle

 
1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Display**.
3. Tap **Sleep**.
4. Select the desired length of time.
Your setting is automatically saved.

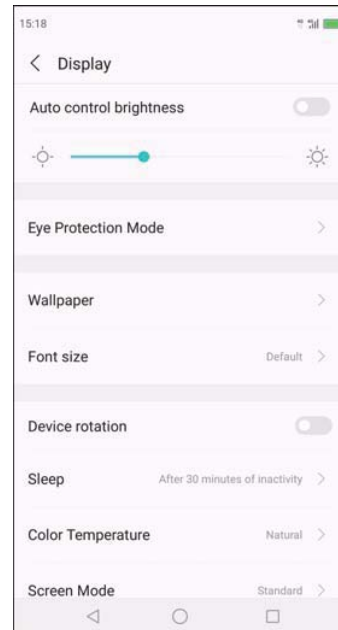

Adjust brightness

1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Display**.
3. Drag the **Brightness** slider to adjust brightness settings.
Your setting is automatically saved.

Change the screen orientation

 
1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Display**.
3. Tap **Device rotation** to turn on/off screen orientation when rotating the device.

Other Display shortcuts

From the Home screen, slide the status bar down to show the settings menu icons.

Do any of the following (as needed):

- Tap **Rotation** to enable or disable phone orientation switching.
- Tap **Eye protection Mode** to enable display to have yellowish color display to the eyes from excessive display glare.
- Tap **Auto Brightness** to automatically adjust the screen brightness on ambient lighting.

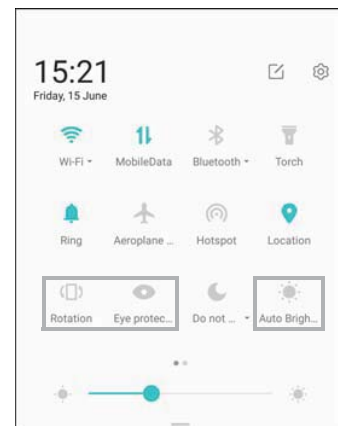

10.3 Using Wireless & networks

Your phone enables you to manage Wi-Fi, Bluetooth, Aeroplane mode, personal hotspot, tethering, and NFC.


1. From the Home screen, slide the status bar down, then slide downwards again to display all other network related icons.
2. Do any of the following (if necessary):
 - To enable or disable Wi-Fi, tap **Wi-Fi**.
 - To enable or disable Bluetooth, tap **Bluetooth**.
 - To enable or disable Aeroplane mode, tap **More > Aeroplane mode**.
 - To enable or disable personal hotspot, tap **More > Personal Hotspot**.
 - To enable or disable USB tethering or Bluetooth tethering, **More > Share Network > USB tethering** or **Bluetooth tethering** respectively.
 - To enable or disable transferring data between capable devices that are a few centimeters apart, tap **More > NFC > NFC**.

10.4 Protecting Your Phone

You can protect your phone from unauthorized users by requiring a PIN code, your personalized unlock pattern, or a password.


Encrypt Phone

Requires you to enter a numeric PIN or password to decrypt your phone each time you power it on.

1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Fingerprint & Password > Screen lock** and configure the necessary security settings.



Enable SIM Card Lock

 
When PIN code is enabled, you are required to enter the PIN code before making a call.

1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **SIM Config**.
3. Select the SIM card that you want to configure (if two SIM cards are inserted).
4. Tap **SIM Lock** and enable **Lock SIM card** function.
5. Enter a SIM PIN code and tap **OK**.


10.5 Configuring Mobile Data Limit

You can set the data usage limitation and warn you when you reach the maximum limit.

1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **SIM Config > Data traffic control**.
3. Swipe left or right to select the SIM card, then tap .
4. Tap **Monthly available data**.
5. Set **Monthly available data** and **Monthly start date** to set limit.

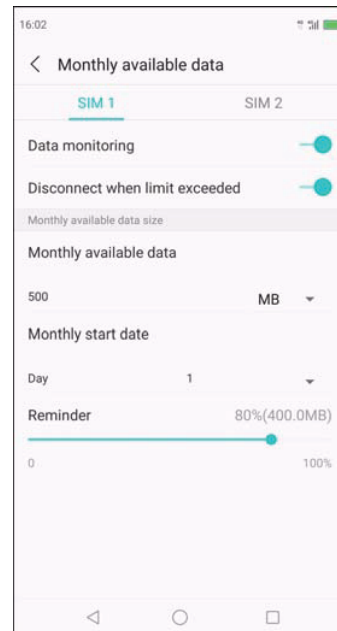

 
6. To view the data usage used by the apps, on Data traffic control screen, tap **Data use ranking**.

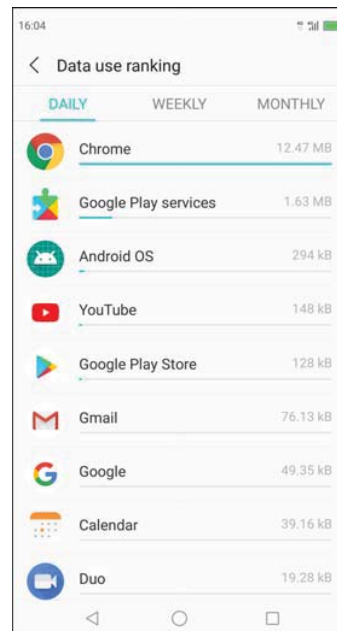

10.6 Resetting the Device

You can reset your phone to its factory defaults.

1. From the Home screen, tap **Settings** or slide the status bar and tap .
2. Tap **Other Settings > Backup**.
3. Tap **Factory data reset**.
4. Tap **RESET PHONE** to reset.

Chapter 11: Specifications

Item	Descriptions
Operating System	Android 8.0.0
Display	5.5 inch, FHD+ 2040x1080 (Sharp FFD)
Processor	Qualcomm Snapdragon SDM630
Network	GSM/WCDMA/LTE
Band	<ul style="list-style-type: none"> • GSM: 850/900/1800/1900 MHz • WCDMA: 850/900/1900/2100 MHz • FDD LTE: 2100(B1)/1800(B3)/2600(B7)/900(B8)/800(B20)
Memory	<ul style="list-style-type: none"> • RAM: 4GB; ROM: 64GB • Support micro-SD for storage extension
Camera	<ul style="list-style-type: none"> • Main: 12MP 2PD 1.4um + 8MP FF 1.12um for Bokeh • Front: 8M FF 1.4um
Wi-Fi	802.11 a/b/g/n/ac (2.4/5GHz)
Bluetooth	5.0
GPS	<ul style="list-style-type: none"> • GPS/AGPS • GLONASS • GALILEO
Sensor	<ul style="list-style-type: none"> • Ambient light sensor • Proximity sensor • Accelerometer • E-compass • Gyroscope • Hall sensor
Interface	USB Type-C
Battery	2700mAh
Dimensions	141.8 x 72.04 x 7.9 mm
Weight	140g with battery pack
Other Features	<ul style="list-style-type: none"> • IMR film • Support Dual SIM • 2.5D glass • Fingerprint sensor • Smart Amplifier

List of Software

Mobile phone OS version	PC OS version	Software to be installed to PC	Mobile phone USB driver
8.0.0	Windows 10 32bit/64 bit	No need	Supported
8.0.0	Windows 7 32bit/64 bit	No need	Supported
8.0.0	Windows Vista 32bit/64 bit	No need	Supported
8.0.0	Windows XP 32bit SP3	Install supplied driver.	Supported
8.0.0	Windows XP 32bit SP1/SP2	1. Update <u>Windows XP Service Pack 3</u> 2. Install supplied driver.	Supported
8.0.0	Windows XP 64 bit	N/A	Supported
8.0.0	Google Chrome OS	No need	Supported
Only supports Android 3.0 or above	Apple PC/laptop	Go to Android to download <u>Android File Transfer</u>	Not supported
...	Tablet		Not supported

❖ **Note1:** Only Windows Media Transfer Protocol (MTP) is supported for file transfer between mobile phones and PCs. Windows Media Player 11 or above is needed to support MTP.

Windows Media Player is built in Windows Vista and Windows 7 OS.

However, Windows XP (32) users must install it separately.

❖ **Note2:** To avoid problems when using the USB modem/binding apps, Windows XP SP1/SP2 users must upgrade to Windows XP SP3 for normal operation.

Warning:

 
This device does not guarantee compatibility with all Micro-SIM adapter cards. Be careful when using such adapter cards. If the adapter card is not compatible, do not insert it by force.

Driver Installation


1. Turn on your device, and connect it to your computer using the USB cable.
2. From the Windows desktop, double click on **Computer** and locate the **CD drive**.



3. Browse and double click **setup.exe**.

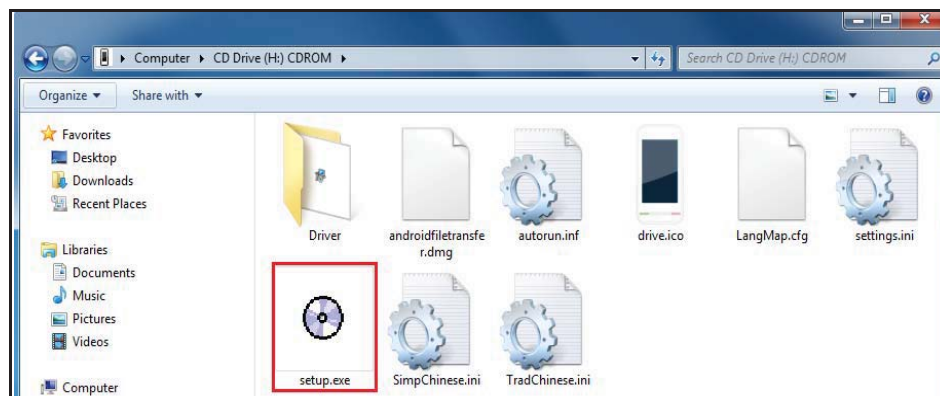

 4. Follow the on-screen instructions to complete the driver installation.

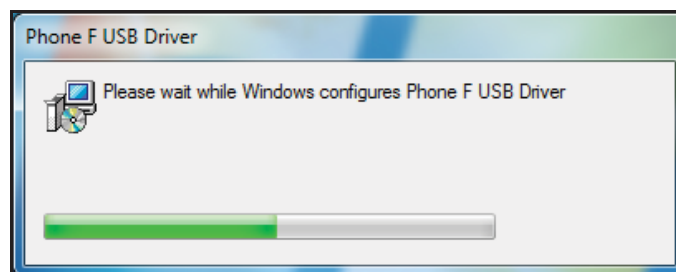

Important Information

Please read before proceeding

- Please keep the SIM eject pin out of the reach of children. If swallowed accidentally, it may cause suffocation or injury.
- DO NOT place sharp objects on top of the device, as they may scratch the screen.
- DO NOT drop your device or subject it to severe impacts.
Bending the body and pushing the display or keys with extreme force could damage the device.
- DO NOT use a pen or any sharp object to tap the screen.
- DO NOT expose the device to dirty or dusty environments.
- Use this device in the temperature range of 5°C ~ 35°C and humidity: 35% ~ 90%.
- Charge handset in ambient temperature 5°C ~ 35°C; Internal Battery may leak/overheat and performance may deteriorate outside this range.
- DO NOT place the device on an uneven or unstable surface.
- DO NOT insert any foreign objects into the device.
- DO NOT expose the device to strong magnetic or electrical field.
- DO NOT use or store this equipment in a place where it will be exposed to high temperatures, such as near an open flame or heat-emitting equipment.
- DO NOT use it or store it where fluids such as water can splash onto it.
Raindrops, water spray, juice, coffee, steam, or other types of liquids will also cause malfunctions.
- Refer to the rating label on the device and be sure that the power adapter complies with the rating. Only use accessories provided by the manufacturer.
- Disconnect the device from an electrical outlet and power off before cleaning the device.
- NEVER attempt to connect or disconnect the power adapter with wet hands.
- Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
- DO NOT disassemble the device. Only a certified service technician should perform repair.
- Please check with your Local Authority or retailer for proper disposal of electronic products.
- For USB connection, users must use a USB 2.0 (or higher version) cable.
- The adapter shall be installed near the equipment and shall be easily accessible.
- The temperature of the device might increase while the CPU is busy handling resource consuming activities such as high resolution video decoding. The SW protection mechanism will ensure stop charging whenever the temperature is over the predefined threshold and prepare for shut down if necessary. Please do not worry.
- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth equipment.

- It is confirmed that the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead.
This advice applies especially to children, adolescents and pregnant women.
- Use cell-phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Actual available capacity of user storage and internal memory is less because of the operating system, software and other functions which utilize part of this capacity. The available capacity may change with software updates.

Safety Precautions for Battery Use

- The phone battery can not be removed, please do not disassemble.
- There is the danger of explosion if disassemble by unauthorized personnel.
- Recycle or dispose used batteries according to the local regulations.



Road and Environmental Safety

- Turn off the phone in areas with a potentially explosive atmosphere or where flammable objects exist such as gas stations, fuel depots, and chemical plants among others. Sparks from these areas could cause explosion or fire and result in injury or even death.
- Do not use hand-held phones while driving a vehicle. Use hands-free devices as an alternative.

Safety in Aircraft

Do not use the phone on board an aircraft. The phone's network signals may cause interference to the navigation system. As a safety measurement, it is prohibited to use mobile phones on board in most countries.

Copyright Information

- Copyright© Sharp Corporation, 2012. All rights reserved.
- This product has an Android™ platform based on Linux, which can be expanded by a variety of JME-based app SW.
- Android is a trademark of Google LLC.
- microSD™ is a trademark of SD Card Association.
- All products use in this device and trademarks mentioned herein are trademarks or registered trademarks of their respective owners.
- LTE is a trade mark of ETSI.

Intellectual Property Right Information

Right to all technologies and products that comprise this device are the property of their original owners respectively.

This product has an Android platform based on Linux, which can be expanded by a variety of Java-Script-based application SW.

The Bluetooth® word mark and logos are registered trademarks owned by BluetoothSIG, Inc. and any use of such marks by SHARP Corporation is under license.

Wi-Fi®, the Wi-Fi CERTIFIED logo and the Wi-Fi logo are trademarks of Wi-Fi Alliance.

Compliance Information

SAR Information

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 W/kg averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.353 W/kg (the measure distance of 0 mm) and at the body is 1.731 W/kg (the measure distance of 5 mm). Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

WEEE Notice

The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserve natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment

disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance

This product is in compliance with DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8 June 2011, on the restriction of the use of certain hazardous substances in electrical and electronic equipment and its amendments.

RED Compliance

This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards. Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Prevention of Hearing Loss

Warning statement requirement under EN 60950-1:2006+A2:2013.



To prevent hearing damage, do not listen at high volume levels for long periods.

Simplified EU Declaration of Conformity

Hereby, UMC Poland sp. z o.o declares that the radio equipment type SH-Z01 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://www.sharpconsumer.eu/documents-of-conformity/>

Maximum transmit power

GSM 900	+33.5 dBm (Power Class 4)
DCS 1800	+30.5 dBm (Power Class 1)
WCDMA FDD I	+23.0 dBm (Power Class 3)
WCDMA FDD 8	+25.0 dBm (Power Class 3)
LTE FDD Band 1	+23.5 dBm (Power Class 3)
LTE FDD Band 3	+23.0 dBm (Power Class 3)
LTE FDD Band 7	+22.5 dBm (Power Class 3)
LTE FDD Band 8	+24.0 dBm (Power Class 3)
LTE FDD Band 20	+24.0 dBm (Power Class 3)
Bluetooth	+6.5 dBm (Power Class 1)
WLAN 2.4GHz	+20.0 dBm
WLAN 5GHz	+16.0 dBm
NFC	-10.06 dBμA/m at 10m

Manufacturer: UMC Poland sp. z o.o

Manufacturer Address: Ostaszewo 57B, 87-148 Łysomice, Poland

Regarding charger, Importer's information is below:

Importer's Name: UMC Poland sp. z o.o

Importer's Address: Ostaszewo 57B, 87-148 Łysomice, Poland



UMC Poland Sp. z o.o.
Ostaszewo 57B, 87-148 Łysomice,
Poland

SHARP CORPORATION
OSAKA, JAPAN

SMP/MAN/0007

www.sharpconsumer.eu

SHARP