

MOTOROLA EX119

LIFE.  POWERED.

68016221001

WELCOME

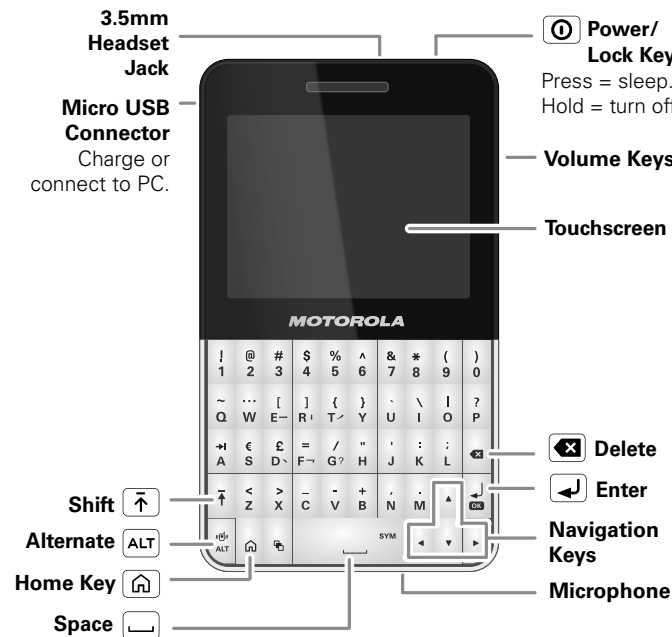 
Your EX119 is a phone with exciting features including music, photo, video, browsing and more—with an easy to use QWERTY keypad.

- **Dual SIM slot.** No need to change SIM cards, use two at the same time.
- **Music.** Instantly play your music. Just open your media player and select a playlist.
- **Photos.** Use your phone's camera to take photos and send them to your friends.

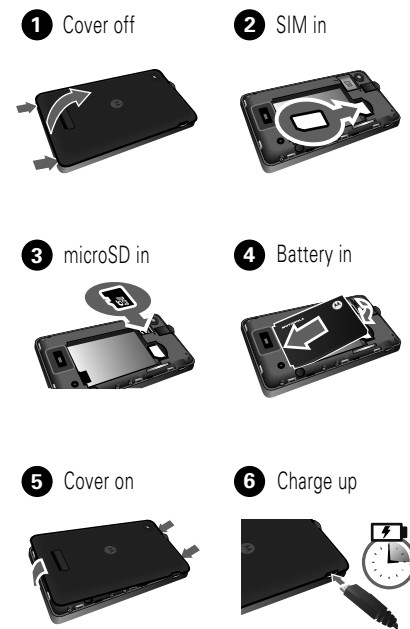 
We've crammed all the main features of your phone into this handy guide, and in a matter of minutes we'll show you just how easy your phone is to use. You may be surprised at what you discover.

Note: Your phone may not appear exactly as the images in this guide.

YOUR PHONE

 


LET'S GO



BASICS


Turn it on & off


Press and hold  (on top of the phone) for a few seconds to turn the phone on/off.


Touch tips

- **Touch:** Choose an icon or option.
- **Drag/Flick:** Scroll/move slowly (drag) or quickly (flick).

Menu navigation

 

Touch  to open the main menu.

Press Home  to close any menu or app and return to the home screen.

Touch  to go back.

 

PERSONALISE

Display settings


To set display settings such as wallpaper and screen saver, touch  >  **More** > **Settings** > **Phone settings** > **Display**.

Date & time

Set date, time, time zone and formats:

touch  >  **More** > **Settings** > **Phone settings** > **Time and date**.

SOCIAL NETWORKS

Use your phone to access Myspace, Facebook™, YouTube™ and others, touch  to choose a social networking application.





Note: If you don't have **MySpace**, **Facebook** accounts, you can visit their Web sites to set them up.

Update your status

 
After you set up a **MySpace** or **Facebook** account, you can sign in, update and see your current status and see and respond to friends' updates.


CONTACTS

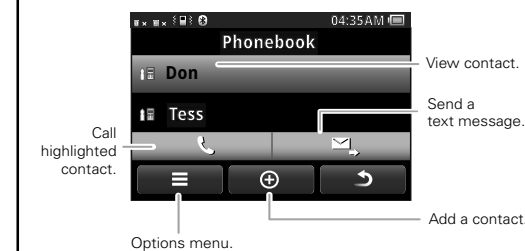 
create contacts

Touch  >  **Phonebook** > , enter the contact name and details, then touch  **Save**.

Call contacts



Touch a contact, then touch .


Tip: Press the volume keys to scroll to a contact, then touch  to call.



BLUETOOTH™


 
Turn on or off

Touch  >  **More** > **Settings** > **Connection manager** > **Bluetooth** > **On** or **Off**.

When Bluetooth power is on, the Bluetooth indicator  appears in the home screen.




Connect new devices

To connect with a new device, you need to pair with it. You only need to do this once for each device.

 
- 1 Make sure the device you are pairing with is in discoverable mode (see device instructions).
- 2 Touch  >  **More** > **Settings** > **Connection manager** > **Bluetooth** > **My devices** > **Search new device**.
- 3 Your phone lists the devices it finds within range. Select a device to connect.
- 4 If necessary, enter the device passkey (like 0000) to connect to the device.

TIPS & TRICKS

 

Recent calls

To see your **Missed Calls**, **Dialled Calls** and **Received Calls**, touch  >  **More** >  **Call Log**.

Voicemail


 

 
From the main menu screen, touch , then touch and hold **1**. If your voicemail number is preset, you will connect.

Backlight time

To set how long your backlight stays on, touch  >  **More** > **Settings** > **Phone settings** > **Misc. settings** > **LCD backlight**.


Battery tips



 
Want to extend your battery life? Try these:

- Turn off Bluetooth™ power: Touch  >  **More** > **Settings** > **Connection manager** > **Bluetooth** > **Off**.
- Turn off the screen saver: Touch  >  **More** > **Settings** > **Phone settings** > **Display** > **Screen saver**, set **Style** to **Off**.

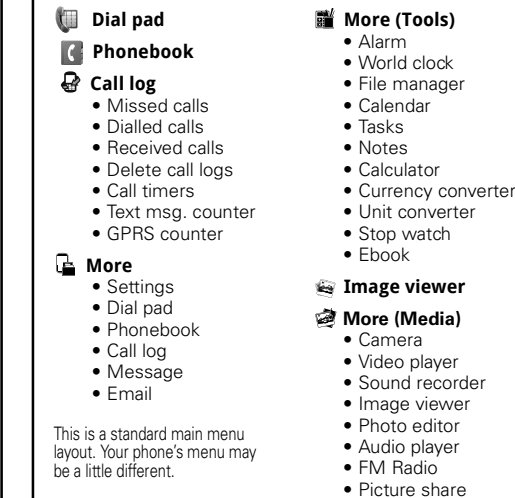 
MUSIC

Touch  >  **More** > **Audio player**

Press Home  to use another app. Your media continues to play. If you use other media programs the media player is turned off.

Tip: To create a new playlist, touch  >  **More** > **Audio player** > **Playlists** >  > **New**.

MENU MAP



WEB

Use your phone's browser to surf your favourite Web sites, upload videos to a video blog and download files and applications to your phone. Log onto your internet-based email account to check your email.

Touch  > **Browser**

- To go to a Web page, touch address bar to input web address.
- To go to a link on a Web page, touch it.

Note: If you can't connect, contact your mobile operator.

HOME SCREEN

The *home screen* is what you see when you turn on the phone or touch Home  from a menu. It's basically like this:



Note: Your home screen might look a little different.

