

<b>1</b>	<b>Copyright</b>	<b>1</b>
<b>2</b>	<b>Getting Started</b>	<b>4</b>
	Your Phone at a Glance	4
	Keys and Functions	5
	Inserting the UIM Card and the Battery	8
	Inserting the microSD Card	8
	Charging the Battery	9
	Status Icons	9
<b>3</b>	<b>Text Entry</b>	<b>11</b>
	Entering English	11
	Entering Spanish	12
	Entering a Digit	12
<b>4</b>	<b>Voice Services</b>	<b>13</b>
	Making a Call	13
	Answering a Call	14
<b>5</b>	<b>Contacts</b>	<b>15</b>
	Adding a Contact	15
	Searching for a Contact	15
<b>6</b>	<b>Messaging</b>	<b>16</b>
	Writing and Sending a Message	16
	Reading a Message	16
<b>7</b>	<b>Media Applications</b>	<b>17</b>

Taking a Photo . . . . .	17
Music Player . . . . .	17
Picture Viewer . . . . .	18
Recorder . . . . .	19
<b>8 Bluetooth . . . . .</b>	<b>21</b>
Bluetooth-based Data Transfer . . . . .	21
Using Bluetooth Headset . . . . .	22
<b>9 Security . . . . .</b>	<b>23</b>
Enabling/Disabling the Phone Lock . . . . .	23
Locking the Keypad . . . . .	23
<b>10 TTY Operation . . . . .</b>	<b>24</b>
Using the TTY Device . . . . .	24
Setting the TTY Mode . . . . .	24
<b>11 Troubleshooting . . . . .</b>	<b>26</b>
<b>12 Warnings and Precautions . . . . .</b>	<b>28</b>



# 1 Copyright

**Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.**

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

## **Trademarks and Permissions**

 HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## **Notice**

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers, thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

## **NO WARRANTY**

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL

 
DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

### **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.


# 2 Getting Started

## Your Phone at a Glance

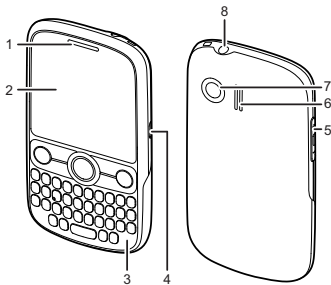

1	Earpiece	2	Screen
3	Microphone	4	Data/Charger Port
5	<b>Volume key</b>	6	Speaker
7	Camera	8	Headset jack

# Keys and Functions

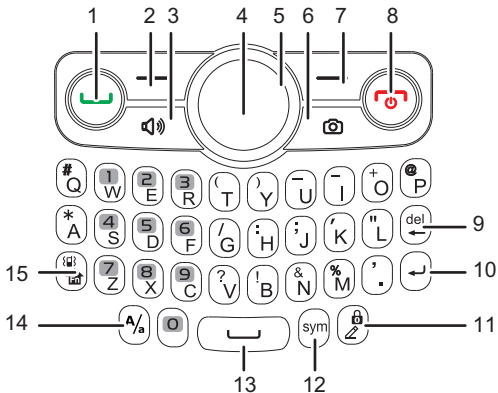 

- 
- |   |                      |                                                                                                                      |
|---|----------------------|----------------------------------------------------------------------------------------------------------------------|
| 1 | <b>Send key</b>      | <ul style="list-style-type: none"><li>• Make or answer a call.</li><li>• Access call logs in standby mode.</li></ul> |
| 2 | <b>Left soft key</b> | Select the option displayed in the lower left corner of the screen.                                                  |
| 3 | <b>Speaker key</b>   | Press and hold to turn on or off the speaker mode.                                                                   |
-

---

4	<b>Confirm key</b>	Confirm a selection.
5	<b>Navigation keys</b>	<ul style="list-style-type: none"><li>• Scroll through a menu.</li><li>• Access the corresponding functions in standby mode.</li></ul>
6	<b>Camera key</b>	<ul style="list-style-type: none"><li>• Press to access camera in standby mode.</li><li>• Press to take a photo in camera preview mode.</li></ul>
7	<b>Right soft key</b>	Select the option displayed in the lower right corner of the screen.
8	<b>End key</b>	<ul style="list-style-type: none"><li>• Power on or power off the phone by pressing and holding it.</li><li>• End or reject a call.</li><li>• Return to the standby mode.</li><li>• Turn on or off the phone backlight.</li></ul>
9	<b>Del key</b>	Delete a character in editing mode or delete a selected item in an application.
10	<b>Enter key</b>	In text input mode, press this key to enter a linefeed character.

---




---


11 <b>Input Method/lock key</b>	<ul style="list-style-type: none"><li>• In text input mode, press this key to switch between text input modes.</li><li>• In standby mode, press and hold to lock the keyboard.</li></ul>
12 <b>Sym key</b>	In text input mode, press to display the symbol list.
13 <b>Space key</b>	In text input mode, press to input a space.
14 <b>Caps key</b>	In text input mode, press the key to switch between "abc" mode (lower case), "Abc" mode (capitalization of the first letter), and "ABC" mode (upper case).
15 <b>Fn/Vibrate key</b>	<ul style="list-style-type: none"><li>• In text input mode, press this key and another key to enter the upper character on the other key.</li><li>• In text input mode, press the Fn key for two consecutive times, and then press other keys to enter upper characters on the keys. Press the Fn key again to cancel this function.</li><li>• In standby mode, press and hold to switch between Vibration mode and the current profile mode.</li></ul>

---

## Inserting the UIM Card and the Battery

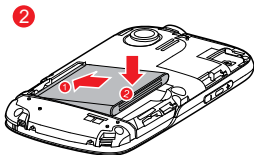 

## Inserting the microSD Card

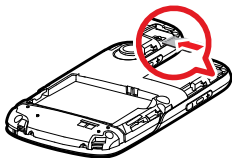 
























## Charging the Battery

Before charging the battery with the travel charger, ensure that the battery is installed in your phone. Do not use a damaged battery or charger.

1. Connect the charger to a power outlet.
2. Connect the charger to the charger connector of the phone. The phone begins charging. When the battery icon changes to fully charged, it indicates that your phone is fully charged.
3. When the phone is fully charged, disconnect the charger from the phone and then from the power outlet.

## Status Icons

	Signal strength		Roaming
	Call in progress		The memory for text messages is full
	New text message received		New multimedia message received

	The memory for multimedia messages is full		New voicemail message received
	New emergency message received		microSD card inserted
	Alarm clock enabled		Bluetooth on
	Bluetooth headset connected		The phone is receiving data through Bluetooth
	The phone is sending data through Bluetooth		Battery level
	Battery charging		Music player playing in the background
	<b>Ring</b> mode activated		<b>Silence</b> mode activated
	<b>Vibration</b> mode activated		<b>Ring and Vibration</b> mode activated
	Headset connected		

# 3 Text Entry

## Entering English

When you turn Predictive input on, your phone supports smart text input methods; otherwise, only traditional text input methods are supported. To turn on or off Predictive input, select **Menu > Settings > Phone > Text Input Settings > Predictive Onput** .

### Smart English Input Method

1. Based on the sequence of the word, press the key labeled with the desired letter. Then the phone predicts the commonly used words according to the numeric sequence of key presses.
2. Select the desired word, and press **Confirm key** or **Space key** to enter the word.
3. Press **Sym key** to display the symbol list. Then you can select and enter a symbol.

---

#### Note:

The indicator of the current input method is displayed in the upper right corner of the screen. You can press **Input Method/lock key** to change the input method.

---

## Traditional English Input Method

The traditional text input method allows you to enter uppercase or lowercase English letters. You can press the key labeled with the desired letter.

- Press **Sym key** to display the symbol list. Then you can select and enter a symbol.
- Press **Space key** enter a space.

## Entering Spanish

You can enter Spanish words using Spanish text input methods.

The traditional Spanish input method and the smart Spanish input method are similar to the traditional English input method and the smart English input method. For details, see "Entering English".

## Entering a Digit

- In "123" input mode, press the key labeled with your desired digit.
- In "Abc" and "En" input mode, press **Fn/Vibrate key** and then press a number key.
- In any text input mode, except the "123" input mode, press and hold a number key to enter the digit.

# 4 Voice Services

## Making a Call

### Dialing via Keypad

1. In standby mode, enter the phone number.
  - To make an international call, press **O/+ key** to enter the international long-distance code (+), and then enter the country code or region code, area code, and phone number in sequence.
  - To dial an extension number, enter the phone number, press **P/@ key** to insert P or press **T/( key** to insert T, and then enter the extension number.
2. Press **Send key** to dial the number.
3. Press **End key** or Select **End** to end the call.

### Dialing via Contacts

Select **Menu > Contacts**, Select a contact, and press **Send key** to make a call.

## Dialing via Call Log

Select **Menu** > **Recent Calls** or press **Send key** to select the required number from call logs. Then press **Send key** to dial the number

## Answering a Call

When there is an incoming call, you can press **Send key** to answer it, press **End key** to reject it.

- If the any-key answer function is enabled, you can press any key except **End key** and **Right soft key** to answer an incoming call.
- If the headset auto-answer function is enabled, when the headset is connected to the phone, the incoming call is answered automatically.



# 5 Contacts

## Adding a Contact

1. Select **Menu > Contacts > Create Contact**.
2. On the Edit screen, enter the information about the contact. (For each contact, at least one number needs to be entered.)
3. Select **Save** to save the contact.

## Searching for a Contact

1. Select **Menu > Contacts**.
2. Enter the name of the contact in the text box. The automatically lists the contacts that comply with the search information you entered.

# 6 Messaging

## Writing and Sending a Message

1. Select **Menu > Messaging > Create Message**.
2. Enter one or more recipient's numbers directly, or press **Confirm key** to access the contact list and then select one or multiple recipients.
3. Enter text contents in the text box. You can press **Confirm key** to add picture, audio or slide to the message, and the message will be converted to MMS mode automatically.
4. Select **Options > Send** to send the message

---

**Note:**

Your phone supports a multimedia message of a maximum size of 500 KB.

---

## Reading a Message

To read a text message stored in the inbox, do the following:

1. Select **Menu > Messaging > Inbox**.
2. Press **Navigation keys** to scroll to a message. Press **Confirm key** to read the message.

# 7 Media Applications

## Taking a Photo

1. Select **Menu > Tools > Camera**.
2. In the viewfinder screen, press **Left soft key** for the camera settings.
3. Focus the camera on the scene. Press **Confirm key** to take a photo.
4. Your photo is automatically saved to the album of the default storage that you select.

## Music Player

### Starting the Music Player

To start the music player, select **Menu > Music Player**.

### Adding a Playlist

1. Select **Menu > Music Player**.
2. Select **Options > Media Library > Playlist**.
3. Select **Options > Create** to create a new playlist. Open the playlist and select **Add** to add songs to the playlist.

---

**Note:**

You can also select **Menu > Multimedia** to select music to play.

---

## Playing music

When the music is played, you can do the following:

- Press **Confirm key** to pause the song; press it again to continue playing.
  - Press **Right navigation key** to play the next song. Press and hold **Right navigation key** to fast-forward the song.
  - Press **Left navigation key** to play the previous song. Press and hold **Left navigation key** to rewind the song.
  - Select **Options > Exit** to exit the media player.
- 

**Note:**

When a song is played, you can select **Minimize** or press **End key** to minimize the media player screen. In this case, the media player is running in the background.

---

## Picture Viewer

1. Select **Menu > Pictures**.
2. Select **Options > Refresh** to search for the recently added pictures and photos.

3. Press **Navigation keys** to scroll to a picture and then press **Confirm key** to view the picture. Select **Options** for the following options:
  - **Send**: to send a picture via messaging, or Bluetooth.
  - **Set as**: to set a picture as the wallpaper or a contact image.
  - **Delete**: to delete a picture.
  - **Rotate**: to rotate the picture clockwise or anticlockwise.
  - **Zoom In**: to zoom in the picture.
  - **Play**: to play all pictures in full-screen mode.

## Recorder

1. In standby mode, select **Menu > Tools > Recorder**
2. Press **Confirm key** to start recording. Select **Pause/Continue** to pause or continue.
3. Select **Stop** to stop recording. The sound clip is automatically saved to the Recorders folder of the default storage that you select.
4. Press **Confirm key** to play the sound clip.

---

**Note:**

When recording a sound clip, keep the microphone of your phone near the

sound source for a better recording effect.

---

# 8 Bluetooth

## Bluetooth-based Data Transfer

You can exchange data between your Bluetooth phone and other Bluetooth devices. If you want to exchange data between your phone and another device, that device must support Bluetooth and the Bluetooth function must be enabled.

1. Select **Menu > Settings > Connectivity > Bluetooth > Bluetooth > On** to enable the Bluetooth function.
2. Select **Search for Devices** to search a Bluetooth device. When a Bluetooth device is found for the first time, authentication is required.
3. If the Bluetooth(BT) accessory that is to be connected requires a password, the message "Enter password:" will appear. Enter the BT accessory password, normally it is 0000 (four zeros). After the same password is entered (sometimes requires entry on both devices) the Bluetooth connection is set up.
4. Launch the application that contains the file to be sent. Select the file you want to send. Select **Options** and select **Send > Via Bluetooth**.

## Using Bluetooth Headset

You can talk by using the Bluetooth headset or Bluetooth loudspeaker. For more information, refer to the user manuals of the relevant devices.

1. Open the Bluetooth headset and keep it in the discoverable state.
2. Select **Bluetooth** to enable the Bluetooth function.
3. Select **Search for Devices** to search for a Bluetooth device.  
When a Bluetooth device is found for the first time, authentication is required.



# 9 Security

## Enabling/Disabling the Phone Lock

The phone lock protects your phone from unauthorized use. The phone lock function is not enabled when you purchase the phone. You can change the default phone lock code (Last four number of the MDN) to any string of 4 to 8 digits.

1. Select **Menu > Settings > Security > Phone Lock**.
2. Press **Navigation keys** to select one of the following options:
  - **On**: The phone lock will be enabled when the phone is powered on next time.
  - **Off**: The phone lock will be disabled.

## Locking the Keypad

When the keypad is locked, you can still answer incoming calls or make emergency calls by pressing **Send key**.

1. Press and hold **Input Method/lock key** to lock the key pad.
2. Press **Left soft key**, and then press **Right soft key** to unlock the keypad.

# 10 TTY Operation

## Using the TTY Device

The Teletypewriter (TTY) is a typewriting device. By connecting the phone to the TTY device, you can use the TTY functions to send/receive messages.

When you use the TTY function, do as follows:

1. Set the phone to the TTY mode and connect the TTY device to the headset jack of the phone.
2. Make or answer calls as normal.
3. When the call is put through, use the TTY device to send or receive the letters.
4. Press **End key** to end the call.

## Setting the TTY Mode

1. Select **Menu > Settings > Phone > TTY Setup**.
2. Select **TTY FULL** mode.
  - **TTY OFF**: The standard voice speaking mode and the listening mode.
  - **TTY FULL**: Transmit and receive the TTY characters.

- **TTY VCO:** Receive TTY characters but transmit by speaking into the microphone.
- **TTY HCO:** Transmit TTY characters but receive by listening to the earpiece.

# 11 Troubleshooting

If you encounter any problem when using your phone, try to rectify the problem according to the following table. If the problem persists, contact the service provider or the dealer.

---

The battery cannot be charged.

The charger is properly connected to your phone and the power socket.

---

The phone cannot be powered on.

- The battery power is sufficient.
- The battery is properly installed.
- Press and hold **End key**.

---

You cannot make a call except an emergency call.

- The phone number is correct.
- You are in the network service area.
- You have not enabled the call restriction function.

---

Bad call quality.

- The signal strength is strong enough.
- If you are staying indoors, move close to a window.

---

During a call, the other side cannot hear your voice.

The microphone is not covered.

---

---

The signal strength is not strong enough or your phone is often off line.

- The antenna is in a good condition.
- Move close to a place with strong signal strength.

---

Your phone displays "No service found", "Service unavailable" or "Network problem".

- You are not in an area with weak magnetic field (in a tunnel or surrounded by buildings). If so, move to another area and try again.
  - Do not visit the service option without obtaining authorization from your service provider.
-

# 12 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

## **Electronic Device**

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

## **Medical Device**

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

## **Potentially Explosive Atmosphere**

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## **Traffic Security**

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## **Operating Environment**

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.



- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

## **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## **Accessories**

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

## **Battery and Charger**

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery

may be short-circuited and may cause injuries and burns on your body.

- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

## **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.

- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

## **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## **Certification Information (SAR)**

This mobile device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.130 W/kg, and when properly worn on the body is 0.992 W/kg.

### **Hearing Aid Compatibility (HAC) regulations for Mobile phones**

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components.

Your phone is compliant with FCC HAC regulations (ANSI C63.19). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have

the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.) Hearing devices may also be measured.

Your phone meets the M4/T4 level rating. Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about the FCC Hearing Aid Compatibility please go to

<http://www.fcc.gov/cgb/dro>

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any



interference received, including interference that may cause undesired operation.

---

**Caution:**

Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

---

**Proposition 65 Compliance Statement**

---

**Caution:**

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

---