

Your HTC Desire Z

User guide



Contents

Basics

Inside the box	6
Your phone	6
Back cover	8
SIM card	8
Storage card	9
Battery	11
Switching your phone on or off	12
Entering your PIN	13
Finger gestures	13
Using the trackpad to interact with the touch screen	14

Getting started

Setting up your phone for the first time	17
Home screen	18
Sleep mode	19
Status and notifications	20
Notifications panel	22
Connecting your phone to a computer	23
Copying files to or from the storage card	24
Adjusting the volume	24
Searching your phone and the web	25
Copying text, looking up information, and sharing	27

Personalizing

Making your phone truly yours	29
Personalizing your phone with scenes	29
Changing your wallpaper	30
Applying a new skin	30
Personalizing your Home screen with widgets	31
Adding icons and other shortcuts on your Home screen	32
Adding folders on your Home screen	32
Rearranging or removing widgets and icons on your Home screen	33
Rearranging the Home screen	34
Using sound sets	34
Changing your ringtones and alarms	35
Rearranging or hiding application tabs	36

Phone calls

Different ways of making calls	38
--------------------------------	----

Making a call on the Phone dialer screen	38
Using Speed dial	39
Calling a phone number in a text message	39
Calling a phone number in an email	40
Making an emergency call	40
Receiving calls	41
What can I do during a call?	42
Setting up a conference call	44
Using Call history	44
Blocking callers	45
Call services	46
Turning Airplane mode on or off	47

People

Ways of getting contacts into your phone	48
Transferring contacts from your old phone	48
About the People app	49
Setting up My contact card	50
Importing contacts from your SIM card	51
Adding a new contact	51
Importing a contact from an Exchange ActiveSync account	51
Merging contact information	52
Filtering your contacts list	53
Backing up your contacts to the storage card	54
Contact information and conversations	54
Sending contact information as a vCard	55
Contact groups	56
Adding People widgets	58

Keyboard

Using the slideout keyboard	60
Using the onscreen keyboard	62
Entering words with predictive text	64
Entering text by speaking	65
Editing text	66
Adjusting input settings	67

Messages

Opening Messages	68
Sending a text message (SMS)	68
Sending a multimedia message (MMS)	69
Resuming a draft message	71
Viewing and replying to a message	71
Viewing and saving an attachment from a multimedia message	72
Push messages	73
Managing message conversations	73

Accounts and sync

Synchronizing with online accounts	75
Synchronizing with your computer	76

Social

Facebook for HTC Sense	85
Facebook app	86
Tweeting on your phone using Peep	88
Using Friend Stream	90
Chatting in Google Talk	92

Email

Using Mail	95
------------	----

Internet connections

Data connection	103
Wi-Fi	104
About connection widgets	106
Connecting to a virtual private network (VPN)	106
Using your phone as a modem (USB tethering)	107
Connecting your phone to the Internet through a computer (Internet Pass-through)	108
Using your phone as a wireless router	108

Bluetooth

Bluetooth basics	109
Connecting a Bluetooth headset or car kit	110
Disconnecting or unpairing from a Bluetooth device	111
Sending information using Bluetooth	112
Receiving information using Bluetooth	113

Camera

Camera basics	115
Taking a photo	117
Recording video	118
Adding effects	119

Photos, videos, and music

Gallery	120
Music	127
Connected Media	131

Maps and location

Location settings	133
Locations	133

More apps

Using Flashlight	145
------------------	-----

Security

Protecting your SIM card with a PIN	146
-------------------------------------	-----

Protecting your phone with a screen lock pattern, PIN or password	146
---	-----

Settings

Changing display settings	148
Changing sound settings	149
Changing the phone language	151
Optimizing your phone's battery life	151
Managing memory	152
Checking information about your phone	153

Update and reset

Phone software updates	154
Restarting your phone	155
Resetting your phone	155

Trademarks and copyrights

Basics


Inside the box

You will find the following inside the box:

- Phone
- Battery (preinstalled)
- microSD™ card (preinstalled)
- USB cable
- 3.5mm stereo headset
- Power adapter
- Quick start guide
- Safety and regulatory guide


Your phone

Front panel (keyboard opened)

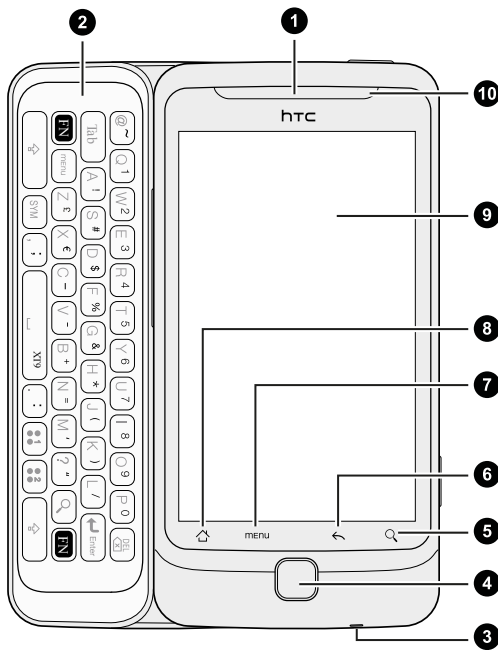


1. Earpiece
2. Slideout keyboard
3. Microphone
4. Trackpad
5. SEARCH
6. BACK
7. MENU
8. HOME
9. Touch screen
10. Notification LED

Left and right panels

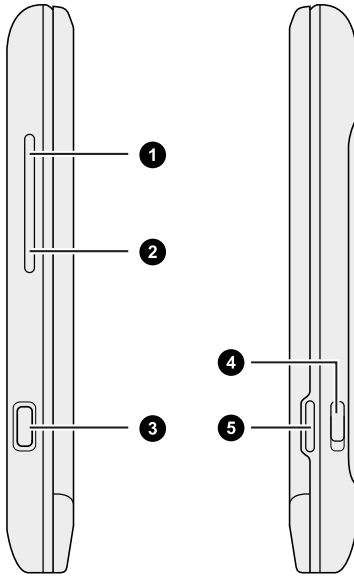


1. VOLUME UP
2. VOLUME DOWN
3. USB connector
4. Back cover lock
5. CAMERA

Back panel

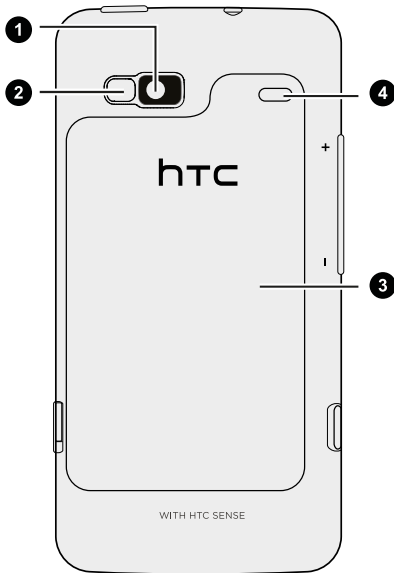

1. 5 megapixel camera
2. LED flash
3. Back cover
4. Speaker

 Top panel




1. 3.5mm headset jack
2. POWER

Back cover

Removing the back cover

Remove the back cover to access the battery compartment, SIM card slot, and storage card slot.

1. With the phone turned off, hold your phone securely with the front facing down.
2. Slide the back cover lock down, and then lift the back cover to remove it.

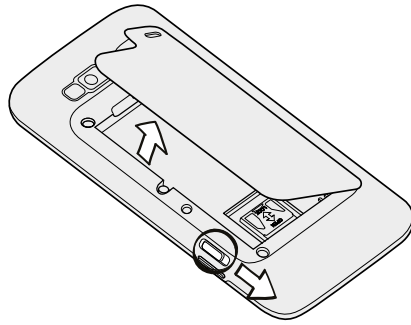

When you take your phone out from the box and remove the back cover for the first time, you'll find that the battery is inside the phone.

Replacing the back cover

1. Insert the back cover tabs to the openings located at the right side of your phone's back panel.
2. Press the back cover against the phone until the back cover lock clicks in place.

SIM card

The SIM card contains your phone number, service details, and phonebook/message memory. Your phone supports both 1.8 V and 3 V SIM cards.




Some legacy SIM cards may not function with your phone. You should consult with your mobile operator for a replacement SIM card. There may be fees for this service.

Inserting the SIM card

1. Take the back cover off.
2. Remove the battery.

3. With the SIM card's gold contacts facing down, insert the SIM card into the slot with its cut-off corner first.

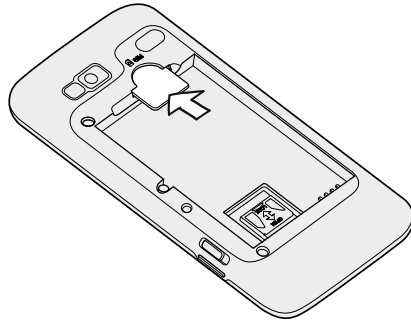

4. Push the SIM card completely into the slot.

Removing the SIM card



Make sure to switch off your phone before removing your SIM card. Otherwise, the phone will automatically turn off when you remove the SIM card.


1. Take the back cover off.
2. Remove the battery.
3. Slide the SIM card out from the SIM card slot using your thumb.

Storage card


Use the microSD card to store your photos, videos, and music. You'll find the microSD card already inserted in your phone.

Inserting the storage card


1. Take the back cover off.
2. Remove the battery.
3. Slide the storage card holder down towards the edge of the battery compartment, and then flip it up to open.

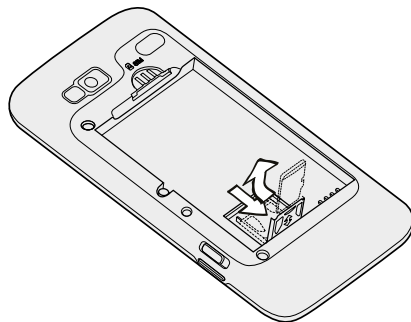

4. Insert the storage card to the holder with its gold contacts facing the connectors on the storage card slot.

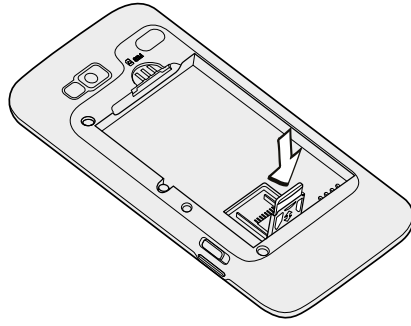

5. Flip the storage card holder down, and then slide it up to lock.

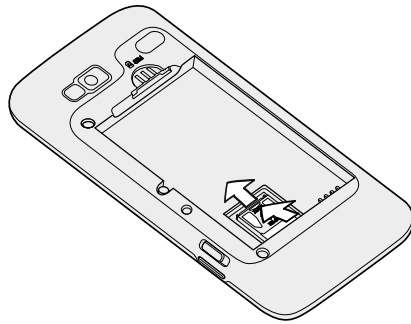

Removing the storage card



If your phone is on you must first "unmount" the storage card before removing it to prevent corrupting or damaging the files in the storage card.

1. Take the back cover off.
2. Remove the battery.
3. Slide the storage card holder down towards the edge of the battery compartment, and then flip it up to open.
4. Pull the storage card out, and then close the storage card holder.

Unmounting the storage card

When you need to remove the storage card while the phone is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Scroll down the screen, and then tap **SD & phone storage**.
3. Tap **Unmount SD card**.

Battery

Your phone uses a rechargeable battery. Please use only original batteries and accessories that came with your phone or replacements that we recommend.


How long the battery can last before it needs recharging depends on how you use your phone. Among these are the phone features and accessories you use (for example, leaving your Bluetooth connection always on uses more power). Long phone calls and frequent web browsing uses up a lot of battery power. Also, consider your location: poor signal strength from your mobile network and extreme temperature make the battery work harder.

Removing the battery



Right after you take your phone out from the box for the first time, don't forget to remove the thin film wrapped around the battery that's inside your phone.


1. Take the back cover off.
2. Lift the battery from the groove at the top of the battery compartment.

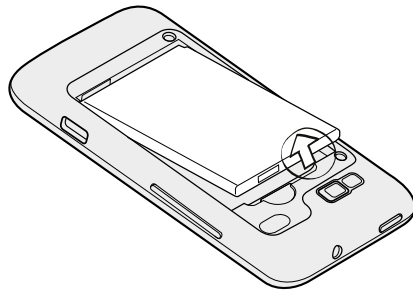

3. Pull the battery out of the battery compartment.

Inserting the battery

1. Take the back cover off.
2. Insert the battery (with its exposed copper contacts first) into the battery compartment.

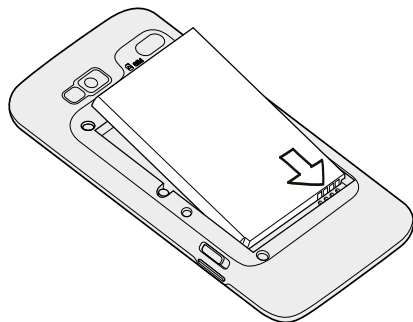

3. Replace the back cover.


Charging the battery

The battery is partially charged when shipped. Before you turn on and start using your phone, it is recommended that you charge the battery. Some batteries perform best after several full charge/discharge cycles.





- When the phone is shipped, the battery is already installed on your phone. A thin film is inserted between the battery and the compartment. You need to remove this film before you can charge the battery.
- Only the power adapter and USB sync cable provided with your phone must be used to charge the battery.
- Do not remove the battery from the phone while you are charging it using the power or car adapter.

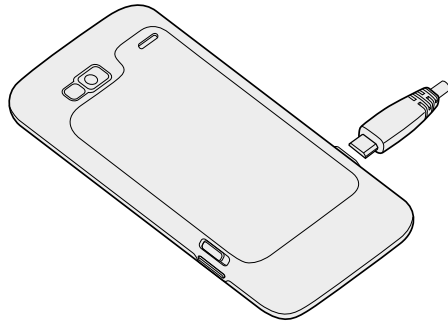1. Plug the power adapter into the USB connector of your phone.



2. Plug in the power adapter to an electrical outlet to start charging the battery.

As the battery is being charged, the notification LED shows a solid red light. The light turns to solid green when the phone is fully charged.

When you charge the battery while the phone is on, the charging battery icon  is displayed in your phone's status bar. After the battery has been fully charged, the charging battery icon turns to a full battery icon .



As a safety precaution, the battery stops charging when it overheats.

Switching your phone on or off

Switching your phone on

Press the POWER button. Easy.



When you turn on the phone for the first time, you'll need to set it up.

Switching your phone off

1. If the display is off, press the POWER button to turn it back on, then unlock the screen by sliding down the bar on the lock screen.
2. Press and hold the POWER button for a few seconds.
3. When the Power options menu appears, tap **Power off**.

Entering your PIN

Most SIM cards come with a PIN (personal identification number) set by your mobile operator. If you're asked for a PIN, enter it and then tap **OK**.



If you enter the wrong PIN three times, your SIM card is blocked. No problem. Just contact your mobile operator and ask for the PUK (PIN Unblocking Key).

Finger gestures

Tap	When you want to type using the keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap them with your finger.
Press and hold	To open the available options for an item (for example, a contact or link in a web page), simply press and hold the item.
Swipe or slide	To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
Drag	Press and hold your finger with some pressure before you start to drag. While dragging, do not release your finger until you have reached the target position.
Flick	Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quicker strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.
Rotate	For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger keyboard.
Pinch	In some apps, like Gallery or the web browser, you can “pinch” the screen using two fingers (for example, thumb and index finger) to zoom in or zoom out when viewing a picture or a web page.

Using the trackpad to interact with the touch screen

Besides using finger gestures, you can also use the trackpad to interact with your phone's touch screen. Be sure to place your finger over the trackpad first (covering it completely), and then slide your finger across the trackpad.

Navigating the Home screen

- To go to the extended Home screen on the right, slide your finger to the right on the trackpad.
- Slide your finger to the left to go to the extended Home screen on the left.

Selecting an item onscreen

For most screens, slide your finger to the left, right, up, or down, depending on the direction you want to go. For example, if you want to select (highlight) an item above, slide your finger upward. Press the trackpad to open the item.



Selecting a tab

For screens that have tabs at the bottom, slide your finger to the left or right to go to a tab.



Moving the cursor when entering text

- To go back or forward one character in a word, slide your finger left or right.
- Slide your finger up or down to go up or down between lines of text.

Selecting a link on a webpage

1. Slide your finger down to go to the next link on a webpage.
2. When a link is selected, press the trackpad to open the link.



Getting started

Setting up your phone for the first time

When you switch on your phone for the first time, you'll be asked to set up your phone. You can choose your language, how you want to connect to the Internet, and whether you want your current location to be automatically detected. If you still have personal contacts and calendar events stored on your old phone, you can easily transfer them to your new phone through Bluetooth as well.

Be sure to sign in to your Google™ Account so you can use Google apps like Gmail™. You can also set up your other email accounts, favorite social networks like Facebook® and Twitter™, and more.

Just follow the onscreen instructions and you'll be up and running with your phone in no time.



Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees from your mobile operator. Don't worry. You can enable or disable them in your phone's settings as you go along later on.

Home screen

Your Home screen is where you make your phone your own. It comes with a weather clock widget that shows the time and weather in your current location. You can also add your favorite applications, shortcuts, folders and widgets so they're always just a tap away. To find out how, see [Personalizing](#) on page 29.

Extended Home screen

As you start to do more things with your phone, you might find that one Home screen is not enough. No problem. You can use up to six extra screens. It should be plenty.

Slide your finger horizontally to the left or right and you'll discover more space for adding icons, widgets, and more.



Press HOME to return to the main Home screen (that is, the center home screen).

Using Leap view

To jump straight to the screen that you want, press HOME or pinch the screen to show the Leap view. It reveals all seven Home screens as thumbnails.



Just tap the one you want and you'll leap right there.

Sleep mode

Sleep mode saves battery power by putting your phone into a low power state while the display is off. It also stops accidental button presses when the phone's in your bag or pocket. You'll still receive messages and calls though.

Switching to Sleep mode

Briefly press the POWER button to turn off the display and switch your phone to Sleep mode. Your phone also automatically goes into Sleep mode when it's idle for a while.

Waking up from Sleep mode

Your phone automatically wakes up when you have an incoming call.

To wake your phone up manually, press the POWER button. You'll need to unlock the screen.

Unlocking the screen

Press the bar on the lock screen and then slide your finger down to unlock the screen or answer an incoming call.



If you have set up a screen unlock pattern, pin, or password, you will be asked to draw the pattern on the screen or enter the PIN or password before it unlocks.

Status and notifications

Status icons

You can tell a lot about your phone by checking the icons in its status bar.



Here's what each icon means:

 Signal strength	 Battery is full
 GPRS connected	 Battery is charging
 GPRS in use	 Battery is low (20% remaining)
 EDGE connected	 Battery is very low (10% remaining)
 EDGE in use	 Silent mode
 3G connected	 Vibrate mode
 3G in use	 Phone microphone is mute
 HSDPA connected	 Speakerphone is on
 HSDPA in use	 Wired microphone headset connected
 Roaming	 Wired headset connected
 No signal	 Bluetooth is on
 No SIM card installed	 Connected to a Bluetooth device
 Connected to a Wi-Fi network	 Airplane mode



Data synchronizing



GPS is on



 
Network sharing is on



Alarm is set

Notification icons

A busy life means a busy phone. Notification icons on the status bar make it easy for you to keep on top of your messages, calendar events, and alarms.



Here's what each one means:



New Gmail message



Call in progress



New Microsoft Exchange ActiveSync or POP3/IMAP email



Missed call



Problem with email delivery



Call on hold



New SMS/MMS



Call forwarding on



Problem with SMS/MMS delivery



Message forwarding on



New Google Talk™ instant message



The phone is connected to a computer via USB cable



New voicemail



Wi-Fi is on and wireless networks are available



Upcoming event



Portable Wi-Fi Hotspot is on



New updates from your social networks



Uploading data (animated)



New tweet



Downloading data (animated)



Matched contacts suggestion
















Waiting to upload



New push message



Downloaded Android Market™ app installed successfully

 Bluetooth pairing request	 Update available for an app downloaded from Android Market
 Phone software update available	 Storage card is safe to remove or storage card is being prepared
 TV out	 No storage card installed on the phone
 Song is playing	 Storage card is low on free space
 FM Radio app in use	 General notification
 Voice recording is on	 More (not displayed) notifications
 Compass needs orientation	

Notifications panel

When you get a new notification, you can open the Notifications panel to see the message, reminder or event notification. The Notifications panel also lets you switch between recently-opened apps as quickly as possible.

To open the Notifications panel, press and hold the status bar, then slide your finger downward.



If you have several notifications, you can scroll down the screen to see them all.



You can also open the Notifications panel on the Home screen by pressing MENU and then tapping Notifications.

Switching between recently opened apps

On the Notifications panel, you can easily access up to eight apps you just recently opened.

1. Press and hold the status bar, then slide your finger downward to open the Notifications panel.
2. In the Recent apps section, slide your finger left or right to see recently-opened apps.



3. Tap an app to open it.



Press and hold HOME to view recently used apps.

Closing the Notifications panel

Press and hold the bottom bar of the Notifications panel, then slide your finger up the screen. Or just press BACK.

Connecting your phone to a computer

Whenever you connect your phone to a computer using the USB cable, the Connect to PC screen opens and lets you choose the type of USB connection.

Select one of the following choices, and then tap **Done**:

Charge only	Select this option if you only want to charge the battery while your phone is connected to your computer.
HTC Sync	Select this option to synchronize contacts, calendar, and other information between your computer and your phone.
Disk drive	This mode is available only when there's a microSD card on your phone. Select this mode when you want to copy files between your phone's storage card and your computer. When Disk drive mode is enabled while your phone is connected to the computer, you will not be able to use apps on your phone to access the storage card.

USB tethering	When you do not have Internet connection on your computer, you can select this mode to share your phone's mobile data connection with your computer.
Internet pass-through	If you don't have a data plan for your phone or you don't have access to a Wi-Fi network, you can select this mode to share your computer's Internet connection with your phone.

Copying files to or from the storage card



You can copy your music, photos, and other files to your phone's storage card.

1. Connect your phone to your computer using the supplied USB cable.
2. On your phone's Connect to PC screen, tap **Disk drive**, and then tap **Done**. On your computer, the connected phone is recognized as a removable disk.
3. Navigate to the removable disk and open it.
4. Do one of the following:
 - Copy the files from the computer to the phone's storage card's root folder.
 - Copy the files from the phone's storage card to a folder in your computer.
5. After copying the files, unmount the removable disk (that is, the connected phone) as required by your computer's operating system to safely remove your phone.
6. Do one of the following:
 - Disconnect the phone from the computer.
 - If you want to keep the phone connected to the computer but want the phone to be able to access the storage card, open the Notifications panel, tap **Disk drive**, select an option except **Disk drive**, and then tap **Done**.

Adjusting the volume

Adjusting the ringer volume changes the volume level of the phone ringtone, while adjusting the media volume changes the volume level of sound notifications and music or video playback.

Adjusting the ringer volume

- Press the VOLUME UP or VOLUME DOWN button on the left panel of the phone to adjust the ringer volume to your desired level. The Ringer volume window appears on the screen to display the volume levels.
- While in the lowest ringer volume level (Silent mode), press VOLUME DOWN once to set your phone to Vibrate mode. The phone vibrates and the vibrate mode icon  appears in the status bar.
- While in Vibrate mode, press VOLUME UP once to switch to silent mode. The speaker mute icon  displays in the status bar.

Adjusting the media volume

When playing music or watching video, press the VOLUME UP or VOLUME DOWN button on the left panel of the phone to adjust the volume. The Media volume window appears on the screen to display the volume level.

Adjusting the earpiece volume for phone calls

During a phone call, press the VOLUME UP or VOLUME DOWN button.


Adjusting the volume via settings




1. From the Home screen, press MENU, and then tap **Settings > Sound > Volume**.
2. Drag the volume sliders to the left or right to adjust the volume levels of your phone's ringtone, media playback, alarms, and notifications. Your phone briefly plays a sample tone with the volume being adjusted as you drag a slider.
3. If you want the same volume for your ringtone and notifications, select **Use incoming call volume for notifications**.
4. When you're done, tap **OK**.

Searching your phone and the web

Find all types of information on your phone and the Web. Search Anywhere sifts through different files, information, and apps on your phone. You can also choose to search the Web using your favorite web search service.

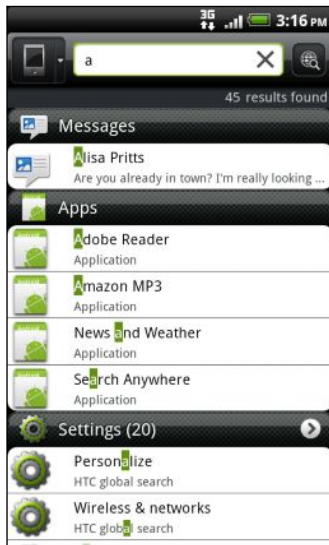Simply press SEARCH from the Home screen. Then enter the first few letters of what you want to search for. Matching items are shown as you type.




- This icon  indicates that your phone will search for all types of information. Tap it if you want to choose and search only for one type of item, for example, Mail.
- Tap this icon  to search the Web for the term you entered.
- Tap a result from the list to open the relevant app.
- Tap  to see more results for a category.

Setting your phone's search options



You can choose the default Web search service to use, or change the type and order of items searched on your phone.

1. From the Home screen, press SEARCH.
2. When the search box appears, press MENU, and then tap **Settings**.
3. Tap any of the following:

Web search engine	Choose the web search service you want to use.
Select areas to search	Choose the types of items or apps to include in the search. You can also press and hold  , and arrange items according to search priority.

Quickly looking up information on the Web


Quick Lookup helps you learn about something right on the spot. When you enter a new word or phrase, you can easily look it up in popular websites or search services such as Google Search and Wikipedia®.

1. From the Home screen, tap  > **Quick Lookup**.
2. If the onscreen keyboard is open, press BACK to close it first so you'll see the bottom tabs.
3. Slide across the tabs to pick where you want to look up information. Then in the search box, enter what you want to search for.
4. Tap .



After looking up the item on one tab, you can slide to other tabs to automatically look up the same term there.

Translating words to other languages

1. From the Home screen, tap  > **Quick Lookup**.
2. If the onscreen keyboard is open, press BACK to close it first so you'll see the bottom tabs.
3. Slide to the Google Translate tab.
4. Under From language, choose the original language, then enter the word or phrase you want to translate.
5. Under To language, choose from the languages available for translation.
6. Tap **Translate**.

Copying text, looking up information, and sharing

In apps such as the web browser and Mail, you can select text and choose what you want to do with it.


Selecting text

1. Press and hold on a word.
2. Drag the start and end markers to highlight the surrounding text you want to select.




To select text in a link, press and hold the link, and then tap **Copy link URL**.

Copying and pasting text

1. After you have selected the text you want to copy, tap . The selected text is then copied to the clipboard.
2. In a text entry field (for example while composing a message), press and hold at the point where you want to paste the text.
3. Tap **Paste**.

Searching text

1. After you have selected the text you want to search for, tap .
2. Tap one of the following tabs:



Google Search


Look for related information using Google Search, based on the text that you selected.



Wikipedia

Look for related information on Wikipedia, based on the text that you selected.

Pasting text in a new message or social network status update

1. After you have selected the text you want to share, tap .
2. Choose whether to paste the selected text in a new text, multimedia, or email message or in your status update on a social network such as Twitter.

Personalizing

Making your phone truly yours

Make your phone look and sound just the way you want it. Personalize your phone with a different wallpaper, skin, ringtone, and notification sound for events such as incoming text, email, and calendar reminders.

Tap the Personalize button  right on the Home screen to get started.

Personalizing your phone with scenes


Your phone becomes multiple phones in one when you use scenes. Scenes are personalized Home screen layouts that you can quickly apply to your phone. By switching between scenes, you instantly turn your phone into your perfect weekend phone, travel phone, work phone, or pure play phone.



Everytime you add or modify something on the Home screen, your phone automatically saves your changes to the current scene selected.


Using a preset scene

Your phone features preset scenes, each preconfigured with a different wallpaper and collection of widgets that reflect different moments in your life. You can choose a scene that is suitable for work, play, travel, or your social life.


1. From the Home screen, tap  > **Scene**.
2. Slide your finger on the screen from right to left to select the scene you want.
3. Tap **Apply**.

Creating a new scene


You'll start with an empty Home screen when you create a new scene.

1. From the Home screen, tap  > **Scene**.
2. Press **MENU**, and then tap **New**.
3. Enter a new scene name, then tap **Done**.
4. Personalize the scene by adding widgets and other elements, arranging the Home screen layout, and changing the skin or wallpaper. All of your changes will be automatically saved to this scene.

Renaming a scene


1. From the Home screen, tap  > **Scene**.
 2. Slide your finger on the screen from right to left to select the scene you want to rename.
 3. Press and hold a scene thumbnail, then tap **Rename**.
 4. Enter a new scene name, then tap **Done**.
-

Deleting scenes

1. From the Home screen, tap  > **Scene**.
2. Press **MENU**, and then tap **Delete**.
3. Slide your finger on the screen from right to left to browse through scenes, then tap one or more scenes you want to delete.
4. Tap **Delete**.

Changing your wallpaper


Personalizing your wallpaper with your favorite photo is a quick and easy way to change the feel of your phone and give it a fresh look. Browse the collection of wallpapers included in your phone or choose from photos that you have taken with the camera. You can also change your Home screen to use an animated wallpaper.

1. From the Home screen, tap  > **Wallpaper**.
2. Tap one of the following:

HTC wallpapers	Choose a preset wallpaper, then tap Preview > Apply .
Live wallpapers	Choose from preset animated wallpapers. Tap Preview to view the animation, and then tap Apply .
Gallery	Choose a photo that you have taken using the camera or copied to your storage card. Crop the photo and then tap Save .

Applying a new skin


Personalize beyond the Home screen by applying a new skin. Skins are set to give a different look and feel to most onscreen buttons, application screens, option menus, and other items.

1. From the Home screen, tap  > **Skin**.
2. Slide your finger on the screen from right to left to select the skin you want.
3. Tap **Apply**.

Personalizing your Home screen with widgets

Widgets put at-a-glance important information and media content up front on your Home screen. Some widgets are already added to your Home screen for your convenience. You can add more from the available selections of widgets, or download more widgets.

Adding a widget to your Home screen

1. Go to a part of the Home screen where there's space to add a new widget.
2. Tap  > **Widget**.
3. Select a widget that you want.
4. Most HTC widgets are available in a variety of designs and sizes to suit your needs. Slide your finger on the screen from right to left to view the different styles, and then tap **Select** to choose one.

You can also add widgets that allow you to quickly switch on or off certain settings of your phone, such as Wi-Fi, Mobile Network, and Bluetooth. Scroll down the widgets list, tap **Settings**, and then tap the widget that you want.

Changing the settings of a widget

You can modify basic settings of some widgets (for example, the People and Mail widgets) from the Home screen.

1. Press and hold a widget on the Home screen. The phone vibrates and you'll see a colored box around the widget. Don't lift your finger just yet.
2. Drag the widget to the **Edit** button (if it's enabled).



The relevant screen where you can change some settings for this widget then opens.


3. Customize the widget settings.

Adding icons and other shortcuts on your Home screen


Place app icons on your Home screen to open apps quicker. You can also add shortcuts to settings and specific information such as a bookmarked webpage, someone's phone number, a music playlist, route directions, and many other items, to your Home screen.



The shortcuts available depend on the apps that are installed on your phone.

1. Go to a part of the Home screen where there's space to add a new icon or shortcut.
2. Tap  and then tap **App** to add an app icon, or **Shortcut** to add a shortcut to a setting or information.




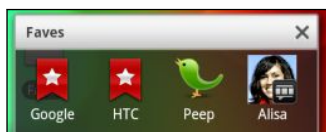
To add an app icon on the Home screen, you can also press HOME, tap , and then press and hold an app icon. Without lifting your finger, drag the icon to an empty area on the Home screen, and then release it.

Adding folders on your Home screen

Use folders to group related apps and other shortcuts to keep your Home screen tidy and organized. You can also add information folders that show up-to-date information such as Bluetooth received files, your Facebook phonebook, and more.

Creating a new folder and adding items to it

1. Go to a part of the Home screen where there's space to add a new folder.
2. Tap  > **Folder**.
3. Tap **New Folder**.
4. Press and hold an app icon or a shortcut that you want to move to the folder. The phone then vibrates. Don't lift your finger just yet.
5. Drag the app icon or shortcut and drop it on top of the folder.



Simply tap the folder to open it so you can access the apps and shortcuts inside the folder.

Renaming a folder

1. Tap the folder to open it.
2. Press and hold the folder window's title bar.
3. Enter a new folder name and then tap **OK**.

Rearranging or removing widgets and icons on your Home screen

Rearrange the widgets and icons on your Home screen to make room for adding more items. You can also remove widgets and icons that you don't frequently use.

Moving a widget or icon

1. Press and hold the widget or icon you want to move. The phone vibrates and you'll see a colored box around the widget or icon. Don't lift your finger just yet.
2. Drag the widget or icon to a new location on the screen. You can pause at the left or right edge of the screen to drag the widget or icon onto another Home screen panel.
3. When the widget or icon is where you want it, lift your finger.

Removing a widget or icon

1. Press and hold the widget or icon you want to remove. The phone vibrates and you'll see a colored box around the widget or icon. Don't lift your finger just yet.
2. Drag the widget or icon to the **Remove** button.
3. When the widget or icon also turns red, lift your finger.


Rearranging the Home screen

Reorder your Home screen panels in any way that fits how you use them. For example, move the panels with frequently-used widgets, shortcuts, and folders closer to the main Home screen.



The center thumbnail in Leap view is always the main Home screen.

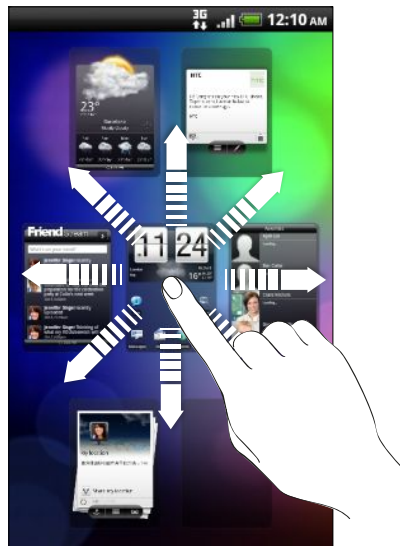

1. Pinch the Home screen to show the Leap view.
2. Press and hold the thumbnail of the home screen you want to move. The phone then vibrates. Don't lift your finger just yet.
3. Drag the thumbnail to its new position, and then lift your finger.



Using sound sets

Sound sets are different collections of ringtone, notification, and alarm sounds you can use to personalize the way your phone alerts you. Using sound sets, you can instantly change from subtle ringtone and notification sounds while you're in the office into something fun when you're out with friends.

Choosing a preset sound set

1. From the Home screen, tap  > Sound set.
2. On the Sound sets screen, tap a sound set name.
3. You can tap  to listen to the different sounds for that sound set.
4. Tap Apply.


Customizing a sound set

You can customize a sound set by applying your personal choice of ringtone, notification sounds, and alarms that may be from your phone's preset selection or your storage card (except for notification sounds).




Be sure to choose the sound set you want before changing the ringtone, notification sounds, and alarm since your phone automatically saves your changes to the current sound set selected.

Creating a sound set

1. From the Home screen, tap  > **Sound set**.
2. On the Sound sets screen, tap **New sound set**.
3. Enter a new sound set name, and then tap **Done**.

The newly created sound set is then added to your phone's list of sound sets. You can assign different tones to the sound set to your preference.


Deleting sound sets

1. From the Home screen, tap  > **Sound set**.
2. Press MENU, and then tap **Delete**.
3. Tap one or more sound sets you want to delete.
4. Tap **Delete**.


Changing your ringtones and alarms

Change your ringtones, notification sounds, and alarms to suit your mood or lifestyle. Your changes are saved in the sound set that is currently loaded, overwriting its settings.

Changing the ringtone


1. From the Home screen, tap  > **Ringtone**.
2. Scroll through the available ringtones and tap the ringtone you want to use. The ringtone briefly plays when selected.
3. If the audio file is on your storage card, tap **New ringtone**, select the item you want to import to the Ringtones list, then tap **OK**.
4. Tap **Apply**.

Changing notification sounds

1. From the Home screen, tap  > **Notification sound**.
2. Choose the type of notification that you want to change.

3. Tap the sound you want to use. A sample tone briefly plays when selected.
4. Tap **Apply**.

Changing the alarm sound

1. From the Home screen, tap  > **Alarm**.
2. Scroll through the available tones and tap the item you want to use. A sample tone briefly plays when selected.
3. If the audio file is on your storage card, tap **New alarm**, select the item you want to import to the Alarms list, then tap **OK**.
4. Tap **Apply**.

Rearranging or hiding application tabs

You can rearrange the tabs at the bottom of some of your phone's apps to prioritize the types of information you frequently use or remove the tabs you don't really need.

1. Open an app that has the usual tabs at the bottom of its screen (for example, the contact details screen in People).



2. Press and hold a tab. When the screen changes and shows you an empty area, lift your finger.
3. Do any of the following:

Move a tab	Press and hold the tab you want to move, and then drag it to its new position.
-------------------	--


Remove a tab	Press and hold a tab you want to hide, then drag it up. When you see a colored box, lift your finger. Note that you can't hide the tab if it's grayed out.
---------------------	--

4. When you're done, press **BACK**.

Adding a tab back

1. Open the app from which you previously removed some tabs.
2. Press and hold a tab. When the screen changes and shows you some of your hidden tabs, lift your finger.

3. Press and hold the tab you want to show, then drag it down to where you want to position it again.

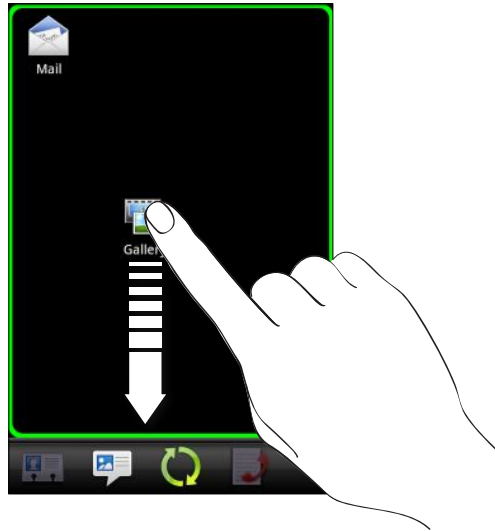

4. When you're done, press BACK.

Phone calls

Different ways of making calls

Besides making calls from the phone dialer screen on your phone, you can tap a number in a text message or email to call, or press a single number on the phone dialer to quickly call a contact.



Most SIM cards come with a PIN (personal identification number) set by your mobile operator. If you're asked for a PIN, enter it and then tap **OK**.

 

If you enter the wrong PIN three times, your SIM card is blocked. No problem. Just contact your mobile operator and ask for the PUK (PIN Unblocking Key).



Making a call on the Phone dialer screen


You can either dial a number directly, or use the Smart dial feature to search and call a stored contact or a number from your call history.

1. On the Home screen, tap **Phone**.
2. Begin entering the first few digits of a phone number or characters of a contact name on the phone keypad. The Phone dialer screen then displays a list of matching numbers and names.



If you enter a wrong digit or letter, tap  to delete it. To erase the entire entry, press and hold .

3. Tap  to close the phone keypad and to see if there are more matching numbers or contacts.
4. To browse through the filtered list, flick through the list or slide your finger up or down the list slowly.
5. To place a call, do one of the following:
 - Tap a phone number or contact from the list.
 - After entering a complete number, tap **Call**.
 - To call a different phone number associated with the contact, you can tap  at the right side of the contact name. On the contact details screen, tap the number you want to call.

While dialing or when the call is in progress, the status bar displays the call in progress icon .

What is Smart dial?

The phone dialer's Smart dial feature makes it quick and easy for you to place a call.

Simply enter the phone number or first few letters of the person's name you want to call. Smart dial automatically searches and filters your contacts list (stored on your phone, SIM card, and online accounts such as Google Account and Exchange ActiveSync®) and the phone numbers from the call history.

Using Speed dial

Use Speed dial to call a phone number with a single tap. For example, if you assign a contact's number to the number 2 key, you can just press and hold 2 to dial the number.




The number 1 key is generally reserved for your voicemail. Press and hold this key to call voicemail and retrieve your voicemail messages.

Assigning a speed dial key

1. On the Home screen, tap **Phone**.
2. Press MENU, and then tap **Speed dial > Add new**.
3. Enter the name of the contact you want to add. When the name comes up in the list, tap the name.
4. On the Speed dial screen, choose the phone number of the contact to use, and a speed dial key to assign.
5. Tap **Save**.

Calling a phone number in a text message

1. Tap the phone number within the message.

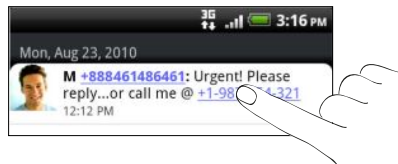

2. Edit the phone number if needed, and then tap **Call**.



To call the message sender, press and hold the sender or the received message, and then tap **Call** on the options menu.

Calling a phone number in an email

Want to call a number that's in an email? No problem. Your phone recognizes a number as a phone number if the number has a minimum of 5 digits and at least one of the following:

- Numbers starting with a plus sign (+). For example, +1-987-654-32 1 or +198765432 1.
 - Numbers starting with an area or country code enclosed in a parenthesis. For example, (02)98765432 1 or (02)987-654-32 1.
 - Numbers separated by dashes. For example, (02)-987-654-32 1 or 0987-654-32 1.
1. In the email body, tap the phone number. A selection menu then pops up and the phone number is highlighted.
 2. Tap **Call**.
 3. When the phone dialer screen opens with the phone number already entered, tap **Call**.

Making an emergency call

You can make emergency calls from your phone even if you don't have a SIM card installed or your SIM card has been blocked.

1. On the Home screen, tap **Phone**.
2. Dial the international emergency number for your locale (for example, 000), and then tap **Call**.



Additional emergency numbers may be included in your SIM card. Contact your mobile operator for details.

If you've enabled but forgotten your lock screen password, lock pattern, and/or the SIM lock, you can still make emergency calls by tapping **Emergency call** on the screen.

Receiving calls

When you receive a phone call from a contact, the Incoming call screen appears.



You can use your phone's polite ringer and pocket mode features for receiving calls. To find out how, see [Changing sound settings](#) on page 149.

Answering a call

To answer a call:

- Tap **Answer**.
- If the display is off when you get a call, the Lock screen appears. Drag the bar that shows the caller name or number downward.



Rejecting a call

Do one of the following:

- Tap **Decline**.
- If the display is off when you get a call, drag the bar upward on the Lock screen, or press MENU and then tap **Decline**.
- To reject the call and send a text message, press MENU, and then tap **Send message**.



You can also Press the POWER button twice to reject a call.

Changing the text message to send out for rejected calls

1. On the Phone dialer screen, press MENU.
2. Tap **Settings > Edit default message**.
3. Enter the new message, and then tap **OK**.

Muting the ringing sound without rejecting the call

Do one of the following:

- Press the VOLUME DOWN or VOLUME UP button.
- Press the POWER button.
- Place the phone face down on a level surface.



If the phone is already facing down, the phone will still ring when there are subsequent incoming calls.

HTC Caller ID


Everytime you make a call or your friend gives you a ring, you get to see your friend's latest status update from social networks like Facebook or Twitter right on the call screen. You also won't miss people's birthdays. You'll see a birthday reminder, if your friend's birthday will occur sometime within the next seven days.



What can I do during a call?

When a call is in progress, use the buttons onscreen to mute or unmute the microphone or to turn the speakerphone on or off. You can also press MENU and choose whether to add a call, place the call on hold, mute the microphone, and more.

Putting a call on hold

1. Press MENU and then tap **Hold** to put the call on hold. When you put a call on hold, the status bar displays the hold call icon .
2. Press MENU, and then tap **Unhold** to resume the call.

Switching between calls

If you're already on a call and accept another call, you can choose to switch between the two calls.

1. When you receive another call, tap **Answer** to accept the second call and put the first call on hold.
2. To switch between the calls, tap the person you want to talk to on the screen.




3. To end the current call and return to the other call, tap **End call**.


Turning the speakerphone on during a call




To decrease potential damage to your hearing, do not hold your phone against your ear when the speakerphone is on.



Do one of the following:

- Flip your phone over during a call (be sure that **Flip for speaker** is selected in HOME > MENU > **Settings** > **Sound**).
- On the call screen, tap .

The speakerphone icon  appears in the status bar when the speakerphone is on.

To turn the speakerphone off, just flip the phone over again, facing it up. Or tap  again.

Muting the microphone during a call

On the call screen, tap  to toggle between turning the microphone on or off. When the microphone is turned off, the mute icon  appears in the status bar.


Ending a call

Do one of the following to end the call:

- On the call screen, tap **End call**.



If the phone display is off, press POWER to turn on the screen so you can tap **End call**.

- Slide open the Notifications panel, then tap .
- If you are using the provided wired headset, press the button to end the call.





If the phone number of the person who called is not in your contacts list, you can choose to save the number to your contacts list after you hang up.

Setting up a conference call

Conference calling with your friends, family, or co-workers is easy. Make the first call (or accept a call), and then simply dial each subsequent call to add it to the conference.



Make sure your SIM card is enabled with conference calling service. Contact your mobile operator for details.

1. Make a call to the first conference call participant.
2. When connected, press MENU, tap **Add call**, and then dial the number of the second participant. The first participant is put on hold when you dial the second participant.
3. When connected to the second participant, tap merge .
4. To add another participant to the conference call, tap  on the conference call screen, and then dial the number of the contact you want to invite to the conference call.
5. When connected, tap  to add the participant to the conference call.
6. To talk to a person in the conference call in private, tap  and then select **Private call** on the options menu.
7. When finished, tap **End call**.

Using Call history


Use Call History to check missed calls, your dialed numbers, and received calls.

Checking a missed call


You will see the missed call icon  in the status bar when you miss a call.

1. Slide open the Notifications panel to check who the caller is.
2. To return the call, tap the missed call notification. Then tap the caller's name or number on the Call History screen.

Checking calls in the Call History


From the Home screen, tap  > **Call History**.



You can also tap  on the phone dialer screen.

On the Call History screen, you can:

- Tap a name or number in the list to call.
- Press and hold a name or number in the list to display the options menu.

- Tap  to check only the call history of a particular contact.
- Press MENU, then tap **View** to display just a particular type of calls such as missed calls or outgoing calls.

Adding a new phone number to your contacts from Call History

1. On the Call History screen, press and hold the phone number that you want to save, and then tap **Save to People**.
2. Choose whether to create a new contact or save the number to an existing contact on your phone.
3. Do any of the following:
 - When creating a new contact, enter the contact name, contact type, and other information in the blank contact record that appears. The phone number is automatically added to the mobile field in the phone section. To store it as another type of number, for example a home number, tap the **Mobile** button.
 - When saving the number to an existing contact, tap a contact stored on your phone, and then select the number type.
4. Tap **Save**.

Clearing the Call History list


On the Call History screen, do one of the following:

Remove one name or number	Press and hold the name or number, and then tap Delete from call history .
Clear the entire list	Press MENU, and then tap Delete all .


Blocking callers

When you block a phone number or a contact from calling you, the blocked calls go directly to your voicemail.


Blocking one or more contacts from calling

1. From the Home screen, tap  > **Blocked Callers**.
2. On the **Blocked callers** tab, tap **Add caller**.
3. Select the contacts you want to block, then tap **Save**.

Checking your blocked call history

1. From the Home screen, tap  > **Blocked Callers**.
2. Slide to the **Blocked call history** tab.
3. Press and hold a name or number in the list to display the options menu where you can select to check the call history details and more.

Unblocking callers

1. From the Home screen, tap  > **Blocked Callers**.
2. On the **Blocked callers** tab, press MENU, then tap **Remove callers**.
3. Select one or more contacts, then tap **Delete**.
4. When prompted, tap **OK**.

Call services

Your phone can directly link to the mobile phone network, and enable you to access and change the settings of various phone services for your phone. Call services may include call forwarding, call waiting, voicemail, and more. Contact your mobile operator to find out about the availability of call services for your phone.

To open call services, press MENU from the Home screen, and then tap **Settings** > **Call**.

Fixed Dialing Numbers	Restrict outgoing calls to a fixed set of numbers. To enable this feature, you must know your SIM card's PIN2 code.
Voicemail service	Shows the current voicemail service being used.
Voicemail settings	Specify another voicemail number aside from the voice mail number on your SIM card.
Clear voicemail notification	If you have a notification of a new voicemail, you can clear the notification with this option.
Phone settings	Edit the call reject message, choose whether to open the message editor when you reject a call with a message, and choose whether to allow automatic saving of an unknown contact number when a call with that number ends.
Cell broadcast	Enable or disable receipt of cell broadcast messages from your service provider.
Cell broadcast settings	Configure channels and language for cell broadcast messages.
Call forwarding	Select how you want your phone to handle busy, unanswered, and unreachable calls. You can also set the call forwarding option for all incoming calls.
Call barring settings	Choose whether to block various categories of incoming and outgoing call.
Additional call settings	Enable or disable operator services such as caller ID and call waiting.

Turning Airplane mode on or off

In many countries, you are required by law to turn off the phone while on board an aircraft. A way to turn off the phone function is to switch your phone to Airplane mode.

When you enable Airplane mode, all wireless radios on your phone are turned off, including the call function, data services, Bluetooth, and Wi-Fi. When you disable Airplane mode, the call function is turned back on and the previous state of Bluetooth and Wi-Fi is restored.

To turn Airplane mode on or off, press and hold POWER, and then tap **Airplane mode**.

When enabled, the Airplane mode icon  is displayed in the status bar.

People


Ways of getting contacts into your phone

There are several ways you can add contacts to your phone. You can sync your phone with contacts from your Google Account, computer, Facebook, and more.

Gmail	Google contacts are imported to your phone after you sign in to your Google Account. You can also create more Google contacts right from your phone.
Facebook	Log in to your Facebook account through Facebook for HTC Sense to import your Facebook friends' contact information.
Phone contacts	You can choose to create and store contacts in your phone memory or transfer existing ones from your old phone.
SIM card	Copy all your SIM contacts to your phone.
Microsoft® Exchange ActiveSync	Your phone syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
Contacts on your computer	Use HTC Sync™ to sync your phone with your computer's Microsoft Outlook®, Outlook Express or Windows® Contacts.

Transferring contacts from your old phone

Easily transfer contacts from your old phone to your new HTC phone through Bluetooth. Depending on your old phone's model, you may also transfer other types of data such as calendar events and text messages to your new phone.


1. From the Home screen, tap  > **Transfer Data**.
2. Tap **Next** to begin.
3. Choose your old phone's name and model.
4. On your old phone, turn Bluetooth on and set it to discoverable mode.
5. On your new HTC phone, tap **Next** to continue. Your new phone automatically turns Bluetooth on and searches for Bluetooth devices.
6. From the device list, choose your old phone and then tap **Next**. Your new HTC phone then tries to pair with your old phone. You'll see a security passkey on the screen.
7. On your old phone, enter this passkey or simply confirm it.





8. Select the **Contacts** check box (and other supported types of data you want to import), and then tap **Next**.
9. When your new HTC phone finishes importing data, tap **Done**.

About the People app


With the People app, easily manage your communications with your contacts via phone, messaging, and email. You can also link your contacts to their social network accounts like Facebook, Twitter, and Flickr™ to see their updates and events from these accounts all in one place.

And that's not all. If you have the same contacts from different sources, People lets you merge their contact information so you won't have duplicated entries in your contacts list.


1. From the Home screen, tap  > **People**.
2. Tap one of the following tabs:

	All Gives you access to all contacts on your phone, online accounts, and more.
	Groups Lets you assign contacts to groups so you can easily send an SMS, MMS, or email message to a whole group.
	Online directories View your friends list in your social network accounts. You can also search for contacts in your Exchange ActiveSync account to copy to your phone.
	Call History Lists all your dialed numbers and received and missed calls.



Your contacts list

The People app's All tab  shows all contacts on your phone and from the online accounts you're logged in to.

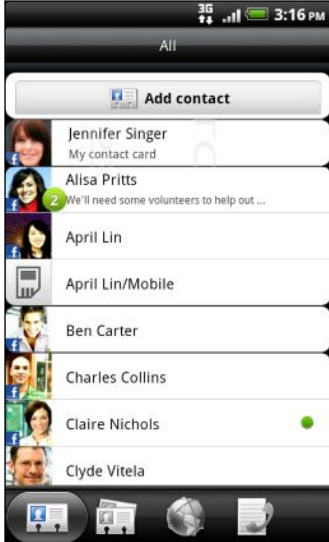Your contacts list also display the contacts stored on your SIM card (usually marked with the SIM card icon ).




From the All tab, you can:

- Open or update your contact information.
- Create, edit, or find contacts.
- View instant status updates when you've linked the contact to his or her social network account.
- Tap the contact's name to open the contact details screen for that contact.
- See a notification icon  when the contact has sent you a new message, tried to call you, updated his or her social network accounts, or when it's the contact's birthday.
- Check out who's online in Google Talk. Online status icons are displayed if you're signed in to Google Talk on your phone. For example,  means the contact is available to chat.

Setting up My contact card

My contact card provides a convenient way to store your personal contact information so that you can easily send it to other people.

1. From the Home screen, tap  > People.
2. On the All tab, tap **Me**.




If you are logged in to your Facebook account through Facebook for HTC Sense, instead of **Me**, you'll see the name you use in Facebook. Tap your name, press MENU, then tap **Edit**.


3. Enter your name and contact details.
4. Tap **Save**.

Importing contacts from your SIM card

You can copy all your SIM contacts to your phone. Import them as phone contacts, Google contacts, or Exchange ActiveSync contacts, if you have set up the relevant accounts.

1. From the Home screen, tap  > **People**.
2. On the All tab, press MENU, and then tap **Import/Export** > **Import from SIM card**.
3. If you have Google or Exchange ActiveSync accounts set up on your phone, tap the type for the imported contacts.
4. Do one of the following:
 - Tap one or more SIM contacts you want to import.
 - To import all contacts, press MENU, and then tap **Select all**.
5. Tap **Save**.

Adding a new contact

1. From the Home screen, tap  > **People**.
2. On the All tab, tap **Add contact**.
3. Select the Contact type, for example Google or Microsoft Exchange ActiveSync. This determines which account the contact will sync with.





Some fields may not be supported when you're adding contacts to your SIM card.

4. Tap the **Name** field, enter the first and last name of the contact, then tap **OK**.
5. Enter the contact information in the fields provided. Press **BACK** if you want to close the onscreen keyboard first and easily scroll through the other fields.
6. Tap **Save**.

Importing a contact from an Exchange ActiveSync account

You can search for a work contact from your Exchange ActiveSync account, and then copy it to your phone.

You need to have your Exchange ActiveSync account set up on your phone first.


1. From the Home screen, tap  > **People**.
2. On the Online directories tab, tap **Company directory**.
3. Enter the name, and then tap .

4. In the list, tap the name of the contact you want to copy to your phone.
5. Tap **Save to People**.


Merging contact information


If you have the same contacts on your phone, Google Account, and social network accounts such as Facebook and Twitter, your phone will try to combine them automatically or let you decide which contacts to combine. Combining the same contacts avoids duplicated entries in your contacts list.

Accepting matched contacts suggestions

When your phone finds contacts that can be merged, you'll see a link icon  in the notifications area of the status bar.

1. Slide down the Notifications panel, and then tap **Matched contacts suggestion**. Your phone displays all suggested contacts that you can merge.

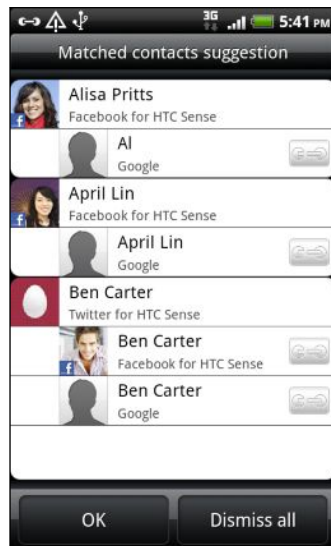


2. To merge, tap .
3. Tap **OK**.



 



If you don't want to merge any of your contacts, tap **Dismiss all**.




Viewing a list of all your linked contacts

1. From the Home screen, tap  > **People**.
2. On the All tab, press **MENU**, and then tap **More > Linked contacts**. The All linked contacts screen then opens where you can see the account types and information merged.
3. You can choose to break the link of an account type or relink.
4. When you're done, tap **OK**.

Manually merging contact information


1. From the Home screen, tap  > People.
2. On the All tab, tap the name of the contact (not the icon or photo) you want to link.
3. On the upper-right corner of the screen, tap  or  (if there are suggested links).
4. On the screen, you can:
 - Under **Suggest links**, tap  to link the contact to an account.
 - Under **Add contact**, tap one of the options to link to another contact.
5. Tap Done.

Breaking the link


1. From the Home screen, tap  > People.
2. On the All tab, tap the name of the contact (not the icon or photo) whose link you want to break.
3. On the upper-right corner of the screen, tap .
4. Under the **Linked contacts** section, tap  beside an account type to break the link.
5. Tap Done.

Filtering your contacts list


You can choose to only display contacts from particular account types (for example, Google contacts or Facebook contacts).

1. From the Home screen, tap  > People.
2. On the All tab, press MENU, then tap **View**.
3. Select the types of contacts you want to show in your contacts list.
You can also choose how you want to display and sort your contacts.
4. Tap Done.

Searching for a contact


1. From the Home screen, tap  > People.
2. Press SEARCH, then enter the first few letters of a contact's first or last name, email, or company name. You can also type in the first few digits of your contact's phone number. Matching contacts are displayed.
3. Tap the contact to open his or her contact details screen.

Backing up your contacts to the storage card

1. From the Home screen, tap  > People.
2. Press MENU, and then tap Import/Export > Export to SD card.
3. Select an account or type of contacts to export, then tap OK.

Importing contacts from the storage card







You can only import contacts that were exported to the storage card using the **Export to SD card** feature on the phone.

1. From the Home screen, tap  > People.
2. Press MENU, and then tap Import/Export > Import from SD card.
3. If you have Google or Exchange ActiveSync accounts set up on your phone, tap the type for the imported contacts.

Contact information and conversations

When you tap a contact on the People screen, the contact details screen opens, showing you the information you've stored or linked for that contact.

The contact details screen has the following tabs:

	Details Shows the information you have stored for the contact. Get in touch with the contact directly by tapping any of the displayed methods. For example, if the contact has a stored work phone number, tap Call work .
	Messages Shows your exchanged SMS messages with the contact. You can reply to the contact's message directly from this tab.
	Mail Shows all the email you have received from the contact. Tap an email to view it.
	Updates and events Shows the contact's updates and events from social network accounts you've linked like Facebook, Twitter, and Flickr.
	Gallery Shows the linked contact's Facebook and Flickr albums and photos.
	Call History Lists all your incoming, outgoing, and missed calls to and from the contact.

Editing a contact's information


1. From the Home screen, tap  > **People**.
2. On the All tab, press and hold the contact, and then tap **Edit contact**.



You cannot edit the contact information of a Facebook friend.


3. Enter the new information for the contact.
4. Tap **Save**.

Deleting contacts

1. From the Home screen, tap  > **People**.
2. On the All tab, press MENU, and then tap **Delete**.
3. Select the contacts you want to remove, and then tap **Delete**.
4. When prompted, tap **OK**.


Sending contact information as a vCard

Easily share your own contact information or any contact on your phone.

1. From the Home screen, tap  > **People**.
2. On the All tab, do the following:

To send	Do this
Someone's contact information	Press and hold the name of the contact (not the icon or photo) whose contact information you want to send, and then tap Send contact as vCard .
Your contact information	<ol style="list-style-type: none"> 1. Tap [Your name] My contact card. 2. Press MENU, and then tap Send my contact info.

3. Choose how you want to send it.

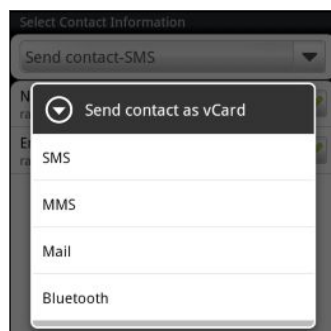


4. Select the type of information you want to send, and then tap **Send**.

Contact groups


Assign contacts to groups so you can easily send a message or email to a whole group. You can also sync groups on your phone with the groups in your Google account, accessible via your computer's web browser. We've also added the Frequent group as a special group type that automatically stores the contacts you dial or get calls from the most.

Creating a group



1. From the Home screen, tap  > People.
2. On the Group tab, tap **Add group**.
3. Enter a name for the group, and then tap **Add contact to group**.
4. Select the contacts you want to add to the group, and then tap **Save**.



If your contacts list is long, you can use the search bar to search for contacts quickly, or press BACK to hide the onscreen keyboard and scroll through the list.

5. Tap  to select a photo for the group.
6. Tap **Save**.


Editing a contact group

1. From the Home screen, tap  > People.
2. On the Group tab, press and hold the group, and then tap **Edit group**.
3. You can:
 - Tap the group name to change the name. You can only change the name for groups that you have created.
 - Tap the icon to the left of the group name to change or remove the group photo.
 - To add contacts to the group, tap **Add contact to group**, select the contacts you want to add, and then tap **Save**.
 - To remove a contact from the group, tap  at the right side of the contact name.
4. Tap **Save**.



Sending a message or email to a group




You will be charged by your mobile provider for each message sent. For example, if you send a message to a group of five people, you will be charged for five messages.

1. From the Home screen, tap  > **People**.
2. On the Group tab, tap the group you want to send a message or email to.
3. Go to the Group action tab, and then do one of the following:
 - Tap **Send group message** to send a message to the group.
 - Tap **Send group mail** to send an email to the group.



Rearranging your contact groups

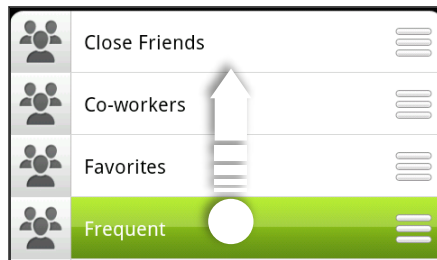1. From the Home screen, tap  > **People**.
2. On the Groups tab, press MENU, and then tap **Rearrange**.
3. Press and hold  at the end of the group you want to move. When the row is highlighted, drag it to its new position.



4. Tap **Save**.


Rearranging the members of a contact group

1. From the Home screen, tap  > **People**.
2. On the Groups tab, tap the group to see its members.
3. Press MENU, and then tap **Rearrange**.
4. Press and hold  at the end of the contact's name you want to move. When the row is highlighted, drag it to its new position.
5. Tap **Save**.

Deleting a group




You can only delete groups that you have created.

1. From the Home screen, tap  > **People**.
2. On the Groups tab, press and hold the group you want to delete, and then tap **Delete group**.

Adding People widgets

Stay in touch with different circles of friends or colleagues in your life. Using the People widget, you can instantly place a call, send a message, view details of a favorite contact, and even check Facebook and Twitter updates. You can add several People widgets on the Home screen, with a different group of contacts on each widget.



1. From the Home screen, tap  > Widget > People.
2. Choose the widget style, and then tap **Select**.
3. Select the group you want to add as a widget.
4. Drag the widget to a blank space on a Home screen. When the widget is where you want it, lift your finger.
5. Repeat the above steps to add another People widget.

Setting the default communication method

1. On the Home screen, go to the People widget.
2. Tap a contact on the widget.
3. On the Select default action screen, tap the communication method you want for the contact.

Changing the default communication method

1. On the Home screen, go to the People widget.
2. Tap the name of a contact on the widget to open the person's contact card.
3. Press MENU, and then tap **More** > **Set widget action**.
4. On the Select default action screen, tap the communication method you want for the contact.

Getting in touch with a contact

1. On the Home screen, go to the People widget.
2. Tap a contact (photo not the name) on the widget. The default communication method will be performed.




Tap the name of the contact to open the contact details screen for that contact.

Keyboard

Using the slideout keyboard

Open the slideout keyboard and type faster and more convenient with your fingers. The slideout keyboard also comes with special keys that let you quickly access menus, search your phone, or launch an app.

1. Hold the phone sideways, with the front panel buttons to your right.
2. Push the screen panel up with your thumbs to reveal the slideout keyboard.

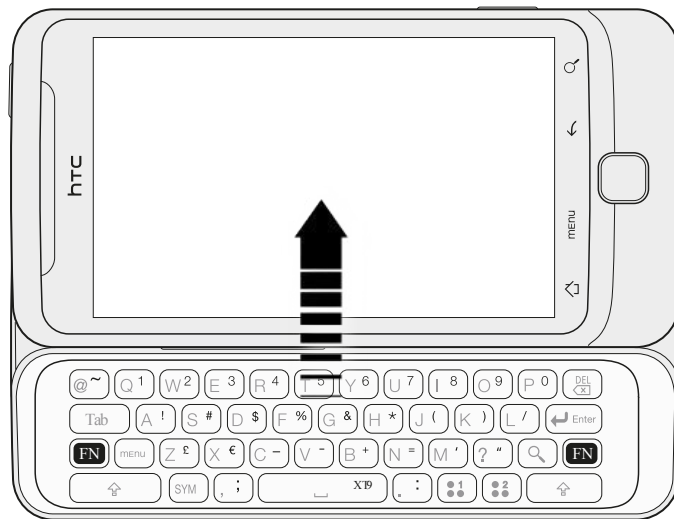
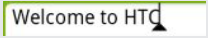

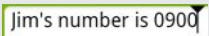
 

 







When the slideout keyboard is opened, the display stays in landscape and you will not be able to use the onscreen keyboard.

 3. Open an app or select a field that requires text or numbers.
4. Press the letter keys to enter text.



Using the slideout keyboard keys

Press these keys to enter uppercase letters, numbers, special characters, symbols, and more:

	Shift key <ul style="list-style-type: none"> Press once and then press a letter key to type that letter in uppercase. Press twice to lock the key and type a series of uppercase letters. The cursor changes when you lock the Shift key: . To unlock the Shift key, press it once again.
	Function key <ul style="list-style-type: none"> Press once to type the character shown beside the letter or punctuation keys. For example, if you need to type the dollar sign (\$), press the Function key, and then press the D key (FN, D). Press twice to lock the key and type a series of numbers and characters. The cursor changes when you lock the Function key: . To unlock the Function key, press it once again.
	Symbol key <p>Press to open the symbols panel and insert a symbol or special character to your text. If Symbol and Search share a single key press  and then press  to open the symbols panel.</p>
	Menu key <p>Instead of pressing the MENU button, press this key to open the available menu options for the current screen.</p>
 or 	Search key <p>Instead of pressing the SEARCH button, press this key to open the search box and type what you want to search. Press the Enter key to begin the search.</p>
 	Quick keys <p>These keys let you quickly open apps and other items such as bookmarks.</p>

Assigning an app or shortcut to a Quick key

The slideout keyboard comes with Quick keys which you can assign to quickly open an app or an item when pressed.

1. Open the slideout keyboard.
2. Press and hold **Shortcut key #1** to assign the first Quick key . Press and hold **Shortcut key #2** to assign the second Quick key .

3. Tap **OK**.
4. Tap **Apps** or **Shortcuts**, and then tap the app or shortcut that you want to assign to the selected Quick key. If you are assigning a shortcut to an item on your phone, follow the screen instructions to proceed.
5. Press the Quick key you've assigned. The app or item opens.

Assigning a keyboard shortcut

While on the Home screen, you can quickly open an app or an item by pressing a keyboard shortcut.

1. While on the Home screen, open the slideout keyboard.
2. Press and hold any of the keyboard keys (A - Z).
3. Tap **OK**.
4. Tap **Apps** or **Shortcuts**, and then tap the app or shortcut that you want to assign to the selected key. If you are assigning a shortcut to an item on your phone, follow the screen instructions to proceed.
5. While on the Home screen, press and hold the key you've assigned a keyboard shortcut to. The app or item opens.

Using the onscreen keyboard

When you start an app or select a field that requires text or numbers, the onscreen keyboard becomes available.



The onscreen keyboard is only available when the slideout keyboard is closed.

After entering your text, you can tap  or press **BACK** to close the onscreen keyboard.

Selecting a keyboard layout









You can choose from three different keyboard layouts to suit your typing style.

1. From the Home screen, press **MENU**, and then tap **Settings > Language & keyboard > Touch Input**.
2. Tap **Keyboard types**, and then select the keyboard layout that you want to use. Choose one from the following:

QWERTY	This layout is similar to a desktop computer keyboard. This is the default keyboard layout.
Phone Keypad	This layout resembles the traditional mobile phone keypad.
Compact QWERTY	This layout features two letters on each key. The key size is slightly bigger than on the full QWERTY layout.

Entering text

 Use the following keys while entering text using the onscreen keyboard:

	Press and hold keys with gray characters at the top to enter numbers, symbols, or accented letters. The gray character displayed on the key is the character that will be inserted when you press and hold that key. Some keys have multiple characters or accents associated with them.
	Shift key. Tap to enter an uppercase letter. Tap twice to turn on caps lock.
	Tap to switch to the numeric and symbol keyboard.
	Enter key. Tap to create a new line.
	Backspace key. Tap to delete the previous character.
	Language key. The key you see depends on the keyboard language you are currently using. Tap to switch to another keyboard language. You can also access onscreen keyboard settings.
	Tap to toggle between Multitap and XT9 predictive modes when using the Compact QWERTY or Phone keypad layout.
	Tap to hide the onscreen keyboard.

Enabling multiple keyboard languages

If there are multiple keyboard languages available on your phone, you can choose which languages to enable in the onscreen keyboard so that you can switch to these languages and use them to enter text.

1. From the Home screen, press MENU, and then tap **Settings > Language & keyboard > Touch Input**.
2. Tap **International keyboard**.
3. Choose the languages you want.



Available languages depend on the region where you purchased the phone.

Changing to the landscape onscreen keyboard

When entering text, you can choose to use the landscape orientation of the onscreen keyboard. Turn your phone sideways to use a larger keyboard for easy typing.



- Select the **Auto-rotate screen** check box in HOME > MENU > **Settings > Display** to allow the screen orientation to automatically change.
- The landscape orientation keyboard is not supported in all apps.

Entering words with predictive text

The onscreen keyboard has predictive text to help you type quickly and accurately. Predictive text input is enabled by default, and word suggestions are displayed as you type.



To enter a word in predictive mode, do any of the following:

- If you see the word you want highlighted in green or orange, just tap the space bar to insert the word into your text.
- If you see the word you want shown in the suggestions before you have finished typing the entire word, tap the word to insert it into your text.
- If an arrow is shown to the right of the suggestion list, tap the arrow to see more suggestions.

Setting a second language for the keyboard

Aside from the keyboard language you are currently using, you can set the predictive text to be bilingual. As you type, you'll get word suggestions in two languages that you've selected.

1. From the Home screen, press MENU, and then tap **Settings > Language & keyboard > Touch Input**.
2. Tap **Bilingual prediction**, and then choose the language you want.

Adding a word to the predictive text dictionary

Your phone comes with a list of words that it references for predictive text suggestions. While entering text using the QWERTY keyboard layout, if you tap any word on the suggestion list, it is automatically added to the predictive text dictionary if it was not in the dictionary already.

You can also add a word to the list manually.

1. From the Home screen, press MENU, and then tap **Settings > Language & keyboard > Touch Input**.
2. Tap **Personal dictionary > Edit personal dictionary > Add new**
3. Enter the word to add, and then tap **OK**.

Editing or deleting a word in the predictive text dictionary

You can edit or remove words that you previously added to the predictive text dictionary.

1. From the Home screen, press MENU, and then tap **Settings > Language & keyboard > Touch Input**.
2. Tap **Personal dictionary > Edit personal dictionary**
 - To edit a word, tap the word itself.
 - To delete words from the dictionary, press MENU and tap **Delete**. Then choose the words to remove and tap **OK**.

Backing up your personal dictionary to your storage card

You can use your storage card to back up the new words you've added to the predictive text dictionary.

1. From the Home screen, press MENU, and then tap **Settings > Language & keyboard > Touch Input**.
2. Tap **Personal dictionary > Sync personal dictionary > Copy to storage card**
3. When prompted, tap **OK**.

Importing your personal dictionary from your storage card

1. From the Home screen, press MENU, and then tap **Settings > Language & keyboard > Touch Input**.
2. Tap **Personal dictionary > Sync personal dictionary > Restore from storage card**
3. When prompted, tap **OK**.

Entering text by speaking

No time to type? Try speaking the words to enter it in most text fields that let you use the onscreen keyboard.



- First make sure to select the language you'll be using in the **Voice input & output** settings.
- Since your phone uses Google's speech-recognition service, you need to be connected to the Internet to enter text by speaking.

1. Press and hold the language key. Your phone cues you to speak.
2. Tell your phone what you want to be typed in.

Setting the voice input language

1. From the Home screen, press MENU, then tap **Settings > Voice input & output > Voice recognizer settings**.
2. Tap **Language**, then choose the language you want.



Available languages depend on the voice input languages supported by Google.

Editing text

It's easy to cut, copy, and paste text using the keyboard.




Some apps may offer their own way of selecting or copying text.


Selecting text

Highlight the text that you want to copy or cut.

1. Press and hold the text field that contains the text to select until the magnifier appears.

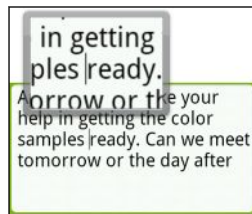

2. Drag your finger to move the text cursor to a letter within the text that you want to select.
3. After positioning the text cursor, lift your finger. The text selection menu then pops up.
4. Do one of the following:
 - Tap **Select text**. When the word where you've placed the text cursor is highlighted, drag the start and end markers to select the text you want.

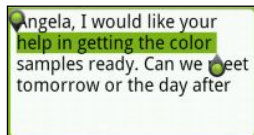


- Tap **Select all** to select everything in the text field.

Copying and pasting text

1. After you have selected the text you want to copy, tap **Copy** or **Cut**. The selected text is then copied to the clipboard.
2. Press and hold a text field in the same or other app until the magnifier appears.
3. Drag your finger to move the text cursor to where you want to paste the text.
4. After positioning the text cursor, lift your finger. The text selection menu then pops up.
5. Tap **Paste**.

Adjusting input settings

Open the Touch Input settings by doing one of the following:


- On the onscreen keyboard, tap the language key (for example, tap  if you're currently using the English onscreen keyboard). Then on the **International keyboard** options menu, tap **Settings**.
- From the Home screen, press MENU, and then tap **Settings > Language & keyboard > Touch Input**.


Hardware keyboard settings	<ul style="list-style-type: none"> ▪ Set the default language keyboard layout (if available). ▪ Turn predictive text on or off.
Keyboard types	Select the keyboard layout to use. You can choose from QWERTY , Phone Keypad , or Compact QWERTY .
International keyboard	Add or remove languages from the onscreen keyboard language list.
Bilingual prediction	Select a secondary keyboard language to use.
Text input	<ul style="list-style-type: none"> ▪ Turn on or off predictive text, spell correction, and word completion. ▪ Enable audible or vibration feedback when typing. ▪ Calibrate the touch keyboard accuracy.
Tutorial	Learn how to use the onscreen keyboard with this interactive tutorial.
Personal dictionary	Add, edit or remove words in the predictive text dictionary.

Messages

Opening Messages

Keep in touch with important people in your life. Use the Messages app to compose and send text (SMS) and multimedia messages (MMS).

From the Home screen, tap  > **Messages**. The All messages screen opens, where all your sent and received messages are neatly grouped into conversations, by contact name or phone number.

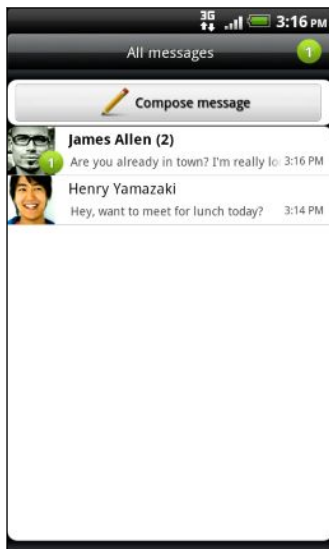



- Scroll up or down the list of conversations by swiping your finger on the screen.
- Tap a contact name or number to view the exchange of messages.



You can also view your messages on the Home screen with the Messages widget.

Sending a text message (SMS)

1. From the Home screen, tap  > **Messages**.
2. Tap **Compose message**.
3. Fill in one or more recipients. You can:
 - Enter the first few letters of a contact name or starting digits of a mobile number. As you type, matching names with phone numbers from your stored contacts are displayed. Tap a name or one of the contact's numbers.
 - Tap , and then select the phone numbers of the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap **OK**.
 - Enter the complete phone numbers directly in the To field.



4. Tap the box that says **Tap to add text**, and then enter your message.



- There is a limit on the number of characters for a single text message (displayed above the **Send** button). If you exceed the limit, your text message will be delivered as one but will be billed as more than one message.
- Your text message automatically becomes a multimedia message if you enter an email address as the recipient, add a message subject, attach an item, or compose a very long message.



5. Tap **Send**, or press **BACK** to save the message as a draft.

Sending a multimedia message (MMS)

1. From the Home screen, tap  > **Messages**.
2. Tap **Compose message**.
3. Fill in one or more recipients. You can:
 - Enter the first few letters of a contact name or starting digits of a mobile number. As you type, matching names with phone numbers and email addresses from your stored contacts are displayed. Tap a contact's number or email address. Email addresses will be displayed when **Show email address** is selected in Recipient list settings.
 - Tap , and then select the phone numbers of the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap **OK**.
 - Enter the complete phone numbers or email address directly in the **To** field.
4. To add a subject line, press **MENU** and then tap **More** > **Add subject**.
5. Tap the box that says **Tap to add text**, and then enter your message.


6. Tap  and then choose the type of attachment.

Picture	Select Camera to take a photo and attach it, or Gallery to attach a photo from your storage card.
Video	Select Camcorder to capture a video and attach it, or Videos to attach a video from your storage card.
Audio	Select Voice Recorder to make a voice recording and attach it, or Music & sounds to attach a music file or voice recording from your storage card.
App recommendation	Choose an app you've installed from Android Market that you want to share with others. The URL from which the app can be downloaded will be inserted to your message.
Location	Add your current location (requires GPS to be turned on), or a location you pick on a map to your message.
Contact (vCard)	Select a contact, and then select the information to attach.
Appointment (vCalendar)	Select the calendar event you want to attach.
Slideshow	Create a slideshow of pictures with text as your MMS message.



7. To make changes to your attachment, tap  or  (depending on the type of file you've attached). You can also press MENU, then tap **Remove** to start over.
8. Tap **Send**, or press **BACK** to save the message as a draft.

Creating a slideshow

In a multimedia message, you can add slides, each containing a photo, video, or audio.

1. In the multimedia message you're composing, tap  > **Slideshow**.
2. On the Edit slideshow screen, tap **Add slide**.
3. Tap **Slide 1**.
4. To compose your slideshow, do any of the following:

Add a picture	Tap Insert picture .
Add a video	Press MENU, and then tap Add video (you cannot add both a picture and a video on the same slide).
Add music or a voice recording	Press MENU, and then tap Add audio .
Add a caption	Tap the box that says Tap to add text .
Add a new slide	Tap Add slide .


View the next or previous slide	Tap  or  .
Preview your slideshow	Press MENU, and then tap Preview .
View more options	Press MENU, and then tap More .

- When finished, tap **Done** to attach the slideshow to your message.
- Tap **Send**, or press **BACK** to save the message as a draft.

Resuming a draft message


- On the All messages screen, press **MENU**, and then tap **Drafts**.
- Tap the message and then resume editing it.
- Tap **Send**.

Viewing and replying to a message

Depending on your notification settings, the phone plays a ringtone, vibrates, or displays the message briefly in the status bar when you receive a new message. A new message icon  is also displayed in the status bar.




- To open and read the message, you can:
 - Press and hold the status bar, and then slide your finger down to open the Notifications panel. Then tap the new message notification.
 - Open the Messages app to access and read the message.
- While reading the message, you can:

Reply with a text message	Tap the box that says Tap to add text , enter your reply message, and then tap Send .
Reply with a multimedia message	Tap the box that says Tap to add text , enter your reply message, tap  to choose an attachment for your message, and then tap Send .
Call or save a phone number contained in the message	Tap the phone number. Then choose whether to dial the number or add it to your contacts.

Open a link in the message	Tap the link to open it in the web browser.
Send to or save an email address contained in the message	Tap the email address. Then choose whether to send an email, send a multimedia message, or save the email address to your contacts.
Forward a message	Press and hold the message to open the options menu, and then tap Forward .
Check message details	Press and hold the message to open the options menu, and then tap View message details .

Replying to another phone number of the contact

When a contact has multiple phone numbers stored on your phone, you'll see the particular phone number used within the message. There's also a bold letter before the phone number to indicate the number type (for example, **M** stands for **Mobile**).

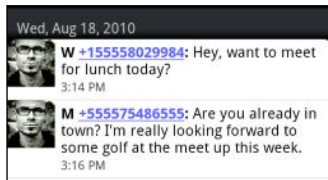

Keep in mind that your response will be sent to the phone number of the latest message you've received from this contact.

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Tap the box that says **Tap to add text**, then enter your reply message
3. Press MENU and then tap **More > Recipient phone number**.
4. Select another phone number of this contact, and then tap **OK**.

Viewing and saving an attachment from a multimedia message

If you are concerned about the size of your data downloads, check the multimedia message size first before you download it.




When **Auto-retrieve** in MMS settings is disabled, only the message header is downloaded. To download the entire message, tap the **Download** button at the right side of the message.

- If there's a media attachment such as a photo or video in a received message, tap it to view the content.
- If the attachment is a contact (vCard), tap it to view the contact information, then tap **Save** to add to your contacts.

- If the attachment is an appointment or event (vCalendar), tap it to choose the calendar where to save it, and then tap **Import**.
- To save the attachment to your storage card, press and hold the multimedia message, and then choose to save the type of attachment from the options menu.

Push messages


Push messages contain a web link. Often, the link will be to download a file that you have requested, for example a ringtone.

When you receive a push message, a notification icon  is displayed in the status bar.

Opening and reading a new push message

1. Press and hold the status bar, and then slide the status bar down to open the Notifications panel.
2. Tap the new message.
3. Tap **Visit website**.


Viewing all your push messages

1. From the Home screen, tap  > **Messages**.
2. Press MENU, and then tap **Push messages**.


Managing message conversations

Protecting a message from deletion

You can lock a message so that it will not be deleted even if you delete the other messages in the conversation.

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Press and hold the message that you want to lock.
3. Tap **Lock message** on the options menu. A lock icon  is displayed at the right hand side of the message.

Copying a message to your SIM card

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Press and hold the message, and then tap **Copy to SIM**. A SIM card icon  is displayed at the right hand side of the message.

Deleting a single message

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Press and hold the message that you want to delete.
3. If the message is locked, tap **Unlock message** on the options menu, and then press and hold the message to display the options menu again.
4. Tap **Delete message** on the options menu.
5. When prompted to confirm, tap **OK**.

Deleting several messages within a conversation

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Press **MENU** and then tap **More > Delete**.
3. Tap **Delete by selection**.



You can also tap **Delete by phone number** if the contact used multiple phone numbers throughout the conversation and you want to delete the messages sent from a particular number.

4. Select the messages you want to delete and then tap **Delete**.

Deleting a conversation

1. Do any of the following:
 - On the All messages screen, press and hold a contact (or phone number) whose messages you want to delete, and then tap **Delete**
 - While looking at the exchange of messages in a conversation, press **MENU** and then tap **More > Delete > Delete thread**.

Any locked messages in the conversation thread will not be deleted unless you select the **Delete locked messages** check box.

2. When prompted to confirm, tap **OK** to delete the entire thread.

Deleting several conversations

1. On the All messages screen, press **MENU** and then tap **Delete**.
2. Select the conversation threads you want to delete.
3. Tap **Delete**. Any locked messages will not be deleted.

Accounts and sync

Synchronizing with online accounts

About online accounts

Your phone can sync with various online social networking and email accounts.

These are some of the types of information your phone can sync with your online accounts:

- Gmail and Exchange ActiveSync email.
- Google and Exchange ActiveSync contacts, as well as your friends' contact information in Facebook and their Twitter profiles.
- Calendar events from your primary Google Account, from Exchange ActiveSync, and from your Facebook account.
- Status updates and links shared by your friends and yourself on social networks such as Facebook and Twitter.
- Flickr and Facebook photo uploads.



You can set up an Exchange ActiveSync account on your phone either in the Mail app or the Accounts & sync settings.

Synchronizing with a Google Account

Signing in to your Google Account lets you sync Gmail and your Google contacts and calendars between your phone and the Web. You also need to sign in to a Google Account to use Google apps such as Google Talk and Android Market.



If you skipped signing in to a Google Account when you first set up your phone, you may encounter problems when using some Google apps. If these problems persist, you may need to factory reset your phone and enter your Google Account details when you set up the phone again.

Adding more Google Accounts

You can add more than one Google Account on your phone. However, subsequent Google Accounts can only sync contacts, emails, and calendar events. Other Google services use the first Google Account you added.

1. From the Home screen, press MENU, and then tap **Settings > Accounts & sync**.
2. Tap **Add account > Google**.
3. Follow the onscreen instructions to sign in to an account or create a new account.

Forgot your Google Account password?

You need your Google Account password to sync Gmail, Calendar, and Google contacts to your phone. You also need this password to use Google Talk and download apps from Android Market. If you have forgotten your Google Account password, you can try to recover it by going to the Google website.

1. On your phone or computer, open your web browser and go to <https://www.google.com/accounts/ForgotPasswd>.
2. Enter the email address or username that you use to sign in to your Google Account and click **Submit**.
3. Follow the instructions on the screen to reset your password.

If you don't have an alternate email address or cannot access the email account you used to create your Google Account, you can reset your Google Account after 24 hours by answering the security question for password recovery.

Adding a social network account

If you skipped setting up your social network account (such as Facebook, Twitter, or Flickr) when you first turned on and set up your phone, you can still sign in to these accounts through your phone's settings.

1. From the Home screen, press MENU, and then tap **Settings > Accounts & sync**.
2. Tap **Add account**, and then tap the account type you want to add.
3. Follow the onscreen instructions to enter the account information.

Your social network account is then added to the list on the Accounts & sync screen. Depending on how you configured the account, the new information may start synchronizing with your phone.

Synchronizing with your computer

About HTC Sync

You have your new vacation photos on your phone while your business calendar is on your computer. Why not make these types of files and information available on both devices?

With HTC Sync, you can:

- Sync your contacts between your Microsoft Outlook, Outlook Express or Windows Contacts on your computer and your phone.
- Sync your calendar events between the Outlook or Windows Calendar on your computer and your phone.

- Bring your photos, videos, documents, songs, and playlists to your phone and enjoy them on the go.
- Easily import your captured photos and videos from your phone to your computer.
- Store the same bookmarks on both your computer and phone's web browsers.
- Use your computer's Internet connection to download maps and useful add-on services for your phone's Locations app.
- Install third-party mobile phone apps (not downloaded from Android Market) from your computer.



- You need a storage card inserted into your phone to be able to sync multimedia files, maps, and documents.
- The available categories and options depend on the phone you've connected to your computer.


Installing HTC Sync that came with the microSD card

Copy the HTC Sync installer from the microSD card to your computer and use it to install.



- The HTC Sync version in the microSD card that came with your phone can be installed on a computer running Windows 7, Windows Vista, or Windows XP.
- HTC Sync requires USB 2.0 on your computer to connect and sync with your phone.
- For trouble-free installation, first quit all running programs and temporarily exit from your anti-virus program before you start installing HTC Sync.

1. Connect your phone to your computer using the supplied USB cable.
2. On your phone's Connect to PC screen, tap **Disk drive**, and then tap **Done**. On your computer, the connected phone is recognized as a removable disk.
3. Navigate to the removable disk and open it.
4. Copy **HTCSync.exe** to your computer.
5. After copying, unmount the removable disk (that is, the connected phone) as required by your computer's operating system to safely remove your phone.
6. On your computer, double-click **HTCSync.exe** and follow the onscreen instructions to install HTC Sync.

After installing HTC Sync, the HTC Sync icon  is added to your computer's system tray (check the bottom-right side of your computer screen). You can double-click this icon to open HTC Sync.

Setting up HTC Sync to recognize your phone

1. Connect your phone to your computer using the USB cable that came with your phone.
2. When your phone prompts you to choose a type of USB connection, tap **HTC Sync**, and then tap **Done**. Wait for HTC Sync to recognize your phone.
3. On the Device setup screen, enter a name for your phone.
4. Click **Save**. The Device panel then opens.



To change the name of your phone later, click **Overview > Device setup**.

Getting to know the workspace

On the Device panel, you can set your sync options, see your phone's general information, check the used and available space on your storage card, and begin synchronization.



The available categories and options depend on the phone you've connected to your computer. For example, Locations appears in the Device panel when you have the Locations app on your phone.

- Click a category of items to see its sync options on the right side of the Device panel.

You can also click **Overview** to see your phone's basic software information and storage card usage, change the phone name, or install third-party applications to your phone.

- Click **Sync now** to start synchronizing the categories and options you've selected.
- The estimated storage usage bar beside the **Sync now** button shows you the estimated storage card space that will be used when there are new items to be synchronized and added to your phone.

Music sync options

Bring the music tracks and songs you play on your computer to your phone. If you have playlists created in iTunes® or Windows Media® Player, you can sync these too and enjoy them on the go.



You can sync audio files in these formats: *.aac, *.amr, *.m4a, *.mid, *.midi, *.mp3, *.wav, *.wma

1. On the Device panel, click Music, and then click the **On** button. Turning Music sync on means you want this category included every time you sync your computer and phone.
2. Select **Sync music files from**, and then click **Add**.

3. Choose a folder that contains your audio files, and then click **OK**.
4. Select **Sync music files from iTunes and Windows Media Player** if you're using iTunes or Windows Media Player on your computer, then choose the playlists you want to sync on your phone.

Gallery sync options

You can automatically sync photos and videos between your phone and computer.



You can sync audio files in these formats:

- Photos: *.bmp, *.gif, *.jpeg, *.jpg, *.png
- Videos: *.3gp, *.3g2, *.mp4, *.wmv

1. On the Device panel, click **Gallery**, and then click the **On** button. Turning Gallery sync on means you want this category included every time you sync your computer and phone.
2. To automatically import your camera shots to your computer during synchronization, select **Copy device Camera Shots to PC**. Photos and videos from your storage card will be saved to the \My Photos\Device Camera Shots folder on your computer.
3. Select **Sync PC photos & videos from**, and then click **Add**.
4. Choose a folder that contains your multimedia files, and then click **OK**. All supported image and video files added to this folder will be copied to your phone's storage card during synchronization.

Calendar sync options

Your phone can sync appointments and events with your calendar in Outlook (Outlook XP, Outlook 2003 or Outlook 2007) or Windows Calendar.

1. On the Device panel, click **Calendar**, and then click the **On** button. Turning Calendar sync on means you want this category included every time you sync your computer and phone.
2. Select the application you want to sync calendar events with.
3. Choose from which point you want to start synchronizing your calendar events.
4. In cases when conflicting information is found on both the phone and computer, choose which information you want to keep.



Only the calendar fields supported on your phone will be synchronized.

People sync options

Sync your phone contacts with your Outlook (Outlook XP, Outlook 2003 or Outlook 2007), Outlook Express, or Windows Contacts.

If you have contacts to sync from your SIM card, you have to import these first to your phone storage.

1. On the Device panel, click **People**, and then click the **On** button. Turning People sync on means you want this category included every time you sync your computer and phone.
2. Choose the application you want to sync your contacts with.
3. In cases when conflicting information is found on both the phone and computer, choose which information you want to keep.



Only the contact fields supported on your phone will be synchronized.

Bookmarks sync options

Sync web browser bookmarks between your phone and computer.



If you are using Google Chrome™ or Firefox® Internet browser and have selected it to sync with your phone, make sure to close all browser windows before you begin synchronization.

1. Using your favorite web browser on your computer, create a favorites folder named **HTC bookmarks**. Make sure to save your favorite bookmarks in this folder to be able to sync them with your phone.
2. On HTC Sync's Device panel, click **Bookmarks**, and then click the **On** button. Turning Bookmarks sync on means you want this category included every time you sync your computer and phone.
3. Choose the web browser that stores the bookmarks to sync with your phone.



When conflicting information is found on both the phone and computer, HTC Sync keeps the information from your computer.

Documents sync options

You can sync files and documents from your computer to your phone. You can also sync email attachments that you stored on your phone's storage card to your computer.



- To open a document on your phone, you'll need a compatible app. Usually, your phone can open and view these file types: Microsoft Office 2003 and 2007 Word (*.doc), Excel (*.xls), and PowerPoint (*.ppt), PDF files (*.pdf), text files (*.txt).
- To sync email attachments stored on your phone's storage card to your computer, you must set up an Exchange ActiveSync or POP3/IMAP email account from the Mail app on your phone.

1. On the Device panel, click **Documents**, and then click the **On** button. Turning Documents sync on means you want this category included every time you sync your computer and phone.
2. To sync email attachments that you've stored on your phone's storage card, select **Copy all download Mail documents to PC**.
3. Select **Sync PC documents from**, and then click **Add**.
4. Choose a folder that contains the documents you want to sync on your phone, and then click **OK**.

Email attachments from your phone's storage card will be saved to the \My Documents\Device documents\ folder on your computer. Documents from your computer will be saved to the \My Documents\Device documents\ folder on your storage card.

Locations sync options


Before going on a trip to another city or country, you can download the maps you need using HTC Sync on your computer, then sync them to your phone. You can also purchase licenses for other useful data such as driving and walking navigation, safety cameras alerts, and more.

1. On the Device panel, click **Locations**, and then click the **On** button. Turning Locations sync on means you want this category included every time you sync your computer and phone.
2. Select and download maps and additional map features.
3. After you're done downloading items on your computer, you'll see these items in the Locations content list. You can then choose whether you want to sync all maps and licenses or just the items you select.


<input type="checkbox"/> All Maps and Licenses	<input checked="" type="checkbox"/> Selected Maps and Licenses	Item	Size	Type
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Argentina	3.69 KB	Navigation
<input type="checkbox"/>	<input type="checkbox"/>	Benelux	0.23 MB	Safety cameras
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	New Zealand	1.95 KB	Navigation
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Taiwan	0.15 MB	Safety cameras
<input type="checkbox"/>	<input type="checkbox"/>	United Kingdom and Ireland	2.16 KB	Navigation
<input type="checkbox"/>	<input type="checkbox"/>	Western Europe	11.03 KB	Navigation

Downloading maps or purchasing services

You can download maps for free or purchase premium services such as navigation, safety cameras, and turn-by-turn voice instructions.

1. On the Device panel, click **Locations**, and then click the **On** button.
2. Click **Get more Maps and Licenses**.
3. On the left side of the Navigation store window, click the type of content you want to download, and then select a country.
4. Under the Additional map features section, you can choose one or more navigation products you want to download or purchase. When purchasing navigation products, you also need to consider the license duration for using the downloaded content.
5. Click **Add to Shopping cart** .

Checking out products or licenses

1. Click **Add to Shopping cart**  beside **Navigation store** to view your shopping cart.
2. Review the items you've selected and the total amount of purchase.
3. Click **Check out**.
4. Enter your email address and your billing information (if you selected a premium navigation product).

5. Please take time to review the agreement, and then click **I agree to the terms and agreement** to continue.
6. Click **Review purchase** to see a list of items you've selected, your email address, and the billing information you've provided.
7. When everything is correct, click **Confirm and download**. The download progress of your selected maps will then display in the Device panel.

Synchronizing your phone

Check the estimated usage bar beside the **Sync now** button for the estimated file size of new items to sync on your phone.



When there's not enough space left on your storage card, you'll see a warning icon and you won't be able to sync.

1. After selecting and customizing the categories you want to sync, click **Sync now**.
2. After synchronization is complete, click **Disconnect**.
3. Safely remove your phone as required by your computer's operating system.

The next time you connect your phone to your computer, synchronization automatically begins based on your sync settings.

Installing an app from your computer to your phone

If you have application files (*.apk) on your computer, you can use HTC Sync to install them to your phone. We strongly recommend you install only applications that you trust.



Before you begin, make sure that your phone is set to allow applications from your computer to be installed to your phone. To do this, press MENU while on the Home screen, tap **Settings > Applications**, and then select the **Unknown sources** check box.

1. On the Device panel, click **Overview**.
2. Click **Application installer**.
3. Browse for the application file on your computer, and then click **Open**. The installation process starts on your phone.
4. Check your phone's screen to see if there are additional instructions to complete the installation.
5. After installation is complete, you can click **Disconnect**.
6. Safely remove your phone as required by your computer's operating system.

Synchronizing another phone with your computer

You can switch from one phone to another, if you have more than one device to sync.

1. Connect another phone to your computer, then set up HTC Sync to recognize this phone.
2. Click the phone you want to set up or begin synchronization. The Device panel then opens, where you can separately customize your sync settings for this phone.

To switch to another phone to sync, click **Devices**, and then click the phone's name or image.

Downloading the latest HTC Sync upgrade

Visit the HTC support website (www.htc.com/support/) from time to time to check for the most recent HTC Sync upgrade so you can download and install it on your computer.

After installing the latest upgrade, set up HTC Sync again to recognize and sync with your phone.


Social

Facebook for HTC Sense

If you signed in to your Facebook account when you turned on and set up your phone for the first time, that means your Facebook account is linked to Facebook for HTC Sense on your phone.

With Facebook for HTC Sense, you can:

- See all your Facebook contacts and their instant status updates in People.

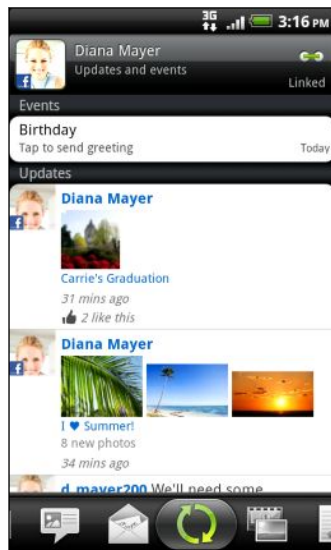

When you tap a contact on the All tab, slide to the Updates and events tab to see updates such as posted status messages, uploads, and profile changes.

When there is a notification of the contact's birthday, you can tap the notification to call the contact directly or send a message greeting.

- See Facebook photos right on the Gallery app.



You can also upload one or more photos from your storage card to Facebook, then tag and add captions that go with it.

When you're viewing the albums of a Facebook friend, you can also share a link to a particular album, or comment on the album photos.

- Check your friends' Facebook status updates in Friend Stream.
- Add your Facebook events and your friends' birthdays to the Calendar app.

What's the difference between Facebook app and Facebook for HTC Sense?

- Facebook for HTC Sense is not a standalone app. It is integrated in People, Friend Stream, Gallery, and Calendar to give you up-to-date information about your Facebook contacts (their status updates, shared links, and photos) in these apps.
- The Facebook app is a standalone app. Use this app to do most of the things that you would do when you're using your computer's web browser to access your Facebook account, such as adding a friend and sending Facebook messages.
- The two do not share the same login credentials. Signing in to Facebook for HTC Sense does not sign you in to the Facebook app and vice versa. If you want to use the same Facebook account for both, you'll have to sign in to both using the same login credentials.



If you have more than one Facebook account, you may sign in to the Facebook app using your second account, since the Facebook app does not share the same login credentials as Facebook for HTC Sense.



Facebook app

The Facebook app on your phone lets you keep up and stay close with your friends in Facebook. It offers most of the features that you are familiar with when using Facebook on your computer.

With the Facebook app, you can:

- Share your thoughts and check other people's status updates.
- View your friends list and write on someone's wall.
- Comment on and like a friend's post.
- View someone's personal information, including photo albums.
- Check your Facebook notifications.
- Take a photo and upload it straight to your Facebook account.

Using the Facebook app

1. From the Home screen, tap  > Facebook.
2. If this is your first time to use Facebook, follow the onscreen instructions to sign in to your Facebook account.
3. On the News Feed screen, tap  to access the other functions.



- While on the Facebook home screen, press MENU, and then tap **Settings** to set refresh and notification options.
- On some Facebook screens, you can press and hold an item to open an options menu.

Adding the Facebook widget

Add the Facebook widget to the Home screen so you can easily post updates and check status updates of your friends.




The widget will only link to the Facebook account that you logged into on the Facebook app.

Tweeting on your phone using Peep

You can post and read tweets, send and receive direct messages, search for new Twitter users to follow using the Peep app. Peep is a Twitter client that lets you enjoy “tweeting” on your phone. You can also link your contacts in People to their Twitter profiles (if you’re following them).

If you did not sign in to your Twitter account when you first turned on the phone, you can do one of the following:









- Sign in to your Twitter account from Peep. From the Home screen, tap  > **Peep**, then follow the onscreen instructions.
- Add the Twitter for HTC Sense account in **Settings > Accounts & sync**.

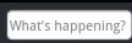

Twitter for HTC Sense and Peep share the same login credentials. This means that when you use Peep on your phone for tweeting, you can also link your contacts to their Twitter profiles via Twitter for HTC Sense.



From the Home screen, tap  > **Peep**. Peep opens in the All tweets tab.



	Tap to compose and send a tweet.
	Tap a person’s name to check profile details and all of his or her tweets.
	If you have linked the contact in People, tap the photo or icon to open a menu where you can quickly choose how to communicate with the contact.
	Press and hold a tweet to open an options menu to reply, send a direct message, retweet, and more.
	View all the tweets from people you follow and tweets that you have posted.
	View all tweets that mention your username using the “[your username]” convention.
	View all private/direct messages that you have received or sent.
	View tweets that you have marked as favorites.

Sending a tweet

1. On the All tweets tab, tap the text box that says **What’s happening?**
2. Type your tweet.

3. Add a picture or location to your tweet.
 - Tap  to post a picture from Gallery or Camera to your default photo hosting site and add the link to the picture in your tweet.
 - Tap  to insert your location into the tweet. You can choose to add a map link, insert your location name, or insert your position coordinates.
4. Tap **Update**.

Sending a direct message

You can only send a direct message to someone who is following you.

1. In any of the tabs in Peep, press MENU, and then tap **New message**.
2. Tap the text box at the top of the screen, and then enter the name. As you enter characters, the names of the Twitter users that match the characters you enter will appear. Tap the name when you see it.
3. Enter your message, and then tap **Update**.



You can also send a direct message when you press and hold a tweet of the person you want to send the direct message to, and then tap **Send direct message** on the options menu.

Setting Peep options

In any of the tabs in Peep, press MENU, and then tap **More > Settings**. You can set these options:

Account settings	Sign out of your Twitter account.
General settings	Choose whether to show the screen name or the real name of the people you follow.
Send & receive	Set the frequency to check for new tweets and set the number of tweets to download.
Services	Set your photo hosting site, photo quality, location options, and URL shortening host.
Notification settings	Select when and how you want to be notified.

Searching for Twitter users to follow

1. In any of the tabs in Peep, press the SEARCH button.
2. Type a Twitter name in the search box. You can also narrow down the search when you tap  > **Users**.
3. Tap .
4. In the list of search results, tap the Twitter user you want to follow.
5. Press MENU, and then tap **Follow**.


Unfollowing a Twitter user

1. On the All tweets tab, tap the Twitter user you want to stop following.
2. Press MENU, and then tap **Unfollow**.

Using Friend Stream

Friend Stream connects you to your social networks. Share and get updates from friends in popular networks like Facebook and Twitter in a single feed. With Friend Stream, you can easily track your friends' status messages, photo uploads, notifications, and more — or comment and post your own.

- You must be signed in to at least one social network account to use Friend Stream.
- To use your Facebook account on Friend Stream, you need to be signed in via Facebook for HTC Sense.

From the Home screen, tap  > **Friend Stream**. Friend Stream opens on the All updates tab.



When you tap someone's status update, you can:

- Open Peep and view all tweets.
- Write a comment. Like or unlike someone's Facebook posts.
- Look at someone's album photos.


When you tap someone's photo or name, you can:



- Check the person's profile details.
- Look at the person's Facebook wall.
- Check the person's posted tweets.

Slide to the other tabs to view social network updates grouped as status updates only, photo uploads, links, updates from members of your Facebook list, or social network notifications.

Updating your status

You can update your status simultaneously on all the social network accounts you are signed in to.

1. From the Home screen, tap  > **Friend Stream**.
2. On the All updates tab, tap the text box that says **What's on your mind?**.
3. Enter your status update.


4. If you do not want to send the status update to all your social network accounts, tap  and clear the check boxes of the social networks to exclude.
5. Tap  and then choose what you want to attach to your tweet or status update.

App recommendation	Choose an app you've installed from Android Market that you want to share with others. The URL from which the app can be downloaded will be inserted to your status.
Picture	Select From Camera to take a photo and attach it or From Gallery to attach a photo from your storage card.
Location	Add your current location or a location you pick on a map.

6. Tap **Share**.

Commenting on and liking Facebook posts


Tap someone's status update on the All updates tab, and do any of the following:

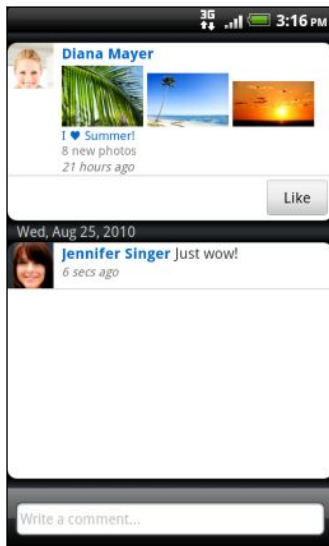

- Tap a photo or the album name shown in the status update to view and comment on the album photos using the Gallery app.
- Tap **Like** or **Unlike** to like or unlike the person's status update.
- Tap the text box that says **Write a comment...**, and then enter what you think about the person's status update.

Checking notifications from your social networks

Slide to the Notifications tab to easily see a single feed of your notifications from different social networks. It can be a comment on your Facebook post, a mention or direct message in Twitter, a tagged photo of you, and more.

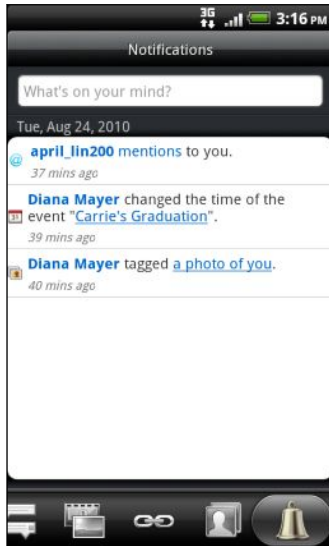


About the Friend Stream widget

Use the Friend Stream widget so you can easily update your status and view other people's status updates right on the Home screen.

Chatting in Google Talk

Google Talk is Google's instant messaging program. It lets you communicate with other people that also use Google Talk. If you signed in to your Google Account when you first set up the phone, you are already signed in to Google Talk.

Chatting with a friend

1. From the Home screen, tap  > **Talk**.
2. Tap a friend in the Friends list.
3. Enter your message in the text box. You can also insert a smiley by pressing MENU, and then tapping **More > Insert smiley**.
4. Tap **Send**.
5. While chatting, press MENU and then tap any of these options:

Chat off record	Your Google Talk messages are stored in the Chats folder of your Gmail account. Tap this option if you don't want to store your chat messages.
Switch chats	If you have more than one chat going, tap to switch chat with another friend.

Friends list	Return to the Friends list.
Add to chat	Add another friend to your chat. The friend you invited and the friend you're currently chatting will receive an invitation to a group chat. Each one who accepts the invitation joins the group chat.
End chat	End your current chat.
More	Clear the chat history, insert a smiley or view your friend's contact details.


Accepting a chat invitation

When a friend sends you a Google Talk message, you receive a notification. Their entry in the Friends list displays the message.

Do one of the following:

- In the Friends list, tap the friend who sent you the invitation to chat.
- Open the Notifications panel, and then tap the chat notification.

Changing your online status and picture

1. From the Home screen, tap  > Talk.
2. In the Friends list, tap your name to open the Set Status screen.
3. Enter your new status message. Or press BACK to choose a custom status from the list.
4. Tap the online status beside your picture, and then select the status you want on the menu.
5. Tap your picture, and then do one of the following:
 - Tap **Remove** to remove your photo.
 - Tap **Change** to select another picture on the storage card.
6. Tap Done.

Your online status, message, and picture appear in your contacts' Friends list and in other apps where your Google Talk status are displayed.

Adding and managing friends

The Friends list is where you add and manage your friends in Google Talk.

To open Google Talk, from the Home screen, tap  > Talk.

Inviting a friend

1. In the Friends list, press MENU, and then tap **Add friend**.
2. Enter the Google Talk instant messaging ID or Gmail address of the friend you want to add.
3. Tap **Send invitation**.

Viewing all friends

Initially, only those friends that you often chat with — the most popular — are shown in the Friends list.

In the Friends list, do one of the following:

- To view all your friends, press MENU, and then tap **All friends**.
- To view only friends that you often chat with, press MENU, and then tap **Most popular**.

Making a friend popular

1. In the Friends list, press MENU, and then tap **All friends**.
2. Press and hold a friend's name, and then tap **Always show friend**.

Blocking a friend

You can block a friend from sending you messages. When blocked, your friend is removed from the Friends list and is added to the Blocked friends list.

1. In the Friends list, press MENU, and then tap **All friends**.
2. Press and hold a friend's name, and then tap **Block friend**.

Unblocking a friend


1. In the Friends list, press MENU and then tap **More > Blocked**.
2. Tap the name of the blocked friend, and then tap **OK**.

Viewing all invited friends

In the Friends list, press MENU, and then tap **More > Invites**.

Friends who have not yet accepted your invitation are listed in the screen.

Changing settings or signing out

1. From the Home screen, tap  > **Talk**.
2. In the Friends list, press MENU and then tap:
 - **Settings** to change the app and notification settings.
 - **Sign out** to sign out.

Email

Using Mail


About the Mail app

Use the Mail app to add your webmail and other POP3 or IMAP email accounts. You can also set up and use your Exchange ActiveSync email on your phone.



You can add the Mail widget to view your POP3/IMAP or Exchange ActiveSync emails on the Home screen.

Adding a POP3/IMAP email account


1. From the Home screen, tap  > Mail.
2. Do one of the following:
 - If this is your first time to add an email account in Mail, tap **Other (POP3/IMAP)** on the Choose a mail provider screen.
 - If you've already added an email account in Mail, press MENU, and then tap **More > New account**. If the Choose a mail provider screen is displayed, tap **Other (POP3/IMAP)**.
3. Enter the email address and password for your email account and then tap **Next**.
4. If the account type you want to set up is not in the phone database, you'll be asked to enter more details.
5. Enter the account name and your name and then tap **Finish setup**.

Adding a Microsoft Exchange ActiveSync account

You can add one or more Microsoft Exchange ActiveSync accounts on your phone. You can sync with Microsoft Exchange Server 2003 Service Pack (SP2) or later.



You can add up to 15 Exchange ActiveSync accounts on your phone.

1. From the Home screen, tap  > Mail.
2. Do one of the following:
 - If this is your first time to add an email account in Mail, tap **Microsoft Exchange ActiveSync** on the Choose a mail provider screen.
 - If you've already added an email account in Mail, press MENU, and then tap **More > New account**. If the Choose a mail provider screen is displayed, tap **Microsoft Exchange ActiveSync**.

3. Enter the Exchange ActiveSync account details, and then tap **Next**. Your corporate Exchange Server must support auto-detect for the phone to automatically set up the Exchange ActiveSync account. If your corporate Exchange Server does not support auto-detect, you'll need to enter your Exchange Server settings after you tap **Next**. Ask your Exchange Server administrator for details.
4. Choose the types of information you want to sync. Also choose how often you want to update and sync email to your phone, then tap **Next**.
5. Enter the account name, then tap **Finish setup**.

Checking your Mail inbox

When you open the Mail app, it displays the inbox of one of your email accounts that you've set up on your phone.


To switch between email accounts, tap the bar that shows the current email account, and then tap another account.



Viewing the unified inbox of all your email accounts

You can view email messages from all your accounts just in one place without having to switch to different accounts.

Just tap the bar that shows the current email account, and then tap **All accounts**. Email messages are color coded so you can easily distinguish which email accounts they belong to.

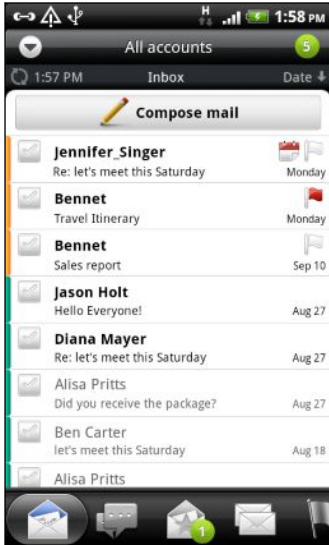

Up to 15 email accounts can be shown in the unified inbox.

Switching between different views of your inbox

If you have lots of email messages, it may take you some time to browse through the long list and find a single email or related email messages. To skim through your email messages easier, tap one of the following tabs to change the view of your inbox:



Received

Displays email messages as individual items.



Conversations

Displays email messages as conversations, grouped according to the subject line. Tap a subject in the list to show the email conversation.



Group

Displays all email messages from a contact group. To choose which contact group to display, press **MENU**, tap **View**, and then select a group.



Unread

Displays unread messages.



Marked (Exchange ActiveSync only)

Displays all flagged messages.



Meeting invitations (Exchange ActiveSync only)

Displays meeting invitations which you have not yet accepted or declined.



Attachments

Displays all messages that have attachments.

Refreshing an email account

Whatever your automatic synchronization settings are, you can also synchronize your sent and received emails manually at any time.

- While in the account you want to synchronize, press MENU, and then tap **Refresh**.
- If you have several email accounts, you can refresh them all at the same time. Go to the unified inbox first. Then press MENU and tap **Refresh**.

Sorting email messages

You can sort email messages by date received, priority, subject, sender, or size.

On the inbox, press MENU, tap **Sort**, and select from the sorting options.

Managing email messages

Deleting an email message

1. On the inbox, press and hold the message you want to delete.
2. On the options menu, tap **Delete**.

Selecting several email messages

1. Tap the check boxes of email messages to select them.
2. Choose what you want to do with the selected messages: **Mark unread**, **Delete**, or **Move to** another folder.



You cannot move email messages when you're in the unified (All accounts) inbox.

Moving several email messages to another folder

1. Switch to the email account you want to use.
2. Go to the Received tab or any other tab (except for the Conversations tab).
3. Tap the check boxes of email messages you want to move.
4. Tap **Move to**, and then tap the folder where to move the email messages.

Moving an email message after reading

In the open message, press MENU, and then tap **More > Move to**. Tap the folder where you want to move the email message.



Deleting all messages

1. First tap the check box of any email message.
2. Press MENU, and then tap **Select all**.
3. Tap **Delete**.

Switching to other mail folders

1. Press MENU, and then tap **Folders**.
2. Tap the mail folder whose messages you want to view.

Sending an email message

1. From the Home screen, tap  > **Mail**.
2. Switch to the email account that you want to use for sending email.
3. On the email account inbox, tap **Compose mail**.
4. Fill in one or more recipients. You can:
 - Enter email addresses directly in the **To** field, separating them with a comma. As you enter email addresses, any matching addresses from your contacts list are displayed. Tap a match to enter that address directly.
 - Tap the  icon, and then choose the contacts to whom you want to send the message. You can also select contact groups as recipients, or search and add contacts from the company directory if you have set up an Exchange ActiveSync account on your phone. When you have selected all the message recipients, tap **OK**.



If you want to send a carbon copy (Cc) or a blind carbon copy (Bcc) of the email to other recipients, press MENU, and then tap **Show Cc/Bcc**.

5. Enter the subject, and then compose your message.
6. To add an attachment, press MENU, tap **Attach**, and choose from the following options:

Picture	Select Camera to take a photo and attach it, or Gallery to attach a photo from your storage card.
Video	Select Camcorder to capture a video and attach it, or Videos to attach a video from your storage card.
Audio	Select Voice Recorder to make a voice recording and attach it, or Files to attach a music file or voice recording from your storage card.
App recommendation	Choose an app you've installed from Android Market that you want to tell other people about. The URL from which the app can be downloaded will be inserted in your email.

Location	You can attach location information. Send your current location (requires GPS to be turned on) or a location you pick on a map.
Document	Attach a PDF file or an Office document such as a text file or a spreadsheet.
Contact (vCard)	Attach someone's contact information.
Appointment (vCalendar)	Attach a calendar event.
File	Attach any file from your storage card.

7. Tap **Send** to send the message immediately, or tap **Save as draft** to send it later.




If there's no Wi-Fi or data connection available or Airplane mode is on when you send your email, the email will be saved to the Outbox folder. Once there's Wi-Fi or data connection available, the saved email will be sent automatically next time your phone syncs.

Resuming a draft email message

1. In the email account inbox, press MENU, and then tap **Folders > Drafts**.
2. Tap the message.
3. When you finish editing the message, tap **Send**.

Reading and replying to an email message

1. From the Home screen, tap  > **Mail**.
2. Switch to the email account you want to use.
3. On the email account inbox, tap the email you want to read.
4. Do any of the following:

Reply to the message	Tap Reply or Reply all .
Forward the message	Press MENU, and then tap More > Forward .
Delete the message	Press MENU, and then tap Delete .
Mark the message as unread	Press MENU, and then tap Mark unread .

Setting the priority for an email message

You can set the priority for an email message that you send.



1. While composing the message, press MENU.
2. Tap **Set priority**.
3. Select the priority for the message.

If you selected **High** or **Low** priority, the priority appears below the subject line of the message.

Working with Exchange ActiveSync email

If you sync your phone with your work Exchange ActiveSync account, you can read, reply, send, and manage email in the same easy way as with a POP3/IMAP account. In addition, you can also use some powerful Exchange features.

Flagging an email

- While viewing the inbox, tap the white flag icon  that appears on the right of an email message. The icon turns red  after you flagged the email.
- While reading an email, you can also tap the flag icon in the email.

Setting out of the office status

You can set your out of office status and auto-reply message right from your phone.

1. Switch to your Exchange ActiveSync account.
2. Press MENU and then tap **More > Out of the office**.
3. Tap the box, and then select **Out of the office**.
4. Set the dates and times for the period when you will be out of the office.
5. Enter the auto-reply message.
6. Tap **Save**.

Sending a meeting request

1. Switch to your Exchange ActiveSync account.
2. Go to the Meeting invitations tab, and then tap **New meeting invitation**.
3. Enter the meeting details.
4. Tap **Send**.

Changing email account settings

1. Switch to the email account whose settings you want to change.
2. Press MENU and then tap **More > Settings**.

3. Select from the following:

Account settings	Change the email account settings such as the name, email address, password, and description.
General settings	Set the font size when reading emails, enable, disable or set the signature, set the account as the default email account, and set where to save email attachments.
Send & Receive	Set the maximum email file size limit when receiving and frequency to check for new emails and how many to check for. You can also set to have emails that you send bcc'd to yourself.
Notification settings	Set email notification settings.
Delete account	Tap to delete the email account.

4. Press BACK to save your changes.

Deleting an email account

1. Switch to the email account you want to delete.
2. Press MENU, and then tap **More > Settings > Delete account**.

Internet connections

Data connection

Your phone will be automatically set up to use your mobile operator's data connection when you turn on your phone (if the SIM card is inserted) for the first time.

Checking the data connection you're using

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Mobile networks > Network operators** or **Access Point Names**.

Turning the data connection on or off

Turning your data connection off can help save battery life and save money on data charges. However, if you don't have data connection turned on and you're also not connected to a Wi-Fi network, you won't receive automatic updates to your email, social network accounts, and other synchronized information.

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Select the **Mobile network** check box to turn on the data connection; clear the check box to turn off the data connection.

Adding a new access point

Before you add another data connection on your phone, have the access point name and settings (including username and password if required) from your mobile operator ready.

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Mobile networks > Access Point Names**.
3. On the APNs screen, press MENU and then tap **New APN**.
4. On the Edit access point screen, enter the APN settings. Tap an APN setting item to edit it.
5. Press MENU and then tap **Save**.

Enabling data roaming

Connect to your mobile operator's partner networks and access data services when you're out of your mobile operator's coverage area.



Using data services while roaming will be costly. Check with your mobile operator for data roaming rates before you use data roaming.

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Mobile networks**, and then select the **Data roaming** check box.


Select the **Data roaming sound** check box if you'd like your phone to play a sound so you'll know when it's connecting to a roaming network.

Wi-Fi

To use Wi-Fi on your phone, you need access to a wireless access point or "hotspot". The availability and strength of the Wi-Fi signal will vary depending on objects, such as buildings or simply a wall between rooms, the Wi-Fi signal has to pass through.

Turning Wi-Fi on and connecting to a wireless network

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Select the **Wi-Fi** check box to turn Wi-Fi on. The phone then scans for available wireless networks.
3. Tap **Wi-Fi settings**. The network names and security settings of detected Wi-Fi networks are displayed in the Wi-Fi networks section.
4. If the wireless network you want to connect to is not in the list of detected networks, scroll down the screen, and then tap **Add Wi-Fi network**. Enter the wireless network settings, and then tap **Save**.
5. Tap the Wi-Fi network you want to connect to. If you selected an open network, you will be automatically connected to the network.
6. If you selected a network that is secured with WEP, enter the key and then tap **Connect**.

When your phone is connected to the wireless network, the Wi-Fi icon  appears in the status bar and tells you the approximate signal strength (number of bands that light up).

The next time your phone connects to a previously accessed secured wireless network, you won't be asked to enter the key or other security information again, unless you reset your phone to its factory default settings.

Connecting to a Wi-Fi network with EAP-TLS security

You may need to install a network certificate (*.p12) to your phone before you can connect to a Wi-Fi network with EAP-TLS authentication protocol.

1. Save the certificate file to the root folder of the storage card.
2. From the Home screen, press MENU, and then tap **Settings > Security**.
3. Tap **Install from SD card**.
4. Select the network certificate needed to connect to the EAP-TLS network.
5. Follow the steps in [Turning Wi-Fi on and connecting to a wireless network](#) on page 104 to connect to the Wi-Fi network.

Checking the wireless network status

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. On the Wireless & networks screen, tap **Wi-Fi settings**, and then tap the wireless network that the phone is currently connected to.

A message box is then displayed showing the Wi-Fi network name, status, speed, signal strength, and more.



If you want to remove the settings for this network from your phone, tap **Forget**. If you want to reconnect to a wireless network that you have removed, you'll need to choose the wireless network from the list of available Wi-Fi networks again. If it is a secured wireless network, you'll need to enter the wireless network credentials again.

Connecting to another Wi-Fi network

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Wi-Fi settings**. Detected Wi-Fi networks are displayed in the Wi-Fi networks section.
3. To manually scan for available Wi-Fi networks, on the Wi-Fi screen, press MENU, and then tap **Scan**.
4. Tap another Wi-Fi network to connect to it.

About connection widgets

Add the Mobile Network and Wi-Fi widgets or the Data dashboard widget to the Home screen to make it faster for you to turn on or off these connections. Tap the widget or icon on the dashboard to turn on or off the connection.



Connecting to a virtual private network (VPN)

Add, set up, and manage virtual private networks (VPNs) so you can connect and access resources inside a secured local network, such as your corporate network.

Depending on the type of VPN you're using at work, you may be asked to enter your login credentials and install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

Also, your phone must first establish a Wi-Fi or data connection before you can start a VPN connection.

Setting up secure credential storage

If your network administrator tells you to download and install security certificates, you must first set up the phone's secure credential storage.

1. From the Home screen, press MENU, and then tap **Settings > Security**.
2. Tap **Set password**.
3. Enter a new password for the credential storage.
4. Scroll down and confirm the password, and then tap **OK**.
5. Select the **Use secure credentials** check box.


You can then download and install the certificates needed to access your local network. Your network administrator can tell you how to do this.

Adding a VPN connection

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **VPN settings > Add VPN**, and then tap the type of VPN you want to add.
3. Tap the VPN settings and set them up according to the security details your network administrator gave you.
4. Press MENU, and then tap **Save**.

The VPN is then added to the VPNs section of the VPN settings screen.


Connecting to a VPN

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **VPN settings**.
3. In the VPNs section, tap the VPN that you want to connect to.
4. When asked, enter your log in credentials, and then tap **Connect**. When you're connected, the VPN connected icon  appears in the notification area of the title bar.

You can then open the web browser to access resources such as your corporate network intranet.

Disconnecting from a VPN

1. Press and hold the title bar, and then slide down your finger to open the Notifications panel.
2. Tap the VPN connection to return to the VPN settings screen, and then tap the VPN connection to disconnect from it.

When your phone has disconnected from the VPN, the VPN disconnected icon  is displayed in the notification area of the title bar.

Using your phone as a modem (USB tethering)

No Internet connection available for your computer? No problem. Use your phone's data connection to connect to the Internet using your computer.

You need your SIM card inserted on your phone to use the data connection.

Before you can use your phone as a modem, be sure to install HTC Sync on your computer first.

1. Make sure your phone's data connection is turned on.
2. Connect the phone to the computer using the provided USB cable.
3. On the **Connect to PC** screen, select **USB tethering**, and then tap **Done**.

Connecting your phone to the Internet through a computer (Internet Pass-through)

If you don't have a data plan for your phone or you don't have access to a Wi-Fi network, you can still go online on your phone by using your computer's Internet connection.

Before you can use your computer as a modem, be sure to install HTC Sync on your computer first.

1. Make sure your computer is connected to the Internet.



Two things to check for your computer's Internet connection. One, we recommend that you turn off your local network's firewall. Two, if your computer connects to the Internet via PPP (e.g. Dial UP, xDSL, or VPN), Internet Pass-through will only support TCP protocol.

2. Connect the phone to the computer using the provided USB cable.
3. On the **Connect to PC** screen, select **Internet pass-through**, and then tap **Done**.

Using your phone as a wireless router

Share your data connection with other devices by turning your phone into a wireless router.


Make sure your phone's data connection is turned on before you use it as a wireless router.

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Portable Wi-Fi hotspot settings**.
3. Enter a router name or use the default router name.
4. Choose the type of Security and set the password (key) for your wireless router. If you selected **None** in Security, you don't need to enter a password.



The password is the key other people need to enter on their device so they can connect and use your phone as a wireless router.

5. Select the **Portable Wi-Fi hotspot** check box to turn on your phone's wireless router.

Your phone is ready to be used as a wireless router when you see  on the status bar.

Bluetooth

Bluetooth basics

Turning Bluetooth on or off

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Select or clear the **Bluetooth** check box.

An even easier way to turn Bluetooth on or off is with the Bluetooth widget on the Home screen.



Turn off Bluetooth when not in use to save battery power, or in places where using a wireless device is prohibited, such as on board an aircraft and in hospitals.

Changing the phone name


The phone name identifies your phone to other devices.

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Bluetooth settings**.
3. If the **Bluetooth** check box is not selected, select it to turn Bluetooth on.
4. Tap **Device name**.
5. Enter the name for your phone in the dialog box, and then tap **OK**.

Connecting a Bluetooth headset or car kit

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free.

- For you to listen to music with your headset or car kit, the headset or car kit must support the A2DP Bluetooth profile.
 - Before you connect your headset, you need to make it discoverable so your phone can find it. You can find out how to do this by referring to your headset manual.
1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
 2. Tap **Bluetooth settings**.
 3. If the **Bluetooth** check box is not selected, select it to turn Bluetooth on.
 4. Make sure that the headset is discoverable.
 5. Tap **Scan for devices**. Your phone will start to scan for Bluetooth devices within range.
 6. When you see the name of your headset displayed in the Bluetooth devices section, tap the name. Your phone then automatically tries to pair with the headset.
 7. If automatic pairing fails, enter the passcode supplied with your headset.

The pairing and connection status is displayed below the hands-free headset or car kit name in the Bluetooth devices section. When the Bluetooth headset or car kit is connected to your phone, the Bluetooth connected icon  is displayed in the status bar. Depending on the type of headset or car kit you have connected, you can then start using the headset or car kit to listen to music and/or make and receive phone calls.

Reconnecting a headset or car kit

Normally, you can easily reconnect your headset by switching on Bluetooth on your phone, and then turning on the headset. However, you might have to connect manually if your headset has been used with another Bluetooth device.

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Bluetooth settings**.
3. If the **Bluetooth** check box is not selected, select it to turn Bluetooth on.
4. Make sure that the headset is discoverable.

5. Tap the headset's name in the Bluetooth devices section.
6. If prompted to enter a passcode, try 0000 or 1234, or consult the headset/car kit documentation to find the passcode.

If you still cannot reconnect to the headset or car kit, follow the instructions in [Unpairing from a Bluetooth device](#) on page 111, and then follow the steps under [Connecting a Bluetooth headset or car kit](#) on page 110.

Disconnecting or unpairing from a Bluetooth device

Disconnecting a Bluetooth device

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Bluetooth settings**.
3. In the Bluetooth devices section, press and hold the device to disconnect.
4. Tap **Disconnect**.

Unpairing from a Bluetooth device

You can make your phone forget its pairing connection with another Bluetooth device. To connect to the other device again, you may need to enter or confirm a passcode again.

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Bluetooth settings**.
3. In the Bluetooth devices section, press and hold the device to unpair.
4. Tap **Disconnect & unpair**, or tap **Unpair** if the Bluetooth device is currently not connected to your phone.

Sending information using Bluetooth






You can use Bluetooth to send information from your phone to another Bluetooth enabled device such as a phone or notebook computer. You can send the following types of information, depending on the device you are sending to:

- Images and videos
- Calendar events
- Contacts
- Audio files

Before you begin, set the receiving device to discoverable mode. You may also need to set it to “Receive Beams” or “Receive Files”. Refer to the device’s documentation for instructions on receiving information over Bluetooth.

The first time you transfer information between your phone and another device, you need to enter or confirm a security passcode. After that, your phone and the other device are paired, and you will not need to exchange passcodes to transfer information in the future.

1. On your phone, open the application that contains the information or file you want to send.
2. Follow the steps for the type of item you want to send:

Captured photo or video	After capturing, on the Camera preview screen, tap  , and then tap Bluetooth .
Photos or videos	<ol style="list-style-type: none"> 1. On the Albums tab  of the Gallery app, choose an album. 2. Tap , and then tap Bluetooth. 3. Choose the photos and videos you want to share, and then tap Next.
Contact	<ol style="list-style-type: none"> 1. On the All tab  of the People app, press and hold a contact, and then tap Send contact as vCard. 2. Tap the down arrow icon, and then select Bluetooth from the displayed list.
Calendar appointment or event	In Day view, Agenda view, or Week view, press and hold the event, and then tap Share > Bluetooth .
Music track	With the track displayed on the Music app’s Now playing screen, press MENU, and then tap Share > Bluetooth .
Voice recording	On the main Voice Recorder screen, tap  , and then tap Bluetooth .

3. Turn on Bluetooth if you’re asked to do so.
4. If you haven’t paired with the receiving device before, tap **Scan for devices**.

5. Tap the name of the receiving device.
6. If prompted, accept the pairing request on your phone and the receiving device.

Also enter the same passcode on both your phone and the other device, or confirm the auto-generated passcode.

7. On the receiving device, accept the file.

Where sent information is saved

When you send information from your phone using Bluetooth, the location where it's saved depends on the type of information and the receiving device.

If you send a calendar event or contact, it is normally added directly to the corresponding application on the receiving device. For example, if you send a calendar event to a compatible phone, the event is shown in that phone's calendar application.

If you send another file type to a Windows computer, it is normally saved in the Bluetooth Exchange folder within your personal document folders.

- On Windows XP, the path may be: `C:\Documents and Settings\[your username]\My Documents\Bluetooth Exchange`
- On Windows Vista, the path may be: `C:\Users\[your username]\Documents`
- On Windows 7, the path may be: `C:\Users\[your username]\My Documents\Bluetooth Exchange Folder`

If you send a file to another device, the saved location may depend on the file type. For example, if you send an image file to another mobile phone, it may be saved in a folder named "Images".

Receiving information using Bluetooth

Your phone is capable of receiving a wide variety of file types with Bluetooth, including photos, music tracks, and documents such as PDFs.

To receive files using Bluetooth, you need to have a microSD card on your phone.

The first time you transfer information between your phone and another device, you need to enter or confirm a security passcode. After that, your phone and the other device are paired, and you will not need to exchange passcodes to transfer information in the future.

1. From the Home screen, press MENU, and then tap **Settings > Wireless & networks**.
2. Tap **Bluetooth settings**.
3. If the **Bluetooth** check box is not selected, select it to turn Bluetooth on.
4. Select the **Discoverable** check box.
5. On the sending device, send one or more files to your phone. Refer to the device's documentation for instructions on sending information over Bluetooth.


6. If asked, accept the pairing request on your phone and the receiving device. Also enter the same passcode on both your phone and the other device, or confirm the auto-generated passcode. A Bluetooth authorization request is then displayed on your phone.
7. If you want to automatically receive files from the sending device in future, select the **Always** check box.
8. Tap **Accept** or **OK**.
9. When your phone receives a file transfer request notification, slide down the Notifications panel, tap the incoming file notification, and then tap **Accept**.
10. When a file is transferred, a notification is displayed. To open the file immediately, slide down the Notifications panel, and then tap the relevant notification.

When you open a received file, what happens next depends on the file type:

- Media files and documents are usually opened directly in a compatible app. For example, if you open a music track, it starts playing in the Music app.
- For a vCalendar file, choose the calendar where you want to save the event, and then tap **Import**. The vCalendar is added to your Calendar events.
- For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your contacts list.

Adding the Bluetooth received folder to the Home screen

You can add a folder to the Home screen that shows all files you have received with Bluetooth.

1. From the Home screen, tap .
2. On the Personalize screen, tap **Folder > Bluetooth received**.
3. Press and hold the Bluetooth received folder icon, and drag it to the Home screen position you want.

To view the folder contents, tap the folder icon. To open a file, tap the file name.



Camera

Camera basics

Whether traveling for business or fun, enjoy taking photos and videos of your trip and encounters with your phone's camera.



Be sure to plug in your microSD card before you use your phone's camera. Photos and videos captured with the camera will be stored onto your microSD card.

- To open the camera in photo mode and take photos, tap  from the Home screen, and then tap **Camera**. Or, press the CAMERA button.
- To open the camera directly in video mode so you can immediately start capturing videos, tap  from the Home screen, and then tap **Camcorder**.

Viewfinder screen

When you're in photo mode and you turn your phone left or right, the camera onscreen controls automatically rotate to how you hold the phone.

You'll find the following onscreen controls on the Viewfinder screen:



	Zoom bar
	Auto focus indicator
	Photo/Video mode switch
	Flash button
	Shutter release/Record button
	Effects button
	Gallery button

Zooming

Before taking a photo or video, you can first use the onscreen zoom bar to zoom in or out of your subject.



If you choose 720p HD resolution for video recording, there's no zooming available.

Simply slide your finger across the zoom bar to zoom in or out.




When you're recording video, the zoom bar is always shown onscreen. You can freely zoom in or out while recording.




Auto focusing

Whenever you point the camera at a different subject or location, it shows the auto focus indicator at the center of the Viewfinder screen.

Let the camera auto focus on the center of the screen. Or you can tap another area on the screen that you want to focus on.


Taking a photo

1. From the Home screen, tap  > Camera.
2. Before taking the photo, you can zoom in or out first on your subject.
3. Tap the flash button repeatedly to choose a flash mode depending on your lighting conditions.


	Auto flash
	Flash on
	Flash off

4. Choose the resolution and other camera settings you want to use.
5. Choose an effect to apply to your photo.
6. Point the camera and focus on your subject.

If you're taking people's photo, the camera will automatically recognize faces and adjust the focus. You'll see boxes on people's faces.

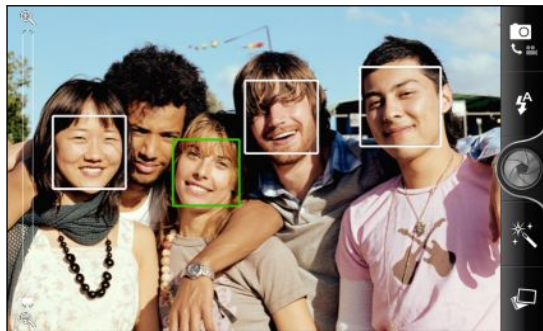

Make sure the **Auto focus** and **Face detection** check boxes are selected in the camera settings.

7. When you're ready to take the photo, tap .
8. Choose what you want to do with the photo you've just taken.



Taking your closeup shot


Having a hard time taking your own closeup shot? With your phone's camera, it's easy. Just set it to automatically take your self portrait. You won't even need to tap the shutter release button.


1. Press MENU to open the settings menu panel.
2. Tap **Self-portrait**. Then choose whether you want the camera to identify 1 or 2 faces in the shot.
3. To set a time delay before the camera takes the shot, tap **Self-timer**. Then set the timer to 2 or 10 seconds.
4. Press MENU to close the settings menu panel.
5. Turn the camera to face you.

Once the camera detects your face, it automatically focuses and takes your photo.

Recording video

1. From the Home screen, tap  > Camcorder.
2. Choose the video quality and other camera settings you want to use. To record video in HD, set **Video quality** to HD 720P (1280 x 720). Or for sharing on the Web, select **Online (HD, 10 minutes)**.
3. Choose an effect to apply to your video.
4. Frame your subject on the Viewfinder screen.
5. Tap  to start recording.
6. You can freely zoom in or out while recording video.
7. You can change focus to a different subject or area by just tapping it on the Viewfinder screen.
8. Tap the flash button to switch the camera light on or off during recording.

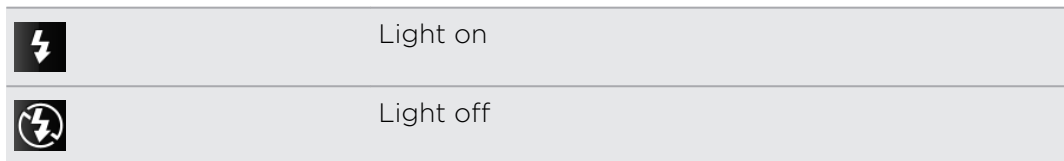


9. To stop recording, tap  again.
10. Choose what you want to do with the video you've just recorded.

Adding effects

Want to make your photos look more interesting? Easy. Use the available camera effects to make your photos look like they've been taken through special lenses and filters. You can also add certain effects to videos.

Choose an effect first before you start taking a photo or video.

1. Tap .
2. Scroll through the available effects and tap one that you like.

When you choose certain photo effects such as depth of field, distortion, or vignette, drag the bar that appears on the right side of the screen to adjust the intensity of the effect.

Photos, videos, and music

Gallery

About the Gallery app


Relive the fun while viewing photos and videos of your latest travels or your pet's newest tricks. Get an audience by tagging your Facebook and Flickr friends. You can even play your media on a TV screen.




To start using Gallery, check first if you have photos or videos copied on your storage card.

What's more, you can edit and add effects to your photos. You can also easily use a photo as your contact icon, location icon, or wallpaper.

Selecting an album

From the Home screen, tap  > **Gallery**. The Gallery app opens on the Albums screen where your photos and videos are organized by albums for easy viewing.

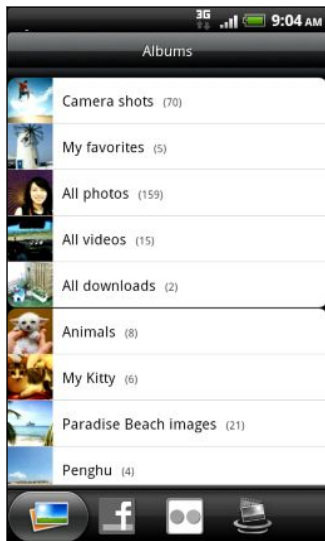

The following are preset albums:

- **Camera shots** lets you view photos and videos that are stored in the camera's folder.
- **My favorites** lets you group photos and videos that you set as your favorites.
- **All photos** lets you view all photos that are stored in all the folders on the storage card.
- **All videos** lets you view all videos that are stored in all the folders on the storage card.
- **All downloads** lets you view photos and videos that you downloaded.

Folders in your storage card that contain photos and videos will also be treated as albums and will be listed below the preset albums. The actual folder names will be used as the album names.




If there are photos or videos under the root path of your storage card (that are not contained in folders), they will be grouped under the **Other** album.


Viewing photos

After you've selected an album, you can browse through your photos and videos. Depending on how you hold your phone, the screen automatically switches to either grid view or filmstrip view:

- While in grid view, slide your finger up or down to scroll through the thumbnails. Tap a photo or video to view it in full screen.

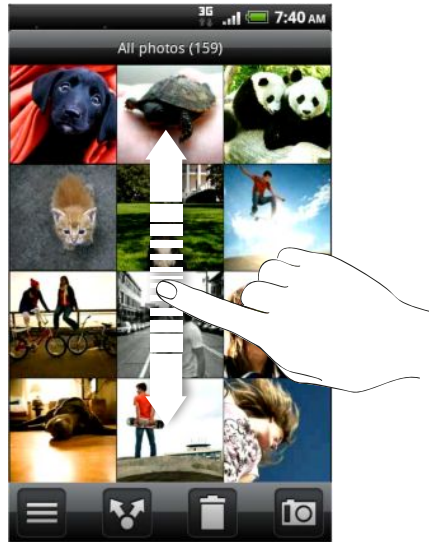


- While in filmstrip view (when you turn your phone sideways), slide your finger left or right across the screen to go through your photos and videos. Tap a photo or video to view it in full screen.

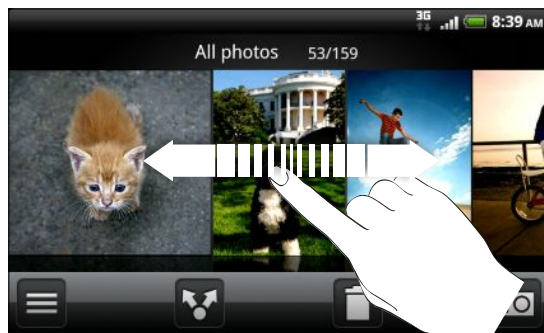

Zooming in or out on a photo

There are two ways you can zoom in or out of a photo.

- Tap the screen twice quickly to zoom in, then tap the screen twice quickly again to zoom out.
- Press your thumb and index finger on the screen and then spread your fingers apart to zoom in; pinch your fingers together to zoom out.

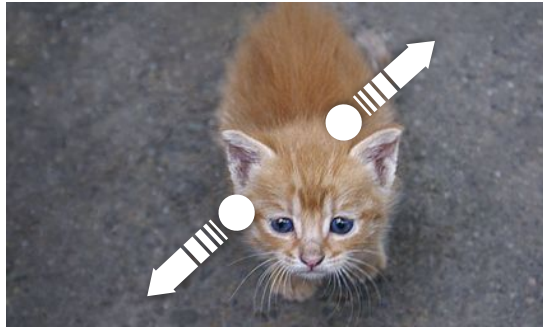


Watching videos


Video is always displayed in landscape mode when you play it.

While browsing an album, tap a video to play it.



Another way to easily get to your videos is to tap  from the Homescreen, and then tap **Video**.

- Use the onscreen controls to play, pause, or stop the video.

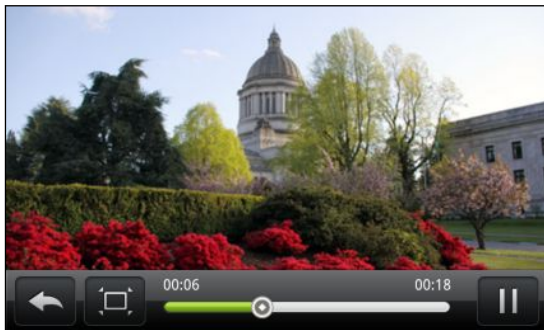

- Tap  to toggle between full and best-fit screens.

Editing your photos

Do basic editing tasks on your photos such as rotate and crop. You can also enhance your photos by applying effects such as high contrast, vintage, and more.

Rotating a photo

1. On the Gallery app's Albums screen, tap an album.
2. Press and hold on the photo that you want to rotate.
3. In the menu that opens, tap **Edit**, and then tap either **Rotate left** or **Rotate right**.

Cropping a photo

1. On the Gallery app's Albums screen, tap an album.
2. Press and hold on the photo that you want to crop.
3. In the menu that opens, tap **Edit**, and then tap **Crop**. You'll see a crop box around the photo.
4. To adjust the crop box size, press and hold the edge of the box.



5. When directional arrows appear, drag your finger inward or outward to resize the crop box.
6. To move the crop box to the part of the photo that you want to crop, drag the crop box to the desired position.
7. Tap **Save** to keep the changes.

The cropped photo is saved in the storage card as a copy. The original photo remains unedited.

Adding effects

1. On the Gallery app's Albums screen, tap an album.
2. Press and hold on the photo that you want to add effects to.
3. In the menu that opens, tap **Edit**, and then tap **Effects**. On the panel that opens, you'll see options available to you.
4. Tap an effect to apply on the photo.
5. Tap **Save** to keep the changes.



The enhanced photo is saved in the storage card as a copy. The original photo remains unedited.

Sending your photos and videos

Send photos and videos via email or MMS or to another phone or your computer using Bluetooth.

Sending photos or videos by email



You can send several photos, videos, or both in an email message. They are added as file attachments in your email.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap  and then tap **Gmail** or **Mail**.
4. Select the photos or videos you want to share and then tap **Next**.
5. Compose your message and then tap **Send**.





If you selected **Mail** and you have multiple email accounts, the default email account will be used.

Sending a photo or video by MMS

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap  and then tap **Messages**.
4. Tap the photo or video you want to send. The photo or video is automatically added into the MMS message.
5. To add more photos to your slideshow attachment, tap **Add slide** and then tap **Insert picture**.
6. Compose your message and then tap **Send**.

Sending photos or videos using Bluetooth

You can select several photos, videos, or both and send them to someone's phone or your computer using Bluetooth.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap  and then tap **Bluetooth**.
4. Select the photos or videos you want to share and then tap **Next**.

In the next few steps, you'll be asked to turn on Bluetooth on your phone and connect to the receiving Bluetooth device so the files can be sent.

Sharing your photos and videos on the Web

Using the Gallery app, you can share photos and videos on your social networks.





You can also use the Camera or Camcorder app to share a photo or video right after you've captured it.

Sharing photos or videos on Facebook





You need to be logged in to your account to be able to upload photos or videos.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap  and then tap **Facebook for HTC Sense**.
4. Select the photos or videos you want to share and then tap **Next**.
5. Enter a different caption on each photo or video. You can also tag friends on your photos. Tap **Tag this photo**, and then tap the part where your friend is. From the list that shows, select who you want to tag.
6. Slide to the left to go to the next photo or video.
7. Tap **Upload**.
8. Select which album to upload to and set privacy settings for the uploaded photos or videos.
9. Tap **Done**.

Sharing photos and videos on Flickr





 
You need to be logged in to your Flickr account to be able to upload photos or videos.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap  and then tap **Flickr**.
4. Select the photos or videos you want to share and then tap **Next**.
5. Enter a different title and description on each photo or video. You can also tag friends on your photos. Tap **Tag this photo**, and then tap the part where your friend is. From the list that shows, select who you want to tag.
6. Slide to the left to go to the next photo or video.
7. Tap **Upload**.
8. Select which album to upload to and set privacy settings for the uploaded photos or videos.
9. Tap **Done**.

Sharing photos on Picasa



You need to be signed in to a Google Account to be able to upload photos to the Picasa™ photo organizing service.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos you want to share.
3. Tap  and then tap **Picasa**.
4. Select the photos or videos you want to share and then tap **Next**.
5. Enter a caption for the photos you're uploading.
6. Select the online album where you want to upload the photos, or tap  to create a new album.
7. Tap **Upload**.


You can view the photos online at <http://picasaweb.google.com>.

Viewing photos in your social networks

Right in the Gallery app, check what you and your friends have uploaded to your social networks (Facebook and Flickr only).

Viewing photos on Facebook


You need to be logged in to your Facebook account to view Facebook photos.

1. From the Home screen, tap  > **Gallery**.
2. Tap the **Facebook** tab.
3. Tap your account name or your friend's account on the list to view the photos in the account.

You can view photos in your online albums in the same way as you view photos on your storage card.

Viewing photos on Flickr


You need to be logged in to your Flickr account to view Flickr photos.

1. From the Home screen, tap  > **Gallery**.
2. Tap the **Flickr** tab. You may be asked to give authorization for the app to connect to the Flickr website. If this happens, you need to give authorization to access your Flickr account.
3. Tap your account name or your friend's account on the list to view the photos in the account.

You can view photos in your online albums in the same way as you view photos on your storage card.

Commenting on photos in your social networks

Add comments to your uploaded photos as well as your friends' photos.

1. Do one of the following:
 - While browsing online albums, press and hold a photo and then tap **Add comment**.
 - While viewing a photo in full screen, tap anywhere on the screen, and then tap .
2. Tap the box that says "Write a comment."
3. Enter your text, and then tap **Comment**.


Music

Listening to music

Enjoy listening to songs and music on your phone using the Music app.



You need to copy music files to your storage card first to use the Music app to play music.

1. From the Home screen, tap  > **Music**. The Music app opens in the Now playing screen.
2. Swipe your finger left or right across the screen to go to the next or previous music album.
3. Tap the onscreen icons to control music playback, select a song to play, repeat songs, and more.



Turn shuffle on or off. (Shuffle is off when button is gray.)



Press and drag your finger across the progress bar to jump to any part of the song.



Go to the library.



Switch between showing the Now playing list and Now playing screen. You can rearrange songs in the Now playing list.



Cycle through the repeat modes: repeat all songs, repeat current song, and don't repeat.

Playing music from the Lock screen

When you're listening to music and the screen turns off, press POWER to turn the screen back on and control the music playback directly on the Lock screen.



If you don't see the playback controls on the Lock screen, tap anywhere on the screen to display them.



You can also pause music playback right from the Notifications panel.

Creating a playlist

Personalize your music experience by creating music playlists. Make a playlist containing just your favorite songs or create one to match your mood for the day. You can make as many playlists as you like.

1. From the Home screen, tap  > Music.
2. Tap  to go to the library.
3. In the library, tap or slide your finger on the bottom row to go to the **Playlists** category.
4. Tap **Add playlist**.
5. Enter a playlist name, and then tap **Add songs to playlist**.
6. Choose a category.
7. Select the check boxes of songs you want to add to the playlist and then tap **Add**.
8. Tap **Save**.



Playing the songs in a playlist

1. In the library, tap or slide your finger on the bottom row to go to the **Playlists** category.
2. Tap a playlist to open it.
3. Tap the first song or any song in the playlist.

When you tap a song in the list to play it, the Now playing screen is updated with the songs from your playlist.

Setting a song as a ringtone



You can choose a song from the Music app's library and set it as your phone's ringtone or a ringtone for a certain contact.

1. From the Home screen, tap  > **Music**.
2. Tap  to go to the library.
3. In the library, choose the song that you want to use as ringtone and then play it back.
4. On the Now playing screen, press MENU and then tap **Set as ringtone**.
5. If you chose an MP3 song, you can trim it first and set the part that you trimmed as the ringtone.
6. In the **Set as ringtone** options menu, tap **Phone ringtone** or **Contact ringtone**. If you select **Contact ringtone**, you need to choose the contacts you want to associate the song with in the next screen.

Trimming an MP3 ringtone

The Music app has a built-in ringtone trimmer. You can trim an MP3 song and set a part of it as your ringtone.

1. On the Now playing screen, press MENU, and then tap **Set as ringtone** > **Trim the ringtone**.
2. Use the onscreen controls to trim your ringtone.

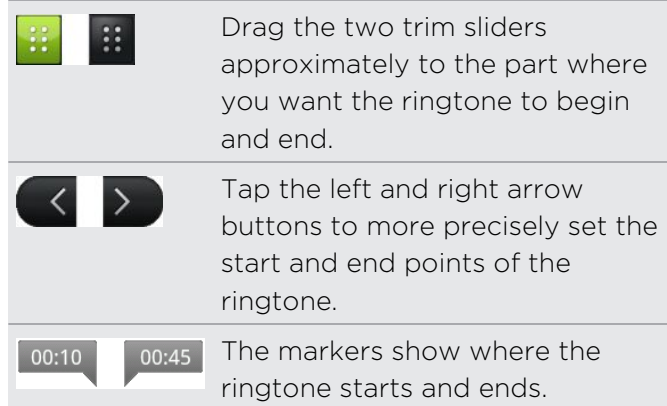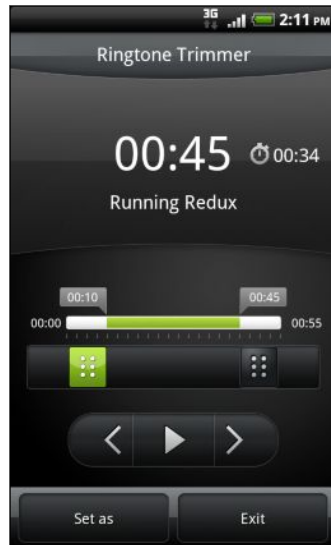

3. After you've finished trimming, tap **Set as**. Then choose whether to set the trimmed song as your **Phone ringtone** or **Contact ringtone**.


Connected Media

Sharing media on your home network




Sharing photos, videos, and music with a bigger circle of friends is easy on your home network. Simply connect your phone to the network and instantly show your captured photos and videos on a big TV, or start streaming your favorite music tracks on hi-fi speakers — all via DLNA®. For more information about DLNA, visit www.dlna.org.

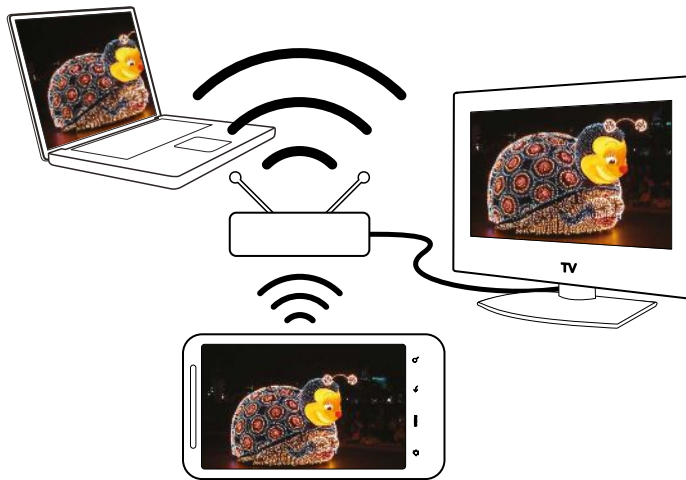


 



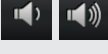

Before you share media through the network:

- Connect your phone to the network via Wi-Fi. To find out how to connect to a Wi-Fi network, see the Internet chapter.
- Connect the TV or speakers to the network. Check the documentation that came with your TV or speakers to know how.



1. Open the Gallery or Music app.
2. Locate the media that you want to share, and then tap it.
3. While viewing the photo or playing the video or music, press MENU, and then tap **Select player**.
4. Choose the device on your network where you want to play the media.
5. Once connected to the other device, your phone opens up the Controller screen where you can tap:

Controls	To
	Play the media on the other device.
	Pause the music or video playback.
	Play the previous photo or music track.

Controls	To
	Play the next photo or music track.
	Shuffle your music playlist.
	Select a repeat mode for photos or music tracks.
	Show available media that you can share.
	View the media information such as the file name, title, and duration.
	Connect to another photo/video player on the network.
	Connect to another music player on the network.
	Adjust the volume of the video or music you're playing on the other device. You can also drag the volume slider to adjust the volume.
	Disconnect your phone from the other device and stop sharing media.



- While playing a media on another device, you can press BACK and do other things on your phone. To return to the Controller screen, slide open the Notifications panel, and then tap the device you're connected to.
- Until you disconnect the phone from the other device, other media that you open from the Gallery or Music app are shared on the other device.

Maps and location

Location settings

Turning on location services

In order to find your location on your phone, you need to enable location sources.

1. From the Home screen, press MENU and then tap **Settings > Location**.
2. Select one or both of the following:

Use wireless networks	Uses Wi-Fi or your mobile data connection to find your approximate location.
Use GPS satellites	Finds your exact GPS location. This requires a clear view of the sky and more battery power.

Locations

About Locations


Search for places of interest, get directions to places you want to go to, and drive using turn-by-turn GPS navigation with Locations. Locations is also your perfect travel companion, whether you're at home or when you're in a different country. With Locations, you can download maps to your phone beforehand so you don't have to worry about having an Internet connection while on the road or costly data roaming charges when abroad. Have your map ready before you start your journey.




If you are in an area where there are a lot of surrounding buildings, Locations may have a hard time pinpointing your location.

Your phone comes with a map installed. The map on your phone will depend on the country where you bought your phone. Don't worry, you can download other maps when you need them.

Finding your location and what's around you


1. From the Home screen, tap  > **Locations**. You can see your current location right below the tab name.

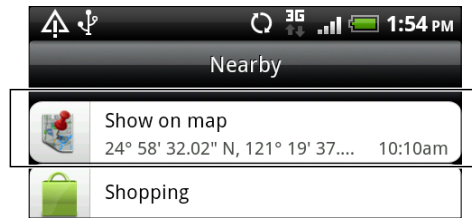

2. Press MENU, and then tap **My location** to update your current location or tap **Map** to show your current location on the map.
3. Select a category that you're interested in to see the places that are close by. The places are listed according to the distance from your current location.


Searching for a place of interest

You can search using a name of an establishment, street, or city. As you enter the place to look for, suggested matches from the database, footprints, and previously searched items are displayed.

1. From the Home screen, tap  > **Locations**.
2. Press the SEARCH button.

3. Enter the place you want to search in the search box. Matching establishments are shown sorted by the distance from your current location.
4. If you don't see what you are looking for, keep entering characters to narrow down the search.



- Search is done in your current country. If you want to do a search on a different country on your phone, tap **Current search region**.
- Tap  if you don't see any suggestions or if you don't see the place you are looking for in the list.

5. Tap an establishment to get directions, call them, add it as a footprint, and more.




Searching for an address

Enter the street or city name you want to find (you don't need to enter the complete address). A list of suggestions will appear to guide you to what you're looking for.


For example, to find "321, Church Street, London, UK", just enter "Church" or "London" to start your search.







You can also search by entering a zip code. To search using a zip code, enter the zip code, and then tap .

Viewing maps

 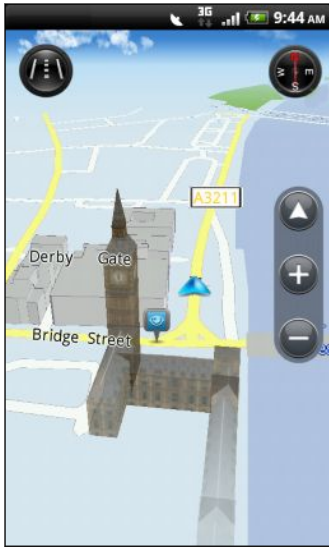In Locations, press MENU, and then tap **Map**.



	Tap to switch between 2D and 3D views.
	Point of interest. Tap to see details, call, get directions, or share.
	Your current location.
	Tap to use or not use the compass.

Tap the screen to show the zoom buttons and My location  button.

Using the compass

Should I turn left or right? By using the compass, the map adjusts depending on where you're facing so you know where to go.

Moving around the map

Swipe your finger on the screen to view other areas of the map.

Zooming in or out of a map

Do one of the following:

- Spread your thumb and index finger across the map to zoom in.
- Pinch your thumb and index finger on the map to zoom out.
- Double-tap a location on the map to zoom in to that location.

Choosing which places of interest to show on the map

1. While viewing a map, press MENU, and then tap **View**.
2. Choose the points of interest you want or don't want to see when you're viewing a map.




You can also choose to show or not show footprints and 3D buildings on the map.

3. Tap **Done**.

Pinning a location on the map


Pin a favorite location on the map and add it as a footprint, get directions to it, or share it with friends. Sharing is a great way to let your friends know about that little place you found that has the best sandwiches in town.

1. While viewing a map, press and hold an area on the map that you want to pin.
2. Tap  and then choose if you want to add the location as a footprint, get directions to it, or share it.



To remove all the pins on the map, while viewing a map, press MENU, and then tap More > Clear pin.

Changing the language of street names and places of interest

1. From the Home screen, tap  > Locations.
2. On the Nearby tab, press MENU, and then tap Settings > Map language.
3. Choose one of the following.



Use native map language	Use this if you want to use the local language of the map. For example, if you are looking at a map of Japan, it will use Japanese characters.
Use language that fits best	Use this if you want to use the language of your phone. This may not be available for all maps.

Recording favorite places as footprints

A footprint consists of a photo of a location such as a restaurant, a sightseeing destination, etc., stored together with a precise GPS position and other information about that location such as the street address and phone number.

The next time you want to visit the same place, just open the footprint. You can then dial the phone number or view the location in the map.

Adding a location as a footprint

1. In Locations, search for the destination you want to go to.
2. Tap Save to Footprints.
3. You can:
 - Tap  to take a picture and add it as a photo for the footprint.
 - Tap  to fine tune the position of the footprint on the map.
 - Tap the image to change the name, category, or address of the footprint, enter the phone or website, add a voice memo, and more.
4. Tap Done.

Setting a footprint as your home location

Save your home address as a footprint to make it easier to set it as your destination.


1. While at your home location, open Locations, and then go to the Footprints tab.
2. Tap **Save to Footprints**.



The address shown should be your current location. If it doesn't show your home address, press MENU, and then tap **My location**.

3. Tap **Done**.
4. Tap **My home**, select your home address from the list, and then tap **Done**.



To change your home address at any time, tap .

Revisiting a footprint

1. On the Footprints tab, tap a category.
2. Tap the footprint you want to revisit.
3. Tap the information fields to get directions, share the footprint, call a stored phone number, and more.

Editing or deleting a footprint

1. On the Footprints tab, tap a category.
2. Press and hold the footprint you want to edit or delete.
3. Tap **Edit** or **Delete** on the options menu.

Sharing your footprints

1. Create a footprint.
2. On the Footprints tab, tap the footprint that you have just created.
3. Tap **Share**, and then choose how you want to share the footprint.

Deleting multiple footprints

1. On the Footprints tab, tap a category.
2. Press MENU, and then tap **Delete**.
3. Select the footprints you want to delete, and then tap **Delete**.

Exporting your footprints

Back up footprints by exporting them to the storage card. You can also open exported footprints files in other applications such as Google Earth™ on your PC.

1. On the Footprints tab, tap a category.
2. Press MENU, and then tap **Export**.



Press MENU and then tap **Deselect all** to deselect all the footprints.

Exported footprints are saved as .kmz files in the Footprints folder on your storage card. If you exported multiple footprints at one time, they are saved together in one .kmz file.

Importing footprints

Bring back footprints you previously backed up to the storage card to your phone. You can also import .kmz files that you saved in other applications, or use a photo as a footprint.

1. On the Footprints tab, press MENU, and then tap **Import**.
2. Do one of the following:
 - To import a saved footprint or another .kmz file from the storage card, tap **Footprints data**, and then tap the file you want to import. If a footprint on your phone is the same as the one you want to import, you're asked whether you want to overwrite it.
 - To import a photo, tap **Photos**, navigate to the photo you want to import, and then tap the photo. You can then add Footprints information such as location and category.

Getting directions

Get detailed driving or walking text instructions on how to get to your destination.

Getting directions from your current location


1. In Locations, search for the destination you want to go to.



You have footprints saved? You can also set a footprint as your destination. Just go to the Footprints tab, and then choose a footprint.

2. Tap **Directions**.

3. Choose how you want to get to your destination. The map opens showing the route to your destination.
4. Do one of the following:
 - At the bottom of the screen, tap **<** or **>** to follow the route to your destination.
 - Slide up the directions bar, and then tap the instructions to follow the route to your destination.

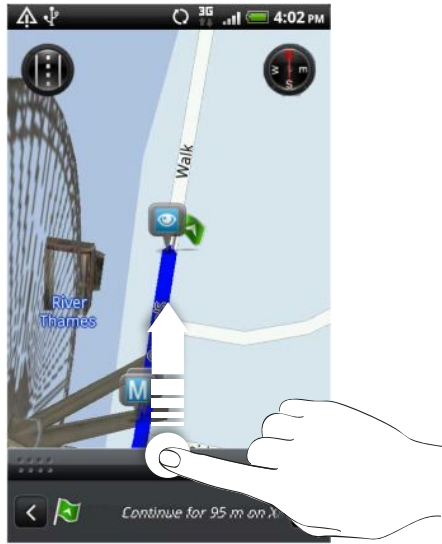

If you have turn-by-turn navigation for that country, press MENU, and then tap **Navigate** to start turn-by-turn navigation.

Getting directions by setting a start and end location

1. While viewing the map, press MENU, and then tap **Directions**.
2. Tap the **My location** text box, and then search for the starting location you want.
3. Tap the **End point** text box, and then search for the destination you want.
4. Tap **Driving** or **Walking** depending on how you want to get to your destination.
5. Do one of the following:
 - At the bottom of the screen, tap **<** or **>** to follow the route to your destination.
 - Slide up the directions bar, and then tap the instructions to follow the route to your destination.



If you have turn-by-turn navigation for that country, press MENU, and then tap **Navigate** to start turn-by-turn navigation.

Using turn-by-turn navigation (Premium navigation)

- To use turn-by-turn navigation, the **Use GPS Satellites** option in Location sources needs to be selected.
- Check if you have the turn-by-turn navigation for the country or region you're using. To find out if the phone has turn-by-turn navigation for the country or region, see [Managing Locations services](#) on page 143.

Using Locations to navigate to a destination

1. In Locations, search for the destination you want to go to.



You have footprints stored? You can also set a footprint as your destination. Just go to the Footprints tab, and then choose a footprint.

2. Tap **Premium navigation**.

While navigating, you can tap the screen to see what other options are available.

Setting navigation preferences

Choose how you want Locations to map your route. You can tell Locations to avoid highways or toll roads, show lane information, choose your route preference, and more.

1. While using turn-by-turn navigation, tap the screen.
2. Tap **More > Settings > Navigator**.
3. Set your preferences by selecting or tapping an item.

Turning off speed and safety camera alerts

If you have the safety camera service, you can choose to turn this service off temporarily.


1. While using turn-by-turn navigation, tap the screen.
2. Tap **More > Settings > Warnings**
3. Clear the **Speed warning** and **Safety camera warning** check boxes.

Answering a call while using navigation






 
When a call comes in, the whole map nudges up a bit so you can see the incoming call and answer it. Don't worry, you'll still be able to use navigation as we made sure that the call screen just occupies as little space as possible at the bottom of the screen.

Using Car Panel

Easily access footprints, points of interest, and places nearby with Car Panel, and then start navigation to show you how to get there.

From the Home screen, tap  > Car Panel.



-  Search for a destination to go to.
-  Select a footprint to set as a destination.
-  Check the places you've search before, and then choose one to set as your destination.
-  Set Car Panel options.
-  Check places of interest that are close to your current location, and then choose one to set as your destination.
-  Make a phone call.

Car Panel keeps opening by itself when you're using a mini-to-micro USB converter?

If you connect a mini-USB power adapter or car charger to your phone through a mini-to-micro USB converter, your phone may misinterpret this to be a car kit connection (due to the different connector PIN assignment on the mini-USB power adapter or car charger) and automatically display the Car Panel.

You can prevent Car Panel from automatically opening by:

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Dock**, and then clear the **Auto-launch** check box.

Using your phone with the car kit

If you purchased the dedicated car kit for your phone, you can use the included in-car holder to mount your phone securely inside your car and use your phone on the road. Refer to the car kit guide for instructions on how to install the in-car holder and properly mount your phone to the holder.

When you mount your phone on the car kit, the Car Panel automatically opens.



When your phone is in the holder and is not connected to a Bluetooth car kit or headset, the phone's speakerphone is automatically turned on when you make or answer a phone call.

Automatically connecting to a Bluetooth car kit or headset


You can set your phone to connect to your Bluetooth car kit or Bluetooth headset automatically, if one is paired with your phone, whenever you mount the phone on the in-car holder.

1. In Car Panel, tap **Settings** > **Car kit**.
2. Select the **Auto-connect** check box.
3. If you have more than one Bluetooth car kit or headset paired with your phone, tap **Default device** to choose the Bluetooth car kit or headset to use.

Before mounting your phone on the in-car holder, make sure that Bluetooth on your phone and the paired Bluetooth car kit or headset is turned on.

Managing Locations services

Check the maps, navigation, safety camera information, and voices for turn-by-turn voice instructions that are already on your phone.


1. From the Home screen, tap  > **Locations**.
2. Press MENU, and then tap **Upgrade**. In the Manage licenses & content tab, you'll see a list of services that are already on your phone.

Downloading maps or purchasing services

Going to a different country for vacation? You can download the map of the country you're going to for free. You can also download or purchase additional services such as navigation, safety camera, and turn-by-turn voice instructions.



You need a data or Wi-Fi connection to download or purchase maps and services.

1. From the Home screen, tap  > **Locations**.
2. Press MENU, and then tap **Upgrade**.
3. Slide to the tab of the item or service that you want to download.
4. Depending on what you selected, tap **Download** or **Purchase**.

Depending on the country where you bought your phone, you may only need to enter a voucher code to activate turn-by-turn navigation. If you have a voucher code, enter it by tapping **Voucher code** at the top of the Purchase navigation tab.


Adding navigation widgets

Add a favorite destination and places of interest that are nearby and your footprints as widgets on your Home screen. Add the Navigate widget to start turn-by-turn navigation to your favorite destination. Add the Locations widget to let you browse places of interest and your footprints right on the Home screen.

More apps

Using Flashlight

Never get caught in the dark again. The Flashlight app turns on your phone's LED flashlight to shine a light wherever you need it.

1. From the Home screen, tap  > Flashlight.
2. To adjust the brightness of the light, simply tap the onscreen power button on the flashlight handle.



To close the flashlight, press BACK.

Security

Protecting your SIM card with a PIN

Add another layer of security for your phone by assigning a PIN (personal identification number) to your SIM.

Make sure you have the default SIM PIN provided by your mobile operator before continuing.

1. From the Home screen, press MENU, and then tap **Settings > Security**.
2. Tap **Set up SIM card lock**, then select **Lock SIM card**.
3. Enter the default SIM card PIN, and then tap **OK**.
4. To change the SIM card PIN, tap **Change SIM PIN**.



Emergency calls can be placed at any time without requiring a PIN.

Restoring a SIM card that has been locked out

If you enter the wrong PIN more times than the maximum number of attempts allowed, your SIM card will become “PUK-locked.”

You need a PUK code to restore access to the phone. This code may have been provided by your mobile operator when you received your SIM card.

1. On the Phone dialer screen, enter the PUK code, and then tap **Next**.
2. Enter the new PIN you want to use, and then tap **Next**.
3. Enter the new PIN again, and then tap **Next**.

Protecting your phone with a screen lock pattern, PIN or password

Protect your personal information and prevent others from using your phone without your permission by setting a screen lock pattern, PIN or password.

Your screen lock will be asked every time your phone is turned on or when it's idle for a certain period of time.

1. From the Home screen, press MENU, and then tap **Settings > Security**.
2. Tap **Set up screen lock**.

3. Tap one of the following:

None	Disable the screen lock you've previously created.
Pattern	Set a screen lock pattern by following the onscreen instructions.
PIN	Set a numeric password of at least four digits.
Password	Set an alpha-numeric password.

4. On the **Security** screen, tap **Lock phone after**, then specify the idle time you can allow before the screen is locked.



You can also clear the **Use visible pattern** on the **Security** screen if you don't want your screen lock pattern to display as you draw it onscreen.

Changing your screen lock

1. From the Home screen, press MENU, and then tap **Settings > Security**.
2. Tap **Change screen lock**.
3. Enter your current screen lock to confirm that you want to change it.
4. Choose a different screen lock type, then enter your new pattern, PIN, or password. Or tap **None** if you don't want to use a screen lock.

Forgot your screen lock pattern?

If you've forgotten your screen lock pattern, you have up to five attempts to try and unlock your phone.

If this fails, you can unlock your phone by entering your Google Account user name and password.

1. On the unlock screen, enter your lock pattern.
2. After the fifth attempt, when you're asked to wait for 30 seconds, tap **OK**.
3. If the display goes off, press the **POWER** button to turn the display back on, and then press the bar on the lock screen and slide your finger down to unlock the screen.
4. Tap the **Forgot pattern?** button in the lower right corner when it appears.
5. Enter your Google Account name and password, and then tap **Sign in**. You'll then be asked to create a new screen lock pattern. If you no longer want to do so, tap **Cancel**.

Settings

Changing display settings

Adjusting the screen brightness manually

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Display > Brightness**
3. Clear the **Automatic brightness** check box.
4. Drag the brightness slider to the left to decrease or to the right to increase the screen brightness.
5. Tap **OK**.

Adjusting the time before the screen turns off

After a period of inactivity, the phone screen turns off to conserve battery power. You can set the idle time before the screen turns off.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Display > Screen timeout**.
3. Tap the time before the screen turns off.

Turning automatic screen rotation off

By default, the screen orientation automatically adjusts depending on how you hold the phone.



Automatic rotation is not supported in all application screens.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Display**.
3. Clear the **Auto-rotate screen** check box.

Recalibrating the G-sensor

Recalibrate the screen if you feel that the screen orientation does not respond properly to the way you hold the phone.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Display > G-Sensor calibration**.

3. Place the phone on a flat and level surface, and then tap **Calibrate**.
4. After the recalibration process, tap **OK**.

Keeping the screen on while charging the phone

You can keep the phone screen from turning off while you're charging the phone.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Applications > Development**.
3. Select the **Stay awake** check box.

Switching animation effects on or off

You can turn off the animation or enable only some animations when switching between screens.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Display > Animation**.
3. On the options menu, select the animation setting you want.

Changing sound settings

Switching between silent, vibration, and normal modes

Do one of the following:

- To change back from silent to normal mode, simply press the VOLUME UP button.
- To change back from vibration to normal mode, press the VOLUME UP button twice.
- From the Home screen, press MENU, and then tap **Settings > Sound > Sound profile**.
- You can also add the Profile widget to your Home screen.

Enabling or disabling audible selection

You can choose to play a sound when you're selecting items onscreen.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Sound**.
3. Select the **Audible selection** check box.

Choosing the notification sound

You can choose a default sound for your phone to play whenever there are new notifications.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Sound > Notification sound**.
3. Select your preferred notification sound in the list.
4. Tap **OK**

To use different sounds for different types of notifications, set the notification sounds in the respective applications. For example, to set different sounds for received and sent text messages, open Messages, then press MENU and tap **Settings**.

Lowering the ring volume automatically

Your phone has a quiet ring feature that automatically lowers the ring volume when you move your phone.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Sound**.
3. Select or clear the **Quiet ring on pickup** check box.

Making your phone ring louder with Pocket mode

To help avoid missing incoming calls when your phone is in your pocket or bag, the pocket mode feature gradually increases the ring volume and vibrates when you receive a call. When not in your pocket or bag, the phone will ring at the normal volume you set.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Sound**.
3. Select or clear the **Pocket mode** check box.

Switching to speakerphone automatically

You can switch to speakerphone by simply flipping over your phone.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Sound**.
3. Select or clear the **Flip for speaker** check box.

Changing the phone language

When you turn your phone on for the first time, you're asked to choose the language you want to use for your phone. If you want, you can still change the phone language after you set up your phone. Changing the language adjusts the keyboard layout, date and time formatting, and more.

The languages available to choose from may depend on the version of phone you have.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Language & keyboard > Select language**.
3. Tap the language and corresponding region you want to use.
4. Press HOME to return to the Home screen. The new language will be applied after a few seconds.

Optimizing your phone's battery life

You can set the phone to automatically switch to power saving mode when the battery level reaches a certain level.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Power saver**.
3. Select the **Enable power saver** check box.
4. Tap **Turn power saver on at**, and then select when to switch to power saver mode.
5. In the Power saver settings section, set and select the phone behavior when the phone switches to power saving mode.

Using the GSM network of your mobile operator

Switch to using the GSM network of your mobile operator if you're not using a data connection to connect to the Internet. Connecting to your mobile operator's GSM network consumes less battery power.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Wireless & networks > Mobile networks > Network Mode**.
3. Tap **GSM only**.

Checking the power usage of applications

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **About phone > Battery > Battery use**.

Managing memory

Checking how much phone memory is available for use

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **SD & phone storage**. The available phone memory is displayed in the Internal phone storage section.

Checking the available storage card space

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **SD & phone storage**. The total and available storage card space is displayed in the SD card section.

Clearing application cache and data

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Applications > Manage applications**.
3. On the Manage applications screen, switch to the Running tab, and then tap an application.
4. In the Application info screen, tap **Clear data** and/or **Clear cache**.

Uninstalling third-party applications

You cannot uninstall applications that are preinstalled on the phone.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Applications > Manage applications**.
3. On the Downloaded tab, tap the application you want to uninstall.
4. On the Application info screen, tap **Uninstall**.

Moving applications to or from the storage card

Move applications that you've downloaded to the phone to the storage card if your phone's memory is getting low. Or, if your storage card is getting full, you can also move applications that are on your storage card to the phone.



You can only move applications that are not preinstalled on your phone.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **Applications > Manage applications**.
3. On the Downloaded tab, tap the application you want to move.
4. On the Application info screen, tap **Move to SD card** or **Move to phone**.

Checking information about your phone

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **About phone**.
3. Select one of the following:

System software updates	Enable or disable the automatic check feature for software updates for your phone. You can also tap Check now to manually check for software updates.
Network	Check information about your mobile operator and its service status.
Phone identity	Check information about your phone and the SIM card you're using.
Battery	Check information about the battery such as its current battery level, status, and what programs are using the battery.
Hardware information	Check the Wi-Fi MAC and Bluetooth addresses.
Software information	Check the version and other information about the Android platform being used by the phone. You can also check the version of the web browser.
Legal information	Read legal information from HTC and Google, and licenses used by the phone.

Update and reset

Phone software updates

From time to time, software updates for your phone may be available. Your phone can check and then notify you if there's a new update. You can then download and install the software update using your phone's Wi-Fi or data connection. You can also manually check if there's an available software update for your phone.

Depending on the type of update, the update may erase all your personal data and customized settings, and also remove any applications you've installed. Make sure that you've backed up the information and files you want to keep.



Checking and downloading phone software updates may incur additional data transfer fees from your mobile operator.

Installing a phone system software update

Make sure your phone has a microSD card inserted. The update will be downloaded to the microSD card.

1. Do any of the following after your phone receives a software update:
 - If the phone display is on and you're not using any application, the **Install system software update** dialog box appears on screen. Select **Install now**, and then tap **OK**.
 - If you're in a call, the update notification icon appears in the status bar. After the call, slide open the Notifications panel, and then tap the update notification.
2. Wait for the update to download and install on your phone. When the update is finished, the phone will automatically restart.

Checking for phone system software updates manually

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **About phone** > **System software updates**.
3. Tap **Check now**.

Restarting your phone

If your phone is running slower than normal, an application is not performing properly, or your phone becomes unresponsive, try restarting your phone and see if that helps solve the problem.

1. If the display is off, press the POWER button to turn it back on.
2. Unlock the phone display.
3. Press and hold the POWER button, and then tap **Restart**.
4. When asked to confirm, tap **Restart**.



If these steps don't work, you can remove and replace the battery, and then turn the phone on to restart it.

Resetting your phone

Do a factory reset to return your phone to its original state before the first time you turned it on.

If you're passing your phone on to someone else or your phone has a persistent problem that cannot be solved, you can perform a factory reset (also called a hard reset). Factory reset is not a step to be taken lightly. It'll permanently delete all your data and customized settings, and will remove any applications you've downloaded and installed. Be sure to back up any data and files you want to keep before you do a factory reset.

Performing a factory reset via settings

The most convenient way to do a factory reset is via the phone settings.

1. From the Home screen, press MENU, and then tap **Settings**.
2. Tap **SD & phone storage > Factory data reset**.
3. Tap **Reset phone**, and then tap **Erase everything**.

Performing a factory reset using the phone buttons

If you can't turn on your phone or access the phone settings, you can still perform a factory reset by using the buttons on the phone.

1. With the phone turned off, press and hold the VOLUME DOWN button, and then briefly press the POWER button.
2. Wait for the screen with the three Android images to appear, and then release the VOLUME DOWN button.
3. Press VOLUME DOWN to select **FACTORY RESET**, and then press the POWER button.

Trademarks and copyrights

©2011 HTC Corporation. All Rights Reserved.

HTC, the HTC logo, the HTC quietly brilliant logo, HTC Desire Z, Friend Stream, HTC Footprints, HTC Sense, and HTC Watch are trademarks or service marks of HTC Corporation.

©2011 Google Inc. Used with permission. Google, the Google logo, Android, the Android logo, Android Market, the Android Market logo, Google Apps, Google Calendar, Google Checkout, Google Earth, Google Latitude, Google Maps, Google Talk, Gmail, and Picasa are trademarks of Google Inc.

Microsoft, Windows, ActiveSync, Outlook, PowerPoint, Windows Media, Windows Vista, and Word are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc.

This device contains Adobe® Flash® Player software under license from Adobe Systems Incorporated. Copyright ©1995–2011 Adobe Systems Incorporated. All rights reserved. Adobe is a trademark of Adobe Systems Incorporated.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

microSD is a trademark of SD Card Association.

Facebook is a trademark of Facebook, Inc.

Twitter is a trademark of Twitter, Inc., and is used under license.

Flickr is a trademark of Yahoo! Inc.

DLNA is a registered trademark, DLNA disc logo is a service mark, and DLNA Certified is a trademark of the Digital Living Network Alliance.

©2011 Kobo Inc. All rights reserved. Kobo and the Kobo logo are trademarks of Kobo Inc.

iTunes is a trademark of Apple Inc.

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from furnishing this material. The information is provided “as is” without warranty of any kind and is subject to change without notice. HTC also reserves the right to revise the content of this document at any time without prior notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.