Whether you're a talker, a texter, or just love listening to the music on the move, EX300 does it all.

with you.

If you'd like even more information about how to use vour new EX300, visit www.motorola.com/support. So, let's go.

images in this guide. However, all key locations, sequences and functions are the same.

basics

touch tips

turn it on & off

Press and hold ① (on top of the phone) for a few

touch: to choose an icon or option, touch it.

touch & hold: To open special options, touch and

drag: to scroll through a list or move slowly, drag

flick: to scroll through a list or move guickly, flick

across the touchscreen (drag quickly and release).

Press the **centre key** from the home screen to

Press the navigation key 🛈 up, down, right or left

to highlight a menu option or simply flick up, down,

select the highlighted option or simply touch the

seconds to turn the phone on/off.

hold an icon or other item.

across the touchscreen.


menu navigation

option on the touchscreen.

right or left to highlight the option.

We've crammed all the main features of your phone into this handy guide—you can even take the guide

your phone

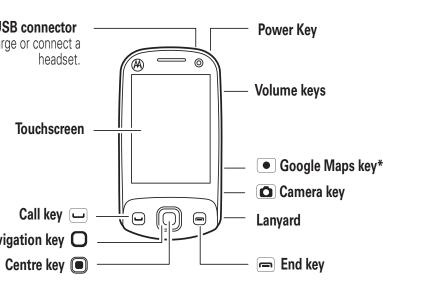

personalise —

set time & date

set auto power

set ringtone & volume

Touch **■** > **⑥** Settings > Profiles

set your wallpaper

*Country dependent

Change the wallpaper to one that makes you smile.

Touch | > Settings > Phone settings > Date and Time

Play it loud or keep it quiet, you choose.

Choose a profile. Touch Edit to edit a profile.

Choose when to receive calls and messages—really

messages

send an SMS or MMS

1 Touch **■** > **■** Messaging > Create message.

2 Enter your message.

Tip: Touch $\overline{\bullet}$ to switch capitalisation modes, and touch **T9** to switch text entry modes.

3 Touch **0K** when you have entered your message. Touch the icons at the bottom of the screen to add pictures, videos and more.

Touch ♣ > Add from contacts or Enter number.

location & navigation

circle, the less accurate the location.

■ Touch ■ > ₩ Google Maps > Menu > Get Directions

4 When you have finished, touch Menu > Clear Map.

Select your mode of transport (Driving, Transit or Walking).

location is shown on the map as (a). The bigger the

2 Enter text in the search map, such as an address,

| find your location

find any location

business or city.

Enter a Start Point and End Point.

then touch Show directions.

3 Touch OK.

get directions

6 Touch **Send**.

read messages

When you receive a message you will see 🖂 1 Unread Message on your screen. Touch it to open the message.

make calls



emergency calls



To call an emergency number, enter the emergency number and press

Your service provider programmes emergency phone numbers, (such as 999 or 112), that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your phone's

pre-programmed emergency number(s) may not wor in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

tips & tricks

| recent calls

To see your Dialed, Received and Missed calls, press (-) from the home screen.

add widgets

o add widgets to your home screen, such as Music Player, Google Search and Calendar, touch and hold an empty spot until you see the Widgets menu.

auto keypad lock

o automatically lock your keypad, touch | > Settings > Phone settings > Auto keypad lock.

voicemail

From the home screen, touch (11), then touch and hold 1. If your voicemail number is preset, you will connect.

backlight time

To set how long your backlight stays on, touch | > Settings > Display settings > Backlight time.

To use the music player, insert a microSD memory card (optional). The music player supports MP3. MIDI and AMR music formats.

play music

Touch | > & Music

controls

function Touch D/ play/pause next/previous Touch KA PM

Tip: To create a playlist, set the song as your ringtone

Tip: To access music stored on your microSD memory card, touch | > | My files > Memory card tab.

Press the side volume kevs up or down.

and more, touch Options.

Create message

Drafts Sent Outbox Email

menu map

Contacts

Inbox

Templates

Settings

Music

Mv files

Phone

Alarms

 Memo World time

Calendar

Memory card

My reminders

Broadcast inbox

FM radio

Settings

Phone settings

Camera

Missed

Dialled

Received

Calls

Display settings Touch settings

 Call settings Connectivity

Network

 Applications Security

Applications

∅ Google Maps

Voice recorder Calculator

 Converter Stopwatch

 Timer Synchronise

This is a standard main menu layout. Your

phone's menu may be a little different.

To use your phone as a modem, connect your

Manager on your PC. To **view** your email inbox, touch | > | Messaging >

Tip: Touch Ontions > Extract to copy URL or phone numbers in emails.

surf the web

website address.

phone to your PC via the USB cable, then: • Ensure that the USB device is displayed in Device

2 To set up the Internet connection, use the

Windows 7[™] and Windows Vista[™] are supported.

To read the files saved on your phone's microSD

connect your phone to your PC via the USB cable

instructions. The phone is in offline mode when switching to File Transfer mode.

Tip: To download PC Suite, go to:

may not be shipped with your phone.



31010CVC

 


6 charge up



Note: Your phone may not appear exactly as the

USB connector Charge or connect a Navigation key





end a call



Press (=).

redial number

10 From the home screen, press → to see a list of All

2 Scroll to the entry you want and press (-).

contacts

save contacts From the home screen, touch Unialer > enter number > Ontions > Save number.

2 Select to save the contact to Phone or SIM, then enter the contact details and touch Save

call contacts

● Touch | > ■ Contacts.

Press • up or down, to scroll through the list to highlight the contact's number.

Tip: Press · **û** · **right** or **left** to switch between

Contacts and Groups. 3 Press (-).

bluetooth™ -

Make sure the device you are pairing with is in

2 Touch **■** > **◎** Settings > Connectivity > Bluetooth > Search

3 Your phone lists the devices it finds within range

4 If necessary, touch Yes, OK or enter the device passkey (such as 0000) to connect to the device.

To automatically disconnect your phone from a paired device, simply turn the device off. To **send** a media file or contact, open the item that you want to transfer, then touch Options > Send > Via

connect new devices

discoverable mode.

Touch a device name to connect with it.

o automatically reconnect your phone with a paired device, simply turn the device on.

photos & videos

• To access the camera, touch $\parallel >$ > > Camera. To access the video camera, press | > Video camera.

Press to take your photo or to start/stop the video, then to:

Set the photo as your Wallpaper or Contact image, touch . Send the photo or video by Message, E-mail or Bluetooth, touch

To **play** the video, touch ▶. o delete the photo or video, touch 📆.

return to the viewfinder, touch \supset . transfer photos or videos to/from your memory card, use a microSD memory card reader on your computer.

email & internet

To **set up** your email, touch | > | Messaging > E-mail and follow the on-screen instructions.

E-mail > email account.

Note: It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

From the home screen, touch then enter the

2 Touch 🕒.

To save a website as a **bookmark**, touch $\nabla > My$ or **switch** open windows, touch $\nabla >$ Window > Close window or Switch window.

PC connection

Windows™ internet wizard on your PC or install and run the Internet wizard application on your

Note: Only Windows 2000™, Windows XP™,

1 Insert the microSD card into your phone, then

2 Select File Transfer on your PC and follow the

http://www.motorola.com/mypcsuite.

Note: USB cable and/or SD card may be optional and



accessories: www.motorola.com







Battery use & safety

Important: Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries, and particularly from the continued use of

Don't disassemble, crush, puncture, shred or otherwise attempt to change the form Don't let the mobile device or battery come into contact with water.* Water can get

- into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to
- Don't allow the battery to touch metal objects. If metal objects, such as jewellery, stay in prolonged contact with the battery contact points, the battery could become very hot.
- Don't place your mobile device or battery near a heat source.* Excessive heat can damage the mobile device or the battery. High temperatures can cause the battery to swell. leak or malfunction. Therefore:
- Don't dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwaye oven.
- Do avoid leaving your mobile device in your car in high temperatures.*
- Do avoid dropping the battery or mobile device.* Dropping these items, especially on a hard surface, can notentially cause damage.
- Do contact your service provider or Motorola if your mobile device or battery has been damaged by being dropped or by high temperature
- * Note: Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection). Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original

Motorola recommends that you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on

- your display such as **Invalid Battery** or **Unable to Charge**, take the following steps: Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery If there is a hologram, replace the battery and try charging it again
- If the message remains, contact a Motorola authorised service centre.
- **Important:** Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it also benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

www.motorola.com/recycling

www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling centre or national recycling organisations for more information on how to dispose of batteries

Warning: Never dispose of batteries in a fire because they may explode.

Battery charging Notes for charging your product's battery:

When charging your battery, keep it near room temperature. Never expose batteries to

- temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged
- New batteries or batteries stored for a long time may take more time to charge
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving precautions

Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

Type or read texts.

- Enter or review written data.
- Surf the web.

Input navigation information.

Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eves on the road
- Enter destination information into a navigation device before driving. Use voice activated features (such as voice dial) and speaking features (such as audible
- directions) if available Obey all local laws and regulations for the use of mobile devices and accessories in the
- End your call or other task if you cannot concentrate on driving.
 - Remember to follow the "Smart Practices While Driving" in this guide and at www.motorola.com/callsmart (in English only).

Specific Absorption Rate (ICNIRP)

Your model of wireless phone meets international guidelines for exposure to

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed o assure the protection of all persons, regardless of age and health, and to account for any

ne guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). The ICNIRP SAR limit for mobile devices used by the general public is 2 watts per kilogram (W/kg), and the ghest SAR value for this mobile device when tested at the ear is 0.649 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this guide. In this case, the highest tested SAR value is 0.759 W/kg. The tests are carried out in accordance with international guidelines for testing. The SAR information includes the Motorola testing protocol, assessment procedure and measurement uncertainty range for this product. As SAR is measured using the mobile device's highest transmitting power, the actual SAR of this mobile device while operating is typically below that indicated above. This is due to automatic

hanges to the power level of the mobile device to ensure it only uses the minimum level required While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products: in

Ill cases, products are designed to be within the guidelines. he World Health Organisation has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure, then you can do so by limiting the length of calls or using a hands-free

device to keep the mobile device away from the head and body Additional Information can be found on the websites of the World Health Organisation (http://www.who.int/emf) or Motorola, Inc.

http://www.motorola.com/rfhealth). **European Union Directives conformance**

- statement Hereby, Motorola declares that this product is in compliance with:
- The essential requirements and other relevant provisions of Directive

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE

such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any

All other relevant EU Directives

IMEI: 358345030052325 Approva

Type: DVT6-33411A11 he above gives an example of a typical Product Approval Number.

rective) at www.motorola.com/rtte. To find your DoC, enter the Product Approval Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Number from your product's label in the "Search" bar on the Web site.

Software copyright notice Motorola products may include convrighted Motorola and third-party software stored in While driving, NEVER: semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software,

copyrighted software contained in Motorola products may not be modified, reverse-engineered. distributed or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant, either directly or by implication or estoppel or otherwise, any licence under the copyrights, patents or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that Use a handsfree device if available or required by law in your area. arises by operation of law in the sale of a product.

Content copyright

The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying noncopyrighted materials, materials in which you own the copyright or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Safety & general information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to radio frequency (RF) energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate using your mobile device, the system handling your call controls the power level at which your mobile device transmits. Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and

Product operation

When placing or receiving a phone call, hold your mobile device just like you would a landline

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimetres 1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com

RF energy interference/compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow instructions to avoid interference problems

Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an aeroplane mode or similar feature, consult airline staff about using it in-

Implantable medical devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your doctor before using this mobile device

- Persons with implantable medical devices should observe the following precautions: ALWAYS keep the mobile device more than 20 centimetres (8 inches) from the implantable medical device when the mobile device is turned ON
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimise the potential for interference. Turn OFF the mobile device immediately if you have any reason to suspect that interference is

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider.

Driving precautions

Using a mobile device while driving may cause distraction. End a call if you can't concentrate on driving. Enter information about your destination and route prior to your drive. Do not enter data or before your hearing could be affected. To protect your hearing: engage in text messaging while driving. Keep your eyes on the road while driving. Listen to the audible turn-by-turn directions, if available

obey the laws and regulations on the use of these products.

Also, using a mobile device or accessory may be prohibited or restricted in certain areas. Always

Responsible driving practices can be found at www.motorola.com/callsmart (in Englis

 
Operational warnings

nss/AcousticSafety.asp (in English only). Obey all posted signs when using mobile devices in public areas.

Potentially explosive atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fuelling areas, such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain dust or metal powders. When you are in such an area, turn off your mobile device and do not remove, install or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Your battery, charger or mobile device may contain symbols, defined as follows:



everyday household waste.

neadset may damage your hearing.

Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information Do not dispose of your battery or mobile device in



Do not let your battery, charger or mobile device get wet. Listening at full volume to music or voice through a

Batteries & chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage or other hazard. For more information, see "Battery use & safety".

Keep your mobile device & its accessories away from small

These products are not toys and may be hazardous to small children. For example: A choking hazard may exist for small, detachable parts. Improper use could result in loud sounds, possibly causing hearing injury.

Improperly handled batteries could overheat and cause a burn. Glass parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service

Seizures/blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout

If you have experienced seizures or blackouts or if you have a family history of such occurrences, please consult your doctor before playing video games or enabling a flashing-lights feature (if available) on your mobile device

Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour and stop use if you are tired.

Caution about high volume usage Warning: Exposure to loud noise from any source for extended periods of time may

affect your hearing. The louder the volume sound level, the less time is required Limit the amount of time you use headsets or headphones at high volume

- Avoid turning up the volume to block out noisy surroundings. Turn the volume down if you can't hear people speaking near you.
- If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears or muffled speech, you should stop listening to the device through your adset or headphones and have your hearing checked.

For more information about hearing, see our website at direct.motorola.com/hellomoto/

Caring for the environment by recycling

Repetitive motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor.

The following statement applies to all products that have received FCC approval.

or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

FCC notice to users

Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on Motorola has not approved any changes or modifications to this device by the user. Any changes



pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television recention, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver. Connect the equipment to a socket on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help.

Use & care

To care for your Motorola phone, please keep it away from:

liquids of any kind

 
Don't expose your phone to water, rain, extreme humidity, sweat or other moisture. If it does get wet, don't try to accelerate drying by using an oven or dryer, as this may

extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



Don't try to dry your phone in a microwave oven.



cleaning solutions To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning



Don't drop your phone.

Information from the World Health Organisation Present scientific information does not indicate the need for any special precautions for the use of

mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and hody Source: WHO Fact Sheet 193 Further information: http://www.who.int/peh-emf

This symbol on a Motorola product means the product should not be disposed of with

Disposal of your mobile device & accessories Please do not dispose of mobile devices or electrical accessories (such as chargers, leadsets or batteries) with your household waste. Do not dispose of your battery or

mobile device in a fire. These items should be disposed of in accordance with the

Privacy & data security

national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola case of fire, traffic accident or medical emergencies (wherever wireless phone service is Approved Service Centre in your region. Details of Motorola-approved national recycling schemes. and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

Disposal of your mobile device packaging & product guide Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

Antorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these ecommendations to enhance protection of your information:

- Monitor access—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available. Keep software up to date—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as
- **Secure personal information**—Your mobile device can store personal information in (Warranty Term) rarious locations including your SIM card, memory card and phone memory. Be sure to remove You must inform Motorola of the lack of conformity to the applicable specifications of any of the or clear all personal information before you recycle, return or give away your device. You can also back up your personal data to transfer to a new device. Note: For information on how to back up or wipe data from your mobile de-
- vice, go to www.motorola.com/support Online accounts—Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the account and how to use security features such as remote wipe and device location (where available).
- Location-based information—I ocation-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones that are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications. accessories and in lieu of all other warranties, terms and conditions, whether express or implied transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola and other hird parties providing services.
- Other information your device may transmit—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at <u>privacy@motorola.com</u>, or contact your

Smart practices while driving Drive safe call smart

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, hands-free use only. Go to www.motorola.com/callsmart (in English only) for more information. Your mobile device lets you communicate by voice and data, almost anywhere, anytime, wherever

wireless service is available and safe conditions allow. When driving a car, driving is your first service to consumers beyond the first year of purchase (South Africa and Portugal), this warranty responsibility. If you choose to use your mobile device while driving, remember the following tips: Get to know your Motorola mobile device and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off

- When available, use a hands-free device. If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original hands-free accessories available today. Position your mobile device within easy reach. Be able to access your
- incoming call at an inconvenient time, if possible, let your voicemail answer it for you. Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.

mobile device without removing your eyes from the road. If you receive an

• Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or CLAIMING oing through your address book takes attention away from your primary responsibility—

- Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few
- No not engage in stressful or emotional conversations that may be distracting Make people you are talking to aware you are driving and suspend conversations that can divert your attention away from the road • Use your mobile device to call for help. Dial 999 or another local emergency number in the
- Use your mobile device to help others in emergencies. If you see a road accident, crime in progress or other serious emergency where lives are in danger, call 999 or another local emergency number (wherever wireless phone service is available), as you would want others
- Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or another special non-emergency wireless number (wherever wireless phone service is available)

WARRANTY INFORMATION

mbers, check the road and your mirrors, then continue.

Motorola guarantees to you, the original purchaser, the Personal Communicator and accessories which you have purchased from an authorised Motorola dealer (the "Products"), to be in conformance with the applicable Motorola specifications current at the time of manufacture for a erm of 1 year (2 years for South Africa and Portugal) from date of purchase of the Product(s)

Products within a period of two (2) months from the date on which you detect a defect in material. orkmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, and must immediately submit the Product for service to Motorola's Authorised Repair or Service Centre. Motorola shall not be bound by Product related statements not directly made by Motorola nor any warranty obligations applicable to the seller.

During the Warranty term, Motorola will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty This is the complete and exclusive warranty for a Motorola Personal Communicator and

Where you purchase the product other than as a consumer. Motorola disclaims all other varranties, terms and conditions express or implied, such as fitness for purpose and satisfactory In no event shall Motorola be liable for damages nor loss of data in excess of the purchase price nor for any incidental special or consequential damages arising out of the use or inability to use

ne Product to the full extent such may be disclaimed by law. This Warranty does not affect any statutory rights that you may have if you are a consumer, such as a warranty of satisfactory quality and fit for the purpose for which products of the same type are normally used under normal use and service, nor any rights against the seller of the Products

HOW TO GET WARRANTY SERVICE?

arising from your purchase and sales contract

In most cases the authorised Motorola dealer which sold and/or installed your Motorola Personal Communicator and original accessories will honour a warranty claim and/or provide warranty service. Alternatively, for further information on how to get warranty service, please contact either the customer service department of your service provider or go to http://www.motorola.com/

Where, in the Country of purchase, there is a statutory requirement to provide extended repair

will be provided by Motorola Authorised Service Centres or Motorola directly appointed dealers in the country of purchase according to the terms of this warranty information document. However, please note that you will be referred back to the place of purchase, if the Motorola Dealer has nurchased the product directly from Motorola, in the country of nurchase or in a country where Motorola is not required to support supplementary repair service during the second year of purchase because of the statutory obligations that may apply to the seller or importer of the product, but not to the manufacturer, to provide an extended warranty to consumers beyond the

In order to claim the warranty service, you must return the Personal Communicator and/or network configurations. As a consumable product, the specifications indicate that accessories in question to Motorola's Authorised Repair or Service Centre in the original you should be able to obtain optimum performance for your Motorola Personal configuration and packaging as supplied by Motorola. Please avoid leaving any supplementary items like SIM cards. The Product should also be accompanied by a label with your name, address charges (Optimum Performance Time). and telephone number; name of operator and a description of the problem. In the case of vehicular The warranty for Motorola rechargeable batteries becomes void if (i) the batteries installation, the vehicle in which the Personal Communicator is installed should be driven to the are charged other than by Motorola approved battery chargers specified for the thorised Repair or Service Centre, as analysis of any problem may require inspection of the charging of the battery, (ii) any of the seals on the battery are broken or show entire vehicular installation evidence of tampering. (iii) the battery is used in equipment or service other than the

In order to be eligible to receive warranty service, you must present your receipt of purchase or a omparable substitute proof of purchase bearing the date of purchase. The phone should also ly display the original compatible electronic serial number (IMEI) and mechanic serial number [MSN]. Such information is contained with the Product.

You must ensure that any and all repairs or servicing is handled at all times by a Motorola Authorised Service Centre in accordance with the Motorola Service requirements In some cases, you may be requested to provide additional information concerning the maintenance of the Products by Motorola Authorised Service Centres only, therefore it is important to keep a record of any previous repairs, and make them available if questions arise oncerning maintenance.

CONDITIONS

This warranty will not apply if the type or serial numbers on the Product have been altered, deleted, duplicated, removed, or made illegible. Motorola reserves the right to refuse free-ofcharge warranty service if the requested documentation can not be presented or if the information is incomplete, illegible or incompatible with the factory records. Renair at Motorola's ontion, may include reflashing of software, the replacement of parts of

boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts. accessories hatteries or hoards are warranted for the halance of the original warranty time neriod. The Warranty Term will not be extended. All original accessories, hatteries, parts, and Personal Communicator equipment that have been replaced shall become the property of Motorola, Motorola does not warrant the installation, maintenance or service of the products. accessories hatteries or parts Motorola will not be responsible in any way for problems or damage caused by any ancillary

equipment not furnished by Motorola which is attached to or used in connection with the Products, or for operation of Motorola equipment with any ancillary equipment and all such equipment is expressly excluded from this warranty. When the Product is used in conjunction with ancillary or peripheral equipment not supplied by Motorola, Motorola does not warrant the operation of the Product/peripheral combination and

Motorola will not honour any warranty claim where the Product is used in such a combination and it is determined by Motorola that there is no fault with the Product. Motorola specifically disclaims any responsibility for any damage, whether or not to Motorola equipment, caused in any time of printing. Motorola reserves the right to change or modify any information or way by the use of the Personal Communicator, accessories, software applications and peripherals (specific examples include but are not limited to hatteries chargers adapters and nower supplies) when such accessories, software applications and peripherals are not manufactured and

WHAT IS NOT COVERED BY THE WARRANTY

This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons. he following are examples of defects or damage not covered by this product warranty:

- 1 Defects or damage resulting from use of the Product in other than its normal and Defects or damage from misuse, access to incompatible sources, accident or
- Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification Breakage or damage to antennas unless caused directly by defects in material or
- Products disassembled or repaired other than by Motorola in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify
- Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator. Defects or damage due to moisture, liquid or spills of food.

any warranty claim

- Control unit coil cords in the Product that are stretched or have the modular tab 9 All plastic surfaces and all other externally exposed parts that are scratched or
- damaged due to customer normal use. 10 Leather cases (which are covered under senarate manufacturer's warranties Products rented on a temporary basis.
- Periodic maintenance and repair or replacement of parts due to normal wear and

Note: The talk-time, stand-by time and total life cycle of a Motorola rechargeable

mmunicator within the first six months from date of purchase and up to (200)

Depending on operating conditions and your usage habits, wear and tear might take

place of components including mechanical problems related to Product housing,

generated through wear and tear and the use of consumable items like batteries

considered to be your responsibility and therefore Motorola will not provide the free

beyond their Ontimum Performance Time as indicated in the product manual is

Please make and retain a note of all data you have inserted into your Product for example

names, addresses, phone numbers, user and access codes, notes, etc. before submitting your

Product for a Warranty service as such data may be deleted or erased as part of the repair of

Please note if you have downloaded material onto your Product for example ring tones ring

tunes, screensavers, wallnaner, games, etc. these may be deleted or erased as part of the repair

process or testing process. Motorola shall not be responsible for such matters. The repair or

testing process should not affect any such material that was installed by Motorola on your

If you request Motorola to repair your Product any time after the Warranty term or where this

discretion carry out such repairs subject to you paying Motorola its fees for such a repair or it

Certain features, services and applications are network dependent and may not be available in

all areas; additional terms, conditions and/or charges may apply. Contact your service provider

All features, functionality and other product specifications, as well as the information contained

in this guide, are based upon the latest available information and believed to be accurate at the

warranty does not apply due to the nature of the defect or fault, then Motorola may at its

are not part of the Product's in-box configuration. The rectification of faults

paint, assembly, sub-assemblies, displays and keyboards and any accessories which

battery for your Personal Communicator will depend on usage conditions and

cellular telephone equipment for which it is specified

Warranty repair service for these items.

INSTALLED DATA

Product as a standard feature.

specifications without notice or obligation.

OUT OF WARRANTY REPAIRS

may refer you to an authorised third party to carry out such repairs.

MOTOROLA and the stylised M Logo are registered in the US Patent & Trademark Office. MOTOBLUR and the MOTOBLUR logo are trademarks of Motorola, Inc. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. WiFi is Certification Mark of the Wireless Fidelity Alliance, Inc. Java and all other Java-based mark are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Google, YouTube, Picasa, Gmail and the Google logo are trademarks of Google, In Facebook is a trademark of Facebook Inc. Microsoft, Windows, Windows Me and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries, Apple, Macintosh, Quicktime and Quicktime logo are registered trademarks of Apple Computer, Inc. iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. All rights reserved. America Online, AOL, the America Online & Design logo the AOL & Design logo and the Triangle Logo are registered trademarks of America Online, Inc. in the United States and/or other countries. Instant Messenger and Buddy List are trademarks of America Online, Inc. UIQ Technology and all UIQ Technology-based marks and logos are trademarks of UIQ Technology AB. All other product or service names are the

Motorola, will void the user's authority to operate the equipment. Product ID: Motorola EX300

property of their respective owners. © 2010 Motorola, Inc. All rights reserved

Caution: Changes or modifications made in the radio phone, not expressly approved by

Manual Number: 31010CVC

















including without limitation loss of use, loss of time, loss of data, inconvenience commercial loss, lost profits or savings