

P200 User Manual

Contents

g to know your phone	1
ur Phone.....	1
rtus icons.....	1
talling SIM card and battery.....	1
talling Storage card.....	2
ttery charging.....	2
wer on/ off.....	3
l Power on.....	3
? Power off.....	3
ing shortcut keys.....	3
Call Function	4
king a call.....	4
l Directly call on Home Screen.....	4
? Make an international call.....	4
} Dial an extension number.....	4
swering or rejecting a call.....	4
l Answer a call.....	4
? Reject a call.....	4
justing call volume.....	4
ding a call.....	4
gs	5
led calls.....	5
ceived calls.....	5
ssed calls.....	5
jected calls.....	5
lete all.....	5
ll timers.....	5
ll cost.....	5
3.8 GPRS volume.....
4.User profiles
4.1 Standard.....
4.2 Silent.....
4.3 Vibrate.....
4.4 Low ring.....
4.5 High ring and vibrate.....
5.Contacts
5.1 View a contact.....
5.2 Adding a new contact.....
6.Message
6.1 Write message.....
6.1.1 New SMS.....
6.1.2 New MMS.....
6.2 Inbox.....
6.3 Outbox.....
6.4 Drafts.....
6.5 Sentbox.....
6.6 Message setting.....
6.6.1 Templates.....
6.6.2 Voice mail server.....
6.6.3 Broadcast message.....
6.6.4 SMS settings.....
6.6.5 MMS settings.....
6.6.6 Message capacity.....
7.Internet
7.1 Input URL.....
7.2 Homepage.....

mark	11	11.1.3 Call divert	
ry	11	11.1.4 Call barring	
le	11	11.1.5 Call waiting	
settings	11	11.1.6 Hide ID	
rowser settings	11	11.1.7 Select line	
referred storage	12	11.1.8 Flight mode	
PRS setting	12	11.1.9 Others	
Restore default	12	11.2 Phone settings	
dia	13	11.2.1 Time and date	
era	13	11.2.2 Select language	
o recorder	13	11.2.3 Auto power on/off	
o player	13	11.2.4 Motion detection	
ackground audio player	13	11.2.5 Power management	
o player	13	11.3 Display settings	
ie browser	14	11.3.1 Wallpaper settings	
order	14	11.3.2 Power on display	
adio	14	11.3.3 Power off display	
anager	14	11.3.4 Contrast	
.....	16	11.3.5 Backlight	
n	16	11.3.6 Keypad light	
ndar	16	11.4 Security settings	
ulator	16	11.4.1 PIN	
tooth	16	11.4.2 PIN2	
ok reader	16	11.4.3 Privacy	
itions	17	11.4.4 Auto keypad lock	
oban	17	11.4.5 Lock screen by end-key	
s	18	11.4.6 Power-on password	
l settings	18	11.4.7 Guardlock	
Multi-SIM	18	11.5 Restore settings	
Network selection	18	12.Safety Precaution	

safe environment.....	26
Medical devices	26
.1 Pacemaker	26
.2 Hearing aids	27
.3 Emergency calls.....	27
Password access.....	27
.1 Phone password	27
.2 PIN code	28
.3 PIN2 code	28
.4 PUK code	28
.5 PUK2 code	28
Precautions for battery charging.....	28
Precautions for battery usage.....	29
Precautions for spare parts usage.....	30
Other safety information	31

ord

omer, thank you for choosing **P200** phone.

will give you unprecedented and pleasantly surprised experience: The phone supports th
ree -SIM standby functions.

ra of high-definition digital will keep the colorful memories for you. The built-in MP3 :
i player will bring comprehensive enjoyment to you as well.

aration

ent of this guide is protected by Copyright forbidden to copy, distribute, publish or ontent of this user guide, in whatever form empowerment of our company.

pany has carefully and closely reviewed ent of this user guide. Nevertheless, it is that there are mistakes and omissions.

ures in this manual only works as the e, please base on the actual picture while phone.

pany reserves the right to update and any products described in this guide, as ne content of this guide. Amendments will without prior notification.

e user guide for the mobile phone only and : include an introduction to this product's and hardware configuration.

ctions mentioned in this guide also need ort of a network operator or service If you are unable to confirm whether you ble to use certain functions or services with ie, please consult your network operator or rovider.

re may include some commodities, gy or software, which is under the control law, and regulations of China or other

countries and areas; therefore, any illega action is forbidden.

In the fullest extent permitted by applica any case, the company or the party with should take no responsibility for any lo: income and any special, occasional or in no matter what reason it caused by.

In order to ensure your safety, please “Safety Notice” and “Safety Precaution”.

Typographic conventions used in this i include:

<>: Shows function key;

“ ”: Shows prompts on the phone interfa

【 】:Shows the keys;

[]: Shows the phone menus.

notice

Using the phone, please read and follow below rules carefully.

You do not dial or answer a call while driving, please use the hands-free device or use your phone after parking the vehicle.



Please make sure your phone is switched off in flight mode during the whole flight, for your phone will interfere with the communication network for the airplane.

Mobile phones may be susceptible to electromagnetic interference, which could affect their performance.



Please switch off your phone near medical devices or places where phone use is forbidden.

In order to ensure high performance and to avoid damage to the phone, please use the original accessories and battery. Please do not use products which are not compatible.



To avoid the risk of any explosion, please switch off the phone at gas stations and places where fuel, chemicals or other dangerous substances are used.

To avoid interfering with blasting operations, please switch off your phone in blasting areas or areas with signs "Turn off mobile phones". Pay attention to and follow any relevant rules and regulations.



Please do not burn the phone battery or treat it as ordinary rubbish as this could endanger the environment. Please obey local environmental policy, and dispose of them timely.

If you need to connect your phone to other devices, please read the user guide of that device carefully for safety.



Keep small parts (e.g. Storage card) out of reach of children, to prevent them from swallowing or causing other dangers.

Please back up the important phone information or to have a handwritten record to avoid important data lost.


















Make sure the phone is switched on and has service coverage before dialling the emergency number. Press the call key to inform your position. Don't end the call unless told to.

Getting to know your phone

Your Phone

Status icons

	Function description
	Represent current SIM1, SIM2 and SIM3 network signal. The more bars, the stronger the signal
	Flight mode
	Battery status, more bars indicate more battery capacity left
	Unread MMS
	MMS memory full
	MMS downloading
	Headset mode

	Unread SMS
	SMS memory full
	Clock has set
	Bluetooth function is activated
	Profile has set as Silent Mode
	Profile has set as Low ring volume
	Profile has set as High ring volume vibrate Mode
	Profile has set as Vibrate Mode

1.3 Installing SIM card and

- (1) Hold on **【End Key】** for about three seconds.
- (2) Slide the battery cover in the direction of the arrow at the bottom of the phone and then remove it.
- (3) Remove the battery.

to know your phone

the sign for SIM1, SIM2 and SIM3 on the phone to install SIM1, SIM2 and SIM3.

make sure that the golden contacts of the card face downwards, then push the card until it fixes itself in the card slot.

Place the battery with its golden contact part on the set phone battery contact piece, and then replace the battery cover.

Installing Storage card

Press the **【End Key】** for about three seconds to turn off the phone.

Remove the battery cover.

Follow the arrow direction of "OPEN" on the card slot cover, open card slot cover, put the card into the slot vertically, make sure that the golden contacts of the card face upwards, until the card fixes itself in the card slot.

Follow the arrow direction of "LOCK" on the card slot cover, pull card slot cover to lock the card slot.

Battery charging

Charge the phone by the travel charger

- (1) Install the battery correctly into the phone.
- (2) Insert the lead of the travel charger into the connecting slot of the phone, and then connect the charger to a standard power socket.

When charging is complete, unplug the charger from the standard power socket first, and then disconnect the phone and charger.



Caution

1. Please use the approved battery charger designated for this product, otherwise it may cause an explosion.
2. If the battery is completely empty, the battery icon will appear after charging for two to three minutes. Generally, the charging time is 2 to 3 hours, depending on the current status of the phone (whether switched on, during a call etc).
3. Please use the charger to charge, try to avoid charging via USB cable.
4. For optimal battery performance, charge and discharge the new battery two or three times. The first several times you charge the battery, charge it for at least 10 hours.

Power on/ off

Power on

【End Key】 for three seconds to switch on the phone.

Power off

【End Key】 for three seconds to switch off the phone.

Warning:

Do not switch the phone on in areas where mobile phone usage is prohibited or where it may cause interference or danger, and also make sure that you haven't activated the phone's "Auto power on/off".

Using shortcut keys

Use some keys directly from the Home Screen to get direct access to common phone functions.

Operation	Function
press briefly	Enter Call History

1~3 Keys	hold on	Enter voicemail for SIM1, SIM2, SIM3
4~9 Key	hold on	Enter the corresponding dial

Using Call Function

Placing a call

Placing a call on Home Screen

On the Home Screen, input the area code and number.

<Options>→SIM1 call/ SIM2 call/ SIM3 to select SIM 1 , SIM 2 or SIM 3 to call.

Placing an international call

Enter the country code (To enter "+", just press **Y** twice).

Enter the area code (Usually exclude the first digit of the phone number).

<Options>→SIM1 call/ SIM2 call/ SIM3 to select SIM 1 , SIM 2 or SIM 3 to call.

Placing an extension number

Enter the switchboard number.

On the Dialling screen, select <Options> →<Pause P>, then enter the extension number.

<Options>→SIM1 call/ SIM2 call/ SIM3 to select SIM 1 , SIM 2 or SIM 3 to call.

The extension number will be transferred a few seconds after getting through the switchboard.

2.2 Answering or rejecting a call

2.2.1 Answer a call

When there is an incoming call, you can press **Y** or **X** (Left Soft Key) to answer.

2.2.2 Reject a call

When there is an incoming call, you can press **Y** or **X** (End Key) to reject it.

2.3 Adjusting call volume

During a call, you can press **Y** or **X** (Navigation Key) to adjust the earphone volume.

2.4 Ending a call

Press **Y** or **X** (End Key) to end the call.

Call logs

From the main menu, and then select **[Call]** to enter the call list.

From the Home Screen, press **[Call Key 1/3]** to enter the call list.

Recent calls

View recent call records.

Received calls

View recent calls received.

Missed calls

View recent calls unpicked up.

Rejected calls

View the phone numbers set as rejected calls.

Delete all

Delete all the call entries.

Call timers

Select the desired SIM Card, and then you can view

all relevant information about the SIM Card.

3.7 Call cost (need the network support)

- ❖ **Total cost:** Record total call charges for SIM2 and SIM3.
- ❖ **Max cost:** You can set the desired maximum for call costs.
- ❖ **Price per unit:** Record the cost rate for SIM2 and SIM3.
- ❖ **Reset cost:** Reset the total call cost to zero.

3.8 GPRS volume

You can view the detail about GPRS flow

Profiles

Standard

Use: Activate the chosen profile.

Options: Set the options as required.

Profile name: Modify the name of the selected profile.

Ring

Options: In all settings, please refer to "Standard".

Rate

Options: In all settings, please refer to "Standard".

Ring / ring

Options: In all settings, please refer to "Standard".

Ring and vibrate

Options: In all settings, please refer to "Standard".

Contacts

How a contact

In contacts, the phone is defaulted to show list with all entries. Press **Left Key/Right** switch between different groups.

Adding a new contact

In Contacts list, select **<Options → New>** to add new contact.

Note: You can input the contact name, mobile number, home number, etc. You can also set profile image and ring for the contact entry.

Tip: The input record will be saved to SIM1, each name one phone number.

Tip: The input record will be saved to SIM2, each name one phone number.

Tip: The input record will be saved to SIM3, each name one phone number.

Message

Write message

SMS

On the Home Screen, press **【Left Soft Key】** and **Message**→**Write message**→**New SMS**] to send an SMS directly.

When sending an SMS, click < **Send** > to send the message.

MMS

MMS is a multimedia message, supporting pictures in JPEG, WBMP, and BMP format.

Restriction

MMS can only be used when it is supported by the network operator; and only when the phone with multimedia function can receive and normally display it.

On the Home Screen, press **【Left Soft Key】** and **Message**→**Write message**→**New MMS**] to send an MMS.

6.2 Inbox

Store all received SMS and MMS.

6.3 Outbox

Store all SMS and MMS failed to be sent.

6.4 Drafts

Save edited SMS and MMS haven't sent.

6.5 Sentbox

Store all the SMS and MMS successfully sent. If you want the sent messages to be deleted automatically, please select

【Message→**Options】**, then select **【SMS settings**→**Save sent messages**→**Save】**.

6.6 Message setting

On the Home Screen, press **【Left Soft Key】** to enter the main menu, then select **【Message**→**Message settings** to enter the message setting menu.

updates

When editing messages, you can directly cite the common phrases. Select <Edit> to set the phrases by yourselves.

Voice mail server

Voice Mail works like an answering machine, and you can transfer a missed call to your personal mailbox, allowing the caller to leave a voice message and notify you by an SMS. Voice Mail is a feature bundled software provided by network operator. Therefore, you need to register to activate the feature, and manually set the phone. Please consult with your network operator for more details.

Caution:

It is possible to transfer the voice call into the mailbox (The number the call will leave a message) by setting "Divert calls".

Broadcast message

You can receive broadcast text messages with various contents via network service, such as news, weather, or traffic information. For more details, please consult your network operator.

6.6.4 SMS settings

- ❖ **SIM1 msg center:** While sending an SMS, you must set the service center number provided by network operator. Most of the numbers defaulted contain the service center number. You can also gain this number directly from the network operator.



Caution:

If you modify or delete the service center number, an SMS might not be sent successfully.

- ❖ **SIM2 msg center:** Please refer to [SIM2 msg center].
- ❖ **SIM3 msg center:** Please refer to [SIM3 msg center].
- ❖ **Message validity period:** Allows you to set the length of time during which your SMS is stored in the message center. The validity period depends on the network operator.
- ❖ **Status report:** Select [On], then the message center will inform you when an SMS is successfully sent a message.

sent messages: You can select whether the sent message or not.

ed storage: You can select to save the the SIM card or the phone first.

settings

IMS account/SIM2 MMS account/ SIM3 account: You can select IM2/SIM3 MMS account.

y report: Select [**Activate**], then the center will inform you that the recipient received and downloaded the MMS.

read report: Click [**Activate**], then you receive a report message when the sent as been read by the recipients.

mous send: Select [**Activate**], the MMS sent to the desired recipient without ing the sender's phone number.

r: Set the priority level for MMS.

e MMS: You can select [**Manual**] between [**Auto receive**]. If manual function is activated, then you have to ly download the received MMS from the f auto function is chosen, then the phone omatically download the received MMS e phone is back to the Home Screen.

❖ **Play audio:** After activated, the phone sound while reading a MMS.

❖ **Allow adversting:** After activated, th will receive advertisement while rec MMS.

❖ **Validity period:** You can set the validi MMS. The period depends on the provided by network operator.

❖ **Storage:** You can select the desired location for pictures, music or videoc MMS.

❖ **Restore default:** Reset to the default s

6.6.6 Message capacity

You can view memory capacity status for : MMS via this function.

Internet

Home screen, press **【Left Soft Key】** and **Internet**].

Caution

Your network service provider may not support some functions. In order to ensure the browser works normally, please confirm first that your SIM card supports and have the Internet function activated. When you browse the web page, flowrate fee will be charged.

Input URL

Enter the wanted website, and click **<OK>** to confirm.

Homepage

When selecting this option, your mobile phone will display the preset or defaulted homepage.

When browsing the website, press **【Left Soft Key】** to toggle between address bar, websites and tool

7.3 Bookmark

Bookmarks are defaulted as blank, and are able to edit it as you want. Save the current website into the Favorites, and marked with names. Select one saved name, and the corresponding web will be connected. Proceed to below setting:

❖ **Add bookmark:** Enter the new website address and name, then select **<OK>**.

7.4 History

Record the websites you visited before.

7.5 Offline

After saving a website as snapshot, you can browse the website while offline.

7.6 WAP settings

7.6.1 Browser settings

❖ **Clear cache:** In order to avoid congestion and improve the web browsing speed, please clear the cache regularly.

network account: Set the SIM1 network

network account: Set the SIM2 network

network account: Set the SIM3 network

ad image: After enabling this function, image will only be displayed after being loaded.

background sound: After enabling this function, you can play background music.

push: If enabling this function, you can receive Push messages.

Caution: Do not arbitrarily change the settings, or you may not be able to normally visit the website.

Preferred storage

Choose the place where to save the picture, video files from the Internet.

S setting

Select to always open GPRS or open it when needed.

7.6.4 Restore default

Reset the WAP settings back to the factory

Multimedia

Camera

From the main menu, and select **[Camera]** to enter the camera preview screen, press **【OK Key】** to start recording the video.



Video recorder



From the main menu, and select **[Video recorder]** on the video preview screen, and press **【OK Key】** to start recording the video.

Audio player

From the Main menu, press **【Left Soft Key】** to enter the Main menu, and select **[Audio player]** to enter the Audio Player screen:

The following table shows the icons on the Audio Player

	Description
	Press 【OK Key】 to display or pause
	Press 【Left/Right Key】 to skip to

	last /next one
	Show the playing volume, 【Up/Down Key】 to turn the volume



8.4.1 Background audio player

While playing a song, press **【End Key】** to enter the background audio playing screen to enter the background audio mode.

8.5 Video player

Enter the Main menu, and click **[Multimedia Video player]**.

Icon description:


Icon	Description
	Press 【OK Key】 to display
	Press 【Left/Right Key】 to skip to last /next one

Show the playing volume, press **【Up/Down Key】** to turn up/down the volume

ge browser

on provides a prompt access to view the pictures.

order





Screen, press **【Left Soft Key】** to enter menu, select **[Multimedia→Recorder]**, e **<Options→Start recording>** to start Select **<Pause>** to have the recording while, select **<Stop>** to cease recording. ng the recording, the recorded file will be illy save in the folder **[Audio]**, press **7 Key】** to select  or select **<Options file list>** to check.

radio

y mode, plug the earphone, press **【Left to enter the Main menu, then select [FM**

FM radio has a telescopic antenna. You c to the radio without headset.

Icon description:

Icon	Description
	Press 【Down Key】 to or deactivate the radio
	Frequency scrolling be press 【Left/Right Key】 adjust the frequency
	Press 【Left /Right Key】 adjust the radio freque
	Display the player vol. Press ™* /# to adjust it

8.9 File manager

This menu allows you to manage files stor USB disk or storage card.

ols

rm

ome Screen, press **【Left Soft Key】** to main menu, and select **[Alarm]**, then you : alarm name, time, ring and mode.

endar

ome Screen, press **【Left Soft Key】** to main menu, and select **[Calendar]** to :alendar screen.

culator

ut numbers, press **【Navigation Key】** to : desired operation symbols (+, -, /, X). **【K Key】** to get the answer.

etooth

Close bluetooth: This function allows switch the Bluetooth on or off.

ooth visibility: Set to show or hide the ith of your phone. If you select to hide the other devices cannot detect the

Bluetooth device of your phone, e activated your Bluetooth function.

- ❖ **Paired device:** You can search for th Bluetooth-enabled devices
- ❖ **My Bluetooth name:** If Bluetooth activated, while other devices se: Bluetooth signal, the correspondin: represents your phone.
- ❖ **Storage:** Able to set the storage loc files received via Bluetooth.
- ❖ **Help:** Provide relevant Bluetooth information.



9.5 E-Book reader

You can view file in TXT format by Ebook : the TXT file to the **[Ebook]** folder in the card from your PC.

On the Home Screen, press **【Left Soft Key】** the main menu and select **[Tools→E-Boo]** to enter the Ebook screen you read last tim **<Back>** to enter the Ebook list and res desired file to read.

Applications

okoban

the boxes  to the destination , then
go to the next game level, press
Action Key **1** to move the snail.

Settings

All settings

Multi-SIM

Standby mode: You can select the standby mode for SIM card.

Multi-SIM settings: There are several types as follows:

You may choose SIM card type to be used according to your need, and you may choose to have prompt choice while using call functions.

Speed dial: If enabling this function, you can speed dial the phone number via the preset card.

Card name: You can name the Card as you

Network selection

Auto select: The phone can automatically search and register available networks.

Manual select: Enable this function, the phone will search for the network, and list all searched

networks, then you need to choose the network needed to register.

11.1.3 Call divert

Based on the set diverting conditions, incoming calls will be forwarded into voice mail or other number.

- ❖ **Unconditional transfer:** All incoming calls will be transferred to the preset number for voice mail. Select [**Query status**] to check the current unconditional call divert status.
- ❖ **Divert if busy:** Calls will be transferred to voice mail or the preset phone number when you are on the phone.
- ❖ **Divert if no answer options:** Calls will be transferred to the voice mail or the preset phone number, if the set time is over and the phone won't be answered.
- ❖ **Divert if unreachable:** Calls will be transferred to the appointed number or your voice mail when your phone is out of the service area or is switched off.
- ❖ **Cancel all diverts:** All Call Divert functions will be cancelled.

all barring

tion helps you to restrict the incoming and calls.

e desired call and press <OK>, then you ct **[Activated]**, **[Off]** or **[Query status]**. **[Activated]**, the phone will need network current setting. Below are the available l call selections.

tion	Description
oing	Restrict all outgoing calls
ming	Restrict all incoming calls
g calls aming	No incoming calls while roaming
tional	Outgoing international calls forbidden
en INTL g	Incoming international roaming forbidden
all	Cancel all call restrictions

Change
password

Change the passw
Call Restrict functio



Caution

- 1 Some network operators forbid the. For more details, please contact your service provider.
2. The network operator will provide initial network password while you appl service.

11.1.5 Call waiting (Need network support)

- ❖ **Activate:** If you set the function on, tl will alert you that there is an incomin can keep current call and answer and
- ❖ **Off:** Cancel call waiting function, the incoming calls won't be answered w on the phone already.
- ❖ **Query status:** Select it to view currel this function.

11.1.6 Hide ID (Need network support)

- ❖ **Hide ID:** While calling, the recipient your phone number.

My own ID: While calling, your phone number will be visible for the recipient.

My ID by network: While calling, whether your phone number will be visible or not for the recipient depends on the network presetting.

My active line

Choose line 1 or line 2 as you need.

My flight mode

My flight mode: Activate flight mode, then all network services won't be available.

My flight mode when power on: You can select whether to activate flight mode when power on.

My callers

My call cut key

When using this function, selecting <Option>→IP number preset IP number will be automatically dial the number you want to dial and call.

My voice call alert

When activate the function, an elapsed time will be heard at the 50th second of every ringing your call, so that you may end the call to save the phone fare.

❖ Alter for voice call connected

The phone will vibrate to prompt you when recipient answers your phone.

❖ Answer /Reject mode

- **Reply SMS after reject:** You can select whether to reply an SMS after reject.

❖ Auto redial

If you set this function on, the phone will redial the number after an unsuccessful call.

11.2 Phone settings

11.2.1 Time and date

- ❖ **Set time:** Directly input the time or press [Time /Down Key] to set it.
- ❖ **Set date:** Directly input the date or press [Date /Down Key] to set it.

11.2.2 Select language

You can select the language you want.

11.2.3 Auto power on/off

You can set the phone to switch on/off at scheduled time. For the setting method refer to "Alarm".

otion detection

ction allows you to activate the scen
ting function for idle wallpaper and audio

notice

sensor only works when screen
ht functions. If the backlight is off, then
tion sensor will be deactivated and there
be any responses.

wallpaper: Click [**Idle wallpaper**], then
ss “**Accelerating shaking from right to**
therefore the wallpaper will be switched as
defaulted one on the list; process
“**Accelerating shaking from left to right**”, then
wallpaper will be switched as the next
ltd one on the list.

notice:

it wallpaper switching function only
ts the defaulted wallpaper. For
ized paper, it won't work.

❖ **MP3 player:** Click [**MP3 player**]
“**Accelerating shaking from right**”
therefore the song will be skippe
defaulted one on the playlist;
“**Accelerating shaking from left to r**
the song will be switched as the nex
one on the playlist.

11.2.5 Power management

Display the battery capacity.

11.3 Display settings

11.3.1 Wallpaper settings

Select the default or other pictures as the
of the phone.

11.3.2 Power on display

You can select the preset animation or
the Power on animation for your phone.

11.3.3 Power off display

You can select the preset animation or
the Power off animation for your phone.

11.3.4 Contrast

Press **【Left /Right Key】** to adjust the c

Backlight

desired backlight time.

Keypad light

desired keypad light time.

Security settings

To secure the information, you can set PIN code, power-on password and function.

The PIN is the personal identification number for the SIM card. If never be modified, the initial password provided by the network operator should be 1234 or 0000. If you forget the power-on PIN code, then you have to input the power-on PIN password each time you switch the phone on. You can modify the PIN code to prevent the SIM card from being used by others.

Warning

If you input your PIN code incorrectly three times in succession, the SIM card will be locked automatically, and prompting to enter the PUK code to unlock it. Therefore, please do not forget the PIN code, if you modify it.

The PUK code (PUK1) is made up by four digits and is unmodifiable. When the phone is locked by the PIN code, please enter correct PUK code to unlock the phone. If you incorrectly input the PUK code ten times in succession, then the SIM card cannot be used any more. Some PUK codes are provided together with the SIM card, some should be obtained from the network service provider. If you do not know the PUK code while your PIN code is locked, please never input the code casually. In this case, you should call the hotline of the service provider for assistance. If you have the SIM card, after simply checking about the user manual, you can gain the PUK code for free to unlock the phone.



Caution

Please be careful when use this function. Do not forget PUK code, please consult your network operator. If you incorrectly input the PUK code ten times in succession, the SIM card will be scrapped.

Select the desired SIM type and have the following options:

- ❖ **Activated:** You should input PIN code each time switching the phone on.

fy: You should activate PIN code before using it.

You should input the correct PIN code to deactivate it.

N2

Code is the personal identification code for some certain functions (such as set number, set phone fare, etc).

Code is another password provided together with SIM card by service provider. If wrongly input it several times in succession, the phone will be locked. Until correct PUK2 code entered, for detailed information, please refer to PIN code and PUK code.

Caution

If you incorrectly input the PUK2 code ten times in succession, you will not be able to use the SIM card. Please be careful when use this function.

Privacy

When you use phone password, the phone will be locked from other unauthorized users. When the lock function has been activated for call logs and messages, you have to enter correct password

on corresponding main menu or sub-menu. The default password is "1234".

11.4.4 Auto keypad lock

After activating this function, the phone keypad will be locked automatically if the time you set expires so as to avoid error operations.

❖ **Manual lock keypad:** On the Home screen, press **【* Key】** and select **<Lock>** to lock the keypad manually.

❖ **Manual unlock keypad:** On the Home screen, select **<Unlock>** and press **【SPAC Key】** to unlock the keypad manually.

11.4.5 Lock screen by end-key

Once activated this function, when the phone is on, press **【End Key】** to turn off the bar and auto lock the keypad.

11.4.6 Power-on password

You should set the power on password when you use this function for the first time. After activating this function, you should input password when you switch the phone on.

ution:
n PWD doesn't have the limitation of
inputting. Please remember carefully
the Power on PWD, otherwise, the
won't be switched on normally once
d forgotten.

ardlock

(MSD) is nicknamed as Mobile Phone
an others illegally use your phone,
like CELLID of the phone will be
and sent to preset mobile phone;
the function will prevent others to use the
r certain times or certain power-on times.

on is defaulted to be off. To activate it,
modify the password. Then you need to
password if you want to activate,
or modify the password to process
and the password has 6 digits. To
you have to enter a preset mobile phone
he mobile phone number set to receive
ge if the phone is stolen) apart from the

ated, the phone stores the IMSI number
SIM card, which is sole and unique, if

you insert another SIM card, there will be
asking you to input the guardlock passwo
wrongly enter the password for three
succession, the phone will default it as ill
display a relevant prompt, then collect a
information like CELLID, LAC, MCC, MNC
preset mobile phone number. While rece
message, legal user can report it to the po
can inquire the illegal usage situation (Incl
used location, call history, etc) from
operator via the piece of information.

The message will be kept sending to th
mobile phone till it is successfully receive
stolen phone is on over 24 hours or re-s'
the phone will resend a message to you
phone number. When the message h
successfully sent up to 15 times, any illeg
SIM card won't work in the stolen phone, v
automatically switched off.



Caution:

Please report to the police timely if the ph
stolen, but this doesn't mean that th
phone will be definitely traced back. The
please take care of your personal proper

ne defaults the SIM card inserted is illegal, rdlock function can not be activated, and setting can not work. If another SIM card is enter correct password, message count ent from zero, meanwhile, there will be a asking you whether to bind this SIM card. nding, then the phone will renew the IMSI and default the SIM card as the designated

ated: Before activating this function, e set the password first, if password hasn't set, the phone will hint "Change password then please enter [**Change password**] to the password setting and back to activate function. While activating it, guardlock word and notified mobile phone number number to receive the information of the :ard illegally used in the stolen phone) are ed. After these, guardlock function will

To deactivate guardlock function, you d input correct Guardlock password.

ge password: Modify guardlock word.



Warning:

Please use this function carefully. Th won't be used if password forgotten.

11.5 Restore settings

Reset all parameter values into defa Please enter the privacy preserving (Initial password is 1234) to resume factc

Safety Precaution

Usage environment

Member to obey relevant rules and regulations whenever use your phone. This will have a good effect from you and the environment.

Do not use your phone near explosive places, such as gas station, bunkers, chemical factories, and fire scene, and adhere to any safety regulations and instructions there. Breaking any rules may cause explosion or injury.

Using a mobile phone in plane will interfere with the flight and bring dangers. Therefore, please do not use mobile phone before boarding, and make sure it is power off during the flight.

Keep the phone in its special bracket while driving. Please don't put it on a seat surface where it could fall off when the car suffers collision or break. In order to ensure safety while driving and avoid road accidents, please do not use the phone when driving. If you must use the phone, please use the phone's hands-free asset

or park at roadside before making or answering a call.

- ❖ Please put the phone away from high temperature environment, for explosion may be caused when the battery is of excessive temperature.

12.2 Medical devices

Please switch off your phone in areas with electronic medical equipments that require switching the phone off (Such as pacemakers, hearing aids, etc). Most devices can shield the phone's RF signal, but we can't. If you have any doubts or need to know more, please consult your doctor or medical equipment manufacturer.

12.2.1 Pacemaker

Pacemaker manufacturers advise the distance between your phone and heart pacemaker should be 6 inches (15.3 cm) at least, otherwise they could interfere with the pacemaker.

The personnel who wears pacemaker should follow the followings:

ld always keep a distance (at least 6 s) between the phone and pacemaker, the phone is switched on.

ld not have the phone in a breast pocket

ld listen to the phone closer to the ear is farther from the pacemaker.

Caution:

switch off your phone while you feel s interference, and consult the doctor

earing aids

hone might bring some interference to aring aids. If so, please consult the hearing ufacturer.

emergency calls

hone uses a radio signal, wireless and communication network and personal unctions like other phones, it is impossible re your phone can be connected ully in any situation, so please don't rely n your phone as the only means of n in cases of emergency (such as medical

Make an emergency call

If your phone is switched off, please tu phone and check whether the network strong enough.

- (1) Input the local first aid number corn as 120), different areas have differe numbers.
- (2) Please press **the call key** to call.



Caution:

While making an emergency call, you try best to provide all important info precisely. At this time, the phone ma only communication tool, so don't end without permission.

12.3 Password access

Your phone and SIM card can be prote password to prevent others using them ill

12.3.1 Phone password

This protects your phone from unauthori You can set the preset password when for the first time. After using it, please n

Precaution

password as soon as possible and keep it

code

Personal identification code, which is used to protect a SIM card from unauthorized users.

The PIN code and SIM card will be locked together. After activating the PIN code, you must input correct password each time you turn the phone on to ensure normal usage.

Precaution

If you input your PIN code incorrectly for three times in succession, the SIM card will be locked. You need to enter the PUK code to unlock it. (If you don't have a PUK code, please contact your network operator or SIM card retailer for this information. Please don't input the PUK code incorrectly).

2 code

Personal identification code for activating special functions on the SIM card. You need to input it while entering the PIN code (eg. Charge Unit, Fixed Dialling etc). The PIN2 code and the SIM card will be locked together. If you incorrectly input the PIN2 code three times in succession, it will be locked

and you will need to input PUK2 to unlock it.

12.3.4 PUK code

This is used to unlock the PIN code. The PUK code and SIM card are provided together. If you don't have it, please contact with your network operator or SIM card retailer. The SIM Card cannot be used any more, if you incorrectly input the PIN code ten times in succession. In that case, you need to apply a new SIM card from your network operator. The PUK code is unmodifiable.

12.3.5 PUK2 code

This is used to unlock the PIN2 code. The PUK2 code and the SIM card are provided together. If you don't have it, please contact with your network operator. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code for ten times in succession, you will not be able to access special functions. Please apply to your network operator for a new SIM card. The PUK2 code is unmodifiable. If you don't have it, please contact your service provider.

12.4 Cautions for battery charging

The phone provides power by using the battery. The standby time and call time will be influenced by the system's environment and user settings.

Use the approved battery and charger rated for this product. The company will not be responsible for damage caused by unauthorized battery or charger.

The battery icon will start scrolling when the battery is charged in power-on-state.

Caution:

If there is no battery left at all, then the battery icon will appear after 2-3 minutes of charging. The battery charging time depends on the status of the phone (whether switched on or making a call), usually, it will take about 10 hours.

To make the new battery achieve its best performance, please charge and discharge the battery for twice or three times. Please charge the new battery over 10 hours for the first time.

Do not use wet hands to touch the battery or charger while charging in order to avoid danger.

Do not use the phone while charging.

The battery icon stops scrolling while the battery is fully charged, and then you can disconnect the phone from the charger adapter.

12.5 Cautions for battery use

The battery usage depends on the network setting and usage situation. Take the battery of 1500 mill amperes capacity as an example, it allows calling time up to 100 minutes, three-SIM standby time as 350-500 hours, Dual-SIM standby time as 400-550 hours, and single-SIM standby time as 450-550 hours.

- ❖ Never use any damaged battery.
- ❖ The phone will consume a little power when in a network station. Therefore, the call duration time depends greatly on the signal strength of the honeycomb network and the parameter setting of the network operator.
- ❖ The battery charging time lies on the charging power, and the type of the battery and the operation time (talk time and standby time) is noticeably shorter than normal. Please replace with a new battery.
- ❖ Only use batteries and chargers authorized for this device, otherwise, explosion or fire may be caused. Please disconnect the charger when the phone is unused. Do not leave the battery charger connected over one week, for overcharging will shorten the life length.

'recaution

connect the anode and cathode of a battery inversely.

leave the battery in places with over-high or low temperature, otherwise, the battery performance will be reduced and battery life will be shortened. Always try to keep the battery in a normal temperature.

do not short-circuit the battery. This may damage the electronic core or internal protected circuit. If you keep the unused battery in the original packaging or bags, metal objects (eg. coin, clip or paperclip) inside might have the anode directly connected with the cathode of the battery and cause an accidental short circuit. Therefore, please handle the battery carefully and separately store the battery.

do not burn your phone battery or treat it as waste or rubbish. Please adhere to the local environmental protection policy in order to avoid shortening life and causing environmental pollution, and recycle your batteries in time.

do not immerse the phone, battery or other charging device in water. If it is accidentally penetrated by water, you must not use it immediately and disconnect any calefaction equipment (such as microwave oven etc.) to dry it. The phone and battery products may go wrong, and may even

cause the phone, battery or other device to burn, expand and explode.

- ❖ Please deal with the discarded battery according to the relative introduction.

The company will take no responsibility for direct or indirect damage caused by user.

12.6 Cautions for spare usage

- ❖ Please put all spare parts (such as SIM card, storage card, battery etc) out of reach of children in case danger occurs.
- ❖ Please do not switch off the phone and remove the battery from the phone before you remove the phone and charger.
- ❖ As the phone's spare parts are not waterproof, please keep all spare parts dry.
- ❖ You should pull out the plug of any spare part correctly when you switch off the power. Do not drag the power line forcibly.

If the phone, battery, and charger don't work normally, please contact the closest maintenance centres timely.

Other safety information

don't use your phone, it's better to switch and remove the battery so as to save y and avoid cellular radiation.

don't have the volume over loud while the phone, which might impair your ng.

nonprofessional shouldn't disassemble the al and battery of the phone.

recommended that you should try not to use olster with magnet button, for the magnet interfere with the phone signal, and hard utton may crush the LCD screen. Plastic e cover will lead to poor volatilization of and have the internal components oted, moreover, it can have the phone oxidized and faded.

or your family has a medical record of less or epilepsy, please consult with the r first, if you want to play phone games or e flashlight (the flash doesn't available in one models)

don't put the flashlight too close to the of human beings or animals, as this could rm to the eyes.

- ❖ Should avoid the phone falling off places.