



عربي
ENGLISH

دليل مستخدم BL20v

ENGLISH
عربي



CE 0168

P/N : MMBB0356180 (1.0) W

LG ELECTRONICS INC.

دليل مستخدم BL20v

Downloaded from <http://www.gsmarc.com>

BL20v User Guide



CE 0168

P/N : MMBB0356180 (1.0) W

Bluetooth QD ID B015620

Downloaded from <http://www.gsmarc.com>



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



BL20v User Guide

Downloaded from <http://www.gsmarc.com>

Congratulations on your purchase of the advanced and compact BL20v phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

| | | | |
|---|-----------|---|-----------|
| Getting to know your phone | 6 | Contacts | 15 |
| Open view | 7 | Searching for a contact..... | 15 |
| Installing the SIM and battery | 8 | Adding a new contact | 15 |
| Memory card | 9 | Contact options | 15 |
| Installing a memory card..... | 9 | Adding a contact to a group | 16 |
| Removing the memory card..... | 9 | Renaming a group | 16 |
| Formatting the memory card | 9 | Messaging | 17 |
| Your standby screen | 10 | Messaging | 17 |
| The quick keys | 10 | Sending a message | 17 |
| The main menu | 10 | Entering text..... | 18 |
| The status bar | 11 | Setting up your email | 19 |
| Calls | 12 | Sending an email using your new account..... | 20 |
| Making a call or video call | 12 | Message folders..... | 20 |
| Making a call from your contacts | 12 | Managing your messages | 21 |
| Answering and rejecting a call..... | 12 | Using templates..... | 21 |
| Using Video call settings..... | 12 | Changing your email settings | 22 |
| Adjusting the call volume | 13 | Changing your other settings..... | 22 |
| Speed dialling..... | 13 | Camera | 23 |
| Viewing your call logs | 13 | Taking a quick photo..... | 23 |
| Using call divert..... | 14 | After you've taken your photo..... | 23 |
| Using call barring..... | 14 | Getting to know the viewfinder..... | 24 |
| | | Viewing your saved photos | 24 |
| | | Setting a photo as Wallpaper or Picture ID | 24 |

Contents


| | | | |
|--|-----------|--|-----------|
| Video camera | 25 | Sending a video clip..... | 33 |
| Shooting a quick video | 25 | Video options menu | 33 |
| After you've shot your video | 25 | External memory | 34 |
| Watching your saved videos | 26 | Using your phone as a mass storage device..... | 34 |
| Adjusting the volume when viewing a video..... | 26 | Transferring a file to your phone | 35 |
| MP3 player | 27 | Sending and receiving your files using Bluetooth | 35 |
| MP3 player | 27 | Games and Apps | 37 |
| Transferring music onto your phone | 27 | Games and Apps | 37 |
| Playing a song..... | 27 | Playing a game..... | 37 |
| Creating a playlist..... | 28 | Viewing applications | 37 |
| Playing a playlist..... | 28 | Browser | 38 |
| Editing a playlist | 28 | Accessing the web..... | 38 |
| Deleting a playlist | 29 | Adding and accessing your bookmarks | 38 |
| My stuff | 30 | Saving a page | 39 |
| Images..... | 30 | Viewing your browser history..... | 39 |
| Images options menu..... | 30 | Changing the web browser settings | 39 |
| Sending a photo | 31 | | |
| Organising your images | 31 | | |
| Deleting an image | 31 | | |
| Deleting multiple images..... | 31 | | |
| Creating a slide show..... | 32 | | |
| Sounds | 32 | | |
| Using a sound | 32 | | |
| Videos | 32 | | |
| Watching a video..... | 32 | | |
| Using options while video is paused..... | 33 | | |

| | |
|--|-----------|
| Settings | 40 |
| Changing your display settings | 40 |
| Changing your security settings | 40 |
| Resetting your phone | 41 |
| Viewing memory status | 41 |
| Changing your Bluetooth settings | 41 |
| Changing your connectivity settings | 41 |
| Pairing with another Bluetooth device | 42 |
| Using a Bluetooth headset | 42 |
| Phone Software update | 43 |
| Accessories | 44 |
| Network service | 45 |
| Technical data | 45 |
| Guidelines for safe and efficient use | 47 |

Getting to know your phone



Open view

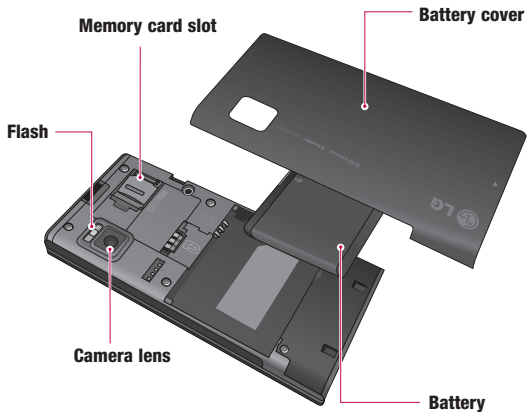

Installing the SIM and battery

1 Remove the battery cover and the battery


Slide down the battery cover and pull out the battery.



⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.


2 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure the gold contact area of the card is facing downwards. To remove the USIM card, gently pull it outwards.

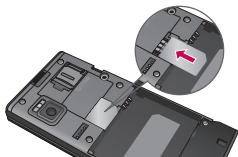

3 Install the battery

Insert the top of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.




Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card.


TIP! A memory card is an optional accessory.

Open the slide covering the memory card slot. Slide the memory card into the slot, until it clicks into place. Make sure that the gold contact area is facing downwards.

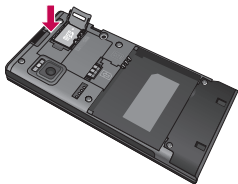

Removing the memory card

Open the slide and carefully remove the memory card by gently pushing it as shown in the following diagram:

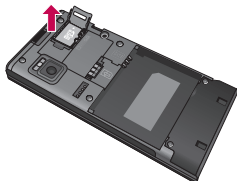

Formatting the memory card

If your memory card is not already formatted, you will need to do so before you can begin using it.





- 1 From the standby screen press **Center key** and select **Settings**.
- 2 Choose **Memory info** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your BL20v press **Center key** and select **My stuff**. Choose **External memory**.

⚠ WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Your standby screen

The quick keys

The quick keys provide easy, one-press access to your most used functions.

-  Select to open your message editor.
-  Select to choose a sound profile for your phone.
-  Select to open the quick menu.
-  Select to open contacts.

The main menu

The main menu provides twelve menu options. To open the main menu:

- 1** Select **Center key**.
- 2** The main menu will appear on the screen.
- 3** Move the highlighted image onto your desired position. And select center key to open.

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown in the figure below.






















Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may interfere and degrade signal quality.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.




Below is a table explaining the meaning of icons you're likely to see in the status bar.

| Icon | Description |
|---|--|
|  | Network signal strength (number of bars will vary) |
|  | No network signal |
|  | GPRS available |
|  | EDGE available |
|  | Flight mode is activated |
|  | Calls are diverted |
|  | Roaming service |
|  | Bluetooth® is activated |
|  | WAP service is connected |
|  | An alarm is set |
|  | Schedule |

| Icon | Description |
|---|------------------------|
|  | New message |
|  | New voice message |
|  | Normal profile in use |
|  | Silent profile in use |
|  | Outdoor profile in use |
|  | Headset profile in use |
|  | Remaining battery life |
|  | Battery empty |

Calls


Making a call or video call

- 1 Key in the number using the keypad. To delete a digit press .
- 2 Press  to initiate the call.
- 3 To end the call, press .


TIP! To enter + when making an international call, press and hold **0**.

TIP! After key in the number, You can Make video call, Send message, Save number or Search contacts by selecting the option soft key.

Making a call from your contacts

- 1 Select **Contacts** from the Standby screen.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 Select **Call** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing, press the lock key, then select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Center key**, select **Settings** and choose **Call** and choose Common settings. Select **Answer mode** and choose from **Press send key**, **Slide up** or **Press any key**.

Using Video call settings

- 1 Select Centre key, select Settings and choose Call.
- 2 Select Video call settings.
- 3 Choose Private mode and Private image.


Adjusting the call volume

To adjust the volume during a call, press the lock key, then press the volume key on the right hand side of your phone.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Contacts** and press options, then select **Speed dials**.
- 2 Your voice mail is set to speed dial 1 and your **Video mail** is set to speed dial 2. You cannot change this. Select any other number either by using the navigation key arrows and select **Set** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation arrows, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

Viewing your call logs

Press **Center key**, select **Calls**. Choose to view:

All calls - View a complete list of all your dialled, received and missed calls.

Missed calls - View a list of any calls you have missed.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Call duration - View details of time you have spent on your received and dialled calls.

Call costs - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.

Data volume - View the amount of all your received and sent data in kilobytes.

TIP! From any call log select **Options** and choose **Delete** to delete selected or all of the recorded items.

TIP! Using the navigation key arrows, highlight any single call entry to view the date and time of the call. To view the call duration select **View**.

Calls

Using call divert

- 1 Select **Center key**, select **Settings** and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when calls are not answered, when you are out of reach or when you are busy on another call.
- 4 Choose **Activate** and select whether to divert to other number or to Voice mail centre.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Select **Center key**, select **Settings** and choose **Call**.
- 2 Select **Call barring** and choose **Voice/ Video calls**.
- 3 Choose options.
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Call** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Contacts

Searching for a contact

- 1 Select **Contacts** from the standby screen, and choose **Search**.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use the navigation arrows.

Adding a new contact

- 1 Select **Contacts** and choose **Create new contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Or, using the slightly quicker method...

- 1 Enter the number you wish to store on the standby screen and select **Options**.
- 2 Choose **Save number as New Contact** or **Update existing contact**.
- 3 Enter the relevant information as above and select **Done**.

Note: When you are storing a contact's email address, press ***#*** to enter a symbol and scroll with the navigation arrows until you see **@**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the Options menu:

- 1 Open the contact you'd like to use. See **Searching contacts** above.

- 2 Select **Options** to open the list of options.

From here you can:

Edit - Change any of the contact's details.

New message - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

Send via - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

Delete - Delete the contact. Select **Yes** if you are sure.

New contact - Add a new contact.


Contacts

Multi delete - Mark multiple contacts to delete.

Copy to SIM/phone - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **View** then select **Add**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.
- 4 Select **Yes** if you are sure.

TIP! You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to and select **Options** and choose an item you want.

Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Select **Contacts** and choose **Groups**.
- 2 Select a group you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

Messaging

Messaging

Your BL20v includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) and email, as well as the network's service messages. Simply press **Center key** and select **Messaging**.

Sending a message

- 1 Press **Center key**, select **Messaging** and choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using either the T9 predictive mode or Abc manual mode. See **Entering text** to see how to switch between the different text entry modes.
- 5 Select **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/My business card/Schedule/Memo/Task)**.
- 6 Press the centre key **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Select **Send**.



 **WARNING:** If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.


Messaging

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

To turn on T9 mode in the text entry field, choose **Options**, select **T9 On** or simply press  and hold for several seconds. With T9 on, you can switch text input mode by pressing . You will notice the text input mode indicator in the upper left corner of the display.

To input a symbol in the text entry field, press the  key and select a symbol, then select **OK**.

Complete each word with a space by pressing **0**.

To delete a character, press  key.

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press **8, 3, 5, 3, 7, 4, 6, 6, 3** to write 'telephone'.

If the word you want doesn't appear, select **Options** and select Writing options then select new word, then you can enter the word using ABC manual mode. Your word will be added to the dictionary.

Note: You can select a different T9 language by pressing **Options** and select **Writing options - Writing language**.

ABC manual mode

In ABC manual mode you may need to press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

123 mode

Type numbers using one keystroke per number. You can also add numbers whilst in letter modes by pressing and holding the desired key.

Setting up your email

You can stay in press on the move using email on your BL20v. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Center key**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then **Email account**.
- 3 Select **Add**.
- 4 You can now choose how your account works:

Account Title - Enter a name for this account.

My name - Enter your name.

User name - Enter the account user name.

Password - Enter the account password.

Email address - Enter the account email address.

Reply email address - Enter the "reply to" email address.

Outgoing mail server - Enter the account details.

Incoming mail server - Enter the account details.

Maximum receive size - Choose the size limit of your emails, the maximum is 300KB.

Mailbox type - Select the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Auto retrieving - Select to automatically retrieve your emails.

To enter the following information, choose Options and select Advanced settings.

Outgoing port number - Normally this is 25.

Incoming port number - Normally, this is 110 for POP3 and 143 for IMAP4 accounts.

SMTP authentication - Select on or off.

SMTP User name - Enter the account details.

Outgoing server password - Enter the account details.

APOP secure login - Choose whether to save your emails to the server of the phone (only for IMAP4).

Messaging

Download options - Select **Headers only, Headers + body** (only for IMAP4) or **All**.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Select **Center key**, select **Messaging** and choose **Create new message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject in the Subject field.
- 4 Enter your message using T9 predictive mode or ABC manual mode. See **Entering text** on page no 18 to see how to switch between the different text entry modes.
- 5 Select **Options** and choose an attachment to add: **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject or More (Contact/My business card/Schedule/Memo/Task)**.

6 Press **Send** and enter the recipient's address or press **Contacts** to open your contacts list.

7 Press **Send** and your email will be sent.

Message folders

Press **Center key**, select **Messaging**. The folder structure used on your BL20v is fairly self-explanatory.

Inbox - All the messages you receive are placed into your Inbox. From here you can reply, forward and more, see below for details.

Mail box - Contains all your email messages. Select the account you want to use then select **Retrieve**. Your BL20v will connect to your email account and retrieve your new messages.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent Items - All the messages you send are placed into your Sent Items folder.

Templates - A list of useful messages, already written for a quick reply.

Managing your messages

You can use your **Inbox** to manage your messages.

1 Press **Center key**, select **Messaging** and choose **Inbox**.

2 Select **Options** and then choose to:

Delete - Delete the selected message.

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.


Call - Call the person who sent you the message.

Message Info. - View the details of a message, for example, the time it was sent.

Copy/Move - Choose to copy or move the selected message to the SIM card or phone.

Multi selection - You can mark multiple messages and then delete or move to myfolder for marked messages.

Filter - You can filter certain type of messages (for example text message).

If you see the message No space for SIM message, you should delete some text messages with  from your message box.

If you see the message No space for messages, you should delete messages to create space.

Using templates

You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

1 Press **Center key**, select **Messaging** and choose **Templates**.

2 Choose **Text** or **Multimedia**. You can then select **Options** and choose **Edit** to change existing templates, to add **New template** or to **Delete** templates.

3 To send a Multimedia template, select the one you want to send, choose **Options** and select Write multimedia message.

4 Select a contact and select **Send**.

Messaging

Changing your email settings

You can adapt your email settings to your own preferences.

- 1 Press **Center key**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then you can adapt the following settings:

Email account - You can set up an email account.

Retrieve interval - Choose how often your BL20v checks for new email messages.

Signature - Switch this feature on and Create an email signature.

Changing your other settings

Press **Center key**, select **Messaging**, choose **Settings** then:

Voicemail - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.

Service message - Here you can switch off service message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages.

Info service - Choose the reception status, alerts and language of your info messages.

Camera

Taking a quick photo

- 1 Hold the camera key down on the right side of the handset. The camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press the camera key halfway. A focus box will appear in the centre of the viewfinder screen. Position the phone so you can see the subject of your photo in the focus box. When the focus box turns green, the camera has focused on your subject.
- 4 Press the centre soft key or press the camera key all the way down to take a photo.

Note: You can also access the camera menu from the standby screen. Select **Center key** and select **Camera**, scroll down to and select **Camera** to open the viewfinder.

After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen and you will see five options displayed on the right side of the screen.



Images - Select to look at the other photos in your album. Your current photo will be saved.



Send - Select to send the photo as a **Multimedia message, Bluetooth** or **Email**.



New - Take another photo straightaway. Your current photo will be saved.



Use as - Select to open a sub menu to set your image as **Wallpaper or Picture ID, Start up** and **shut down**.




Delete - Delete the photo you have just taken and confirm by selecting **Yes**. The viewfinder will reappear.

Camera


Getting to know the viewfinder

Note: You can adjust the zoom using the volume key on the left side of the phone. The zoom function is only available when the resolution is set to 2048x1536 or below. See

Changing the image size.

TIP! When using the camera, power consumption increases. If  icon appears indicating low battery, recharge the battery before use.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and captured screen. From the viewfinder, simply select  on the navigation key. From the standby screen you should select **Center key**, then select **My stuff** and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to enlarge it.

Setting a photo as Wallpaper or Picture ID

From your image gallery, use the navigation keys to select an image and choose **Options** and **Set as** to use the selected image as **Wallpaper, Picture ID, Start up, Shut Down, Incoming call** or **Outgoing call** for one of your contacts.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video

Hold the camera key down on the right side of the handset. The camera's viewfinder will appear on screen, then select video icon using navigation arrow key.

- 1 The video camera's viewfinder will appear on screen.
- 2 Point the camera lens towards the subject of the video.
- 3 Press the camera key on the right side of the handset to start recording.
- 4 **REC** will appear in the bottom left center and a timer will show the length of your video.
- 5 To pause the video select **Pause** and resume by selecting **Resume**.
- 6 Select **Stop** to stop recording.

Note: You can also access the **Video camera** from the standby screen. Select **Center key** and select **Camera**, scroll down and select **Video camera** to open the viewfinder.

After you've shot your video

The name of the video runs along the bottom of the screen and five options will be displayed on the right side of the screen.

Delete - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

New - Select to shoot another video straight away. Your current video will be saved.

Play - Select to play the video you have just recorded.

Send - Select to send the video as a **Message, E-mail, Bluetooth**.

Videos - Select to look at the other video clips in your album. Your current video clip will be saved.

Video camera

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the standby screen you should select **Center key**, then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and press the centre soft key to watch it.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the volume keys on the right side of the handset.

MP3 player

MP3 player

Your LG BL20v has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, select **Center key** and select **Music** then **MP3 player**. From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlists - Contains any playlists you have created.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.




Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.

- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

Playing a song

- 1 Press **Center key** and select **Music**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Select play.
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.

TIP! To change the volume while listening to music, use the volume keys on the side of your phone.

MP3 player

Using options while playing music

Select **Options** and choose from:

Minimize - Hide the music player screen so that you can continue using your phone as normal while music is playing.

Add to playlist - Adds the current track to a playlist.

Set as - Set the current track as your **Ringtone, Message tone, Start up or Shut Down.**

File Info - You can view information about the MP3 file you are listening to.

Shuffle - Select to Shuffle the songs.

Repeat - Select to repeat the songs.

Equalizer - select the Equalizer you want from the list.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press **Center key** and select **Music**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Press **Options** and select **New playlist**, enter the playlist name and press **Save**.

- 4 The **New playlist** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting **Mark**.

- 5 Select **Save** to store the playlist.

Playing a playlist

- 1 Press **Center key** and select **Music**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Select the playlist you would like to play and then select play.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

If you want to organise your playlists, you can edit them using the **Options** menu.

- 1 Press **Center key** and select **Music**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Select the playlist you want to edit, then select **Options**. Choose from:

Add new songs - You can add songs to the playlist using this option.

Remove - Remove a song from the playlist. Select **Yes** to confirm.

Multi-selection - Delete selected songs from the playlist.

Remove all - Remove all of the songs from the playlist.

Deleting a playlist

- 1 Press **Center key** and select **Music**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete all** and select **Yes** to confirm.

Note:

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

My stuff

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

All your multimedia files will be saved in **My stuff**. Select **Center key** then select **My stuff** to open a list of folders.

Images

Images contains a folder of default images and default flash files pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **Set as, File info, Search, Sort by, Slide show, List View, Memory info, Delete all** options are available for default images.

In the **Images** folder, select **Options** to bring up your list of options.

Delete - Delete the selected image.

Set as - Set the selected image as your **Wallpaper** or as a **Picture ID**.

Send via - Send the selected image to a friend via **Multimedia message, Bluetooth** or **Email**.

Note: The image may need to be resized before it can be sent by MMS.

Print via - Print an image file via **Bluetooth**.

Slide show - See **Creating a slide show** on page 32.

New folder - Create a new folder within the main Images folder.

Multi-selection - Select more than one.

Delete all - Delete all the photos in your Images folder.

Sort by - Arrange your images by **Date, Type** or **Name**.

List view / Grid View - Change the way you view your photos.

Sending a photo

- 1 Press **Center key** then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Organising your images

- 1 Press **Center key** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

Deleting an image

- 1 Press **Center key** then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete**.

Deleting multiple images

- 1 Press **Center key** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** and select **Multi-selection**.
- 4 A box will appear next to each image. Select each image and select to mark it. To unmark an image, select again so that the tick disappears from the box. Or, you can select **Options** then choose **Mark all** or **Unmark all**.
- 5 Once you have marked all of the appropriate boxes, select **Delete** and confirm you want to delete all of the marked images.

My stuff

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Press **Center key** then select **My stuff**.
- 2 Select **Images**.
- 3 Select the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Pause** to pause the slide show and **Quit** to end the slide show and return to the **Images** folder.

Selecting **Options** during the slide show presents further options:

View - Choose between **Full image** and **Full screen**. Select **Landscape** to change the orientation of the image.

Repeat on / off - Decide whether you want the slide show on repeat or not.

Sounds

The **Sounds** folder contains the **Default sounds**, your voice recordings and sound files downloaded by you. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Press **Center key** then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and press ► to listen to it.
- 5 Select **Options**, select **Set as** and choose from **Voice Ringtone**, **Video ringtone**, **Ringtone ID**, **Message tone**, **Start up** and **Shut down**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Press **Center key** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press ►.

Using options while video is paused

By selecting **Options**, the video you are playing will be in pause mode and you can choose from:

Delete - Delete the video.

Send via - Send the video to a friend via **Multimedia message, Bluetooth** or **Email**.

Information - View the Name, Size, Date, Time, Type and Copyright details of the selected file.

Sending a video clip

- 1 Press **Center key** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.
- 4 Press **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

Video options menu

In the **Videos** folder, press **Options** to bring up the following list of options.

Delete - Delete the selected video.

Send via - Send the selected video to a friend via **Multimedia message, Email** or **Bluetooth**.

New folder - Create a new folder within the main Videos folder.

Multi-selection - Select more than one.

Delete all - Delete all the clips in your Videos folder.

Sort by - Arrange your videos by **Date, Type** or **Name**.

My stuff

List view / Thumbnail view - Change the way you view your videos.

External memory

If you've inserted a memory card it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into four further folders: **Images**, **Sounds**, **Videos** and **Others**. Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

Using your phone as a mass storage device

Your BL20v can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, the phone will be displayed as two drives on your computer: the handset memory and external memory.

- 1 Press **Center key**, select **Settings** and **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and select **OK**.

- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the BL20v. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically on your computer. Two folders will open if you have a memory card inserted. It will show all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music or documents into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.
- 8 When you want to access a file, for example an image, press center key, then select **My stuff** followed by **Images**. All the images you transfer will be contained in this file.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. So for example, photographs will be saved in the **Images** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

To switch Bluetooth on:

- 1 Press **Center key** and select **Settings** and **Connectivity**, then choose **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.

My stuff

- 4 Your BL20v will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** on page 41 for more information.
- 2 A message will prompt you to accept the file from the sender. select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

Note The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

Games and Apps

Games and Apps

Your BL20v comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Press **Center key** and select **Games & Apps**.
- 2 Select **Games**.
- 3 Choose the game you want to play and select **Launch**.

Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Center key** and select **Games & Apps**.
- 2 Select **Applications**.
- 3 View and manage any applications you have.

Browser

With a browser at the tip of your fingers, you can get up to date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 Press **Center key** and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately, select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Center key** and select **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Done**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.

Saving a page

- 1 Access your required web page as described.
- 2 Choose **Options** and select **Save** items, Save this page.
- 3 Select **OK**.

Accessing a saved page

- 1 Press **Center key** and select **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

TIP! This menu will also allow you to delete saved pages.

Viewing your browser history

- 1 Press **Center key** and select **Browser**.
- 2 Select **History**.
- 3 A list of web pages you have accessed recently will be displayed. To access one of these pages, select **Open**.

Changing the web browser settings

- 1 Press **Center key** and select **Browser**.
- 2 Select **Browser settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Browser profiles, Appearance settings (Show image, JavaScript), Cache, Cookies, Security certificates, Reset Settings**.
- 4 Once you have changed your settings, select **OK**.

Settings

Changing your display settings

- 1 Press **Center key** and select **Settings**.
- 2 Select **Screen** and choose from:

Homescreen - Choose a wallpaper to appear on your screen display.

Backlight - Choose for how long the backlight remains on.

TIP! The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Use the navigation keys to adjust the brightness. Choose from 40%, 60%, 80% or 100%, then select OK to save your change.

Font - Change the font size : **Small**, **Medium** and **Large**.

Handset Theme - Quickly change the whole look of your screen.

Menu style - Select from List or Grid.

Greeting message - Switch it On and edit the text you want to display.

Changing your security settings

Change your security settings to keep your BL20v and the important information it holds protected.

- 1 Press **Center key** and select **Settings**.
- 2 Select **Security** and choose from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Handset lock - Choose a option to lock your phone **When Switch on, When SIM changed, Immediately**.

Change codes - Change your **Lock code**, **PIN code**, **PIN2 code** and **ATMT code**.

Lock application - Mark the applications for which you want to lock.

Resetting your phone

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function.

Viewing memory status

Your BL20v has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Center key** and select **Settings**. Choose **Memory info**, and you will then see the current status of the memories (Handset Common and Reserved, USIM card and External memory) in your BL20v.

Changing your Bluetooth settings

- 1 Press **Center key** and select **Settings** and **Connectivity**, then choose **Bluetooth**.
- 2 Choose **settings**. Make your changes to:

My device visibility - Choose whether to **Show** or **Hide** your device to others.

My device name - Enter a name for your BL20v.

My address - View your Bluetooth address.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately after putting the SIM. If you want to change any settings, use this menu.

Press **Center key** and select **Settings**. Choose **Connectivity**. Your options are:

Bluetooth - Set up your BL20v for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

Settings

Network - Your BL20v connects automatically to your preferred network. To change these settings use this menu. You can also add new Network using this menu.

USB connection - Choose **Data service** and synchronise your BL20v using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the BL20v removable device folder.

Music Syn - Use it to sync music files.

Pairing with another Bluetooth device

By pairing your BL20v and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth settings** menu, by selecting **My device visibility**, then **visible**.
- 2 Select **Search new device** from the Bluetooth menu and choose **New**.

- 3 Your BL20v will search for devices. When the search is completed **Add and Retry** will appear on screen.
- 4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your BL20v will then automatically connect to your Bluetooth headset and switch to headset profile.

Phone Software update

LG Mobile Phone Software upgrade in web site

For more information and using this function,
Please visit [LGmobile.com](http://lgmobile.com) site

**path: <http://www.lgmobile.com>
- select country – Products menu
- Manual & software menu**

This Feature allows you to upgrade your software to the latest version conveniently on the internet without needing to visit our service center.

As the mobile phone software upgrade requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or battery during the upgrade may seriously damage you mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories were supplied with your BL20v.

Charger



Data cable and CD

Connect and synchronise your BL20v and PC.



Battery



User Guide

Learn more about your BL20v.



Stereo headset



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : BL20v

System : GSM / W-CDMA

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM / W-CDMA Terminal Equipment

Model Name

BL20v

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1

EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1

EN 301 511 V9.0.2

EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,

EN 300 328 V1.7.1

EN 50360:2001/EN62209-1:2006

EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

14.Aug. 2009

Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model BL20v has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.667 W/kg (10g) and when worn on the body is 1.45 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

Guidelines for safe and efficient use

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

Guidelines for safe and efficient use

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

إرشادات لاستخدام آمن و فعال

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافةً. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى. ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.

- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.

- لا تعمل على تفكيك البطارية أو تعريضها لحادث تماس.

- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.

- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.

- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.

- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة. مثل الحمام.

- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.

- هناك خطر انفجار. إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.

- تخلّص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تخلّص منها كمهملات منزلية.

- إذا كنت بحاجة إلى استبدال البطارية. فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.

- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.

- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة. وإعدادات المنتج. والنقوش المستخدمة. والبطارية والأوضاع البيئية.

السلامة على الطرقات

حَقِّق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.

- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقته عمله بواسطة أجهزة لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

جَنِّب إلحاق الضرر بسمعك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك، ونوصي بالتالي بالآتي
تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود، واتبع الأنظمة أو القوانين.

مناطق تتسبب أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال، أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

في الطائرة

باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.

- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قِبَل طاقم الطائرة.

إرشادات لاستخدام آمن و فعال

- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث الفوائن الخاصة تطالبك بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جار. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تضغط على الهوائي من دون وجود سبب يدعوك إلى ذلك.

تشغيل فعّال للهاتف

الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش. ما قد يؤثر على أداؤها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. جُنب وضع الهاتف على أجهزة ضبط النبض. مثلاً، في الجيب على مستوى الصدر.
- قد تسبب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون، والراديو، والكمبيوتر الشخصي.

إرشادات لاستخدام آمن و فعال

- أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختباره بواسطة DASy4 للاستخدام على الأذن تبلغ 0.667 واط/كيلوجرام (10غرام) وعند الحمل على الجسد تبلغ 1.45 واط/كيلوجرام (10غرام).
- معلومات بيانات SAR للمقيمين في بلدان/ مناطق تتبنى حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كغ كمتوسط لكل غرام واحد (1) من النسيج.

العناية بالمنتج وصيانته



تحذير

- استخدم فقط البطاريات، والشواحن، والملحقات الموافق على استخدامها مع طراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول، وقد يكون خطيراً.

- لا تقم بتفكيك الوحدة، اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.

يرجى قراءة هذه الإرشادات البسيطة، عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR)

لقد تم تصميم طراز الهاتف المحمول BL20v هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR. وتجري اختبارات SAR باستخدام أساليب تعتمد على المقاييس فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كافة نطاقات التردد التي تم اختبارها.
- وعلى الرغم من وجود اختلافات بين مستويات SAR لمتختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.
- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كغ وهو حد مقسّم على نحو مناسب إلى 10 غرامات من النسيج.

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM / W-CDMA Terminal Equipment

Model Name

BL20v

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

14.Aug. 2009

Signature of representative

خدمة الشبكة

بيانات تقنية

تحت الموافقة على استخدام الهاتف اللاسلكي الذي جاء وصفه في هذا الدليل على شبكات GSM و W-CDMA.

وهناك عدد من الميزات المضمّنة في هذا الدليل وتسمى خدمات الشبكة. هذه الخدمات عبارة عن خدمات خاصة يمكنك الحصول عليها عبر موفر خدمة اللاسلكية. قبل أن تتمكن من الاستفادة من أي خدمة من خدمات الشبكة، عليك الاشتراك فيها عبر موفر الخدمة والحصول على الإرشادات المتعلقة باستخدامها والتي يزودك بها موفر الخدمة.

عام

اسم المنتج : BL20v

النظام : GSM / W-CDMA

درجات الحرارة المحيطة

الحد الأقصى : +55 درجة مئوية (تفريغ)

+45 درجة مئوية (شحن)

الحد الأدنى : -10 درجات مئوية

الملحقات

وقد تم تزويدك بهذه الملحقات مع الهاتف BL20v.



كبل البيانات
والقرص
المضغوط
للبيانات

قم بتوصيل
الهاتف BL20v
وبزامنته مع
الكمبيوتر.



الشاحن



البطارية



دليل مستخدم BL20v

دليل
المستخدم

اعرف المزيد حول
BL20v.



سماعة رأس
استيريو

ملاحظة

- استخدم ملحقات LG الأصلية دائماً. يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

تحديث برنامج الهاتف

تحديث برنامج الهاتف المحمول LG من إنترنت للحصول على مزيد من المعلومات حول استخدام هذه الوظيفة. يرجى زيارة موقع ويب ل LG.

المسار: <http://www.lgmobile.com>
- select country – Products menu -
Manual & software menu

تسمح لك هذه الميزة بتحديث أحدث إصدار لبرامج الهاتف الثابت بسهولة من إنترنت من دون الحاجة إلى زيارة مركز الخدمة.

بما أن تحديث برنامج الهاتف المحمول الثابت يتطلب انتباه المستخدم الكامل لمدة عملية التحديث. يرجى التحقق من كل التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة.

جدر الملاحظة إلى أن حذف كبل بيانات USB أو البطارية أثناء الترقية قد يتسبب بإلحاق ضرر بالغ بهاتفك المحمول.

5 يتصل هاتفك حينئذٍ بالجهاز الآخر. حيث عليك إدخال رمز المرور نفسه.

6 لقد أصبح اتصال Bluetooth المحمي برمز مرور آمناً الآن.

استخدام سماعة رأس Bluetooth

1 تأكد من كون Bluetooth في وضع التشغيل ومن كونه مرئياً.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.

3 سيتصل جهاز BL20v تلقائياً بسماعة رأس Bluetooth والتبديل إلى وضع سماعة الرأس.

وضع اتصال **USB** - اختر خدمة البيانات وقم بمزامنة هاتف BL20v باستخدام البرنامج LG PC Suite لنسخ الملفات من الهاتف. إذا توفرت لديك بطاقة الذاكرة تم إدخالها في الهاتف. فحدد جهاز تخزين ذات سعة كبيرة لاستخدام الهاتف بالطريقة نفسها التي تستخدم بها ذاكرة USB. قم بتوصيل الهاتف بالكمبيوتر واسحب الملفات وأسقطها في حافظه الجهاز القابل للإزالة لهاتف BL20v.

الاقتران بجهاز Bluetooth آخر

عند إجراء اقتران لهاتف BL20v بجهاز آخر. يمكنك إعداد اتصال محمي برمز مرور. وهذا يعني أن الاقتران أصبح آمناً أكثر.

1 تأكد من كون Bluetooth في وضع التشغيل ومن كونه مرئياً. يمكنك تغيير إمكانية رؤيتك في قائمة إعدادات **Bluetooth**. عبر تحديد إمكانية رؤية جهازي. ثم مرئي.

2 حدد قائمة الأجهزة من قائمة Bluetooth واختر جديد.

3 يبحث الهاتف BL20v عن الأجهزة. عند اكتمال عملية البحث يظهر اقتران وتحديث على الشاشة.

4 اختر الجهاز الذي تريد إجراء الاقتران به. وحدد اقتران وأدخل رمز مرور ثم اختر موافق.

إعادة إعداد الهاتف

استخدم إعادة التعيين لإعادة تعيين كل الإعدادات وفق تعريفاتها المحددة من قبل الشركة المصنعة. ومن أجل تنشيط هذه الوظيفة تحتاج إلى رمز الحماية.

عرض حالة الذاكرة

تتوفر في الهاتف BL20v ثلاثة أنواع من الذاكرة: الهاتف وبطاقة SIM وبطاقة الذاكرة الخارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ويمكنك استخدام إدارة الذاكرة لتحديد كمية الذاكرة المستخدمة وكمية المساحة المتوفرة.

اضغط على القائمة وحدد الإعدادات. اختر معلومات الذاكرة وستشاهد حينئذٍ حالة الذاكرات الحالية (عادية ومحجوزة وبطاقة SIM وذاكرة خارجية) في الهاتف BL20v.

تغيير إعدادات Bluetooth

1 اضغط على القائمة وحدد الإعدادات وإمكانية الاتصال. ثم اختر Bluetooth.

2 اختر الإعدادات. أدخل تغييراتك على:

إمكانية رؤية هاتفك - اختر عرض جهازك أو إخفاءه بالنسبة إلى الآخرين.

اسم الجهاز - أدخل اسماً للهاتف BL20v.

عنواني - عرض عنوان Bluetooth.

تغيير إعدادات إمكانية الاتصال

تم مسبقاً إعداد إعدادات إمكانية الاتصال بواسطة مشغل الشبكة. بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد منذ البداية. إذا أردت تغيير أي إعدادات الإعدادات استخدم هذه القائمة.

اضغط على القائمة وحدد الإعدادات. اختر إمكانية الاتصال. خياراتك هي:

Bluetooth - قم بإعداد BL20v لاستخدام

Bluetooth. يمكنك تكبير إمكانية رؤيتك بالنسبة إلى الأجهزة الأخرى أو البحث عبر الأجهزة التي اقترن هاتفك بها.

الشبكة - يتصل الهاتف BL20v تلقائياً بشبكتك المفضلة. لتغيير هذه الإعدادات، استخدم هذه القائمة. كما يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

تغيير إعدادات الشاشة

1 اضغط على القائمة وحدد الإعدادات.

2 حدد الشاشة واختر من:

الشاشة الرئيسية - اختر خلفية لكي تظهر على شاشة العرض.

الإضاءة الخلفية - اختر الفترة التي تبقى خلالها الإضاءة الخلفية قيد التشغيل.

تلميح! بقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل، بقدر ما يتم استخدام طاقة البطارية وقد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

السطوع - استخدم مفاتيح التنقل لضبط السطوع. اختر من 40% أو 60% أو 80% أو 100%. ثم حدد موافق لحفظ التغيير الذي قمت به.

الخط - قم بتغيير حجم الخط في العناصر التالية :
القائمة واللائحة.

سمة الهاتف - تغيير مظهر الشاشة بأكمله بشكل سريع.

تغيير إعدادات الحماية

قم بتغيير إعدادات الحماية لحماية الهاتف BL20v والبيانات الهامة التي يحتوي عليها.

1 اضغط على القائمة وحدد الإعدادات.

2 حدد الحماية واختر من القائمة أدناه:

طلب رمز PIN - اختر رمز PIN الذي يجب طلبه عند تشغيل هاتفك.

قفل الهاتف - اختر رمز حماية لإقفال هاتفك عند التشغيل أو عند تغيير SIM أو على الفور.

تغيير الرموز - تغيير رمز الحماية أو رمز PIN1 أو رمز PIN2.

حفظ صفحة

- 1 انتقل إلى صفحة ويب المطلوبة كما جاء وصفه.
 - 2 اختر الخيارات وحدد حفظ عناصر. حفظ هذه الصفحة.
 - 3 حدد موافق.
- الوصول إلى صفحة محفوظة
- 1 اضغط على القائمة وحدد المتصفح.
 - 2 حدد الصفحات المحفوظة.
 - 3 حدد الصفحة المطلوبة واضغط فتح.

تلميح! تسمح لك هذه القائمة أيضاً بحذف صفحات محفوظة.

عرض محفوظات المتصفح

- 1 اضغط على القائمة وحدد المتصفح.
- 2 حدد المحفوظات وحدد موافق.
- 3 تظهر قائمة بصفحات ويب التي وصلت إليها مؤخراً. للوصول إلى إحدى هذه الصفحات. حدد فتح.

تغيير إعدادات متصفح ويب

- 1 اضغط على القائمة وحدد المتصفح.
- 2 حدد إعدادات المتصفح.
- 3 يمكنك أن تختار الطريقة التي يعالج بها الهاتف المعلومات. ويعرضها ويستخدمها عند استعراض الإنترنت. يمكنك تعديل الإعدادات ضمن أوضاع المتصفح. إعدادات المظهر. وذاكرة التخزين المؤقت وملفات تعريف الارتباط وشهادات الأمان وعرض الصورة و **JavaScript**.
- 4 عندما تنتهي من تغيير الإعدادات. حدد موافق.

مع وجود المتصفح في متناول يدك، يمكنك الحصول على آخر الأخبار وتوقعات الطقس وكذلك معلومات تتعلق بالرياضة أو حركة السير كلما احتجت إليها. بالإضافة إلى ذلك، يسمح لك المتصفح بتنزيل أحدث الموسيقى، ونغمات الرنين، والخلفيات والألعاب.

الوصول إلى ويب

1 اضغط على القائمة وحدد المتصفح.

2 للوصول مباشرةً إلى شاشة المتصفح الرئيسية، حدد الشاشة الرئيسية، كطريقة بديلة، حدد إدخال العنوان واكتب عنوان URL المطلوب، يليه اتصال.

ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

إضافة الإشارات المرجعية والوصول إليها

لكي تتمكن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل، يمكنك إضافة إشارات مرجعية وحفظ صفحات ويب.

1 اضغط على القائمة وحدد المتصفح.

2 حدد إشارات مرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.

3 لإضافة إشارة مرجعية جديدة، حدد الخيارات واختر إشارة مرجعية جديدة، أدخل اسماً للإشارة المرجعية. يتبعه URL.

4 اضغط على حفظ. تظهر إشارتك المرجعية الآن في قائمة الإشارات المرجعية.

5 للوصول إلى الإشارة المرجعية ما عليك إلا التمرير للوصول إلى الإشارة المرجعية المطلوبة وتحديد اتصال. فيتم توصيلك بالصفحة التي وضعت عليها إشارة مرجعية.

الألعاب والتطبيقات

الألعاب والتطبيقات

يكون الهاتف BL20v محملاً مسبقاً بألعاب تهدف إلى تسليتك في أوقات الفراغ. إذا اخترت تنزيل أية ألعاب أو تطبيقات إضافية، فسيتم حفظها في هذه الحافظة.

تشغيل لعبة

- 1 اضغط على القائمة وحدد الألعاب والتطبيقات.
- 2 حدد الألعاب.
- 3 اختر اللعبة التي تريد لعبها وحدد تشغيل.

عرض التطبيقات

يمكنك إدارة تطبيقات Java المثبتة على هاتفك باستخدام قائمة التطبيقات. كما يمكنك حذف التطبيقات التي تم تنزيلها.

- 1 اضغط على القائمة وحدد الألعاب والتطبيقات.
- 2 حدد التطبيقات.
- 3 قم بعرض وإدارة التطبيقات المتوفرة لديك.

الاستوديو

- 4 سيبحث الهاتف BL20v تلقائياً عن أجهزة Bluetooth أخرى تم تمكينها ضمن النطاق.
- 5 اختر الجهاز الذي تريد إرسال الملف إليه وحدد إرسال.

لاستلام ملف:

- 1 لتلقي ملفات. يجب أن يكون Bluetooth في وضع التشغيل ومرتبياً. انظر تغيير إعدادات Bluetooth على الصفحة 41 للحصول على مزيد من المعلومات.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. حدد نعم لاستلام الملف.

نلميح! راقب شريط التقدم لكي تتأكد من إرسال الملف.

ملاحظة إن علامة الكلمة Bluetooth® وشعاراتها مملوكة من قبل Bluetooth SIG, Inc. وأي استخدام لمثل هذه العلامات من قبل LG Electronics يتم بموجب ترخيص. أما العلامات التجارية والأسماء التجارية الأخرى فهي تعود إلى مالكيها.

نقل ملف إلى هاتفك

يمكنك أيضاً نقل الملفات من الكمبيوتر إلى الهاتف باستخدام Bluetooth.

1 تأكد من تشغيل Bluetooth على الهاتف والكمبيوتر ومن كونهما مرتين ببعضهما بالنسبة إلى بعض.

2 استخدم الكمبيوتر لإرسال الملف عبر Bluetooth.

3 عندما يتم إرسال الملف سيترتب عليك قبوله على الهاتف وذلك بتحديد نعم.

4 سيتم حفظ الملف ضمن الحافظة المناسبة له وهذا وفقاً لنوعه، وهكذا على سبيل المثال، سيتم حفظ الصور في حافظة الصور والموسيقى في حافظة الأصوات. إذا لم يكن باستطاعة هاتفك التعرف على نوع الملف، فسيتم حفظ الملف في الحافظة أخرى.

ملاحظة: ستُحفظ في ذاكرة الهاتف الملفات المرسلّة بواسطة Bluetooth.

إرسال الملفات واستلامها باستخدام

Bluetooth

يعتبر Bluetooth طريقة جيدة لإرسال الملفات وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال سريعاً وسهلاً. كما يمكنك الاتصال بسماعات رأس Bluetooth لإجراء مكالمات وتلقيها.

قبل أن تتمكن من بدء المشاركة في الملفات باستخدام Bluetooth، ستحتاج إلى إجراء اقتران لهاتفك بجهاز Bluetooth آخر. للحصول على معلومات حول اقتران الأجهزة، انظر الاقتران بجهاز Bluetooth آخر.

لتشغيل Bluetooth:

- 1 اضغط على القائمة وحدد الإعدادات وإمكانية الاتصال. ثم اختر Bluetooth.
- 2 حدد تشغيل/إيقاف تشغيل Bluetooth واختر تشغيل.
- 3 حدد إيقاف تشغيل لإيقاف تشغيل Bluetooth.

لإرسال ملف:

- 1 افتح الملف الذي تريد إرساله، وهو عادةً عبارة عن صورة أو فيديو أو ملف موسيقى.
- 2 حدد الخيارات واختر إرسال عبر Bluetooth.
- 3 حدد نعم لتشغيل Bluetooth إذا لم يكن قد تم تنشيطه بعد.

- عرض القائمة / عرض الصور المصغرة - تغيير طريقة عرض ملفات الفيديو.
- 4 أدخل الطرف الصغير لكبل USB بموصل كبل USB على حافة BL20V. قم بتوصيل الطرف الكبير بمنفذ USB على الكمبيوتر.
- 5 يفتح حافظه قرص قابل للإزالة بشكل تلقائي على الكمبيوتر. واثنان إذا كنت قد أدخلت بطاقة الذاكرة. وهكذا يُظهر كل الحافظات الموجودة في الهاتف أو في بطاقة الذاكرة.
- 6 قم بسحب وإفلات الصور، أو ملفات الفيديو، أو الموسيقى أو المستندات في الحافظات المناسبة.
- 7 أخرج الهاتف بأمان وذلك بالنقر فوق الرمز حذف الجهاز بأمان الموجود على شريط أدوات سطح المكتب.
- 8 عندما ترغب في الوصول إلى ملف، صورة مثلاً، اضغط على القائمة، ثم حدد الاستوديو والذاكرة الخارجية ثم الصور. ستكون كل الصور التي قمت بنقلها موجودة في هذا الملف.
- الذاكرة الخارجية
- إذا قمت بإدخال بطاقة الذاكرة، فستظهر كحافطة ضمن الاستوديو. ستكون حافظه الذاكرة الخارجية مقسمة إلى أربع حافظات إضافية: الصور والأصوات وملفات الفيديو وأخرى. وستحتوي كل حافظه على كل الملفات من ذلك النوع والتي يتم حفظها في بطاقة الذاكرة بدلاً من حفظها في الهاتف.
- استخدام الهاتف كوسيلة تخزين ذات سعة كبيرة
- يمكنك استخدام الهاتف BL20V كجهاز تخزين ذي سعة كبيرة تماماً مثل ذاكرة USB. هذه الطريقة تعتبر جيدة لنقل الملفات من الكمبيوتر إلى الهاتف. إذا قمت بإدخال بطاقة الذاكرة، عند توصيلها كجهاز تخزين ذي سعة كبيرة، فسيتم عرضها كمحرك أقراص على الكمبيوتر: ذاكرة الهاتف والذاكرة الخارجية.
- 1 اضغط على القائمة، ثم حدد الإعدادات وإمكانية الاتصال.
- 2 حدد اتصال USB.
- 3 قم بالتمرير إلى جهاز تخزين ذي سعة كبيرة وحدد موافق.

استخدام الخيارات فيما الفيديو متوقف مؤقتاً بمجرد تخيد الخيارات. سيكون الفيديو الذي تقوم بتشغيله في وضع التوقف المؤقت ويمكنك الاختيار من ضمن:

حذف - حذف الفيديو.

إرسال عبر - إرسال الفيديو إلى صديق عبر رسالة وسائط متعددة، أو **Bluetooth**. أو البريد الإلكتروني.

المعلومات - عرض معلومات بالملف المحدد مثل الاسم، والحجم، والتاريخ، والوقت، والنوع وتفاصيل حقوق النشر.

إرسال فيديو كليب

1 اضغط على القائمة ثم حدد الاستوديو.

2 قم بالتمرير إلى وحدد ملفات الفيديو.

3 حدد الفيديو كليب المطلوب واضغط الخيارات.

4 اضغط إرسال عبر واختر من ضمن رسالة وسائط متعددة أو **Bluetooth** أو بريد إلكتروني.

5 إذا اخترت الرسالة أو البريد الإلكتروني، فسيتم إرفاق الفيديو كليب بالرسالة ويمكنك كتابة الرسالة وإرسالها كالمعتاد. أما إذا اخترت **Bluetooth** فستطالب بتشغيل Bluetooth وسيبحث الهاتف عن جهاز لإرسال الفيديو إليه.

ملاحظة: قد تحتاج إلى تغيير حجم الصورة قبل أن يتم إرسالها بواسطة MMS. قد تكون بعض ملفات الفيديو كبيرة جداً بحيث لا يمكن إرسالها بواسطة MMS.

قائمة خيارات الفيديو

في حافظة ملفات الفيديو. اضغط على الخيارات لإحضار قائمة الخيارات التالية.

حذف - حذف الفيديو المحدد.

إرسال عبر - إرسال الفيديو المحدد إلى صديق عبر رسالة وسائط متعددة، أو **Bluetooth**. أو البريد الإلكتروني.

حافظة جديدة - إنشاء حافظة جديدة ضمن حافظة ملفات الفيديو الرئيسي.

تحديد متعدد - تحديد أكثر من عنصر واحد.

حذف الكل - حذف كل كليات الفيديو في حافظة ملفات الفيديو.

ترتيب حسب - ترتيب ملفات الفيديو حسب التاريخ، أو النوع أو الاسم.

تشغيل التالي تلقائياً - يسمح بتعيين وضع التشغيل: إيقاف وتكرار مرة واحدة وتكرار الكل.

• إيقاف: تشغيل الملف المحدد.

• تكرار مرة واحدة: تشغيل كل الملفات في القائمة مرة واحدة.

• تكرار الكل: متابعة تشغيل كل الملفات في القائمة بشكل متكرر.

إنشاء عرض شرائح

إذا أردت مشاهدة كل الصور الموجودة على الهاتف أو تفحص ما لديك. فيمكنك إنشاء عرض شرائح يوفر عليك عملية فتح كل صورة وإغلاقها بشكل فردي. **1** اضغط على القائمة ثم حدد الاستوديو.

2 حدد الصور.

3 حدد الصورة التي تريد بدء عرض الشرائح بها وحدد الخيارات.

4 اختر عرض شرائح فيبدأ العرض.

5 اضغط إيقاف مؤقت لإيقاف عرض الشرائح مؤقتاً واضغط إنهاء لإنهاء عرض الشرائح والعودة إلى حافظة الصور.

يؤدي تحديد الخيارات أثناء عرض الشرائح إلى تقديم خيارات إضافية:

عرض - اختر بين صورة كاملة وملئ الشاشة. حدد أفقي لتغيير اتجاه الصورة.

تشغيل / إيقاف التكرار - يمكنك تحديد ما إذا كنت ترغب في تكرار عرض الشرائح أم لا.

أصوات

تحتوي حافظة الأصوات على الأصوات الافتراضية وتسجيلاتك الصوتية وملفات الصوت التي قمت بتنزيلها. ومن هنا يمكنك إدارة الأصوات. أو إرسالها أو ضبطها كنغمات رنين.

استخدام صوت

1 اضغط على القائمة ثم حدد الاستوديو.

2 قم بالتمرير إلى وحدد الأصوات.

3 حدد أصوات افتراضية أو اختر من ضمن قائمة ملفات التسجيلات الصوتية.

4 حدد صوتاً واضغط [للاستماع إليه.

5 حدد الخيارات. وحدد ضبط ك واختر من ضمن نغمة الرنين و معرف نغمة الرنين و نغمة الرسالة.

ملفات الفيديو

تعرض حافظة مقاطع الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك وملفات الفيديو التي قمت بتسجيلها على هاتفك.

مشاهدة فيديو

1 اضغط على القائمة ثم حدد الاستوديو.

2 قم بالتمرير إلى وحدد ملفات الفيديو.

3 حدد فيديو واضغط على [.

إرسال صورة

1 اضغط على القائمة ثم حدد الاستوديو.

2 حدد الصور.

3 حدد صورة ثم الخيارات.

4 حدد إرسال عبر واختر من ضمن رسالة وسائط متعددة أو Bluetooth أو بريد إلكتروني.

5 إذا اخترت رسالة وسائط متعددة أو بريد إلكتروني، فسيتم إرفاق صورتك بالرسالة ويمكنك كتابة الرسالة وإرسالها كالمعتاد. إذا اخترت Bluetooth، فسُتطلب بتشغيل Bluetooth وسيبحث الهاتف عن جهاز لإرسال الصورة إليه.

تنظيم الصور

1 اضغط على القائمة ثم حدد الاستوديو.

2 حدد الصور.

3 حدد الخيارات ثم ترتيب حسب.

4 اختر من ضمن التاريخ أو النوع أو الاسم.

حذف صورة

1 اضغط على القائمة ثم حدد الاستوديو.

2 حدد الصور.

3 حدد صورة واضغط على الخيارات.

4 حدد حذف.

حذف صور متعددة

1 اضغط على القائمة ثم حدد الاستوديو.

2 حدد الصور.

3 اختر الخيارات ثم حدد تحديد متعدد.

4 تظهر خانة بالقرب من كل صورة. حدد كل صورة

ثم حدد لوضع علامة. لإلغاء تحديد صورة.

حدد مجددًا بحيث تختفي علامة الاختيار

من الخانة. أو يمكنك تحديد الخيارات ثم اختيار

تحديد الكل أو إلغاء تحديد الكل.

5 بعد أن تنتهي من تحديد كل الخانات المناسبة، حدد

حذف وأكد رغبتك في حذف كل الصور التي

حددتها.

ضبط ك - تعيين الصورة المحددة كخلفية أو معرف صورة.

إرسال عبر - إرسال الصورة المحددة إلى صديق عبر رسالة وسائط متعددة أو **Bluetooth** أو البريد الإلكتروني.

ملاحظة: قد تحتاج إلى تغيير حجم الصورة قبل أن يتم إرسالها بواسطة MMS.

طباعة بواسطة - طباعة ملف صورة بواسطة **Bluetooth**.

عرض شرائح - انظر إنشاء عرض شرائح على الصفحة 32.

حافضة جديدة - إنشاء حافضة جديدة ضمن حافضة الصور الرئيسي.

تحديد متعدد - تحديد أكثر من عنصر واحد.

حذف الكل - حذف كل الصور في حافضة الصور.

ترتيب حسب - ترتيب الصور حسب التاريخ أو النوع أو الاسم.

عرض القائمة / عرض الصور المصغرة - تغيير طريقة عرض الصور.

يمكنك تخزين أي ملفات وسائط متعددة في ذاكرة الهاتف بحيث يتوفر لديك الوصول السهل إلى كل الصور والأصوات وملفات الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. الفائدة من استخدام بطاقة الذاكرة هي أنها تسمح لك بتحرير مساحة على ذاكرة الهاتف.

سيتم حفظ كل ملفات الوسائط المتعددة في الاستوديو. حدد القائمة ثم حدد الاستوديو لفتح قائمة بالحافظات.

الصور

الصور تحتوي على حافضة من الصور الافتراضية وملفات الفلاش الافتراضية التي تم تنزيلها مسبقاً على هاتفك وصور قمت أنت بتنزيلها وصور تم التقاطها بواسطة كاميرا الهاتف.

قائمة خيارات الصور

تتوقف الخيارات المتوفرة لك في الصور على نوع الصورة التي حددتها. وستكون كل الخيارات متوفرة للصور التي التقطتها على كاميرا الهاتف. وحدها خيارات عرض وضبط و معلومات الملف وعرض شرائح وترتيب حسب وعرض القائمة / عرض الصورة المصغرة هي التي ستكون متوفرة للصور الافتراضية.

في حافضة الصور. حدد الخيارات لإحضار قائمة الخيارات.

حذف - حذف الصورة المحددة.

ملاحظة:

كنتيجة لنظام إدارة الحقوق الرقمية (DRM)، قد تتوفر قائمة "حق الشراء" لبعض عناصر الوسائط التي تقوم بتنزيلها من الإنترنت أو تلتاهاها بواسطة MMS وذلك للسماح لك بالوصول إليها. ويمكن الحصول على المفتاح الذي يتيح لك شراء الحق من موقع ويب الذي يمتلك حقوق الوصول إلى المحتويات.

إن الموسيقى محمية بموجب حقوق التأليف في المعاهدات الدولية وقوانين حقوق النشر المحلية. قد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. يرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

حذف - حذف أغنية من قائمة التشغيل. حدد نعم للتأكيد.

حذف متعدد - حذف الأغاني المحددة من قائمة التشغيل.

حذف الكل - حذف جميع الأغاني من قائمة التشغيل.

المعلومات - عرض معلومات قائمة التشغيل.

حذف قائمة تشغيل

1 اضغط على القائمة وحدد الموسيقى.

2 اختر مشغل MP3. ثم حدد قائمة التشغيل خاصتي.

3 قم بالتمرير إلى قائمة التشغيل التي تريد حذفها وحدد خيارات.

4 حدد حذف الكل وحدد نعم للتأكيد.

4 تظهر حافظه قائمة تشغيل جديدة. حدد كافة الأغاني التي تريد تضمينها في قائمة التشغيل وذلك بالتمرير إلى الأغاني التي تريدها وتحديد



5 حدد حفظ لتخزين قائمة التشغيل.

تشغيل قائمة التشغيل

1 اضغط على القائمة وحدد الموسيقى.

2 اختر مشغل MP3. ثم حدد قائمة التشغيل خاصتي.

3 حدد قائمة التشغيل التي تريد تشغيلها واختر عرض. ثم حدد [.

تعديل قائمة تشغيل

قد ترغب. من وقت إلى آخر في إضافة أغانٍ جديدة أو حذف أغانٍ من قائمة التشغيل.

إذا أردت تنظيم قوائم التشغيل. فيمكنك تعديلها باستخدام قائمة الخيارات.

1 اضغط على القائمة وحدد الموسيقى.

2 اختر مشغل MP3. ثم حدد قائمة التشغيل خاصتي.

3 قم بالتمرير إلى قائمة التشغيل التي تريد تعديلها وحدد عرض. ثم حدد الخيارات. اختر من ضمن:

إضافة - يمكنك إضافة الأغاني إلى قائمة التشغيل باستخدام هذا الخيار.

استخدام خيارات أثناء تشغيل الموسيقى
حدد الخيارات واختر من ضمن:

تصغير - إخفاء شاشة مشغل الموسيقى بحيث يمكنك الاستمرار في استخدام الهاتف بشكل عادي أثناء تشغيل الموسيقى.

عرض قائمة التشغيل - انظر إلى قائمة التشغيل التي تستمع إليها حالياً.

إضافة إلى قائمة التشغيل - إضافة المسار الحالي إلى قائمة تشغيل.

ضبط ك - تعيين المسار الحالي ك- نغمة رنين أو نغمة رسالة.

معلومات - يمكنك عرض معلومات تتعلق بملف MP3 الذي تستمع إليه.

الإعدادات - تغيير إعدادات المزج أو التكرار أو المعادل.

إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك بإنشاء مجموعة مختارة من الأغاني من حافظه جميع الأغاني.

1 اضغط على القائمة وحدد الموسيقى.

2 اختر مشغل MP3. ثم حدد قائمة التشغيل خاصتي.

3 اضغط على الخيارات وحدد قائمة تشغيل جديدة. وأدخل اسم قائمة التشغيل واضغط على حفظ.

مشغّل MP3

مشغّل MP3

هناك مشغّل MP3 مضمّن في الهاتف LG BL20v بحيث يمكنك تشغيل كل أنواع الموسيقى المفضلة لديك.

للوصول إلى مشغّل MP3، أو حدد القائمة وحدد موسيقى ثم مشغّل MP3. من هنا يمكنك الوصول إلى:

جميع الأغاني - يحتوي على جميع الأغاني المتوفرة في هاتفك.

قائمة التشغيل خاصتي - تحتوي على أي قوائم تشغيل قمت بإنشائها وكذلك قائمة أثناء التنقل. والأغاني الحديثة. والأغاني المفضلة.

الفنانين - يمكنك استعراض مجموعتك الموسيقية حسب الفنان.

الألبومات - يمكنك استعراض مجموعتك الموسيقية حسب الألبوم.

الأنواع - يمكنك استعراض مجموعتك الموسيقية حسب النوع.

نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر Bluetooth أو كبل المزامنة. للنقل باستخدام Bluetooth:

1 تأكد من تشغيل Bluetooth على الجهازين ومن كونهما مرئيين بالنسبة إلى بعضهما البعض.

2 حدد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر Bluetooth.

3 عندما يتم إرسال الملف سيترتب عليك قبوله على الهاتف وذلك بتحديد نعم.


4 يجب أن يظهر الملف في جميع الأغاني.


تشغيل أغنية


1 اضغط القائمة وحدد الموسيقى. ثم اختر مشغّل MP3. أو اضغط  من شاشة وضع الانتظار.

2 اختر جميع الأغاني ثم حدد الأغنية التي تريد تشغيلها. خذ يد.

3 حدد  لإيقاف الأغنية مؤقتاً.

4 حدد  للانتقال إلى الأغنية التالية.

5 حدد  للانتقال إلى الأغنية السابقة.

6 حدد  لإيقاف الموسيقى والعودة إلى قائمة مشغّل MP3.

تلميح! لتغيير مستوى الصوت أثناء الاستماع إلى الموسيقى، استخدم مفاتيح مستوى الصوت على جانب الهاتف.

كاميرا الفيديو

مشاهدة ملفات الفيديو المحفوظة

- 1 يمكنك الوصول إلى ملفات الفيديو المحفوظة من ضمن وضع الكاميرا ومن شاشة وضع الانتظار. من شاشة وضع الانتظار يجب أن تُحد القائمة. ثم حدد الاستوديو و ملفات الفيديو.
- 2 يظهر الاستوديو على الشاشة.
- 3 استخدم مفاتيح التنقل لتحديد الفيديو الذي تريد عرضه واضغط مفتاح الاختيار الأوسط لمشاهدته.

ضبط مستوى الصوت عند عرض فيديو لضبط مستوى الصوت في الفيديو أثناء تشغيله. استخدم مفاتيح مستوى الصوت الموجودة في الجانب الأيمن من الهاتف.

كاميرا الفيديو

التقاط فيديو سريع

- 1 سيظهر محدد المنظر في كاميرا الفيديو على الشاشة.
 - 2 أشر عدسة الكاميرا نحو موضوع الفيديو.
 - 3 اضغط مفتاح الكاميرا الموجود في الجانب الأيمن من الهاتف لبدء التسجيل.
 - 4 يظهر تسجيل في الوسط الأيمن السفلي وسيعرض الموقت طول الفيديو.
 - 5 لإيقاف الفيديو مؤقتاً حدد إيقاف مؤقت ولاستئناف التسجيل حدد استئناف.
 - 6 حدد إيقاف لإيقاف التسجيل.
- ملاحظة: يمكنك أيضاً الوصول إلى كاميرا الفيديو من شاشة وضع الانتظار. حدد القائمة وحدد الكاميرا. وقم بالتمرير إلى أسفل وحدد كامير الفيديو لفتح محدد المنظر.

بعد الانتهاء من التقاط الفيديو


- يظهر اسم الفيديو عبر أسفل الشاشة. وستشاهد خمسة خيارات تكون معروضة في الجانب الأيمن من الشاشة.
- حذف - احذف الفيديو الذي سجلته للتو وأكد رغبتك في الحذف بتحديد نعم. يظهر محدد المنظر من جديد.
- جديد - حدد لالتقاط فيديو آخر على الفور. وسيتم حفظ الفيديو الحالي.
- تشغيل - حدد لتشغيل الفيديو الذي قمت بتسجيله.
- إرسال - حدد لإرسال الفيديو كرسالة وسائط متعددة أو بريد إلكتروني.
- ملفات الفيديو - حدد للنظر إلى ملفات الفيديو الأخرى في الألبوم. وسيتم حفظ ملف الفيديو الحالي.

التعرّف على محدد المنظر


ملاحظة: يمكنك ضبط التكبير/التصغير باستخدام مفتاح مستوى الصوت في الجانب الأيسر من الهاتف. وتتوفر وظيفة التكبير/التصغير فقط عندما تكون الدقة معيّنة إلى 2048x1536 أو أقل. راجع تغيير حجم الصورة.

تعيين صورة كخلفية أو معرّف صورة

من معرض الصور. استخدم مفتاح التنقل لتحديد صورة واختر الخيارات وتعيين كإستخدام الصورة المحددة كخلفية أو معرّف صورة لإحدى الأسماء. ملاحظة: يمكن إضافة معرّف الصورة إلى الأسماء المحفوظة في هاتفك فقط. وليس في بطاقة SIM.

تلميح! عند استخدام الكاميرا. يتزايد استهلاك الطاقة. إذا ظهر الرمز  للإشارة إلى انخفاض مستوى شحن البطارية. فعليك إعادة شحنها قبل استخدامها.

عرض الصور المحفوظة

- 1 يمكنك الوصول إلى الصور المحفوظة من ضمن وضع الكاميرا ومن شاشة التقاط الكاميرا. من محدد المنظر. حدد ببساطة  الموجود على مفتاح التنقل. من شاشة وضع الانتظار يجب أن تحدد القائمة. ثم حدد الاستوديو و الصور. يظهر الاستوديو على الشاشة.
- 2
- 3 استخدم مفاتيح التنقل لتحديد الصورة التي تريد عرضها وحدد عرض لتكبيرها.

التقاط صورة سريعة

- 1 اضغط مفتاح الكاميرا الموجود في الجانب الأيمن من الهاتف نحو الأسفل. سيظهر محدد المنظر في الكاميرا على الشاشة.
 - 2 مع الإمساك بالهاتف أفقياً، صوّب العدسة باتجاه موضوع الصورة.
 - 3 اضغط مفتاح الكاميرا بشكل جزئي. يظهر صندوق البؤرة في وسط شاشة محدد المنظر. ضع الهاتف بحيث يمكنك مشاهدة موضوع الصورة في صندوق البؤرة. عندما يتحوّل لون صندوق البؤرة إلى أخضر، فهذا يعني أن الكاميرا تركز على موضوع الصورة.
 - 4 اضغط مفتاح الاختيار الأوسط أو اضغط مفتاح الكاميرا نحو الأسفل لالتقاط صورة.
- ملاحظة: يمكنك أيضاً الوصول إلى قائمة الكاميرا من شاشة وضع الانتظار. حدد القائمة وحدد الكاميرا. وقم بالتمرير إلى أسفل وحدد الكاميرا لفتح محدد المنظر.

بعد التقاط الصورة

- تظهر الصورة الملتقطة على الشاشة. ويظهر اسم الصورة عبر أسفل الشاشة. وستشاهد خمسة خيارات تكون معروضة في الجانب الأيمن من الشاشة.
-  صور - حدد لاستعراض الصور الأخرى في الألبوم. سيتم حفظ الصورة الحالية.
-  إرسال - حدد لإرسال الصورة كرسالة وسائط متعددة أو بريد إلكتروني.
-  صورة جديدة - التقاط صورة أخرى على الفور. سيتم حفظ الصورة الحالية.
-  استخدام ك - حدد لفتح قائمة فرعية لتعيين صورتك كخلفية أو معرّف صورة.
-  حذف - احذف الصورة التي التقطتها للتو وأكد ذلك بتحديد نعم. يظهر محدد المنظر من جديد.

حساب البريد الإلكتروني - يمكنك إعداد حساب بريد إلكتروني.

نقطة الوصول - يمكنك إعداد نقطة الوصول إلى البريد الإلكتروني.

الفاصل الزمني للاسترداد - اختر مدى تكرار قيام BL20v بالتحقق من وجود رسائل بريد إلكتروني جديدة.

التوقيع - أنشئ توقيعاً على البريد الإلكتروني وشغّل هذه الميزة.

تغيير الإعدادات الأخرى

اضغط على القائمة وحدد مراسلة واختر الإعدادات ثم:

رقم البريد الصوتي - يتم تخزين رقم بريدك الصوتي هنا. اتصل بمشغّل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

رسالة الخدمة - يمكنك هنا أن توقف تشغيل

رسالة الخدمة، مما يعني توقف دفع الرسائل إلى

جهازك مباشرة عند تلقيها. إلا عندما تتحقق من وجود رسائل جديدة.

رسالة معلومات - اختر حالة الوصول. والتنبيهات ولغة رسائل المعلومات.

إدارة الرسائل

إذا شاهدت الرسالة لا توجد مساحة كافية للرسائل.
فعليك حذف بعض الرسائل لتوفير مساحة.

يمكنك استخدام صندوق الوارد لإدارة رسائلك.

استخدام النماذج

يمكنك إنشاء نماذج للرسائل النصية ورسائل الوسائط المتعددة التي ترسلها بشكل متكرر. هناك بعض النماذج الموجودة مسبقاً على هاتفك، والتي يمكنك تعديلها إذا ما رغبت في ذلك.

1 اضغط على القائمة. ثم حدد الرسائل واختر النماذج.

2 اختر النص أو الوسائط المتعددة. يمكنك من ثم تحديد الخيارات واختيار تعديل لتغيير نماذج موجودة لإضافة نموذج جديد أو حذف نماذج.

3 لإرسال نموذج الوسائط المتعددة، قم بتحديد النموذج الذي تريد إرساله واختر الخيارات وحدد اكتب رسالة وسائط متعددة.


4 حدد جهة اتصال وحدد إرسال.

تغيير إعدادات البريد الإلكتروني

يمكنك تكييف إعدادات البريد الإلكتروني وفق تفضيلاتك الخاصة.

1 اضغط على القائمة. حدد الرسائل واختر الإعدادات.

2 حدد بريد إلكتروني ويمكنك من ثم تكييف الإعدادات التالية:

1 اضغط على القائمة. حدد الرسائل واختر صندوق الوارد. أو هناك طريقة سريعة تقضي بتحديد  على وضع الانتظار لتعديل رسالة جديدة.

2 حدد الخيارات ثم اختر القيام بما يلي:

حذف - حذف الرسالة المحددة.

رد؛ - إرسال رد على الرسالة المحددة.

إعادة توجيه - إرسال الرسالة المحددة إلى شخص آخر.


إجراء مكالمة - الاتصال بالشخص الذي أرسل إليك الرسالة.

معلومات - عرض تفاصيل تتعلق بالرسالة. وقت إرسالها مثلاً.

نسخ/نقل - اختر نسخ أو نقل الرسالة المحددة إلى بطاقة SIM أو الهاتف.

تحديد متعدد - يمكنك وضع علامة على رسائل متعددة ثم حذف الرسائل المحددة أو نقلها إلى حافظتي.

عامل التصفية - يمكنك تصفية نوع محدد من الرسائل (مثلاً رسالة نصية).

إذا شاهدت الرسالة لا توجد مساحة لرسالة SIM.
فعليك أن تحذف بعض الرسائل النصية مع  من صندوق الرسائل.

حافظات الرسائل

اضغط على القائمة، وحدد الرسائل. إن بنية

الحافظة المستخدمة في الهاتف BL20v تفسر نفسها بنفسها بطريقة معقولة.

صندوق الوارد - توضع في صندوق الوارد كل الرسائل التي تلقاها. من هنا يمكنك الرد، وإعادة التوجيه والكثير غير ذلك. انظر أدناه للحصول على التفاصيل.

صندوق البريد الإلكتروني - يحتوي على كل رسائل البريد الإلكتروني. حدد الحساب الذي تريد استخدامه ثم حدد استرداد. فيتصل الهاتف BL20v بحساب البريد الإلكتروني ويسترد رسائلك الجديدة.

المسودات - إذا لم يكن لديك الوقت الكافي للانتهاء من كتابة رسالة، فيمكنك أن تحفظ هنا ما كتبته حتى الآن.

صندوق الصادر - عبارة عن حافظة لحفظ الرسائل مؤقتاً فيما يكون إرسالها جارياً.

المرسلة - توضع كل الرسائل التي أرسلتها في حافظة المرسلة.

النماذج - لائحة برسائل مفيدة مكتوبة مسبقاً لإجراء رد سريع.

استرداد التنزيل - حدد الرؤوس فقط. الرؤوس + النص (فقط لحساب IMAP4) أو الكل.

لقد تم إعداد حسابك الآن، وسيظهر في قائمة الحسابات في حافظة البريد الإلكتروني.

إرسال بريد إلكتروني باستخدام حسابك الجديد

إرسال/استلام رسالة بريد إلكتروني. عليك إعداد حساب بريد إلكتروني.

1 حدد القائمة ثم حدد الرسائل واختر إنشاء رسالة جديدة.

2 اختر البريد الإلكتروني فيفتح بريد إلكتروني جديد.

3 اكتب موضوعاً ثم اضغط موافق.

4 أدخل رسالتك باستخدام وضع T9 التكهني أو وضع ABC اليدوي. انظر إدخال النص لمعرفة كيفية التبديل بين مختلف أوضاع إدخال النص.

5 حدد الخيارات واختر مرفقاً لإضافة: صورة أو صوت أو فيديو أو مستند أو جهة اتصال أو بطاقة العمل الخاصة بي أو جدول.

6 اضغط إرسال وأدخل عنوان المستلم أو اضغط الخيارات وحدد الاسماء لفتح قائمة الاسماء.

7 اضغط إرسال فيتم إرسال بريدك الإلكتروني.

إعداد البريد الإلكتروني

كلمة مرور خادم الصادر - أدخل تفاصيل الحساب.

إدخال المعلومات التالية. اختر الخيارات وحدد الإعدادات المتقدمة.

نوع البروتوكول - حدد نوع صندوق البريد. POP3 أو IMAP4.

الحد الأقصى لحجم الاستلام - اختر حد حجم رسائل البريد الإلكتروني. الحجم الأقصى هو 300 كيلو بايت.

حفظ في الخادم - اختر ما إذا كنت ترغب

في حفظ رسائل البريد الإلكتروني في الخادم.

بالنسبة إلى حسابات IMAP4 يتم دوماً حفظ النسخ.

تسجيل الدخول الآمن - **APOP** - اختر ما إذا كنت ترغب في حفظ رسائل البريد الإلكتروني إلى خادم الهاتف (فقط لحساب IMAP4).

إدخال التوقيع - اختر ما إذا كنت تريد إدخال

التوقيع تلقائياً في رسائل البريد الإلكتروني.

عنوان بريد الرد - أدخل عنوان البريد الإلكتروني "الرد على".

رقم منفذ الوارد - هذا الرقم هو عادة 110

لحسابات POP3 و 143 لحسابات IMAP4.

رقم منفذ الصادر - هذا الرقم هو عادة 25.

استرداد تلقائي - حدد هذا الخيار لاسترداد رسائل البريد الإلكتروني تلقائياً.

يمكنك أن تبقى على تواصل أثناء التنقل من خلال استخدام البريد الإلكتروني على الهاتف BL20v. فعملية إعداد حساب بريد إلكتروني POP3 أو IMAP4 تعتبر عملية بسيطة وسهلة.

1 اضغط على القائمة. حدد الرسائل واختر الإعدادات.

2 حدد بريد إلكتروني ثم حساب بريد إلكتروني.

3 حدد جديد.

4 يمكنك أن تختار الآن كيفية عمل حسابك:

اسم الحساب - أدخل اسماً لهذا الحساب.

عنوان البريد الإلكتروني - أدخل عنوان البريد الإلكتروني لهذا الحساب.

اسمي - أدخل اسمك.

خادم البريد الوارد - أدخل تفاصيل الحساب.

اسم المستخدم - أدخل اسم مستخدم

الحساب.

كلمة المرور - أدخل كلمة مرور الحساب.

خادم البريد الصادر - أدخل تفاصيل الحساب.

مصادقة البريد الصادر حدد تشغيل أو إيقاف التشغيل.

معرف خادم الصادر - أدخل تفاصيل الحساب.

إدخال النص

يمكنك إدخال الأحرف الأبجدية والرقمية باستخدام لوحة المفاتيح على الهاتف. فتخزين الأسماء مثلاً في الأسماء وكتابة رسالة وإنشاء أحداث مجدولة في التقويم كلها عمليات تتطلب إدخال النص. وتتوفر أساليب إدخال النص التالية في الهاتف: وضع T9 التكهني، ووضع ABC اليدوي، ووضع 123.

ملاحظة: قد تسمح بعض الحقول بوضع إدخال نص واحد فقط (مثل رقم الهاتف في حقول دفتر العناوين).

لتشغيل وضع T9 في حقل إدخال النص، اختر الخيارات، حدد تعيين **T9** واختر تشغيل أو اضغط ببساطة **#** باستمرار لبضع ثوان. عندما يكون وضع T9 قيد التشغيل، يمكنك تبديل وضع إدخال النص وذلك بضغط **#**. وستلاحظ مؤشر وضع إدخال النص في الزاوية اليسرى العليا من الشاشة.

لإدخال رمز في حقل إدخال النص، اضغط على المفتاح ***** وحدد رمزاً، ثم حدد موافق.

أكمل كل كلمة بمسافة وذلك بضغط **0**.

حذف حرف، اضغط على المفتاح **<**.

وضع T9 التكهني

يستخدم وضع T9 التكهني قاموساً مضمّناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسلات المفاتيح التي تضغط عليها. ما عليك إلا ضغط مفتاح الرقم المقترن بالحرف الذي تريد إدخاله، وسيتعرف القاموس على الكلمة فور إدخال كل الأحرف. اضغط مثلاً **3, 5, 3, 8, 4, 7, 6, 3** لكتابة 'telephone'.

إذا لم تظهر الكلمة المطلوبة، فحدد الخيارات وحدد كلمة **T9** جديدة، ثم يمكنك إدخال الكلمة باستخدام وضع ABC اليدوي. تضاف كلمتك إلى القاموس.

ملاحظة: يمكنك تحديد لغة T9 مختلفة وذلك بالضغط على الخيارات وتحديد لغة الكتابة.

وضع ABC اليدوي

قد تحتاج إلى ضغط المفتاح بشكل متكرر لإدخال حرف وذلك عند التشغيل ضمن وضع ABC اليدوي. فلكتابه الكلمة 'hello'، اضغط **4** مرتين، و**3** مرتين، و**5** ثلاث مرات، و**5** ثلاث مرات أخرى، ثم **6** ثلاث مرات.

وضع 123

اكتب الأرقام وذلك باستخدام زر ضغط واحدة لكل رقم. يمكنك أيضاً إضافة أرقام مع البقاء في أوضاع الأحرف وذلك بالضغط باستمرار على المفتاح المطلوب.

الرسائل

الرسائل

يتضمّن الهاتف BL20v وظائف متعلقة بـ SMS (خدمة الرسائل القصيرة). و بـ MMS (خدمة رسائل الوسائط المتعددة). والبريد الإلكتروني. وكذلك رسائل خدمة الشبكة. ما عليك إلا الضغط على القائمة وتحديد الرسائل.

إرسال رسالة


1 اضغط على القائمة. وحدد الرسائل ثم اختر إنشاء رسالة جديدة.

2 اختر الرسالة لإرسال رسالة SMS أو MMS.

3 يفتح محرر رسائل جديدة. يجمع محرر الرسائل ما بين SMS وMMS ضمن واجهة بديهية واحدة سهلة الاستخدام للتبديل بين الأوضاع. الضبط الافتراضي لمحرر الرسائل هو وضع SMS.

4 أدخل رسالتك باستخدام وضع T9 التكهني أو وضع ABC اليدوي. انظر إدخال النص لمعرفة كيفية التبديل بين مختلف أوضاع إدخال النص.

- 5 حدد الخيارات واختر إدخال لإضافة صورة أو صوت أو فيديو أو رمز أو نموذج نص أو رمز تعبيرى أو اسم ورقم أو شرحة جديدة أو موضوع أو المزيد جهة اتصال/بطاقة العمل الخاصة بي/الجدول).
- 6 اضغط على المفتاح الأوسط لإرسال إلى.
- 7 أدخل رقم الهاتف أو اضغط على الخيارات وحدد الاسماء أو القائمة الحديثة لفتح قائمة الاسماء. يمكنك إضافة جهات اتصال عديدة.
- 8 حدد إرسال.

 **خبر:** إذا تمت إضافة صورة أو صوت أو فيديو أو شرحة جديدة أو موضوع إلى محرر الرسائل. فسيتم تلقائياً تحويل العناصر المضافة إلى وضع MMS وسيُفرض رسم عليك مقابل ذلك.

نسخ إلى SIM/الهاتف - اختر النقل أو النسخ إلى بطاقة SIM أو الهاتف (وفقاً للموقع حيث قمت أصلاً بحفظ جهة الاتصال).

إضافة جهة اتصال إلى مجموعة

يمكنك حفظ الاسماء ضمن مجموعات. بوضع زملائك في العمل وأفراد عائلتك ضمن مجموعات مختلفة مثلاً.

1 حدد الاسماء واختر المجموعات.

2 قم بالتمرير إلى المجموعة التي تريد إضافة جهة اتصال إليها وحدد عرض ثم حدد إضافة.

3 افتح الاسماء. قم بالتمرير إلى أي جهة اتصال تريد إضافتها إلى المجموعة واضغط على .

ثم حدد تم.

4 حدد نعم إذا كنت متأكداً.

نلميح! يمكنك تعيين نغمة رنين أو رمز أو مجموعة. حدد المجموعة التي تريد تعيين نغمة رنين أو رمز لها وحدد الخيارات واختر العنصر المطلوب.

إعادة تسمية مجموعة

يمكنك إعادة تسمية أي مجموعة بشكل يتلائم مع وضع عيشك.

1 حدد الاسماء واختر المجموعات.

2 حدد مجموعة تريد إعادة تسميتها.

3 حدد الخيارات. وحدد إعادة تسمية وأدخل الاسم الجديد للمجموعة.

4 حدد حفظ.

ملاحظة: يمكنك فقط تعيين جهة اتصال إلى

مجموعة أو إضافة صورة إلى جهة اتصال تم

حفظها في ذاكرة الهاتف (وليس على بطاقة SIM).

البحث عن جهة اتصال

- 1 حدد الاسماء في شاشة وضع الانتظار. ثم اختر بحث.
- 2 باستخدام لوحة المفاتيح. أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها. وهكذا. للاتصال بالكتاب. اضغط **6** ثلاث مرات.
- 3 للتمرير عبر الاسماء وأرقامها المختلفة استخدم أسهم التنقل.

إضافة جهة اتصال جديدة

- 1 حدد الاسماء واختر إنشاء جهة اتصال جديدة.
 - 2 اختر ما إذا كنت تريد تخزين جهة الاتصال الجديدة على الهاتف أو على بطاقة **SIM**.
 - 3 أدخل كل المعلومات الموجودة في الحقول المتوفرة وحدد حفظ.
- أو باستخدام الطريقة الأسرع بعض الشيء...
- 1 أدخل الرقم الذي ترغب في تخزينه على شاشة وضع الانتظار وحدد الخيارات.
 - 2 اختر حفظ أو إضافة إلى جهة الاتصال الموجودة.
 - 3 أدخل المعلومات المناسبة كما جاء أعلاه وحدد حفظ.

ملاحظة: عند قيامك بتخزين عنوان بريد إلكتروني لجهة اتصال. اضغط ***** لإدخال رمز وقيم بالتمرير بواسطة أسهم التنقل حتى تشاهد @.

خيارات الاسماء

- هناك العديد من الأمور التي يمكنك القيام بها عند عرض جهة اتصال. إليك الطريقة التي تتيح لك الوصول إلى قائمة خيارات واستخدامها:
- 1 افتح جهة الاتصال التي تريد استخدامها. انظر البحث عن جهات اتصال أعلاه.
 - 2 حدد الخيارات لفتح قائمة الخيارات. من هنا يمكنك:

تعديل - تغيير أي من تفاصيل جهة الاتصال.

رسالة جديدة - إرسال رسالة إلى جهة الاتصال. إذا كان لدى جهة الاتصال عنوان بريد إلكتروني. فحدد ما إذا كنت ترغب في إرسال رسالة. أو بريد إلكتروني.

إرسال عبر - إرسال تفاصيل تتعلق بجهة الاتصال إلى شخص آخر كبطاقة عمل. اختر الإرسال ك رسالة نصية. أو رسالة وسائط متعددة. أو عبر **Bluetooth** أو بواسطة البريد الإلكتروني.

حذف - حذف جهة الاتصال. حدد نعم إذا كنت متأكدًا.
جهة اتصال جديدة - إضافة جهة اتصال جديدة.

حذف متعدد - ضع علامات على عدة جهات اتصال لحذفها.

استخدام تحويل المكالمات

- 1 حدد القائمة، ثم حدد الإعدادات واختر مكالمة.
 - 2 حدد تحويل المكالمات.
 - 3 اختر ما إذا كنت تريد أن يتم تحويل كل المكالمات، عند عدم الرد. عندما لا يكون الوصول إليك ممكناً.
 - 4 اختر تنشيط وحدد ما إذا كنت تريد أن يتم التحويل إلى رقم آخر أو رقمك المفضل.
 - 5 أدخل رقم التحويل أو حدد بحث لاستعراض الأسماء لرقم التحويل.
- ملاحظة: يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.
- نلميح!** لإيقاف تشغيل كل عمليات تحويل المكالمات، اختر إلغاء تنشيط الكل من قائمة تحويل المكالمات.

استخدام حظر المكالمات

- 1 حدد القائمة، ثم حدد الإعدادات واختر مكالمة.
- 2 حدد حظر المكالمات واختر المكالمات الصوتية.
- 3 حدد خيارات:
- 4 حدد تنشيط وأدخل كلمة مرور حظر المكالمات. تحقق من توفر الخدمة مع مشغل الشبكة.

نلميح! حدد رقم اتصال محدد من القائمة اتصال لتنشغيل وجميع قائمة بالأرقام التي يمكن طلبها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من مشغل الشبكة. عند التشغيل، وحدها الأرقام المضمّنة في قائمة أرقام الاتصال المحدد هي التي يمكن طلبها من هاتفك.

ضبط مستوى صوت المكالمة

لضبط مستوى صوت مكالمة أثناء مكالمة. اضغط مفتاح الإقفال. ثم اضغط مفتاح مستوى الصوت في الجانب الأيمن من الهاتف.

الاتصال السريع

يمكنك تعيين رقم اتصال سريع لجهة اتصال تتصل بها بشكل متكرر.

1 اضغط الأسماء واضغط على القائمة. ثم حدد الاتصال السريع.

2 يتم مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع 1 ولا يمكنك تغيير ذلك. حدد أي رقم آخر سواء باستخدام سهم مفتاح التنقل وتحديد تعيين أو بضغط مفتاح الرقم الفعلي.

3 افتح دفتر العناوين. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم باستخدام سهم مفاتيح التنقل. ثم حدد موافق.

لطلب رقم اتصال سريع. اضغط باستمرار على الرقم المعين حتى ظهور اسم جهة الاتصال على الشاشة. تبدأ المكالمة تلقائياً. لا حاجة إلى ضغط



عرض سجل المكالمات

اضغط القائمة. وحدد المكالمات. اختر عرض ما يلي:

كل المكالمات - عرض قائمة كاملة تتضمن كل الأرقام التي طلبتها. واستلمتها ولم ترد عليها.

مكالمات لم يرد عليها - عرض قائمة بأي مكالمات لم ترد عليها.

مكالمات صادرة - عرض قائمة بكل الأرقام التي طلبتها.

مكالمات مستلمة - عرض قائمة بكل الأرقام التي اتصلت بك.

مدة المكالمات - عرض تفاصيل تتعلق بمدة مكالماتك؛ تلك التي تلقيتها وتلك التي طلبتها.

تكاليف المكالمات - عرض التكاليف التي تم تطبيقها على مكالماتك الأخيرة أو كل المكالمات. هذه الخدمة تعتمد على الشبكة. وبعض مشغلي الشبكات ليس باستطاعتهم دعم هذه الخدمة.

حجم البيانات - عرض كمية البيانات التي استلمتها وأرسلتها بالكيلو بايت.

تلميح! من أي سجل مكالمات حدد خيارات وحذف لحذف عنصر مسجل محدد أو كل العناصر المسجلة.

تلميح! باستخدام سهم مفتاح التنقل. قم بتمييز أي إدخال مكالمة فردي لعرض تاريخ ووقت المكالمة. لعرض مدة المكالمة حدد عرض.


المكالمات

إجراء مكالمة



- 1 أدخل الرقم باستخدام لوحة المفاتيح. لحذف رقم اضغط على .
- 2 اضغط على  لبدء المكالمة.
- 3 لإنهاء المكالمة، اضغط على .

نلميح! لإدخال + عند إجراء مكالمة دولية، اضغط باستمرار 0.

إجراء مكالمة من الأسماء

- 1 حدد الأسماء في شاشة وضع الانتظار.
- 2 باستخدام لوحة المفاتيح، أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها، وهكذا، للاتصال بالمكتب، اضغط 6 ثلاث مرات.
- 3 حدد اتصال أو اضغط على  لبدء المكالمة.

الرد على مكالمة ورفضها

- عندما يرن الهاتف، اضغط على قبول أو اضغط  للرد على المكالمة.
- أثناء رنين الهاتف، اضغط مفتاح إيقاف، ثم حدد، صامتة لكتم الرنين. يُعتبر هذا الأمر جيداً إذا كنت قد نسيت تغيير وضع الهاتف إلى صامتة أثناء حضور اجتماع ما.
- اضغط على  أو حدد رفض لرفض المكالمة الواردة.

نلميح! يمكنك تغيير الإعدادات على هاتفك للإجابة على المكالمات من خلال طرق مختلفة.

اضغط القائمة، وحدد الإعدادات واختر مكالمة واختر إعدادات عامة. حدد وضع الرد واختر من ضمن فتح القطعة المنزلقة. أو أي مفتاح أو مفتاح الإرسال فقط.

شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة، والرسائل الجديدة وفترة عمل البطارية. وكذلك إعلامك ما إذا كان Bluetooth نشطاً.

يفسر الجدول التالي معنى الرموز التي من المحتمل أن تشاهدها على شريط الحالة.

| الوصف | الرمز |
|---------------------------------|---|
| رسالة جديدة |  |
| رسالة صوتية جديدة |  |
| الوضع عام قيد الاستخدام |  |
| الوضع صامت قيد الاستخدام |  |
| الوضع اهتزاز قيد الاستخدام |  |
| الوضع خارجي قيد الاستخدام |  |
| الوضع سماعة الرأس قيد الاستخدام |  |
| فترة العمل المتبقية للبطارية |  |
| البطارية فارغة |  |

| الوصف | الرمز |
|---|--|
| قوة إشارة الشبكة (يختلف عدد الأشرطة) |  |
| إشارة الشبكة غير متوفرة |  |
| GPRS متوفر |  |
| EDGE متوفر |  |
| وضع الرحلات الجوية منشط |  |
| الكلمات محوطة |  |
| خدمة التجوال |  |
| Bluetooth® منشط |  |
| خدمة WAP متصلة |  |
| تم تعيين منبه |  |
| المهام |  |

شاشة وضع الانتظار

المفاتيح السريعة

توفر المفاتيح السريعة وصولاً سهلاً بمجرد لمسة واحدة إلى أكثر الوظائف استخداماً.

➔ قم بتحديد مفتاح محرر الرسائل.

⬅ حدد لاختيار وضع صوتي لهاتفك.

⬇ حدد لفتح قائمة سريعة.

⬇ حدد لفتح الاسماء.

القائمة الرئيسية

توفر القائمة الرئيسية 12 خيار قائمة. لفتح القائمة الرئيسية:

1 حدد القائمة.

2 تظهر القائمة الرئيسية على الشاشة.

3 انقل الصورة المحددة إلى الموقع الذي ترغب به. وحدد المفتاح الأوسط للمفتاح.

نصيحة إلى العميل

للسماح بحساسية أفضل للهوائي تفتح LG بأن تحمل الهاتف كما يظهر في الرسم التوضيحي أدناه.



يرجى عدم تغطية منطقة الهوائي بيدك أثناء المكالمات أو عند استخدام اتصال Bluetooth. قد يحدث تشويش وتراجع في جودة الصوت.


بطاقة الذاكرة

تركيب بطاقة الذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة الذاكرة. يدعم هاتف BL20v بطاقة الذاكرة تصل سعتها إلى 16 جيجابايت.

تلميح! بطاقة الذاكرة هي عبارة عن ملحق اختياري.


افتح غطاء فتحة بطاقة الذاكرة. حرّك بطاقة الذاكرة إلى داخل الفتحة. حتى تستقر في مكانها. تأكد من كون ناحية الموصلات الذهبية موجهة نحو الأسفل.

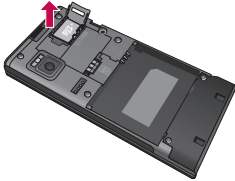

تنسيق بطاقة الذاكرة

إذا لم تكن بطاقة الذاكرة مهيأة، فعليك تهيئتها قبل أن تبدأ باستخدامها.

- 1 من شاشة وضع الانتظار اضغط على القائمة وحدد الإعدادات.
- 2 اختر حالة الذاكرة وحدد الذاكرة الخارجية.
- 3 اضغط على تهيئة، وأدخل كلمة المرور، التي تم تعيينها إلى 0000 كضبط افتراضي. ستتم تهيئة بطاقتك وتصبح جاهزة للاستخدام.
- 4 لعرض المحافظ الجديدة التي تمت تهيئتها على هاتف BL20v اضغط على القائمة وحدد الاستوديو. اختر الذاكرة الخارجية.

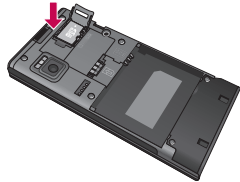

حذف بطاقة الذاكرة


افتح القطعة المنزلقة وقم بإخراج بطاقة الذاكرة بلطف وذلك بدفعها كما يظهر في الرسم التخطيطي التالي:

تحذير: عندما تقوم بتهيئة بطاقة الذاكرة، سيتم مسح كل محتواها. إذا لم تكن ترغب في فقدان البيانات الموجودة على بطاقة الذاكرة، فعليك إجراء نسخة احتياطية عنها أولاً.

تركيب بطاقة SIM و البطارية


1 انزع غطاء البطارية والبطارية

حرك غطاء البطارية لأسفل واسحب البطارية إلى الخارج.

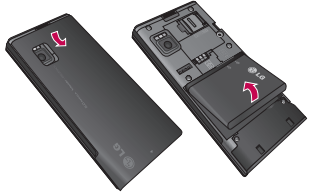


2 تركيب بطاقة USIM

ادفع بطاقة USIM إلى داخل حاملها. تأكد من كون ناحية الملامسات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. لإزالة بطاقة USIM، اسحبها بلطف في الاتجاه المعاكس.

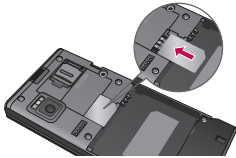


3 تركيب البطارية

قم أولاً بإدراج الجهة العليا للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة ملامسات البطارية مع أطراف توصيل الهاتف. اضغط جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.



⚠ تحذير: لا تخرج البطارية عندما يكون الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

نظرة على الهاتف وهو مفتوح

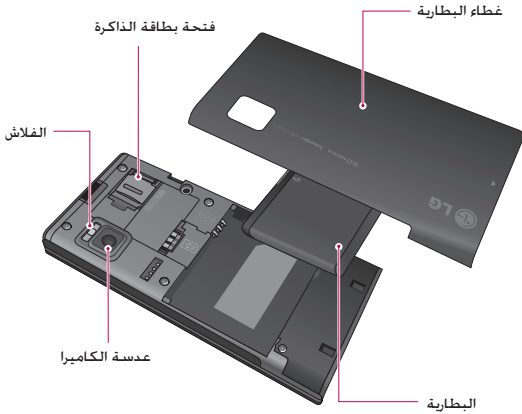

التعرّف على هاتفك

موصل الشاحن. الكبل. الجهاز اللابديوي



| | |
|----|-------------------------------------|
| 40 | الإعدادات |
| 40 | تغيير إعدادات الشاشة |
| 40 | تغيير إعدادات الحماية |
| 41 | إعادة إعداد الهاتف |
| 41 | عرض حالة الذاكرة |
| 41 | تغيير إعدادات Bluetooth |
| 41 | تغيير إعدادات إمكانية الاتصال |
| 42 | الاقتران بجهاز Bluetooth آخر |
| 42 | استخدام سماعة رأس Bluetooth |
| 43 | تحديث برنامج الهاتف |
| 44 | الملحقات |
| 45 | خدمة الشبكة |
| 45 | بيانات تقنية |
| 47 | إرشادات لاستخدام آمن وفعال |

| | | | |
|---------|--|---------|--|
| 33..... | إرسال فيديو كليب | 25..... | كاميرا الفيديو |
| 33..... | قائمة خيارات الفيديو | 25..... | التقاط فيديو سريع |
| 34..... | الذاكرة الخارجية | 25..... | بعد الانتهاء من التقاط الفيديو |
| 34..... | استخدام الهاتف كوسيلة تخزين ذات سعة كبيرة | 26..... | مشاهدة ملفات الفيديو المحفوظة |
| 35..... | نقل ملف إلى هاتفك | 26..... | ضبط مستوى الصوت عند عرض فيديو |
| 35..... | إرسال الملفات واستلامها باستخدام Bluetooth | 27..... | MP3 مشغّل |
| 37..... | الألعاب والتطبيقات | 27..... | مشغّل MP3 |
| 37..... | الألعاب والتطبيقات | 27..... | نقل الموسيقى إلى الهاتف |
| 37..... | تشغيل لعبة | 27..... | تشغيل أغنية |
| 37..... | عرض التطبيقات | 28..... | إنشاء قائمة تشغيل |
| 38..... | المتصفح | 28..... | تشغيل قائمة التشغيل |
| 38..... | الوصول إلى ويب | 28..... | تعديل قائمة تشغيل |
| 38..... | إضافة الإشارات المرجعية والوصول إليها | 29..... | حذف قائمة تشغيل |
| 39..... | حفظ صفحة | 30..... | الاستوديو |
| 39..... | عرض محفوظات المتصفح | 30..... | الصور |
| 39..... | تغيير إعدادات متصفح ويب | 30..... | قائمة خيارات الصور |
| | | 31..... | إرسال صورة |
| | | 31..... | تنظيم الصور |
| | | 31..... | حذف صورة |
| | | 31..... | حذف صور متعددة |
| | | 32..... | إنشاء عرض شرائح |
| | | 32..... | أصوات |
| | | 32..... | استخدام صوت |
| | | 32..... | ملفات الفيديو |
| | | 32..... | مشاهدة فيديو |
| | | | استخدام الخيارات فيما الفيديو متوقف مؤقتاً |
| | | 33..... | |

| | | | |
|---------|------------------------------------|---------|----------------------------|
| 15..... | الاسماء | 6..... | التعرّف على هاتفك |
| 15..... | البحث عن جهة اتصال | 7..... | نظرة على الهاتف وهو مفتوح |
| 15..... | إضافة جهة اتصال جديدة | 8..... | تركيب بطاقة SIM و البطارية |
| 15..... | خيارات الاسماء | 9..... | بطاقة الذاكرة |
| 16..... | إضافة جهة اتصال إلى مجموعة | 9..... | تركيب بطاقة الذاكرة |
| 16..... | إعادة تسمية مجموعة | 9..... | حذف بطاقة الذاكرة |
| 17..... | الرسائل | 9..... | تنسيق بطاقة الذاكرة |
| 17..... | الرسائل | 10..... | شاشة وضع الانتظار |
| 17..... | إرسال رسالة | 10..... | المفاتيح السريعة |
| 18..... | إدخال النص | 10..... | القائمة الرئيسية |
| 19..... | إعداد البريد الإلكتروني | 11..... | شريط الحالة |
| | إرسال بريد إلكتروني باستخدام حسابك | 12..... | المكالمات |
| 20..... | الجديد | 12..... | إجراء مكالمة |
| 20..... | حافظات الرسائل | 12..... | إجراء مكالمة من الاسماء |
| 21..... | إدارة الرسائل | 12..... | الرد على مكالمة ورفضها |
| 21..... | استخدام النماذج | 13..... | ضبط مستوى صوت المكالمة |
| 21..... | تغيير إعدادات البريد الإلكتروني | 13..... | الاتصال السريع |
| 22..... | تغيير الإعدادات الأخرى | 13..... | عرض سجل المكالمات |
| 23..... | الكاميرا | 14..... | استخدام خويل المكالمات |
| 23..... | التقاط صورة سريعة | 14..... | استخدام حظر المكالمات |
| 23..... | بعد التقاط الصورة | | |
| 24..... | التعرّف على محدد المنظر | | |
| 24..... | عرض الصور المحفوظة | | |
| 24..... | تعيين صورة كخلفية أو معرّف صورة | | |

تهانينا لشرائك الهاتف المتقدم والصغير الحجم
BL20v من LG، والمصمّم للعمل مع تقنية
الاتصال الرقمي الأحدث للهواتف المحمولة.



قد تختلف بعض المحتويات الموجودة في هذا
الدليل عن هاتفك وذلك استناداً إلى برنامج
الهاتف أو موفر الخدمة.

دليل مستخدم BL20v

Downloaded from <http://www.gsmarc.com>