

English

العربية



دليل مستخدم

GS155



CE0168



English

العربية

User Guide

GS155

P/NO : MMBB0376417(1.0)

www.lg.com

دليل مستخدم GS155 - العربية

سيساعدك هذا الدليل على إدراك كيفية استخدام هاتفك المحمول الجديد، سيوفر لك شرحاً مفيداً للميزات الموجودة على هاتفك.

قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موقر الخدمة.



التخلص من الأجهزة القديمة لديك

- 1 عندما يكون هذا الشعاع سلة المهملات ذات العجلات والرسوم عليها إشارة الضرب، مرفقاً بمنح فذلك يعني أنّ المنتج مشمول بالتوجيه الأوروبي EC/2002/96
- 2 يجب التخلص من جميع المنتجات الكهربائية والإلكترونية بشكل منفصل عن المهملات العامة التي جمعها البلدية وذلك عبر وسائل جميع معبئة خذها الحكومة أو السلطات المحلية.
- 3 يساعد التخلص الصحيح من الأجهزة القديمة على تجنب التأثيرات السلبية على البيئة وصحة الإنسان.
- 4 للحصول على معلومات تفصيلية حول التخلص من الأجهزة القديمة، يرجى الاتصال بمكتب البلدية أو بخدمة التخلص من المهملات أو بالمتجر الذي اشتريته منه المنتج.




التعرّف على الهاتف الخاص بك



تثبيت بطاقة الذاكرة

قم بإزالة غطاء البطارية وادفع فتحة بطاقة الذاكرة واقبلها لأعلى. ضع بطاقة الذاكرة الخارجية microSD في المكان المخصص لها. تأكد من توجيه ناحية الملامسات الذهبية نحو الأسفل. لإخراج بطاقة الذاكرة الخارجية microSD، اسحبها بلطف في الاتجاه العاكس. يدعم هاتف GS155 بطاقة ذاكرة تصل سعتها إلى 2 جيجا بايت.

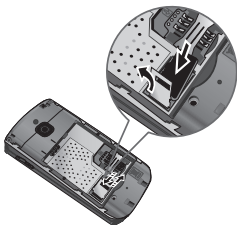

تثبيت بطاقة SIM وشحن البطارية


تثبيت بطاقة SIM

عندما نشترك بشبكة الهاتف الخليوي، يتم تزويدك بطاقة SIM مصحوبة بتفاصيل حول اشتراكك. مثل رمز PIN، وأي خدمات اختيارية متوفرة وغير ذلك.

هام! ؛ يمكن إلحاق ضرر ببطاقة SIM وملامساتها بسهولة عن طريق الخدش أو النثب. لذا كن حذراً عند التعامل معها وعند إدراجها أو إخراجها. يجب إبقاء كل بطاقات SIM بعيداً عن متناول الأطفال.

تدعم بطاقة SIM: 2G [3V / 1.8v]

الأشكال التوضيحية

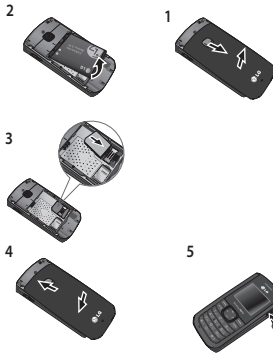

تحذير: لا نصح بإزالة البطارية عندما يكون الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى إلحاق ضرر بالهاتف.

خريطة القوائم

3 سجلات المكالمات

- 1 كل المكالمات
- 2 المكالمات التي لم يرد عليها
- 3 المكالمات الصادرة
- 4 المكالمات المستلمة
- 5 مدة المكالمات

2 الأسماء

- 1 البحث
- 2 جهة اتصال جديدة
- 3 الاتصالات السريعة
- 4 نسخ الكل
- 5 حذف الكل
- 6 حالة الذاكرة
- 7 المعلومات

1 الرسائل

- 1 رسالة جديدة
- 2 صندوق الوارد
- 3 السبوتات
- 4 صندوق المحادثة
- 5 صندوق الصادر
- 6 المرسلات
- 7 الاستماع إلى البريد الصوتي
- 8 رسائل المعلومات
- 9 النماذج
- 0 الإعدادات

6 الوسائط

- 1 الكاميرا
- 2 مشغل MP3
- 3 رايبو FM

5 الاستوديو

- 1 صوتي
- 2 أصواتي
- 3 أخرى

4 الألعاب

- 1 الكرة الفضائية

9 الإعدادات

- 1 الأوضاع
- 2 التاريخ والوقت
- 3 اللغات
- 4 الشاشة
- 5 المكالمات
- 6 إفعال المفاتيح تلقائياً
- 7 الحماية
- 8 توفير الطاقة
- 9 اتصال USB
- 0-خديد الشبكة
- * إعادة ضبط الإعدادات
- # حالة الذاكرة

8 منظم المواعيد

- 1 المنبه
- 2 التقويم
- 3 المذكرة


7 الأدوات

- 1 المصباح
- 2 المكالمات الوهمية
- 3 الحاسبة
- 4 ساعة الإيقاف
- 5 محول الوحدة
- 6 الساعة العالية
- 7 خدمات SIM
- 8 التطبيقات


تشغيل الهاتف وإيقاف تشغيله

- 1 اضغط باستمرار مفتاح الإنهاء إلى أن يتم التشغيل.
- 2 اضغط باستمرار مفتاح الإنهاء إلى أن يتم إيقاف التشغيل.

إجراء مكالة

- 1 أدخل الرقم باستخدام لوحة المفاتيح. حذف رقم. اضغط مفتاح المسح.
 - 2 اضغط  لبدء المكالة.
 - 3 لإنهاء المكالة، اضغط  .
- تلميح! لإدخال + عند إجراء مكالة دولية. اضغط باستمرار على 0.

إجراء مكالة من الأسماء

- 1 اضغط "البحث" عن جهات اتصال لفتح قائمة الأسماء.
 - 2 باستخدام لوحة المفاتيح أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها، وهكذا للاتصال بالملعب.
 - 3 للتمرير عبر الأسماء وأرقامها المختلفة، استخدم "مفتاح التنقل لليسار أو اليمين".
 - 4 اضغط  لبدء المكالة.
- تلميح! يمكنك تغيير الإعدادات على هاتفك للإجابة على المكالات من خلال طرق مختلفة. اضغط القائمة، وحد الإعدادات ثم اختر المكالة، حدد وضع الرد واحتر من ضمن أي مفتاح أو مفتاح الإرسال فقط.

الرد على مكالمة ورفضها

عندما ين الهاتف، اضغط على قبول أو اضغط على  للرد على المكالمة. أثناء رنين الهاتف، قم بتحديد صامت لكنم الرنين. يُعتبر هذا الأمر جيداً إذا كنت قد نسيت تغيير وضع الهاتف إلى صامت أثناء حضور اجتماع ما. اضغط على  أو رفض لرفض المكالمة الواردة.

تلميح! يمكنك تغيير الإعدادات على هاتفك للإجابة على المكالمات من خلال طرق مختلفة. اضغط القائمة. وحدد الإعدادات ثم اختر المكالمة. حدد وضع الرد واختر من ضمن أي مفتاح أو مفتاح الإرسال فقط.

تغيير إعدادات المكالمات

بإمكانك تعيين قائمة متعلقة بمكالمة. اضغط القائمة. وحدد الإعدادات ثم اختر الحماية.

- حظر المكالمات - حدد متى ترغب في حظر المكالمات.
- رقم اتصال محدد - اختر قائمة بالأرقام التي يمكن طلبها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من المشغّل. وحدد الأرقام المضمّنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

إدخال النص

يمكنك إدخال الأحرف الأبجدية أو الأرقام باستخدام لوحة المفاتيح على الهاتف. فتخزين الأسماء مثلاً في الأسماء وكتابة رسالة وإنشاء أحداث مجدولة في التقويم كلها عمليات تتطلب إدخال النص. وتتوفر أساليب إدخال النص التالية في الهاتف: وضع T9 التنبؤي. ووضع ABC اليدوي. ووضع 123. وملاحظة: قد تسمح بعض الحقول بوضع إدخال نص واحد فقط (مثل رقم الهاتف في حقول دفتر العناوين).


وضع T9 التنبؤي
يستخدم وضع T9 التنبؤي قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسلات المفاتيح التي تضغط عليها. ما عليك إلا ضغط مفتاح الرقم المقتن بالحرف الذي تريد إدخاله، وسيتعرف القاموس على الكلمة فور إدخال كل الأحرف.

وضع ABC اليدوي
ينح لك هذا الوضع إدخال الأحرف بالضغط على المفاتيح المعنون بواسطة الحرف المطلوب. مرة واحدة أو مرتين أو ثلاث مرات أو أربع مرات حتى يظهر الحرف.

وضع 123
اكتب الأرقام وذلك باستخدام ضغطة واحدة لكل رقم، يمكنك أيضاً إضافة أرقام مع البقاء في أوضاع الأحرف بالضغط باستمرار على المفاتيح المطلوب.

الرسائل القائمة 1
بتضمّن الهاتف GS155 وطلائف متعلقة بـ SMS (خدمة الرسائل القصيرة).



- إرسال رسالة**
- 1 اضغط القائمة. وحدد الرسائل ثم اختر رسالة جديدة.
 - 2 اختر الرسالة لإرسال رسالة SMS.
 - 3 افتح محرر رسائل جديدة. يجمع محرر الرسائل ما بين رسائل SMS ضمن واجهة بديهية واحدة. الضبط الافتراضي لمحرر الرسائل هو وضع SMS.

- 4 أدخل رسالتك باستخدام وضع T9 التنبؤي أو وضع ABC اليدوي. يمكنك تبديل وضع إدخال النص وذلك بضغط  .
- 5 اضغط الخيارات واختر إدراج لإضافة رمز أو نموذج نص أو الاسم والرقم.
- 6 اضغط إرسال إلى.
- 7 أدخل رقم الهاتف أو اضغط الخيارات وحدد الأسماء أو القائمة الحديثة لفتح قائمة الأسماء. يمكنك إضافة جهات اتصال عديدة.
- 8 اضغط إرسال.

الأسماء القائمة 2

البحث عن جهة اتصال

يمكنك البحث عن جهة اتصال في الأسماء لديك.

- 1 اضغط الأسماء واختر البحث. ثم حدد الأسماء من شاشة القائمة.
- 2 باستخدام لوحة المفاتيح، أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها، وهكذا، للاتصال بالمكتب. اضغط 6 ثلاث مرات.
- 3 للتمرير عبر الأسماء وأرقامها المختلفة، استخدم  و  .

سجلات المكالمات القائمة 3

- كل المكالمات: يمكنك عرض كافة قوائم المكالمات الصادرة أو الواردة.
- المكالمات التي لم يرد عليها: يمكنك عرض المكالمات التي لم يتم الرد عليها.
- المكالمات الصادرة: يمكنك عرض المكالمات الصادرة (التي قمت بطلبها أو حاولت إجرائها).
- المكالمات المستلمة: يمكنك عرض المكالمات المستلمة.
- مدة المكالمات: يسمح لك بعرض مدة المكالمات الواردة والصادرة. كما يمكنك إعادة تعيين مؤقت المكالمات.

ألعاب القائمة 4

يكون الهاتف GS155 محملاً مسبقاً بألعاب تهدف إلى تسليتك في أوقات الفراغ.

الاستوديو القائمة 5

يمكنك تخزين ملفات الوسائط المتعددة في ذاكرة الهاتف. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. الفائدة من استخدام بطاقة الذاكرة هي أنها تسمح لك بتحرير مساحة على ذاكرة الهاتف. سيتم حفظ كل ملفات الوسائط المتعددة في الاستوديو. اضغط على قائمة ثم حدد الاستوديو لفتح قائمة بالحافظات. يدعم هاتف GS155 الصور بتنسيق JPEG. إضافةً إلى ملفات الصوت MP3 وMIDI.

الوسائط القائمة 6

الكاميرا

التقاط صورة سريعة

باستخدام وحدة الكاميرا المضمّنة في الهاتف، يمكنك التقاط صور لأشخاص، بالإضافة إلى ذلك، يمكنك اختيار صور لاستخدامها كخلفية للشاشة.

- 1 اضغط القائمة وحدد الوسائط، ثم حدد الكاميرا أو انتقل مباشرةً إلى الكاميرا عبر مفتاح الاختصار بضغط مفتاح التنقل للأسفل.
- 2 مع الإمساك بالهاتف بشكل عمودي، صوّب العدسة باتجاه الشيء المراد تصويره.
- 3 اضغط مفتاح الالتقاط للانتقاط لالتقاط صورة.

مشغّل MP3

يتضمن الهاتف LG1515 من مشغّل MP3 مضمّن بحيث يمكنك تشغيل كافة أنواع الموسيقى المفضلة لديك.

تشغيل أغنية

- 1 اضغط القائمة وحدد الوسائط، ثم اختر مشغّل MP3.
 - 2 حدد كل الأغاني واختر الأغنية التي تريد تشغيلها، ثم انتقل إلى الخيارات واضغط التشغيل.
 - 3 أثناء تشغيل الموسيقى، انتقل إلى الخيارات <الإيقاف المؤقت لإيقاف الأغنية مؤقتاً.
 - 4 اضغط مفتاح التنقل لليمين للانتقال إلى الأغنية التالية.
 - 5 اضغط مفتاح التنقل لليسار للانتقال إلى الأغنية السابقة.
 - 6 أثناء تشغيل الموسيقى، اضغط مفتاح "الرجوع" لإيقاف الموسيقى والعودة إلى قائمة مشغّل MP3.
- يمكنك عرض الأغاني الحديثة، وقائمة التشغيل، والألبوم، والفنان والنوع وتشغيلها في القائمة.

أثناء تشغيل أغنية.

- 1 اضغط مطولاً مفتاح التنقل لليمين للتقديم السريع إلى الأمام.
- 2 اضغط مطولاً مفتاح التنقل لليسار للرجوع إلى الخلف.
- 3 إذا تم تشغيل أغنية لأكثر من 3 نوان وإذا قمنا بضغط مفتاح التنقل لليسار، فسيتم تشغيل الأغنية ذاتها من البداية وإلا فسيتم تشغيل الأغنية السابقة.

راديو FM

حين يتعدّ العنور على قناة FM أو حين يكون مستوى وضوح القناة منخفضاً، استخدم سماعة الأذن. تتوفر في طراز الهاتف GS155 من LG ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة للاستماع إليها أثناء التنقل. ملاحظة: ستحتاج إلى إدخال سماعات الرأس لكي تتمكن من الاستماع إلى راديو FM بشكل أوضح. أدخل الفابس بأخذ سماعة الرأس (هو المأخذ نفسه الذي تقوم بتوصيل الشاحن به).

الاستماع إلى الراديو

- 1 اضغط على القائمة وحدد الوسائط، ثم اختر راديو FM.
 - 2 حدد رقم القناة للمحطة التي تريد الاستماع إليها.
- ملاحظة: يمكنك الاستماع إلى الراديو عبر مكبر الصوت للضّمّن. اضغط خيارات. وحدد الاستماع عبر وحدد مكبر الصوت. يدعم الهاتف GS155 FM لاسلكي. لا يحتاج المستخدم إلى إدخال سماعة الأذن للاستماع إلى راديو FM في ظل الظروف العادية. في المناطق حيث تكون إشارة راديو FM ضعيفة، يمكن أن تتراجع الحساسية حسب وضع اللاسلكي والهوائي. لذلك يُنصح بإدراج سماعة الأذن للحصول على جودة أفضل لـ FM.

الأدوات / منظم المواعيد القائمتان 7 و 8

استخدام التقويم (القائمة < منظم المواعيد < التقويم)

عند دخولك إلى هذه القائمة، يظهر تقويم، جَد مؤشر مربع موضوع على التاريخ الحالي. يمكنك نقل المؤشر إلى تاريخ آخر باستخدام مفاتيح التنقل.

إضافة مذكرة (القائمة < منظم المواعيد < المذكرة)

يمكنك تسجيل مذكراتك الخاصة هنا.

تعيين المنبّه (القائمة < منظم المواعيد < المنبه)

يمكنك إعداد ما يصل إلى 3 ساعات منه بحيث ترنّ في وقت محدد.

استخدام الحاسبة (القائمة < الأدوات < الحاسبة)

تقوم الحاسبة بتطبيق وظائف حسابية رئيسية: الجمع والطرح والضرب والقسمة.

استخدام ساعة الإيقاف (القائمة < الأدوات < ساعة الإيقاف)

يتيح لك هذا الخيار استخدام وظيفة ساعة الإيقاف.

خوبيل وحدة (القائمة < الأدوات < محول الوحدة)

يسمح لك هذا الخيار بتحويل أي قياسات إلى الوحدة التي تريدها.

الساعة العالمية (القائمة < الأدوات < الساعة العالمية)

يمكنك التحقق من الوقت الحالي لتوقيت غرينتش (GMT) وتوقيتات المدن الرئيسية حول العالم.

خدمات SIM (القائمة < الأدوات < خدمات SIM)

هذه الميزة تعتمد على SIM وخدمات الشبكة، إذا كانت بطاقة SIM تعتمد خدمات SAT (أي مجموعة أدوات تطبيق SIM).

فستكون هذه القائمة اسم الخدمة الخاصة بالمشغلّ الحزنة على بطاقة SIM.

الإعدادات القائمة 9

تغيير الأوضاع (القائمة < الإعدادات < الأوضاع)

يمكنك تغيير نمطك إلى عام أو صامت. أو اهتزاز فقط. أو خارجي أو سماعة الرأس.

تغيير التاريخ والوقت (القائمة < الإعدادات < التاريخ والوقت)

يمكنك تعيين الوظائف المتعلقة بالتاريخ والوقت.

تغيير اللغة (القائمة < الإعدادات < اللغة)

يمكنك تغيير لغة النصوص التي تظهر على شاشة الهاتف. وسيؤثر هذا التغيير أيضاً على وضع إدخال اللغة.

تغيير إعدادات الشاشة (القائمة < الإعدادات < الشاشة)

يمكنك تغيير إعدادات شاشة الهاتف.

تغيير إعدادات الحماية (القائمة < الإعدادات < الحماية)

قم بتغيير إعدادات الحماية لحماية الهاتف GS155 والمعلومات الهامة التي يحتوي عليها.

• طلب رمز PIN - اختر رمز PIN الذي يجب طلبه عند تشغيل هاتفك.

• قفل المفاتيح التلقائي - إذا قمت بتنشيط هذه الوظيفة. فسيتم إقفال المفاتيح تلقائياً في وضع الانتظار من دون طلب الضغط على أي مفاتيح.

• قفل الهاتف - اختر رمز حماية لإقفال هاتفك عند التشغيل أو عند تغيير SIM أو على الفور.

• جهاز التتبع الخاص بمكافحة سرقة المحمول - عند سرقة الهاتف، يرسل الهاتف رسالة SMS إلى الأرقام المحددة من قبل المالك الحقيقي. يتوجب على المستخدم تكوين إعدادات ATMT (تنبع الهاتف ضد السرقة) عبر إدخال الاسم، ورقم الهاتف الأساسي، ورقم الهاتف الثانوي، يتوجب على المستخدم تعيين تشغيل ATMT (تنبع الهاتف ضد السرقة) لتنشيط ميزة ATMT (تنبع الهاتف ضد السرقة)، رمز ATMT (تنبع الهاتف ضد السرقة) الافتراضي هو "0000". ستحتوي رسالة ATMT (تنبع الهاتف ضد السرقة) على معلومات حول الهاتف المسرووق IMEI وموقعه الحالي ورقم هاتف الشخص الذي يستخدم الهاتف.

• تغيير الرموز - تغيير رمز الحماية أو رمز PIN2 أو رمز PIN. أدخل رمز الحماية القديم يتبعه الرمز القديم.

استخدام وضع الرحلات الجوية

1 اضغط (القائمة < الإعدادات > الأوضاع < وضع الرحلات الجوية

2 استخدم هذه الوظيفة للتبديل ما بين تشغيل أو إيقاف تشغيل وضع الرحلات الجوية، لن يكون باستطاعتك إجراء

مكالمات أو إرسال رسائل عندما يكون وضع الرحلات الجوية قيد التشغيل.

توفير الطاقة (القائمة < الإعدادات > توفير الطاقة)

إذا قمت بتعيين تشغيل دائم، فيمكنك توفير الطاقة عند عدم استخدام الهاتف. اختر أحد إعدادات توفير الطاقة التالية تشغيل دائم، أو الليل فقط أو إيقاف التشغيل.

إعادة تعيين الهاتف (القائمة < الإعدادات > إعادة تعيين الإعدادات)

استخدم إعادة التعيين لإعادة تعيين كل الإعدادات وفق تعريفاتها المحددة من قبل الشركة المصنعة، ومن أجل تنشيط هذه الوظيفة تحتاج إلى رمز الحماية، الرقم الافتراضي هو "0000".

تغيير اتصال USB

1 اضغط القائمة < الإعدادات > اتصال USB.

2 قم بالتغيير إلى وسيلة التخزين ذات سعة كبيرة أو PC suite أو السؤال دائماً. (سيتم تحديد السؤال دائماً كافتراضي)

إرشادات لاستخدام آمن و فعال

يرجى قراءة هذه الإرشادات البسيطة، عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني، تتوفر معلومات مفصلة أكثر في هذا الدليل.



- يجب إيقاف الهواتف المحمولة في كل الأوقات داخل الطائرة.
- لا تمسك الهاتف بيدك أثناء القيادة.
- لا تستخدم الهاتف بالقرب من محطات البنزين، أو مستودعات الوقود، أو المصانع الكيميائية أو المناطق التي تتم فيها عمليات تفجير.
- حفاظاً على سلامتك، استخدم "فقط" بطاريات وشواحن "أصلية".
- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنته جار. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال، فهو يحتوي على أجزاء صغيرة قد تتسبب بالاختناق عند انفصالها عنه.
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.

تنبيه

- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة بتعليق الهاتف، على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافةً، وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ.
- استخدم فقط الملحقات "الأصلية" لنفاذي إلحاق الضرر بالهاتف.
- خذ كل أجهزة الإرسال اللاسلكية مخاطر التشويش مع الأجهزة الإلكترونية الموجودة على مقربة منها. قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.
- يجب التخلص من البطاريات وفق القوانين السارية.
- لا تفكك الهاتف أو البطارية.

التعرّض لطاقة التردد اللاسلكي

معلومات حول التعرّض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR) لقد تمّ تصميم طراز الهاتف المحمول GS155 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرّض للموجات اللاسلكية. ويستند هذا المطلب إلى إرشادات علمية تتضمن هوامش سلامة مصمّمة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

- تستخدم إرشادات النيان للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR. وتجري اختبارات SAR باستخدام أساليب تعتمد على المقاييس فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كافة نطاقات التردد التي تمّ اختبارها.
- وعلى الرغم من وجود اختلافات بين مستويات SAR لتختلف طرازات هاتف LG. فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرّض للموجات اللاسلكية.
- SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين Commission on Non-Ionizing Radiation Protection (ICNIRP) هو 2 واط/كجم وهو حد مقسّم على نحو مناسب إلى 10 جرامات من النسيج.
- تبلغ أعلى قيمة SAR لطراز الهاتف هذا الذي تمّ اختباره بواسطة DASY4 للاستخدام على الأذن 1.03 واط/كيلوجرام (10 جرام) وتعند الحمل على الجسد تبلغ 0.440 واط/كيلوجرام (10 جرام).
- معلومات بيانات SAR للمقيمين في بلدان/مناطق تتبنى حد SAR الموصل به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) Electrical and Electronics Engineers وهو 1.6 واط/كجم كمتوسط لكل جرام واحد (1) من النسيج.

العناية بالمنتج وصيانته



تحذير

- استخدم فقط البطاريات، والشواحن، والملحقات الموافق على استخدامها مع طراز الهاتف المعلن هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة نطبق على الهاتف المحمول. وقد يكون خطيراً.
- لا نصح بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
 - ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
 - يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
 - تجنب إسقاط الوحدة.
 - لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
 - قد يلحق الضرر بطبقة الهاتف الخارجية إذا ما تمّت تغطيتها بمادة تغليف أو غلاف من الفينيل.
 - استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج. (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول.)
 - لا تعرّض هذه الوحدة للدخان أو الغبار الرائد.
 - لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
 - لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
 - لا تعرّض الهاتف للسوائل أو الرطوبة.
 - استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تضغط على الهوائي من دون وجود سبب يدعوك إلى ذلك.

تشغيل فَعَال للهاتف

الأجهزة الإلكترونية

قد تتعرض كل الهواتف المحمولة للتشويش، ما قد يؤثر على أدائها.

- لا نستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. جَنَّب وضع الهاتف على أجهزة ضبط النبض. أي الجيب على مستوى الصدر.
- قد تسبب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

السلامة على الطرقات

خُفِق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.

- لا نستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.
- تَوَقَّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمات إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة أجهزة لاسلكية مثبتة أو محمولة، فقد يتسبب ذلك بتعطله أو بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

جَنِّبِ إِحْقَاقَ الضَّرْرِ بِسَمْعِكَ

قد يؤدي تعرُّضك إلى أصوات عالية لفترات وقت طويلة إلى إحقاق الضرر بسمعك، ونوصي بالتالي بالألا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية، التزم بالقيود، واتبع الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود. لا تستخدمه بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال، أو المنفجرات في حجرة السيارة التي تحتوي على الهاتف المحمول وملحقاته.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض دون الحصول على إذن من قبل طاقم الطائرة.

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال، فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافةً، وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. راجع موقع الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى، ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصمّمة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة. مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار. إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلص منها كمخلفات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

AddressLG Electronics Inc, LG Twin Towers 20,
Yousido-dong, Yeongdeungpo-gu, Seoul, Korea 100-721

Product Details

Product Name

GSM 900 / DCS 1800 Dual band Terminal Equipment

Model Name

GS155

Trade Name

LG

CE 0168

Applicable Standards Details

RATTE Directive 1990/269/EEC

EN 301 480-01 V1.3.1, EN 301 480-07 V1.3.1

EN 301 811 V9.0.2

EN 60960:2001, EN62206-1:2006

EN 60950-1:2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(NB07)

BABT, Fench House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name**Issued Date**

Seung Myoun, Jr / Director 05.Feb. 2010

Signature of representative

LG Electronics Logistics and Services B.V.
Volkensloot 16, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 6904, e-mail : jacob @ lge.com

بيانات تقنية

عامة

اسم المنتج : GS155

النظام : GSM 900 / DCS 1800

درجات الحرارة المحيطة

الحد الأقصى : +55 درجة مئوية (تبريد)

+45 درجة مئوية (شحن)

الحد الأدنى : -10 درجات مئوية

GS155 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.




Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.




Getting to know your phone

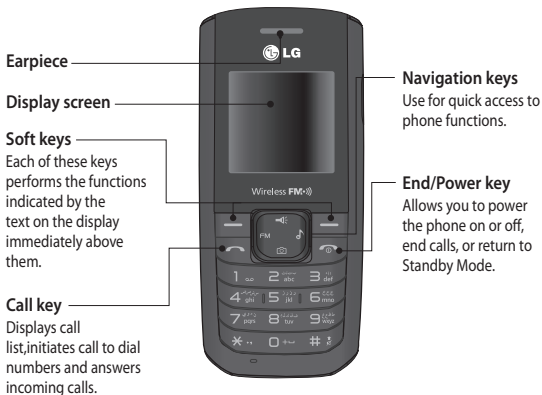

Installing a memory card

Remove the battery cover and push the memory card slot and flip up the slot. Put the microSD card on the card tray. Make sure that the gold contact area is facing downwards. To remove the microSD card, pull it gently in the opposite direction. The GS155 will support a memory card of up to 2 GB.

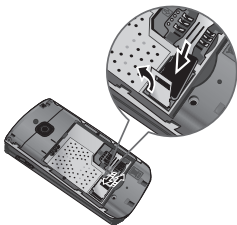

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.


Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

› SIM card support: 2G [1.8v / 3V]

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert the battery
- 5 Close the battery cover
- 6 Charge your battery

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

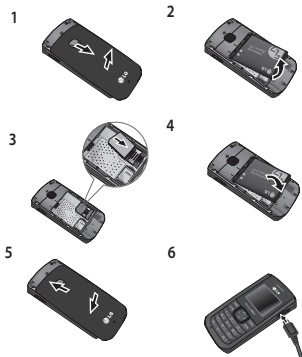

Menu map

1 Messaging

- 1 New message
- 2 Inbox
- 3 Drafts
- 4 Chat box
- 5 Outbox
- 6 Sent
- 7 Listen to voice mail
- 8 Info messages
- 9 Templates
- 0 Settings

2 Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Copy all
- 5 Delete all
- 6 Memory status
- 7 Information

3 Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration

4 Games

- 1 Space ball

5 My stuff

- 1 My images
- 2 My sounds
- 3 Others

6 Media

- 1 Camera
- 2 MP3 player
- 3 FM radio

7 Tools

- 1 Torch
- 2 Fake call
- 3 Calculator
- 4 Stopwatch
- 5 Unit converter
- 6 World clock
- 7 SIM services

8 Organiser

- 1 Alarm
- 2 Calendar
- 3 Memo



9 Settings

- 1 Profiles
- 2 Date & Time
- 3 Languages
- 4 Display
- 5 Call
- 6 Auto keylock
- 7 Security
- 8 Power save
- 9 USB connection
- 0 Network selection
- * Reset settings
- # Memory status

Turning Your Phone On and Off



- 1 Press and hold the End key until the power comes on.
- 2 Press and hold the End key until the power goes off.

Making a call

- 1 Key in the number using the keypad. To delete a digit press Clear key.
- 2 Press  to initiate the call.
- 3 To end the call, press .


TIP! To enter + when making an international call, press and hold 0.


Making a call from your contacts

- 1 Press  contacts from idle screen and select "Search" to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press 6 three times.
- 3 To scroll through the contacts use up and down navigation keys and to scroll through their different numbers use "Left and Right Navigation key".
- 4 Press  to initiate the call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press Menu, select Settings, choose Call. Select **Answer mode** and choose from **Any key** or **Send key only**.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call. While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Any key** or **Send key only**.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Security**.


- **Call barring** – Select when you would like calls to be barred.
- **Fixed dial number** – Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating schedule events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mod.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. You can use the  key to cycle through possible words matching the keys you pressed.

ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.


123 mode

Type numbers using one keystroke per number. You can also add numbers while remain in letter modes by pressing and holding the desired key.

Messaging Menu 1

Your GS155 includes functions related to SMS (Short Message Service).

Sending a message

- 1 A new message editor will open. Message editor combines SMS into one intuitive. The default setting of the message editor is SMS mode.
- 2 Enter your message using either the T9 predictive mode or Abc manual mode. You can switch text input mode by pressing .
- 3 Press Options and choose Insert to add an **Symbol, template, contact** and **business card**.
- 4 Press options and select **Send to**.
- 5 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 6 Press options and select **Send**.

Contacts Menu 2

Searching for a contact

You can search for a contact in your contacts.

- 1 Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 To scroll through the contacts use up and down navigation keys and to scroll through their different numbers use "Left and Right Navigation key".

Call history Menu 3

- **All calls:** You can view all lists of outgoing or incoming calls.
- **Missed calls:** You can view the unanswered calls.
- **Dialled calls:** You can view the outgoing calls (called or attempted).
- **Received calls:** You can view the Received calls.
- **Call duration:** Allows you to view the duration of your incoming and outgoing calls.

Games Menu 4

Your GS155 comes with preloaded games to keep you amused when you have time to spare.

My stuff Menu 5

You can store multimedia files into your phone's memory. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Press **Menu** then select **My stuff** to open a list of folders.

Your GS155 supports JPEG images, MP3 & MIDI sound files.

Media Menu 6

Camera

Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can select photos as wallpaper.


- 1 Press **Menu** and select **Media**, select **Camera** or go directly to camera through short cut key by pressing down navigation key.
- 2 Holding the phone vertically, point the lens towards the subject of the photo.
- 3 Press the Capture key to take a photo.

MP3 Player

Your LG GS155 has a built-in MP3 player so you can play all your favourite music.

Playing a song

- 1 Press menu and select Media and then choose MP3 Player.
- 2 Choose all songs then select the song you want to play, Go To Options and then Press Play.
- 3 While music is playing, go to Options->Pause to pause the song.
- 4 Press right navigation key to skip to next song.
- 5 Press left navigation key to skip to previous song.
- 6 While music is playing, press "Back" key to stop the music and return to the MP3 player menu.

You can view and play songs, add songs to Play list, remove, set any song as ringtone from  options.

When you're playing a song,

- 1 Long press right navigation key to FF
- 2 Long press left navigation key to REV.
- 3 If song is played for more than 3 seconds and if we press left navigation key then it will play the same song from the beginning else it will play the previous song.

FM radio

When phone can't find FM channel or low channel clarity is happening, use ear-mic .

Your LG GS155 has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen FM Radio more clear. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via built-in speaker. Press **Options**, select **Listen via Speaker**. GS155 supports wireless FM. User does not require to insert ear-mic to listen FM in normal condition. In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the ear-mic for better and enhanced FM quality.

Tools / Organiser Menu 7,8

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding a memo (Menu > Organiser > Memo)

You can register your own memos here.

Setting your alarm (Menu > Organiser > Alarm)

You can set up to 3 alarm clocks to go off at a specified time.

Using your calculator (Menu > Tools > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the stopwatch (Menu > Tools > Stopwatch)

This option allows you to use the function of a stopwatch.

Converting a unit (Menu > Tools > Unit converter)

This converts many measurements into a unit you want.

World clock (Menu > Tools > World clock)

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world.

SIM services (Menu > Tools > SIM services)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Settings Menu 9

Changing your profiles (Menu > Settings > Profiles)

You can change your profile **General, Silent, Vibrate only, Outdoor, Flight Mode** and **Headset**.

Using Flight mode

- 1 Press Menu > Settings > Profiles > Flight mode
- 2 Use this function to switch the flight mode On or Off. You will not be able to make calls, send message when the Flight mode is On.

Changing your date & time (Menu > Settings > Date & Time)

You can set functions relating to the date and time.

Changing the language (Menu > Settings > Language)

You can change the language for the display texts in your phone. This change will also affect the language input mode.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Call (Menu > Settings > Call) - You can set the menu relevant to a call.

Auto keylock - You can make the key pad locked automatically after some time.

Changing your security settings (Menu > Settings > Security)

Change your security settings to keep your GS155 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Phone lock** - Choose a security code to lock your phone, **When power on, When SIM changed** or **Immediately**.

- **Call barring**
- **Fixed dial number**
- **Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000". ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.
- **Change codes** – Changing your **security code** or **PIN1 code** or PIN2 code, ATMT code, enter the old code followed by the new code.

Power save (Menu > Settings > Power save)

If you set **Always on**, you can save the battery power when you don't use the phone. Choose to switch the power save settings **Always on**, **Night only** or **Off**.

Changing your USB connection

- 1 Press Menu > Settings >USB connection.
- 2 Make your change to Mass storage, PC suite or Always ask. (Default Always ask will be selected)

Network selection - You can also select a network manually and set a network.

Resetting your phone (Menu > Settings > Reset settings)

Use Reset settings to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

Memory status - You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use **ONLY** specified **ORIGINAL** batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or serious damage to your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

CAUTION

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use **ORIGINAL** accessories to avoid damage to your phone.

- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GS155 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/Kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.03 W/Kg (10g) and when worn on the body is 0.440 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission.
Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the aircraft without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Technical data

General

Product name : GS155


System : GSM 900 / DCS 1800

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity		LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc, LG Twin Towers 20, Yuseok-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 900 / DCS 1800 Dual band Terminal Equipment	
Model Name	GS155	
Trade Name	LG	
CE 0168		
Applicable Standards Details		
RATTE Directive 1999/5/EC		
EN 301 488-01 V1.8.1, EN 301 488-07 V1.3.1		
EN 301 511 V8.0.2		
EN 60950-2001, EN62209-1:2006		
EN 60950-1:2001		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Farnley House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD, United Kingdom		
Notified Body Identification Number : 0188		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date
	Seung Hyeon, Jr / Director	05.Feb. 2010
LG Electronics Logistics and Services B.V. Vakhusseum 16, 1327 AE Almere, The Netherlands Tel : +31 - 36- 947 88940, e-mail : jacob@lgs.com	 Signature of representative	

MEMO

MEMO

MEMO

MEMO
